 

MNOBLE FoKus H-ANC

Quick Start Guide

Product Overview



LED light

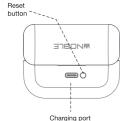











Ouick Start Guide v 1



Silicon Ear Tips x 3 (M on the earbuds) USB Charging Case x 1

LEMEATI

comples with Part 15 of the FCC Rules. Operation is subject to the following two conditions: tice may not cause harmful Interference, and tice must accept any interference received, including interference that may cause undesired operation.

NOTE:

The equipment has been learned and found to comply with the limits for a Class 8 digital device, pursuent to Part 15 of the 1FC DA in the equipment of the expense o

Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio(TV technician for help.

Please refer to the online manual on the web page for charging and installation instructions.











BACK

How to pair

The Noble FoKus H-ANC will need to be paired to your device before use. Once paired, they will connect automatically each time they are activated.



Open the lid of the charging case, remove the earbuds from the charging case The earbuds will power on automatically and enter pairing mode, with blue and white indicator lights flashing alternately.

Enable Bluetooth on your smartphone and search for "NOBLE FoKus H-ANC" in available Bluetooth devices. Once found, select "NOBLE FoKus H-ANC" to initiate pairing. You will hear voice prompt "PAIRING COMPLETE", now the earphones are ready to use.

If pairing does not work properly or the operation is unstable, please try to reset the earbuds. To do so, please open the lid, press and hold the reset button of the charging case for 10 seconds when the earbuds are on the case, until charging case white indicator LED1 and LED3 flash.



Check the battery level of the case Press ONCE

Displays the remaining battery life of the case.

Pairing Long press for 3 sec.

Pair both earphones with the device while they are in the case, and case lid is open, case LED3 flashes 5s.

Long press for 10 sec.

Long press LEFT

Press and hold for 10 seconds until case LED1 and LED3 flash 5s synchronously to reset the setting.

Hear-through & ANC function In standby mode or when playing music

ANC OFF

First time to use the earbud, default state is ANC OFF

Hear-through function Long press LEFT for 3 sec

Press and hold the left earbud touch sensor for 3 seconds with voice prompt "AMBIENT MODE", it will activate the external sound capturing function.

Wind noise reduction Long press LEFT for 3 sec

Press and hold the left earbud touch sensor for 3 seconds with voice prompt "Wind noise reduction", it will activate the active noise cancellation for wind noise environment.

Active noise cancellation(ANC) Long press LEFT for 3 sec

Press and hold the left earbud touch sensor for 3 seconds with voice prompt "ANC ON", it will activate the active noise

In a word, here is the loop for "AMBIENT MODE", "Wind noise reduction", "ANC ON", "ANC OFF" by long pressing LEFT earbud for 3 seconds

> For information on how to use the touch sensor andhow to read the LED display Please refer to the online manual on the web page.