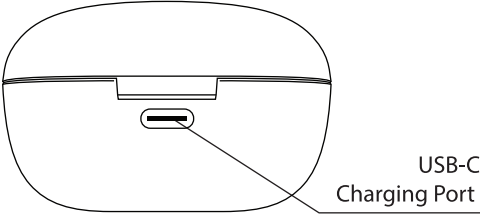 
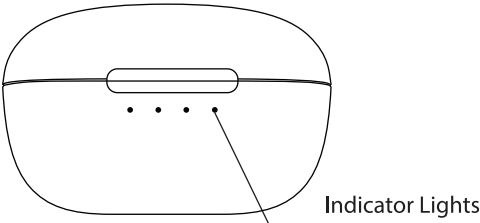 
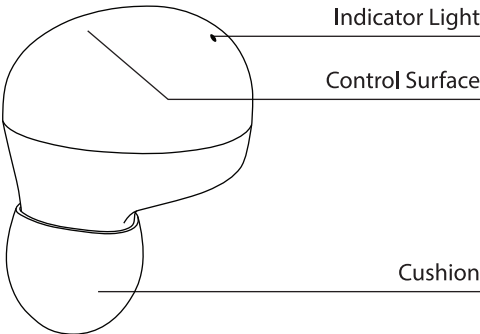 


iHome Bluetooth®  XT-30 TRUE WIRELESS EARBUDS	1 Package Contents: • XT-30 True Wireless Earbuds • Charging Travel Case • 8 Ear Cushions in 3 sizes (2 Small, 2 Large, 4 Medium) • USB-A to USB-C Charging Cable • Instruction Manual Specifications: Bluetooth® Version: 5.1 Working distance: 33 ft Charge Connector: USB-C Frequency Response: 20Hz-20KHz Case Battery: 320 mAh Case Charge time: 1.2 hrs Case Weight: 10g Earbuds Battery: 2 x 50 mAh Earbuds Weight: 5g each	23 Operation Guide 	4 Getting Started Before using this device, fully charge it. Charging instructions can be found on page 6. Open the charging case and take out the earbuds. Both LED lights will flash red and blue until one of the earbuds flashes red and blue, while the other earbud flashes blue, indicating that the right and left earbuds have synced to each other. Pairing 1. Go to Bluetooth® Settings on your mobile device. 2. Turn Bluetooth® ON, on your device. 3. On your Bluetooth® device, select “iHome XT-30” from the list of available devices. 4. The earbud indicator LEDs will shut off to indicate they are connected.	Basic Functions Right Earbud: • Double tap the control surface to play or pause the audio. • Tap and hold for two seconds to skip to the next audio track. • Single tap to raise the volume. Left Earbud: • Double tap the control surface to play or pause the audio. • Tap and hold for two seconds to skip to the previous audio track. • Single tap to lower the volume. Phone calls: When there is an incoming call, the unit will pause the playback and ring to alert you of the call. Phone call functions work the same on either of the earbuds.* To answer an incoming call, single tap the control button of either earbud. To end a call, double tap the control surface. To reject an incoming call, tap and hold the control surface for two seconds. *Volume controls may not work during phone calls with some smartphone models.
---	---	---	--	--

5 Troubleshooting Earbuds do not sync with each other 1. Place the earbuds in the case, then take out the earbuds, ensuring both earbuds are turned on. 2. On each earbud, press and hold the control surface for 5 seconds. The earbud will turn off after the light flashes red 3 times. 3. Replace the earbuds in the charging case. 4. Repeat the Getting Started process. Earbuds do not pair to device: 1. Turn the Earbuds OFF by pressing the control surface on each earbud until the light blinks red, and then turns off. 2. Replace the earbuds in the case. Turn your device's Bluetooth® OFF and then back ON. Then repeat the pairing process.	67 Charging 1. Replace the earbuds in the case. 2. Connect the USB-C charging cable to the charging port on the back of the case. 3. Plug the cable into a standard USB 5V/1A or higher power output. When you plug the case into a charger, the indicator lights on the front of the case will blink to indicate the available power. The lights on the buds in the case glow steady red, to indicate they are charging. When all four case lights stay lit, not blinking, and the earbud indicator lights turn off, the case and earbuds are completely charged. 4. When fully charged, promptly unplug the charge case from the power source. If you want to charge the earbuds from the charge case internal battery, simply replace them in the case. They will begin charging from the built-in case battery.	Warnings • Do not use this unit for anything other than its intended use. • Do not puncture, throw, drop, bend, or modify this product. • Do not throw this product into fire or water. • Do not short-circuit the battery with any metal or metallic objects. • Do not expose this product to corrosive liquids such as salt water. • Do not operate the unit if it has been wet or moist to prevent against electric shock and/or injury to yourself and damage to the unit. • Do not allow children to play with this product as it is not a toy, and may present a choking hazard. • Avoid leaving your device in direct sunlight, such as on the dashboard, console, or seat of a vehicle. • Do not leave your device, or use your device, in any area where the temperature is likely to drop below 32°F, or may exceed 140°F, such as inside a closed vehicle on a hot day. • Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk. • Protect your hearing by always listening at a safe level. Prolonged use at elevated volumes may affect your hearing capacity and could result in hearing loss. • Use the earbuds with this charging case only. • To avoid damage to the charging case, please only use a USB 5V/1A or higher charger. • In order to ensure the battery life, charge normally at least once a month.	FCC FCC ID: 2AHN6-AUBE218 This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or an experienced radio/TV technician for help. Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.	89 Warranty Bytech NY INC. warrants this product to be materially free from defects and workmanship to the original purchaser for a period of 12 months from the original purchase date. Bytech responsibility with regard to this limited warranty shall be limited solely to repair or replacement at its option, of any product which fails during normal consumer use. This warranty does not extend to damage or failure which results from misuse, neglect, accident, alteration, abuse, improper installation or maintenance. At any time during the 12 months period following the purchase, the product fails due to defects in material or workmanship, return the defective product (with freight prepaid) with proof of purchase. WWW.BYTECHINTL.COM Bytech NY Inc 2585 West 13street Brooklyn NY 11223 (718) 449-3700 CE FC MADE IN CHINA ©2021 BYTECH NY INC. *All trademarks and copyrights are the property of the respective companies.
---	--	---	---	--