


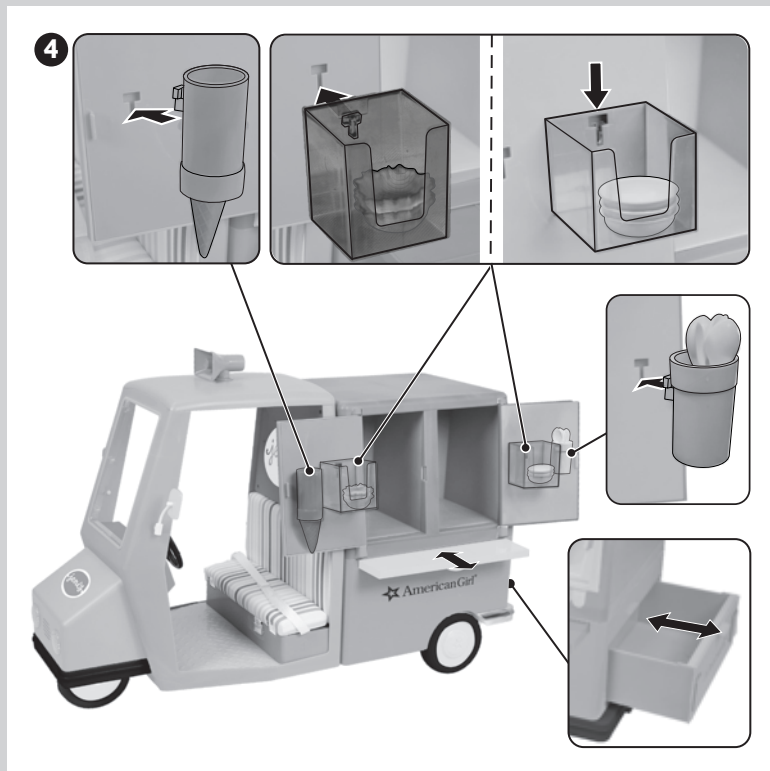

Full of Flavor Ice Cream Truck

Contains

- | | |
|--|-------------------------------|
| 1 truck | 3 triple scoops |
| 4 gallon containers of ice cream with lids | 2 cone holders |
| 4 pints with lids | 1 ice cream scooper |
| 1 Jeni's box | 1 set of 4 ice cream signs |
| 4 waffle cones | 1 phone |
| 3 waffle bowls | 1 phone case with card reader |
| 3 bowls | 1 reversible phone screen |
| 6 spoons | 1 gift card |
| 4 double scoops | 5 \$1 bills |

WARNING:
CHOKING HAZARD – Small parts.
Not for children under 3 years.

Adult assembly required.
Tool required for battery installation: Phillips screwdriver (not included).
Requires 3 AA (LR6) x 1.5V alkaline batteries (not included).
Dispose of batteries safely.
Keep these instructions for future reference as they contain important information.

© 2023 American Girl. American Girl and associated trademarks are owned by American Girl, LLC. Retain this address for future reference: American Girl, 2330 Eagle Drive, Middleton, WI 53562, U.S.A.



HM25-0970
1101575114-DOM

americangirl.com/service

6+

BATTERY INSTALLATION

1. Unscrew and remove the battery cover.
2. Insert batteries as shown on the inside of the battery compartment.
3. Replace the battery cover and tighten the screw.

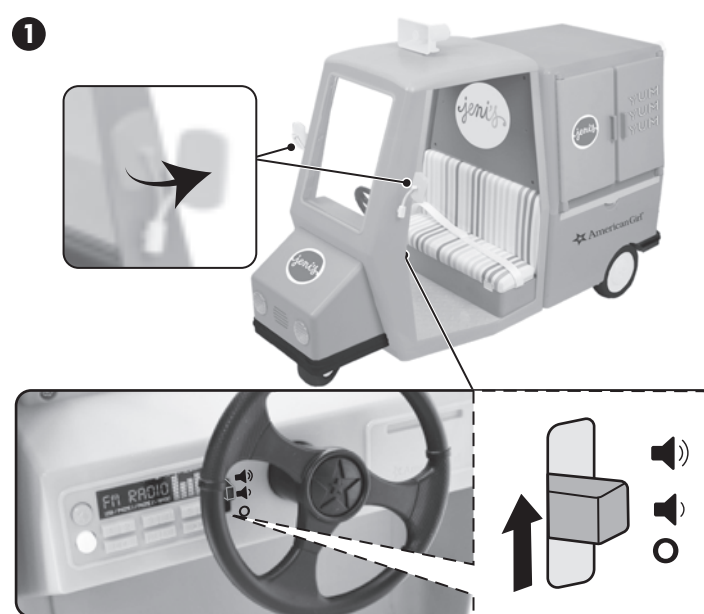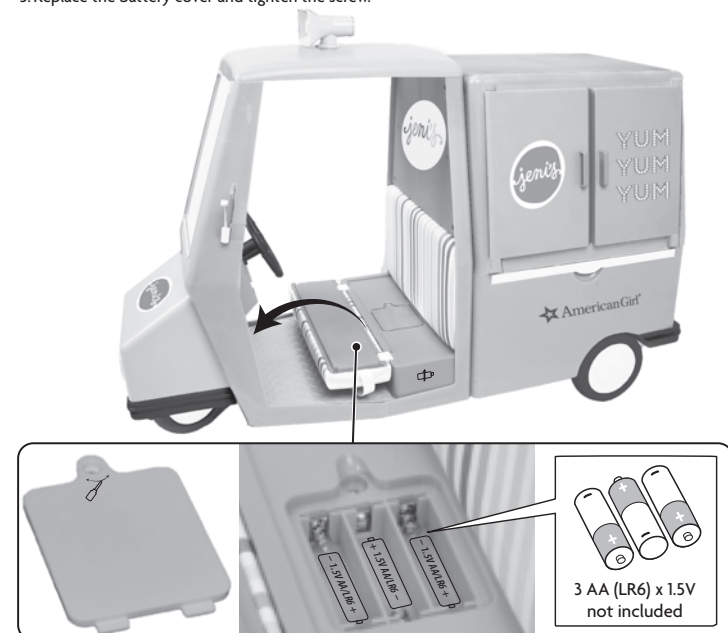

For longer life use alkaline batteries.
Check the batteries' installation if product malfunctions.
When exposed to an electrostatic source, the product may malfunction. Turn the switch off and then power on again.
HINT: When light dims or sounds from this toy become faint or stop, it's time for an adult to change the batteries.
Note: The product is equipped with an automatic shut-off feature that helps preserve battery life.

