



Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 TV	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Recall	 Back / Return
 Exit	 Exit / Cancel / Clear
 List	 Smart / List
 APP	 Shift + Green / APP / Repeat

Original	Replacement
 EPG	 Guide / EPG / -/--
 OPT	 Setup / OPT /
 OK	 OK
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 Vol+	 Vol+
 Vol-	 Vol-
 CH/Page+	 CH+ / Page+
 CH/Page-	 CH- / Page-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Text	 Text / Goto
 Sub	 Subtitle / EQ



