

# SF300 Digital thermostat

## Operating instructions

Read this manual carefully and keep it with other warranty documents. Connection must be carried out by a qualified installer in accordance with local regulations. Before installing or disassembling the thermostat, always switch off the electricity in the meter cupboard. This thermostat can be installed in a single flush-mounting box 50 mm deep, according to standard DIN formats.




### 1. Technical details

Power	90-240Vac 60/60Hz
Max. Load	16A/250V
Floor sensor type	10k NTC 1%
Temp. range	5°C-35°C
Accuracy	0.5°C
Cover	IP21
Warranty	2 years


### 2. Wiring diagram

- 1 Power supply (Line)
- 2 Power supply (Neutral)
- 3 Heating cable wire 1\*
- 4 Heating cable wire 2\*
- 5 N/A
- 6-7 Floor sensor connection

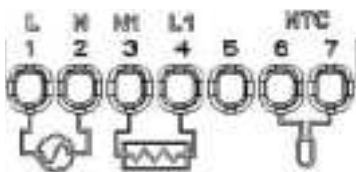

\* Order Heating wire 1 and 2 does not apply.  
EARTH: Connect the earth of the heating cable and the earth of the power supply outside the thermostat.

### 3. Display icon explanation

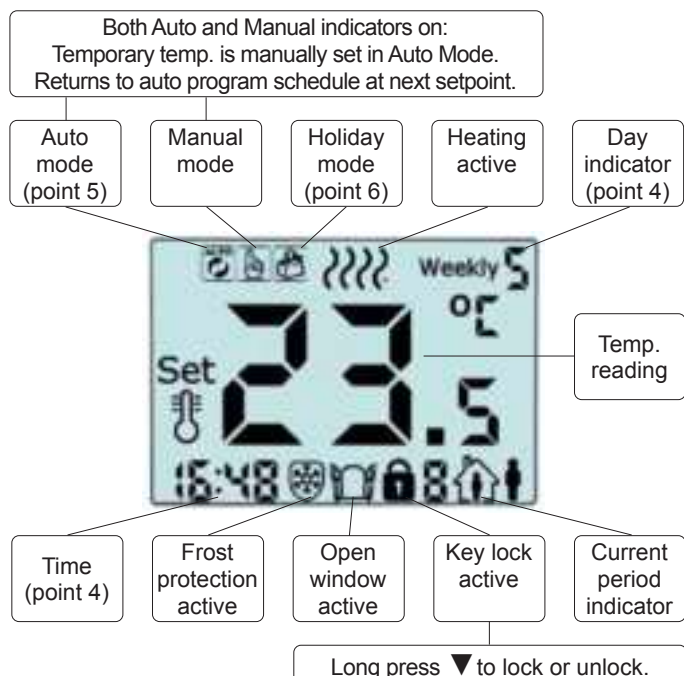

### 4. Time setting

- (Thermostat on) Long press □ to enter options
- Press ▲, choose 01 and press □ to enter
- Press ▼ or ▲ to set minutes
- Press □ to confirm and enter hour setting
- Press ▼ or ▲ to set hours
- Press □ to confirm
- Press ▼ or ▲ to set week day (Monday = 1, Sunday = 7)
- Press □ to confirm







### 5. Choose mode

Press □ to switch between **Auto Mode** or **Manual mode**.

### 6. Programming (Auto Mode)

(Thermostat on) Long press □ to enter options  
press ▲, choose 02 and then □ to enter programming  
Press □ to choose hours, min. and temp. (with ▼ or ▲ and □)

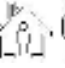There are 3 periods (6 setpoints) per day. See standard schedule for reference:

					
<b>Wake up (On)</b>	<b>Away (Off)</b>	<b>Home (On)</b>	<b>Away (Off)</b>	<b>Home (On)</b>	<b>Sleep (Off)</b>
Setpoint 1	Setpoint 2	Setpoint 3	Setpoint 4	Setpoint 5	Setpoint 6
06:00 20°C	08:00 15°C	11:30 20°C	13:30 15°C	17:00 20°C	22:00 15°C

### 7. Holiday Mode

- (Thermostat on) Long press □ to enter options
- Press ▲, choose 03 and press □ to enter
- Press ▼ or ▲ to set days
- Press □ to confirm and enter temperature setting
- Press ▼ or ▲ to set temperature
- Press □ to confirm

### 8. Sensor error

When an "E1" or "E2" code is shown the sensor is wrongly connected or broken. The thermostat will stop heating until the sensor is connected correctly or replaced.

### 9. Advanced settings

**WARNING: Changing advanced settings may cause undesired results.**  
**Please consult your installer before entering this menu!**

Press the on/off button once, long press □ to enter Advanced menu A.  
Press □ to choose between A1 to AE. Press ▼ or ▲ to adjust.

No.	Item	Parameters	Default
A1	Measured temp. calibration	-9°C to +9°C	0.5°C
A2	Differential	0.5°C to 2.5°C	1°C
A3	Key lock	0: Half lock 1: Full lock	0
A4	Power with memory function	0: Power with memory function 1: Shutdown power after power off 2: Shutdown power after power on	0
A5	Backlight time	5 to 30 seconds	10 sec
A6	Programmable	0: 5+2 (Week 1-5 and weekend 6-7) 1: 6+1 (Week 1-6 and sunday 7) 2: 7 (Week 1-7)	0
A7	Lowest temp. setting	1 - 10°C	5°C
A8	Highest temp. setting	20-70°C	35°C
A9	Low temp. protection	1: 1°C - 10°C Function off: > 10°C Display (-----)	5°C
AA	High temp. protection	1: 35°C-70°C 2: Function off: < 35°C Display (-----)	45°C
AB	High temp. protection differential	1-9	2
AC	Running temp. of open window function	1: 10 - 20°C, 2: Function off: < 10°C Display (-----)	15°C
AD	Running time of open window function	10 - 20 min	10
AE	Reset to factory settings	Long press □ until display goes blank	-