## NIGHT OWL

# **Quick Setup Guide**

Let's get started

#### What's Included

#### Wire Free Camera



(1) 2K Wire-free Spotlight Camera



(1) Micro USB Cable



(1) Wall Mount



(3) Mounting Hardware


**NOTE:** If mounting the camera, you will need a screwdriver or drill (not included).


### **Items Not Included**

- · Screwdriver
- Drill
- · Drill Bit (15/64) (3/64)
- · Router / Modem

- · USB Power Adapter
- · Mobile Device (Phone/Tablet)
- · microSD Card

#### **Camera Details**

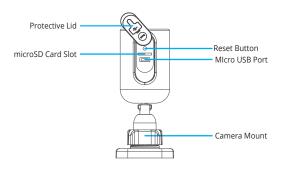

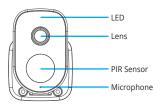

## Step 3: Download the Night Owl App

If you are a first-time user, go ahead and download the Night Owl app. Quickly create an account and log in.

Already have an account? Simply log in.









## **Initial Start-up Steps**

 Carefully lift off the rubber piece at the bottom of your camera to gain access to the micro USB charging port. Plug in the small end of the micro USB cable into the camera.




 Connect one end of the USB cable to a USB power adapter and plug it into an outlet. If you do not have a USB power adapter, you may use a USB charging port.



**NOTE:** USB power adapter not included.

### **Initial Start-up Steps (Continued)**

 After a few seconds of your camera being plugged in you will hear "Camera is in Pairing Mode". You can now begin the installation process using the Night Owl application

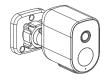

Camera is in Pairing Mode

**NOTE:** Keep your camera plugged in for up to 3 hours to fully charge.

#### **Add Your Camera**

To begin viewing your camera, add it to the Night Owl app or to a compatible recorder.


For more detailed setup steps, scan the QR code below.



## Connecting to a Wi-Fi router

#### Adding your camera.

- 1. Open Night Owl Protect app
- 2. Tap on "Add New" or "+"

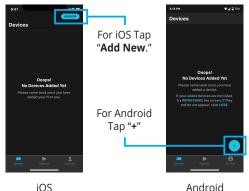

IUS Aliului

- 3. Scan the QR code at the side of the camera
- 4. Follow the on-screen display to add the camera step by step.

## Connecting to a Wi-Fi router (Continued)




If setup is completed using
Network Discovery or Manual
setup by UID once your device
is added to the network you
will need to select the category
of the device to proceed.

Select "Standalone
camera" from the


8

#### **Camera Installation**

 Use the holes in the back of each camera as a template to mark the screw positions on the surface where you plan to mount the camera.

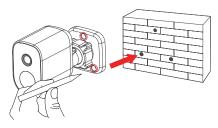

Insert the screw anchors. Line up the camera base holes with the screw anchors, insert the screws through the base and tighten to secure the camera in place.

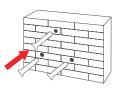

## **Need Help?**



For more help, please follow the steps below to access your Series support page:

- Please visit: Support.NightOwlSP.com
- Enter FBWNIP4U into the Search bar or scan the QR Code

FCC RADIATION NORM

FCC

This device complies with Part 15 of the FCC Rules. Operation is subject to the followin two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause

FCC Compliance Statement These limits are designed to provide reasonable protection against frequency interference in residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed or used in accordance with the instructions, may cause harmful interference to radio communication.

However, there is no guarantee that interference will not occur in television reception, which can be determined by turning the equipment off and on. The user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

• Consult the dealer or an experienced radio/1v technician for help. CAUTION!

The Federal Communications Commission warns the user that changes or modifications to the unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment should be installed and operated with a minimum distance of 8 inches between the radiator and your body.