




## BS-PTT wireless PTT usage and pairing instructions

\*Requires wireless hand microphone or helmet microphone to use\*

Wireless PTT (only used with our company's N series radio equipment)

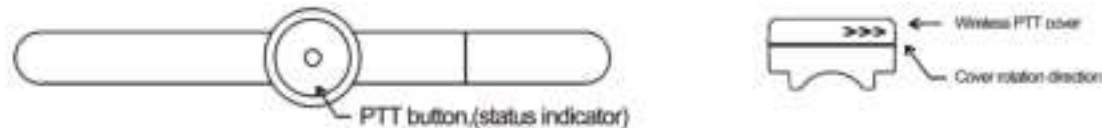

The wireless PTT has been waterproofed in the factory and can adapt to the complex outdoor use environment.

**Wireless PTT status indicator:** the newly enabled wireless PTT, click the PTT button, the indicator flashes quickly to enter the pairing state. Press the PTT button after pairing, the indicator light flashes slowly after connection fails, try to connect again within 1-2 seconds. Still unable to connect, the wireless PTT enters the pairing status indicator flashes quickly.

**Wireless PTT battery use and replacement:** This product uses CR1632 button battery power supply, you can open the APP device status bar to view the battery voltage during connection and use, please replace the battery when the battery voltage is too low or can not be used. To replace the battery, unscrew the wireless PTT cover in the direction shown in the figure above, push out the battery with a non-metallic rod (remember the battery direction), reinstall the battery in the correct direction (the battery positive corresponds to the positive of the module), check the correctness, and then replace the

lower case. Rotate the upper cover in the reverse direction of removal to use.

## -----Wireless PTT Pairing-----

### **I. Use the mobile APP to pair**

1. Press and hold the wireless PTT button, wait for the wireless PTT indicator to flash, and enter the pairing state.
2. Open the APP to enter the settings, click the connection management to open the scan.
3. In the list of paired devices, find the <PTT button>, indicating that the pairing is successful, you can release it and press it again, and observe whether the transmission icon on the intercom display screen works. When the wireless handset or wireless headset is not connected to the radio, the display of the radio will display <Wireless headset is not connected>, indicating that the wireless PTT can be used, but the transmission is prohibited without a sound receiving device.
4. If the above three steps are not successfully repeated, or the wireless PTT has been paired to the surrounding intercom by mistake, turn off the other intercom and re-pair with this unit.

### **II. Pairing the operation of the intercom panel directly**

1. Double-click the menu key on the main page or enter the menu and select <Peripheral Pairing> to open, let the radio enter the pairing state.

2. Press and hold the wireless PTT button, wait for the wireless PTT indicator to flash, and enter the pairing state.

3. When the pairing is successful, the <Peripheral Pairing> will automatically turn off the pairing state. You can release it and then press the PTT button to observe whether the transmission icon on the intercom display screen works.

When there is no wireless microphone or wireless headset connected to the radio, the radio display will show <Wireless headset not connected>, indicating that the PTT can be used, but there is no sound receiving device and it is prohibited to start transmission.

4. If the above three steps are not successfully repeated, or the wireless PTT has been paired to the surrounding intercom by mistake, turn off the other intercom and re-pair with this unit.

---

Product Name: BS-PTT wireless PTT

Transceiver frequency: 2.4~2.485GHz ISM band

Effective distance: 8 meters

Power supply: CR1632 button battery

Waterproof method: rainproof

Installation method: Fix the velcro on the index finger, the steering wheel or gear lever of the car, and the handlebar of the locomotive/single bike.

Weight: 20g

Size: main body  $\phi 23 \times 13$