

BLINDER

QUICK START GUIDE

 
600



WHAT'S IN THE PACK



OPERATION



*NOTE THE BLINDER 600 IS PACKAGED IN DEMO-MODE. TO ENABLE FULL FUNCTION OF THE LIGHT, CONNECT IT TO A USB-C CHARGER.

POWER BUTTON




- LONG PRESS (2 SECS) - ON/OFF
- QUICK PRESS - CHANGE MODE
- DOUBLE PRESS - TOGGLE BETWEEN STEADY & FLASH MODES
- QUICK PRESS WHEN OFF TO CHECK BATTERY STATUS

CHARGING

LIFT THE CHARGING-PORT HATCH.



INSERT USB TYPE-C CHARGING CABLE.

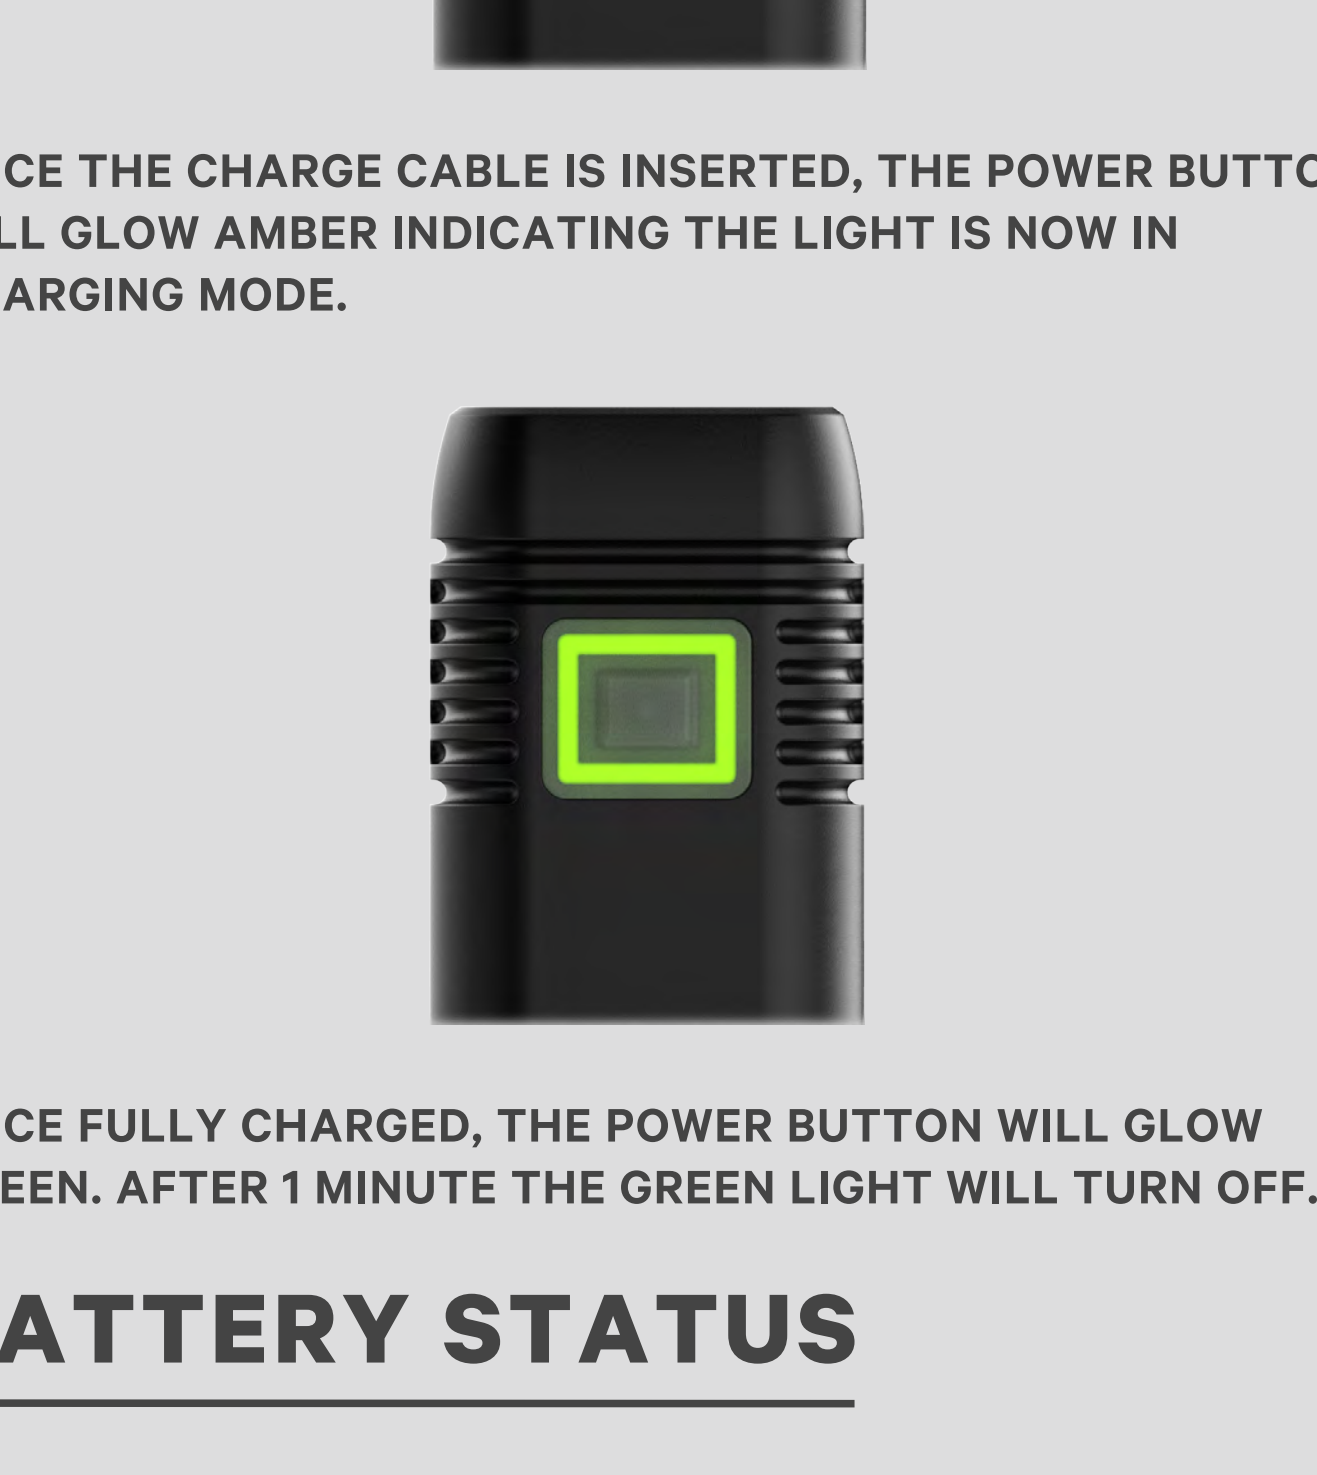

ONCE THE CHARGE CABLE IS INSERTED, THE POWER BUTTON WILL GLOW AMBER INDICATING THE LIGHT IS NOW IN CHARGING MODE.




ONCE FULLY CHARGED, THE POWER BUTTON WILL GLOW GREEN. AFTER 1 MINUTE THE GREEN LIGHT WILL TURN OFF.

BATTERY STATUS



A QUICK PRESS OF THE POWER BUTTON WHEN THE LIGHT IS SWITCHED OFF WILL INDICATE THE BATTERY STATUS.

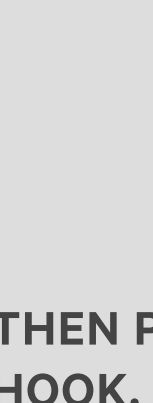


WHEN THE POWER BUTTON LIGHT IS FLASHING RED, THE LIGHT'S OUTPUT WILL BE REDUCED TO 30% TO PRESERVE RUNTIME.

MOUNTING

BAR MOUNT



SELECT THE CORRESPONDING HOLE TO SUIT YOUR BAR DIAMETER.

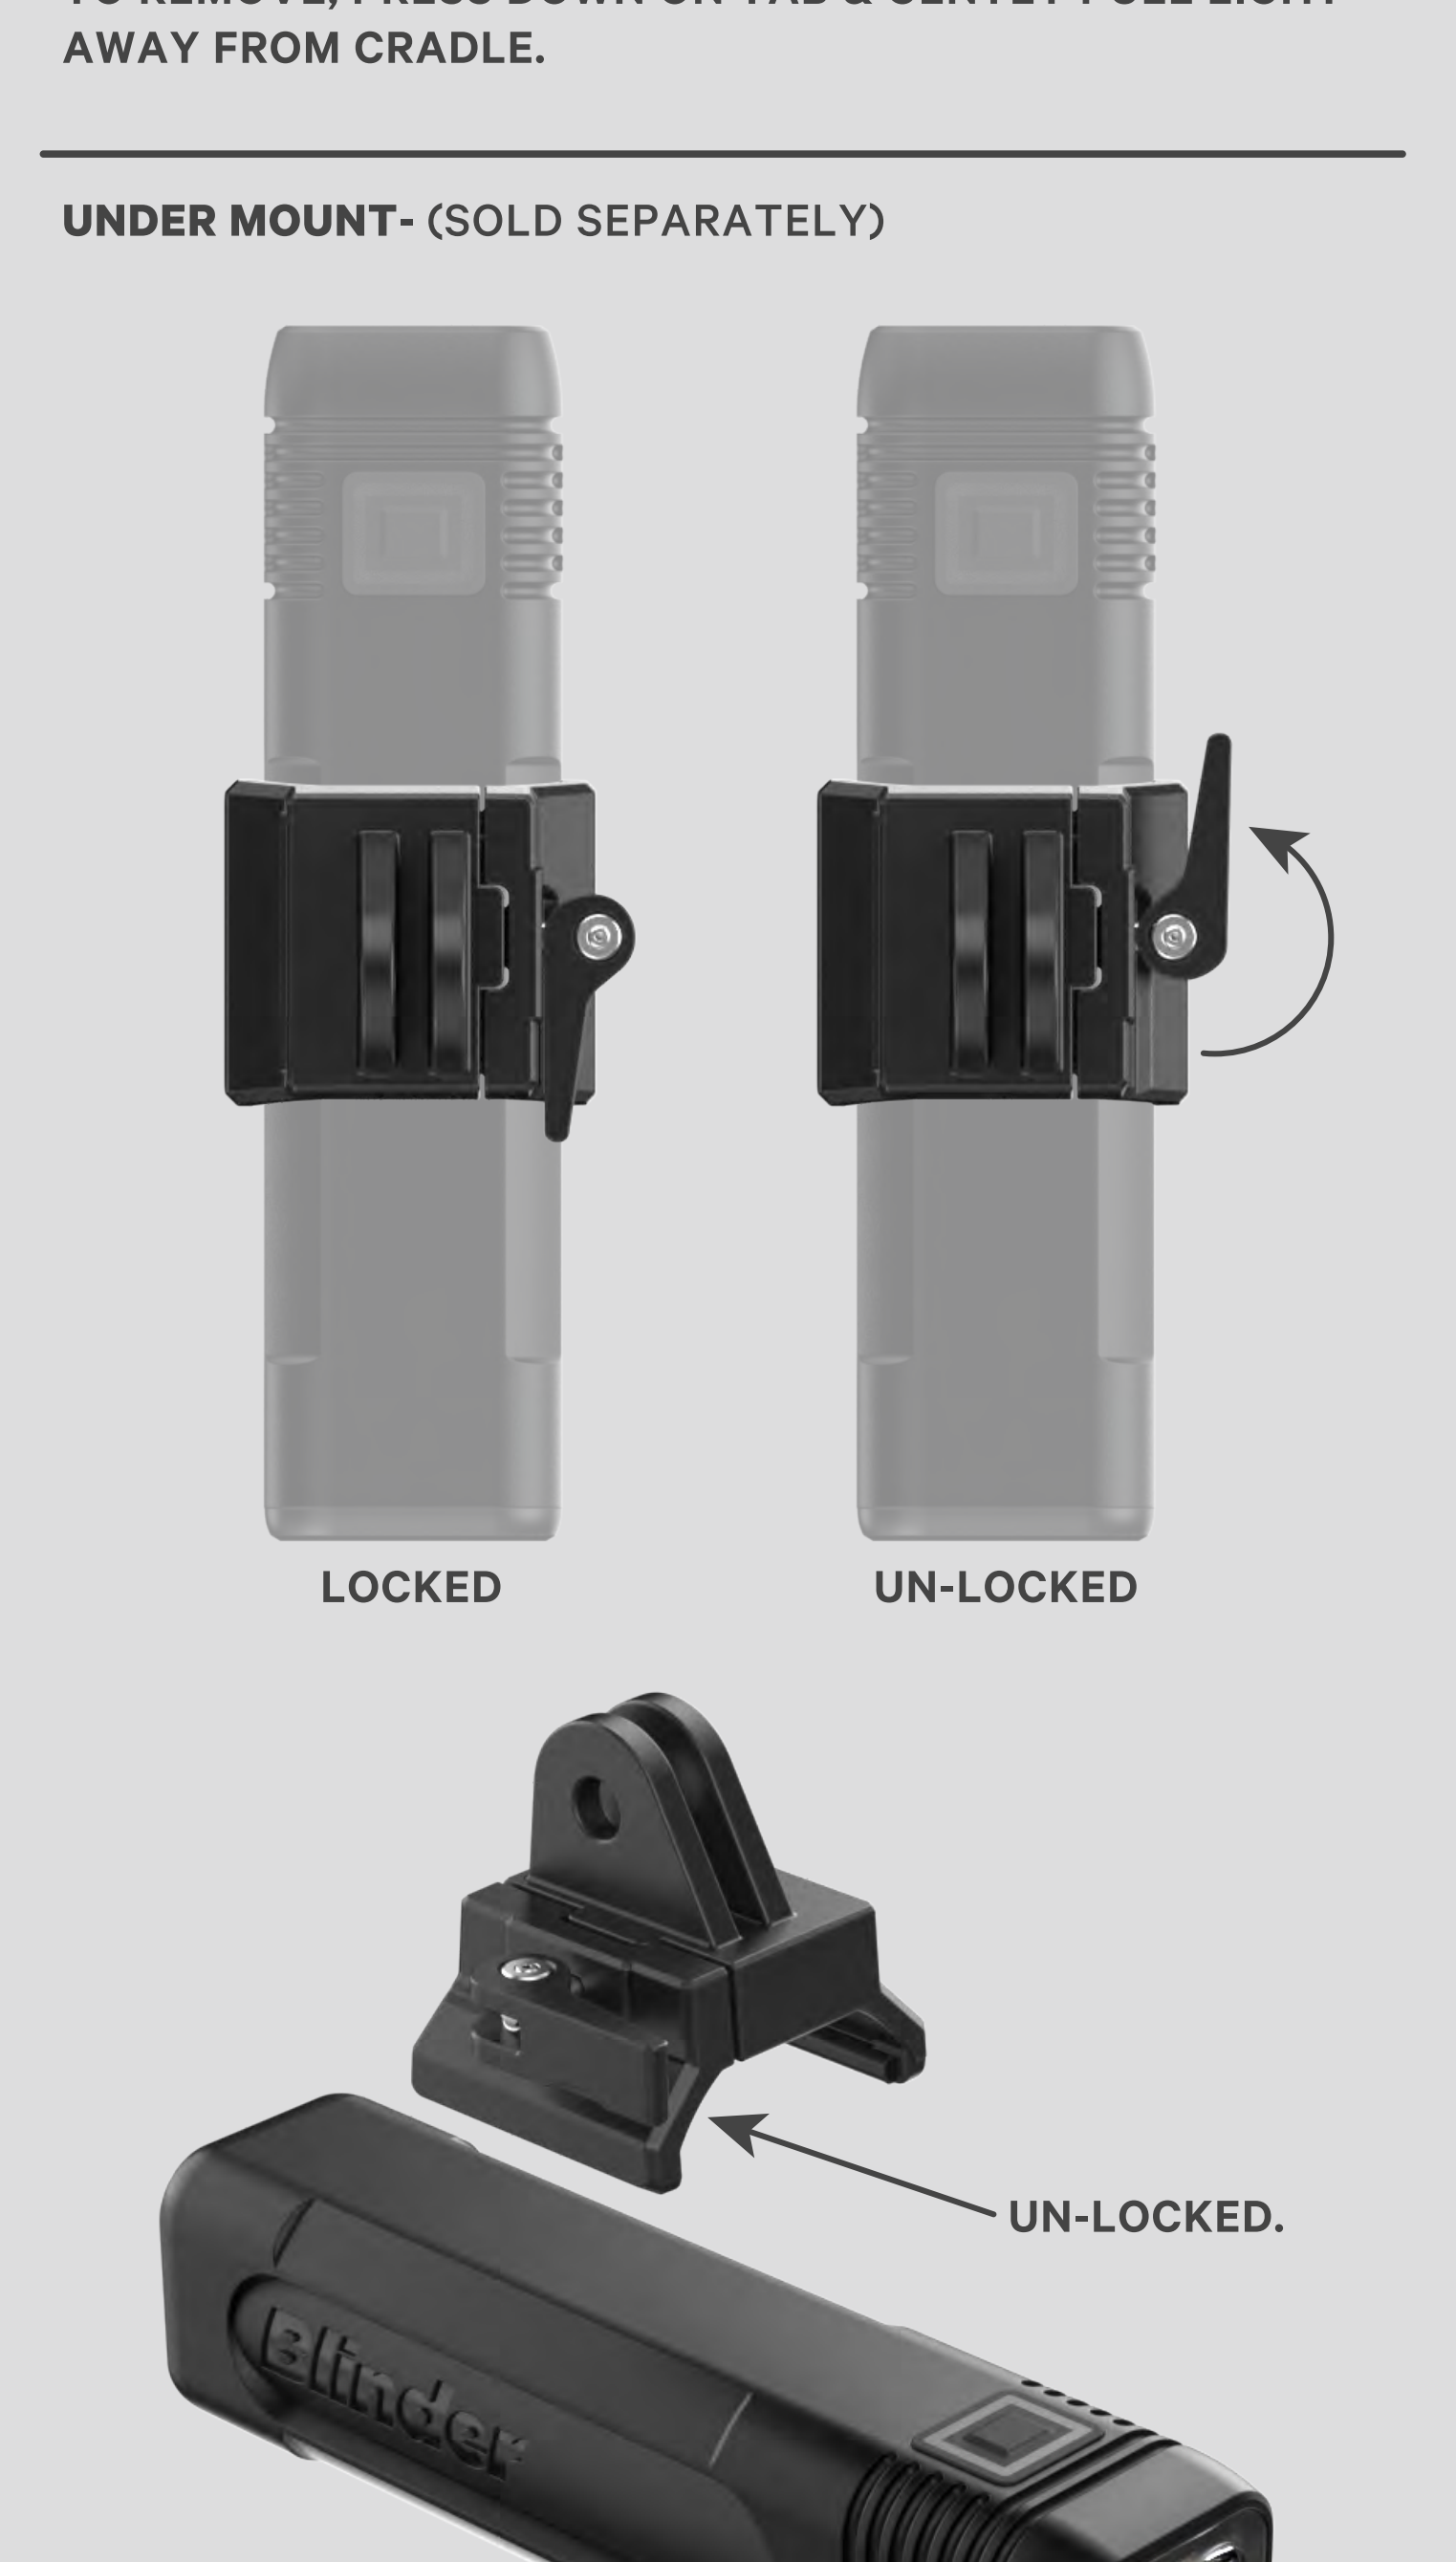

FIRMLY HOLD THE MOUNT IN PLACE & STRETCH THE STRAP DOWNWARDS.



THEN PULL THE STRAP AROUND THE BAR & SECURE ON THE HOOK.



PLACE THE LIGHT IN THE CRADLE.



COMPLETE MOUNTING BY PULLING UP ON THE TAB WHILE APPLYING DOWNWARD PRESSURE TO CLICK THE LIGHT INTO POSITION. MAKE SURE THE LIGHT IS SECURE BEFORE RIDING!

TO REMOVE, PRESS DOWN ON TAB & GENTLY PULL LIGHT AWAY FROM CRADLE.

UNDER MOUNT- (SOLD SEPARATELY)

LOCKED

UN-LOCKED

UN-LOCKED.

PLACE THE LIGHT INSIDE THE MOUNT IN THE UN-LOCKED POSITION.

LOCK THE UNDER-MOUNT.

MAKE SURE THE UNDER-MOUNT IS LOCKED BEFORE RIDING. DO NOT RIDE WITH THE UNDER-MOUNT UNLOCKED!

REFER TO YOUR GO-PRO OR COMPUTER MOUNT INSTRUCTIONS TO COMPLETE BLINDER UNDER-MOUNT INSTALLATION.

MODES & RUNTIMES

MODE	LUMENS	RUNTIME
High	600	2hr
Medium	300	4hr
Low	150	8hr
Pulse	300	8hr
Strobe	150	16hr
Eco	90	120hr

DESIGNED BY KNOG
MELBOURNE, AUSTRALIA

2 YEAR WARRANTY

KNOG.COM