

esatto

This little Quick Start Guide is everything you need for your EBTDWW Benchtop Dishwasher—say goodbye to those dirty dishes piling up!




Get ready to use your new EBTDDWW Benchtop Dishwasher!

The Controls

- 1 On/Off power button
- 2 Delay Start button
- 3 Delay Start indicators
2, 4, 6 & 8 hours
- 4 Rinse Aid indicator
Fill the Rinse Aid compartment
- 5 Program End indicator
Your wash program has completed
- 6 Water Failure indicator
Faucet may not be open
- 7 Program Selector button
- 8 Start/Pause button
- 9 Program indicators

For a complete guide on operating your dishwasher, refer to user manual on page 12.

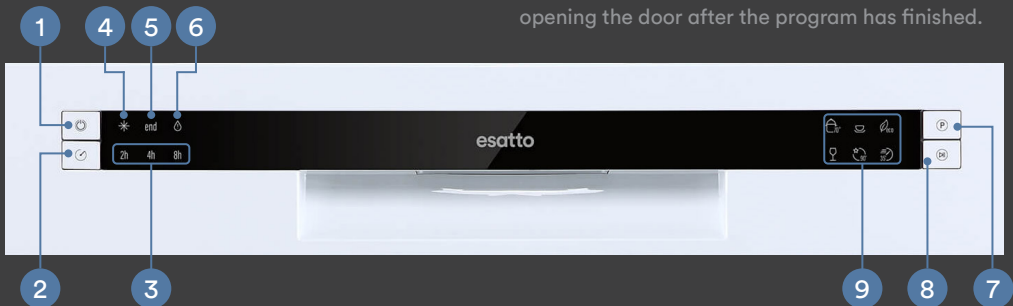

Product Details

Dimensions (W, D, H mm) / **550 × 500 × 590**
 Energy Rating (MEPS/WELS) / **2.5 Stars / 3.5 Stars**
 Capacity / **8 Place Settings**
 Warranty / **2 Years**

Register your Esatto product online for a free additional year esatto.house/warranty

Program Cycles

- **Rapid 35'**
A quick 35 minute wash suitable for lightly soiled dishes—does not include a drying stage.
- **90' Min**
A fast 90 minute daily program for lightly soiled dishes.
- **Glass**
Suitable for lightly soiled delicate glassware.
- **ECO 50° C**
A standard program for daily use with reduced energy and water consumption.
- **Heavy**
A program suitable for heavily soiled dishes.
- **Intensive 70° C**
A hot intensive program suitable for heavily soiled dishes and cookware.

Note: To assist drying, we recommend partially opening the door after the program has finished.

Get in Touch

Need help? Contact our friendly support team via the contact details below.

Phone / **1300 11 4357**

Email / support@residentiagroup.com.au

@esatto.house @esatto.house

www.esatto.house