 


NOSTALGIA

Wireless Charger+Speaker+Lamp

TLL151361-TLL151371

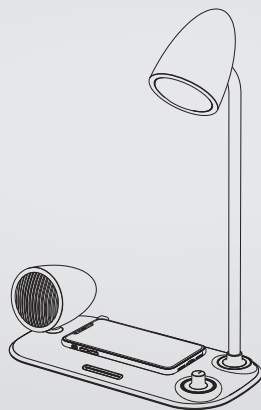

-  User manual
-  Manual de utilizare
-  Manual del usuario
-  Manuel d'utilisation
-  Manuale d'uso
-  Benutzerhandbuch



 
 
INTO YOUR FUTURE

Thank you, for choosing Tellur!

Please, read this user manual carefully before using the product and keep it safe for future references.

Note! To ensure the wireless charging function works safely and efficiently, you must use a DC 5V/2A or 9V/2A adapter (QUALCOMM Quick Charger 2.0 or 3.0) and a quick charge Type-C cable (if not use the appropriate adapter and quick charge cable, the charger may not fast charge your phone or may even damage the charger).

1. Product diagram

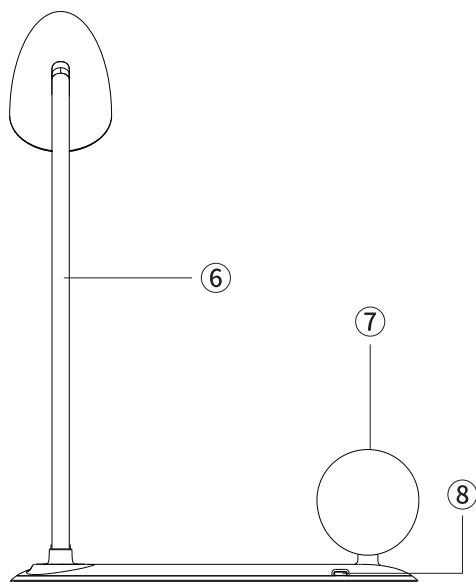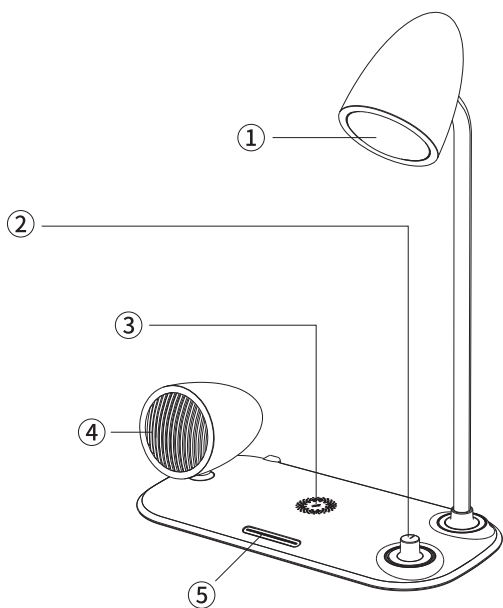

1. LED Lamp
2. Knob function switch
3. Wireless charging area
4. Speaker
5. LED indicative light
6. Lamp pole
7. Speaker case
8. Type-C power input port.

2. Product description

Meet Nostalgia a 3 in 1 device, retro and modern at the same time. A lamp desk to Light your life with a style restoring ancient ways. A Bluetooth Speaker to enjoy the music and to be present on the scene.

From elegance to classic. The fantastic lightning and gorgeous rhythm are creating a carnival filled with melody.

 
Combining fun with functionality, Nostalgia Lamp, will keep your phone's battery at 100% through its Qi wireless charging function.

The shape is simple and delicate with antique style that leads you to nostalgia. Top sound quality. Enjoy good times!

3. Installation and operation steps


Out of the box installation

- Align the light lamp pole with the DC socket and install it on the main body.

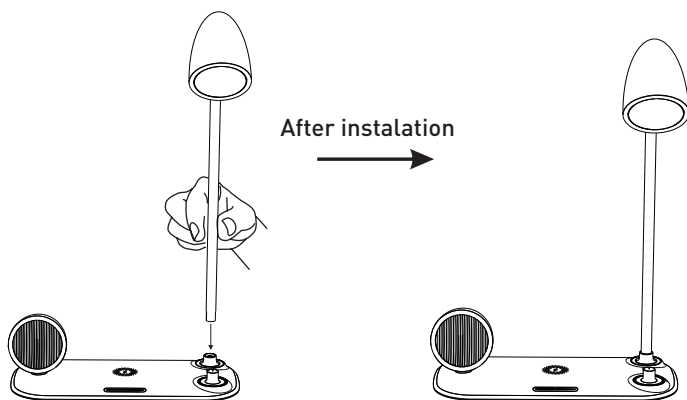

Connect to power source and wireless charging operation:

 1. Connect the device to a 5V2A or 9V/2A QC3.0 adapter through a type-C quick charge cable, to switch on the power. The LED indicator will flash twice when powered on.
2. Place your smartphone on the destined wireless charge area. The LED indicator will remain on until the phone is fully charged and 1 minute has passed.
3. When a foreign object is detected between the phone and wireless charging area, the indicator LED will flash rapidly.

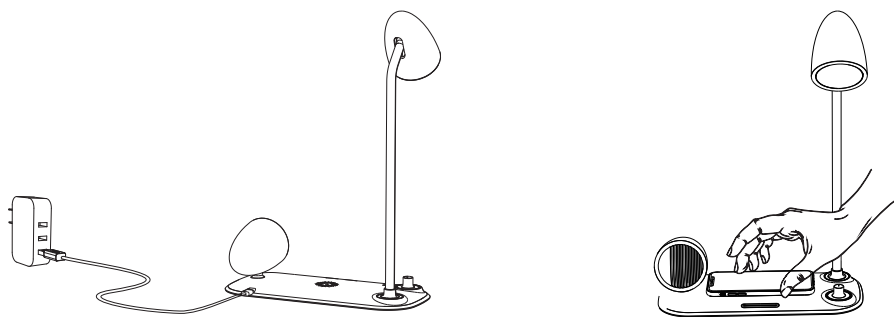


Compatible devices

1. Apple: iPhone 13, iPhone 13 mini, iPhone 13 Pro, iPhone 13 Pro Max, iPhone 12, iPhone 12 Mini, iPhone 12 Pro, iPhone 12 Pro Max, iPhone 11, iPhone 11 Pro, iPhone 11 Pro Max, iPhone X, iPhone XS, iPhone XS Max, iPhone XR, iPhone 8, iPhone 8 Plus.
 2. Samsung Galaxy S: 21 5G, 21+ 5G, 21 Ultra 5G, FE 5G, 20 5G, 20+5G, 20 Ultra 5G, 10, 10+, 10e, 9, 9*, 8, 8+, 7, 7 edge, 6, 6 edge, 6 edge+6 G9209, 6Active; Galaxy Note: 10, 10e, 10+, 9, 8, 7, 6, 5.
 3. LG: G2 (VS980, Verizon version), G3, G6, G6+, G7, G7 ThinQ, G7+ ThinQ, G8, G8ThinQ, V30, V30+/35, V40 ThinQ, V50 ThinQ, LG Lucid2 (VS870), LG Optimus F5 (As870), LG Optimus Vu3, Spectrum 2, Optimus G Pro, Optimus Vull, Optimus LTE 2, etc.
 4. Motorola: Droid Turbo, Droid Turbo 2, Droid 5, Moto Maxx, Ultra M, Moto X Force.
 5. HUAWEI: P50, P50 Pro, Mate 40 Pro, Mate 40 Pro+, Mate 40 RS, Mate 30, Mate 30 RS, Mate 30 Pro, Mate 30E Pro, P40 Pro, P40 Pro+, P30 Pro, Mate 20 Pro, Mate RS.
 6. Xiaomi: 11 Ultra, 11 Pro, 11, 10s, MIX4, 10, 10 Pro, 9, 9 Pro, 9X, MIX 3, MIX 2S.
- Including other devices with wireless charging receiver built-in; other some devices need to add a wireless charging receiver.

Note: All devices must meet the Qi standard.

LED Lamp operation:

 
1. The angle can be adjusted up/down 90 degrees and left/right 60 degrees.
2. Rotating the switch to the right will turn on the light and will increase the intensity gradually up to maximum.
3. Rotating the switch to the left will gradually decrease the intensity of the light and will eventually turn off the light.

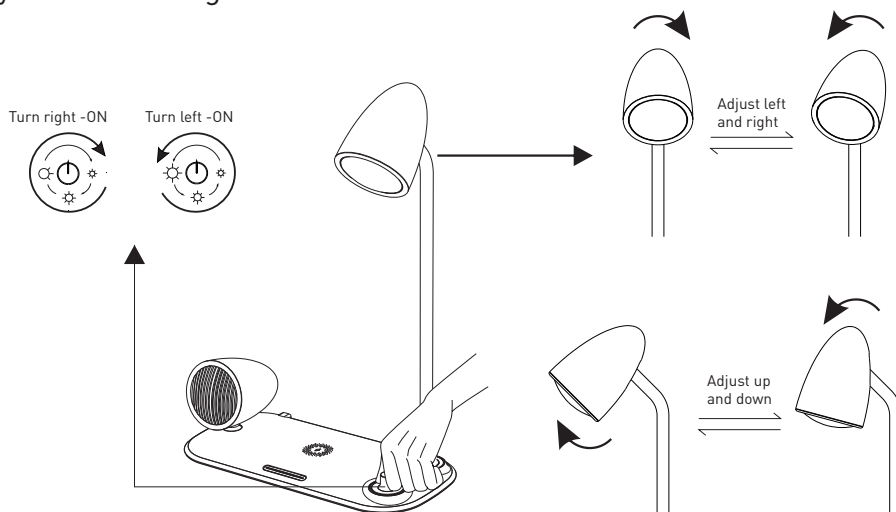

***Note – The light intensity cannot be adjusted if the Bluetooth speaker is turned on and used.

Bluetooth speaker operation

 1. Press and hold the rotary switch for 2 second to turn on the speaker.
2. The speaker will enter pairing state or connect to the last known device automatically.
3. Turn on the Bluetooth function on your phone/tablet/PC etc.... and search for Tellur Nostalgia
4. When the connection is successfully done, the speaker will emit a short notification sound.

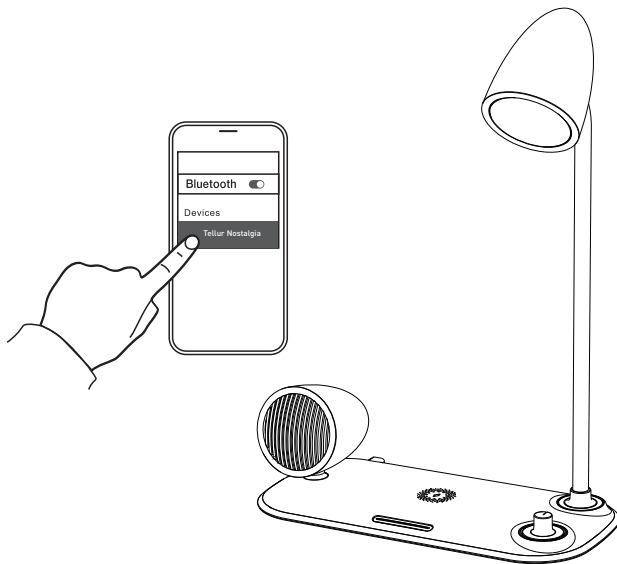

Using the rotary switch in Bluetooth mode

1. Rotating the switch to the right will increase the volume up to maximum. (a prompt sound will mark the maximum volume)
2. Rotating the switch to the left will decrease the volume up to minimum.
3. Short press the switch to play/pause
4. Long press the switch turn on/off the speaker.

4. Technical specifications

EN

Input: DC 5V/2A, 9V/2A

Input port: Type-C

Wireless power output: 15W(Max), 10W, 7.5W, 5W

Transmission distance: ≤6mm

Charging conversion rate: >75%

Product compatibilities: Fast charging* supported by iPhone 13 mini/ 13/ 13 Pro/ 13 Pro Max/ iPhone 12 mini/ 12/ 12 Pro/ 12 Pro Max, iPhone 11/ 11 Pro/ 11 Max, iPhone XR/ X/ XS Max/ XS, iPhone8/ 8 Plus, Samsung S22 Ultra/ S22+/ S22/ S21 Ultra/ S21+/ S21/ Note 20 Ultra/ Note 20/ S20 FE/ S20 Ultra/ S20+/ S20/ S10+/ S10/ S10e/ S9/ S9+/ S8/ Note 8/ S7 Edge, Google 5, LG G6, LG G6 Plus, LG V30 and other Qi compatible devices

Standard wireless charging for all Qi enabled devices

*Min. QC2.0 fast charger adapter required for fast wireless charging (not included)

Safety protections: Overvoltage protection, temperature control and foreign object detection

Bluetooth version: 5.1

Working range: 10M

Rated power: 5W

Speaker size: 50mm

Bluetooth Pairing name: Tellur Nostalgia

Lighting power: 2W

Multi-angle adjustment: Vertical 90°, Horizontal 60°

Dimmable: Yes

Lumens: 26LM

Color temperature: 3000K

Lifetime: 50,000H

Beam Angle: 120°

Material: ABS

Available colors: Black, White

Size: 290 x 140 x 406mm

Weight: 600gr

Attention!

1. Please, keep the device away from water or other liquids.
2. If you need to clean the device, please, make sure it is not connected to the power supply.
3. Do not disassemble or modify the device.
4. Product working environment temperature range: -20°C ~ 45°C degrees.

1. If you're experiencing interrupted or slow charging, check the following:
 - The back of your phone should not have any metal, pop sockets or credit cards.
 - Place the phone in the center of the charging surface (this lets the charging coil in your phone line up with the one inside the wireless charger).
 - Phone case should not be thicker than 5 mm for effective charging.
2. If you're failing to charge your device, please, try out the following:
 - Please, restart your cellphone and test with other USB cable.
 - Please, check whether the indicator turns on or not.
 - Please, check if the Adapter is QC3.0 Quick Charger (Output 9V/2A) or not. iPhone original adapter does not match with the wireless charger.
 - Please, check your phone case thickness ($\leq 5\text{mm}$).
3. If you're using the recommended wireless charger with the QC3.0 adapter and have removed any potential charging obstructions, but are still experiencing issues, try:
 - Replacing the cable connecting your wireless charger with the power supply.
 - Check if the power adapter is working properly.
 - Rebooting your phone.
 - Unplug the adapter and reinsert it.

Disposal and recycling information



The crossed-out wheeled-bin symbol on your product, battery, literature or packaging reminds

you that all electronic products and batteries must be taken to separate waste collection points at the end of their working lives; they must not be disposed of in the normal waste stream with household garbage.

It is the responsibility of the user to dispose of the equipment using a designated collection point or service for separate recycling of waste electrical and electronic equipment (WEEE) and batteries according to local laws.

Proper collection and recycling of your equipment helps ensure EEE waste is recycled in a manner that conserves valuable materials and protects human health and the environment, improper handling, accidental breakage, damage, and/or improper recycling at the end of its life may be harmful for health and environment.