

ASRock

AI QUICKSET

Experience AI In One Click

AMD GRAPHICS · WINDOWS VERSION



User Manual

Contents

Chapter 1 Introduction	1
Chapter 2 System Requirements	2
Chapter 3 Software Installation	3
Chapter 4 Launching AI Applications	8
4.1 DirectML Shark	8
4.2 Stable Diffusion web UI	12
4.3 Whisper Desktop	14
Chapter 5 Software Uninstallation	17
Chapter 6 Troubleshooting	20
6.1 DirectML Shark	20
6.2 Other Problems	21

Chapter 1 Introduction

ASRock AI QuickSet software tool can help users quickly download, install and set up artificial intelligence (AI) applications, and is very helpful in popularizing artificial intelligence (AI) technology, allowing enthusiasts to avoid the dilemma of complex installation and configuration.

Through a friendly user interface, ASRock AI QuickSet software tool guides users to download, configure and install various components of supported artificial intelligence (AI) applications, such as frameworks like TensorFlow or PyTorch, specialized AI function libraries, and runtime libraries and other body components, etc. It also prompts the user for configuration-specific options, or automatically set the default configuration for artificial intelligence (AI) applications. These enable users to ensure that artificial intelligence (AI) applications operate optimally without delving into complex configuration settings.

Whether it is a professional user who is familiar with artificial intelligence (AI) applications or an ordinary user who does not have extensive technical knowledge, the ASRock AI QuickSet software tool is undoubtedly an excellent choice for quickly experiencing AI applications!



NOTE

The pictures in this document are for reference only. The actual user interface may vary with the updated software version.

This documentation includes instructions on how to install and uninstall the AI QuickSet software on your Windows system, and how to launch the third-party AI applications as listed below:

- DirectML Shark
- Stable Diffusion web UI
- Whisper Desktop

Chapter 2 System Requirements

Hardware Requirements	
CPU	<ul style="list-style-type: none"> • Intel® 14th/13th/12th Gen Core™ Processors • AMD Ryzen™ 7000/5000 Series Processors
Motherboard	<ul style="list-style-type: none"> • Intel® 700/600 Series Motherboards • AMD 600/500 Series Motherboards
Memory	32 GB
Graphics Card	ASRock AMD Radeon™ RX 7000 Series Graphics Cards ¹
Storage	Minimum of 25 GB of available space (SSD recommended)
Internet Connection	Internet connection is required for both installation and operation (Broadband recommended)

Software Requirements	
Operating System	<ul style="list-style-type: none"> • Microsoft® Windows® 10 22H2 64-bit and later versions² • Microsoft® Windows® 11 22H2 and later versions²
Driver	The latest driver for AMD Graphics ³



NOTE

1. ASRock AI QuickSet software supports only the platforms that are equipped with ASRock AMD Radeon™ RX 7000 series graphics cards.
2. Please perform a clean installation of Windows® 10/11 and then run the Windows Update to ensure it is up to date, as the status shown below.



3. You can find and download the latest driver of AMD Graphics here: <https://www.amd.com/en/support>

Chapter 3 Software Installation


1. Download the compressed file "ASRock AI QuickSet" from ASRock website.
Check if the version is preferred. Extract the installer files. Then double-click on the installer's icon to start the installation.




2. When the Welcome page pops up, click "Next".




3. Read the license agreement and select "I accept the agreement". Click "Next".

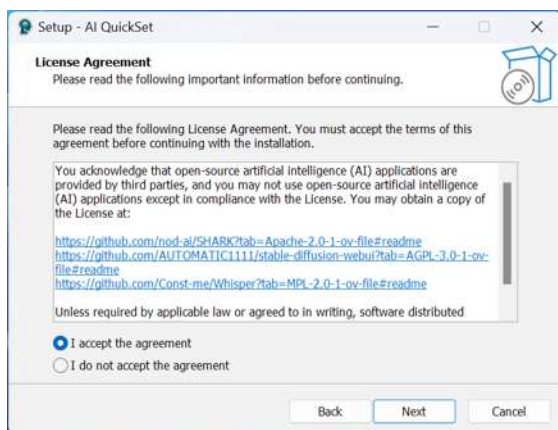


- Select the folder where to install this software, and then click “Next”.

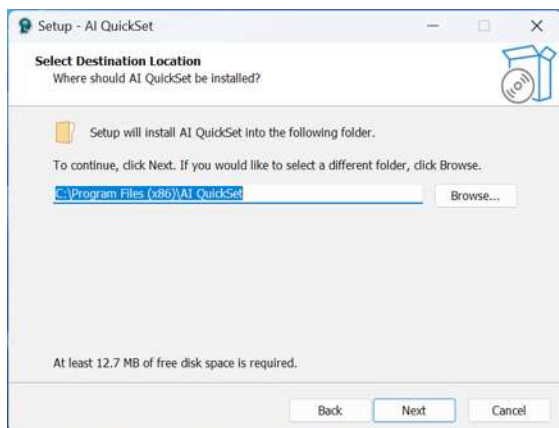


- Select the AI application(s) you want to install, and then click “Next”.

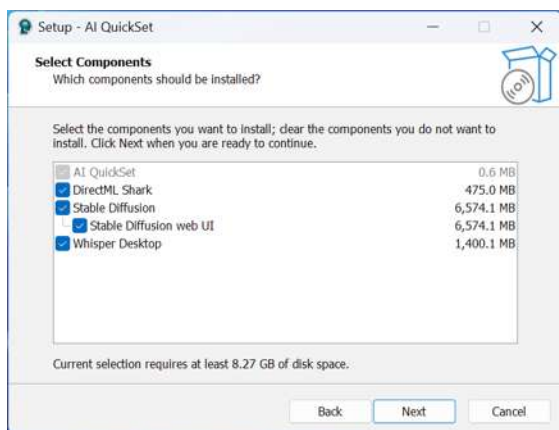

6. Verify every task and item, and then click “Install” to start installation procedures.

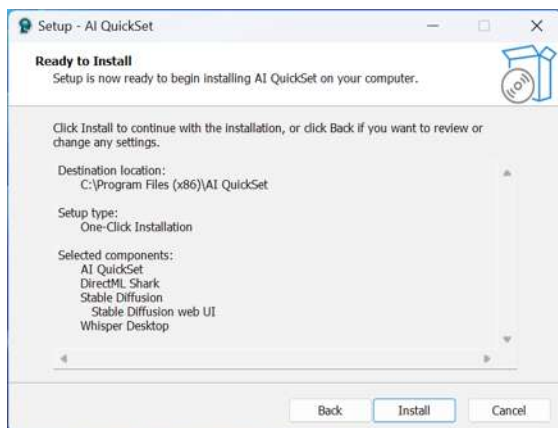

7. The installation process may take about 5 minutes. Actual time spent may vary depending on your system configuration and network speed. Please wait patiently until it is done.

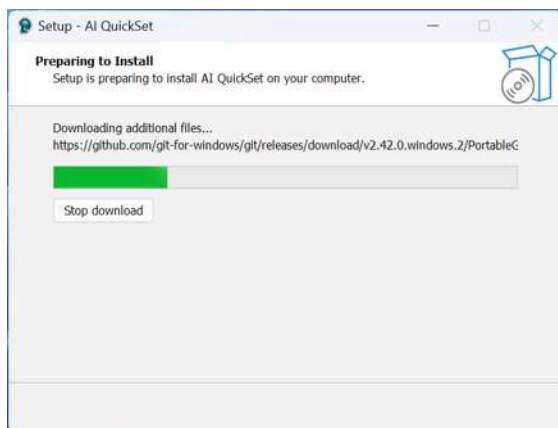


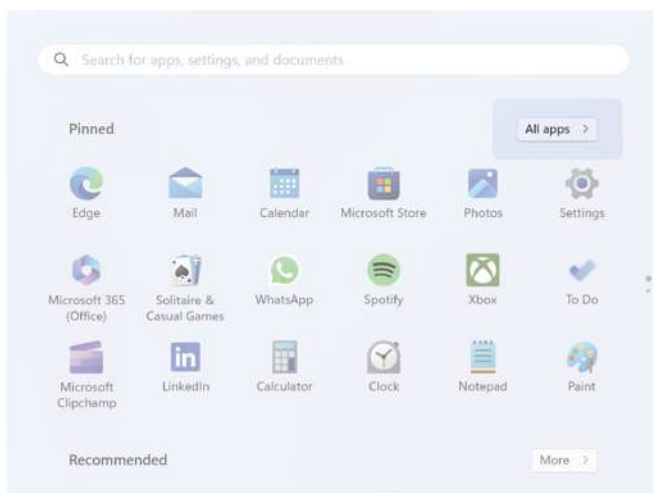
8. When installation process is complete, click “Finish” to exit the setup wizard.




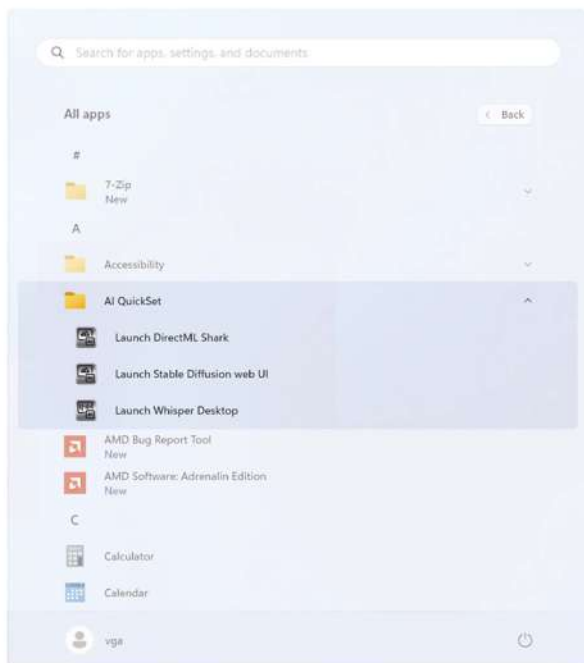
9. After completing the installation, you can find the launchers for your installed AI applications at below location. Here we take Windows 11 as an example.

- **Shortcuts in the Start Menu**

1. Click on the Start menu icon  in the center of the taskbar.
2. Click "All apps" on the upper right corner in the window.



3. Click  on the "AI QuickSet" item to expand the sub menu and you will see the shortcuts of the AI applications installed via the AI QuickSet software.



- **Shortcuts on the Desktop**



Chapter 4 Launching AI Applications


4.1 DirectML Shark

DirectML Shark is an AI model that can generate images from text prompts.


1. Click on the “Launch DirectML Shark” icon.



2. Then the initialization window pops up. When you launch it for the first time, please wait for a few minutes for the application to configure itself.

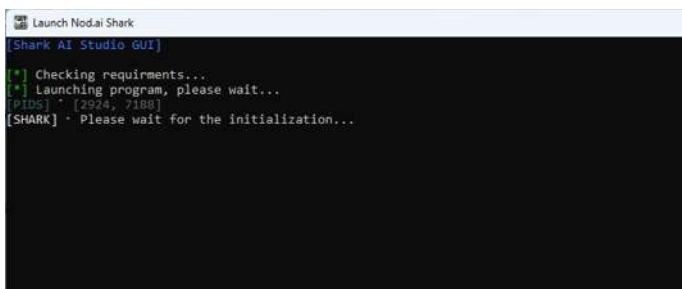

3. Click “Allow” to continue.

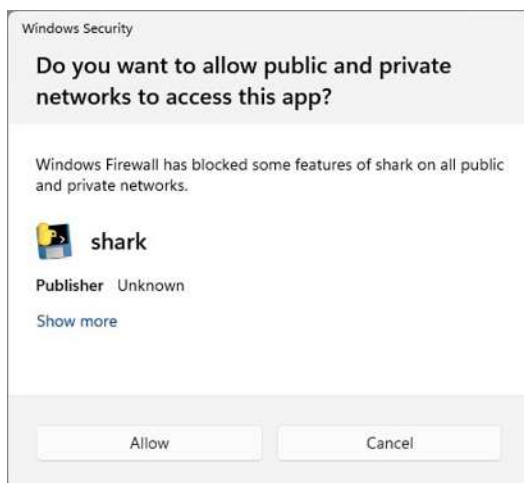

- When the "SHARK AI Studio" panel appears please do the following steps to create images.

Step 1.

Click ▼ button to expand the "Models" drop-down menu.


Step 2.

Select "stabilityai/stable-diffusion-2-1" model in the drop-down list.

Step 3.

Then click the "Generate Image(s)" button, and it will start to download the model checkpoint file and generate the image(s).

It may take a few minutes for the first time. Please wait patiently.

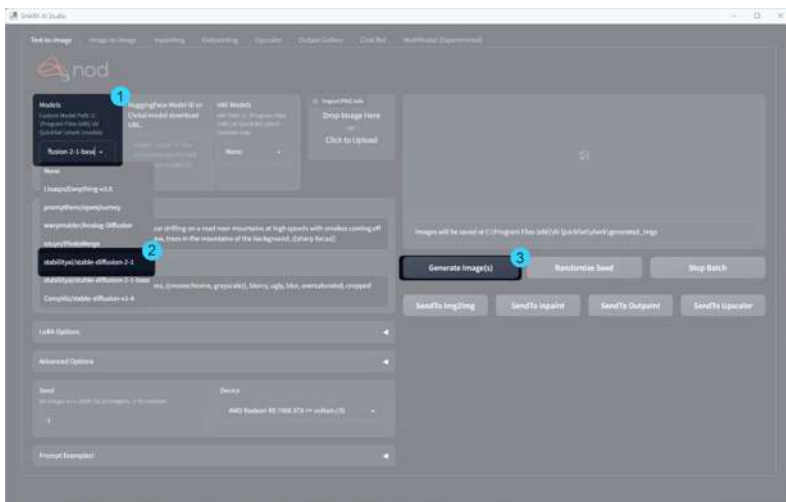

Important

Please note that the initialization window will remain on the screen when the "SHARK AI Studio" panel appears.

Do not close the initialization window while you are using the DirectML Shark application.

When you close the "SHARK AI Studio" panel, the initialization window will be closed immediately as well.


5. You can also key in prompts in the "Prompt" and "Negative Prompt" columns and customize settings in the "Advanced Options" column to generate more unique images.

- Key in prompts

Enter positive and negative prompts to define the image(s) you would like to generate. Use clear, concrete and specific prompts because the more specific the prompt, the more likely it is that the AI will generate accurate image(s).


Prompt - Describe what should exist in the image(s)

Negative Prompt - Describe what should be avoided in the image(s)

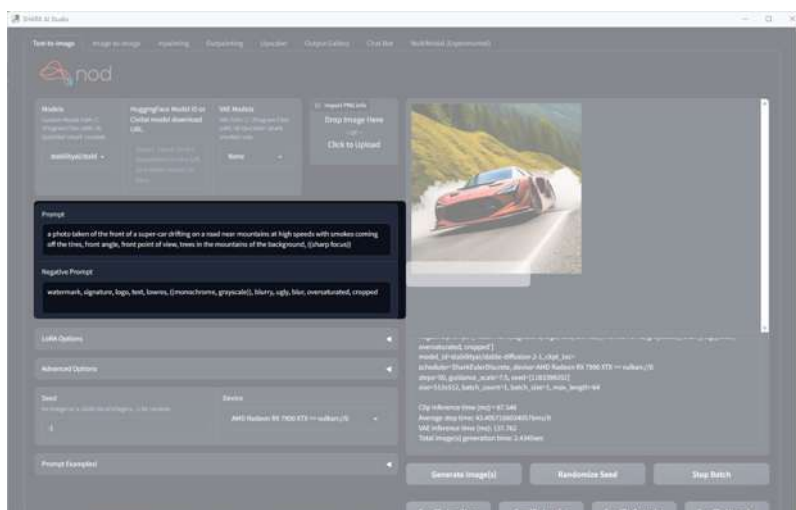

- Customize settings

Click on the ◀ icon on "Advanced Options" to configure more settings.

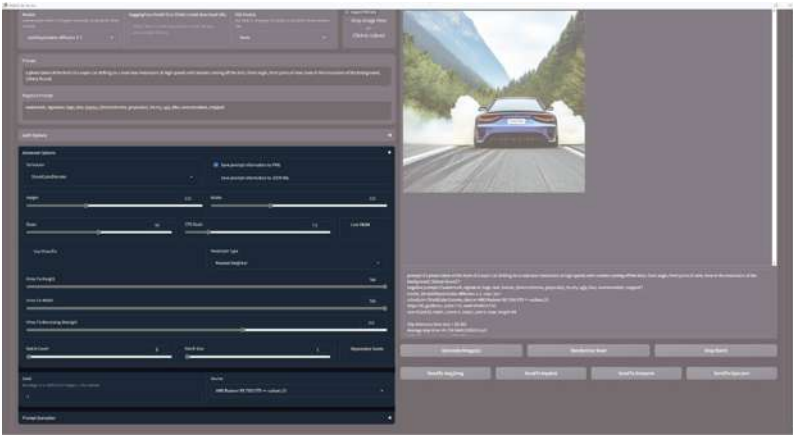

4.2 Stable Diffusion web UI

Stable Diffusion web UI is an AI model that can generate images from text prompts.

1. Click on the “Launch Stable Diffusion web UI” icon.



2. Then the initialization window pops up. When you launch it for the first time, please wait for a few minutes for the application to configure itself.

A screenshot of a terminal window titled 'Launch Stable Diffusion web UI'. The window shows the following text:

```
[Stable Diffusion Web UI]
[*] Checking system path...
[*] Checking virtual env path...
[*] Virtual env found.
[*] Installing requirements, this may take a few minutes...
[*] Starting web service...
[PIDS] . [14952, 8748]
[WEB] . Web is running on http://127.0.0.1:7860, To stop, press ctrl+c or close button
```

- Once the launching process is done, the "Stable Diffusion" window pops up automatically. Please do the following steps to create images.

Step 1.

Click ▼ button to expand the "Stable Diffusion checkpoint" drop-down menu.

For the first time running this application, please select "v1-5-pruned-emaonly.safetensors" model in the drop-down list.


Step 2.

Choose "txt2img" tab and key in the prompt you prefer in the column.

Step 3.

Then click the "Generate" button, and it will start to download the model checkpoint file and generate the image(s).

It may take a few minutes for the first time. Please wait patiently.

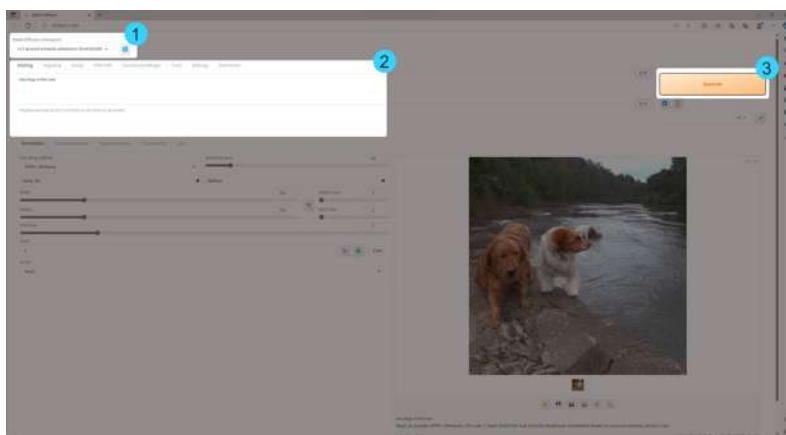

Important

Please note that the initialization window will remain on the screen when the "Stable Diffusion" panel appears.

Do not close the initialization window while you are using the Stable Diffusion application.

After you close the "Stable Diffusion" panel, please also close the initialization window as well.


4.3 Whisper Desktop


Whisper Desktop is an automatic speech recognition system that can convert spoken language into written text.

1. Click on the "Launch Whisper Desktop" icon.




2. For the first time, you need to load the Whisper Desktop model.

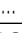
In the "Load Whisper Model" window, click on  icon to select the model file. The default location is "C:\Program Files (x86)\AI QuickSet\whisper".

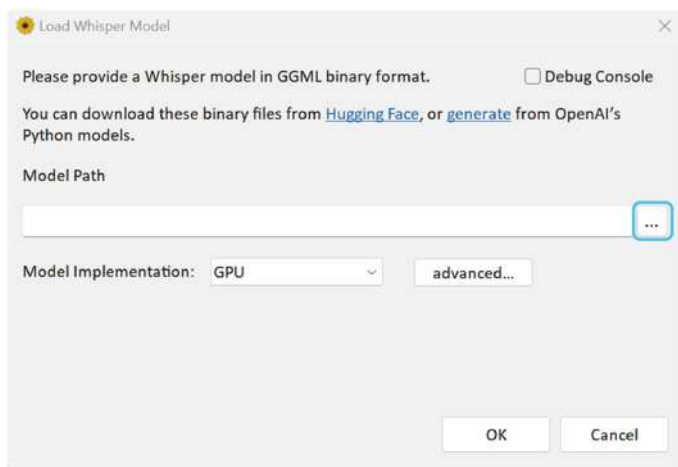

3. Click "OK" to start loading the model file.

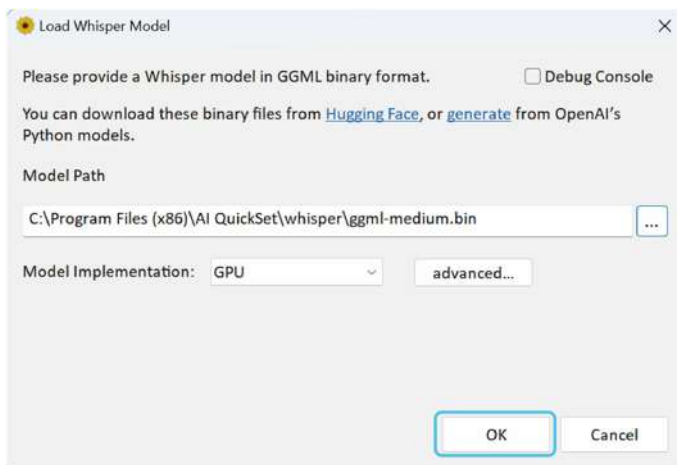


4. When it's completed, the "Transcribe Audio File" window pops up automatically.

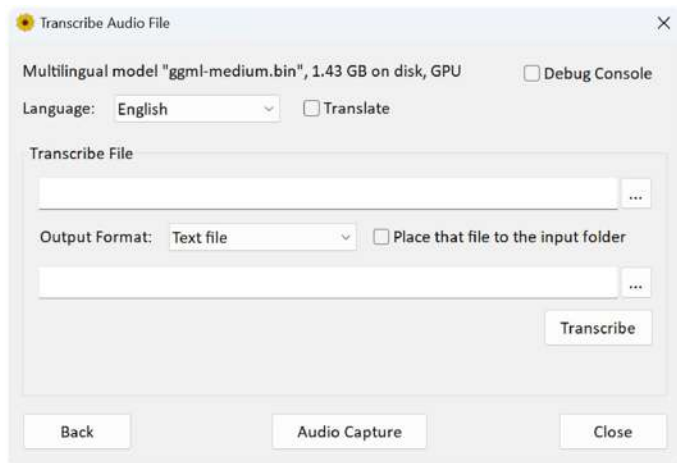

5. Please do the following steps to convert spoken language into written text.

Step 1.


Click on  icon to select the audio file you want to transcribe.

Step 2.


Click on  icon to designate the location to save the file.

Step 3.

Then click the “Transcribe” button, and it will start to translate and transcribe your audio file.

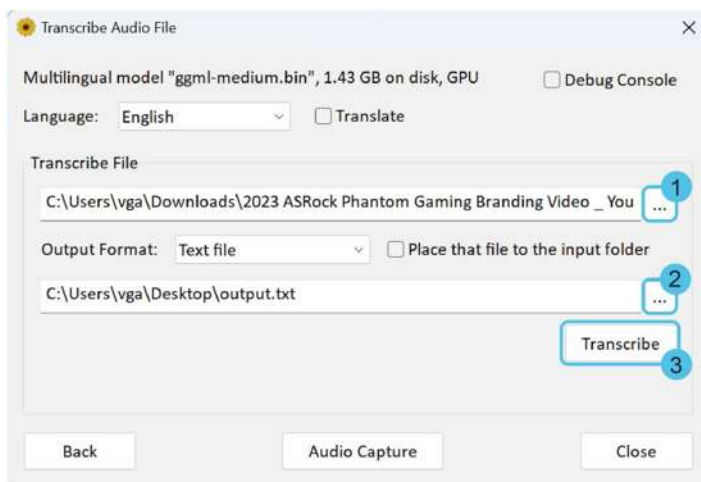


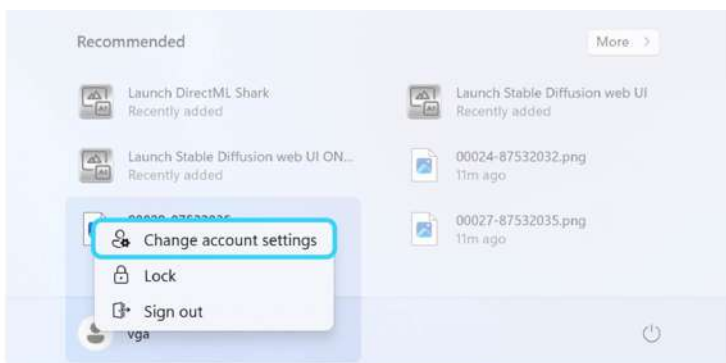
6. When transcription is completed, you will see the picture below. Click "OK" to close the window.

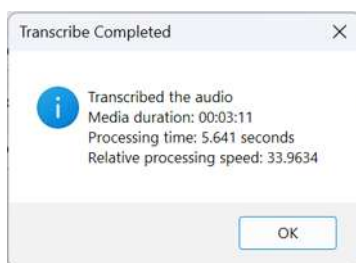


Chapter 5 Software Uninstallation

Please follow the steps below to remove the "AI QuickSet" software when it's no longer needed. Here we take Windows 11 as an example.


1. Click on the Start menu icon  in the center of the taskbar.
2. Right-click on your account name and select "Change account settings" to access your Account Settings page.



3. Select the "Apps" tab to head to the Apps page. Click on the "Installed apps" from the right pane.

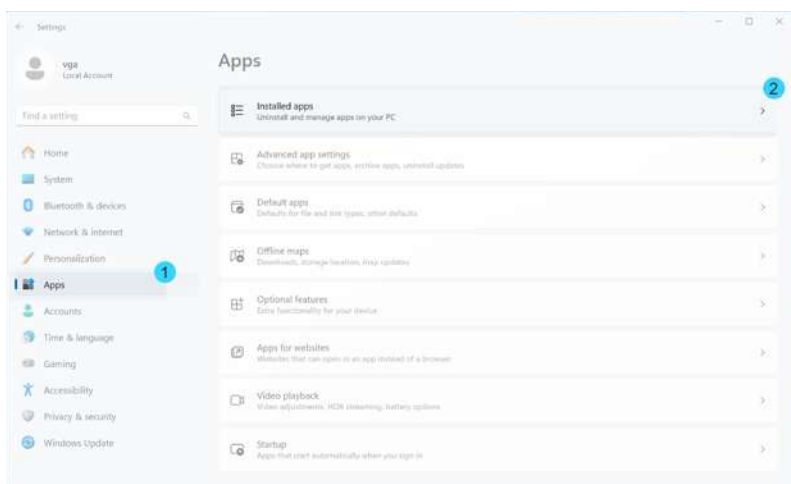


- Find the "AI QuickSet" software in the list. Click on "..." to expand the sub menu, and then select "Uninstall".

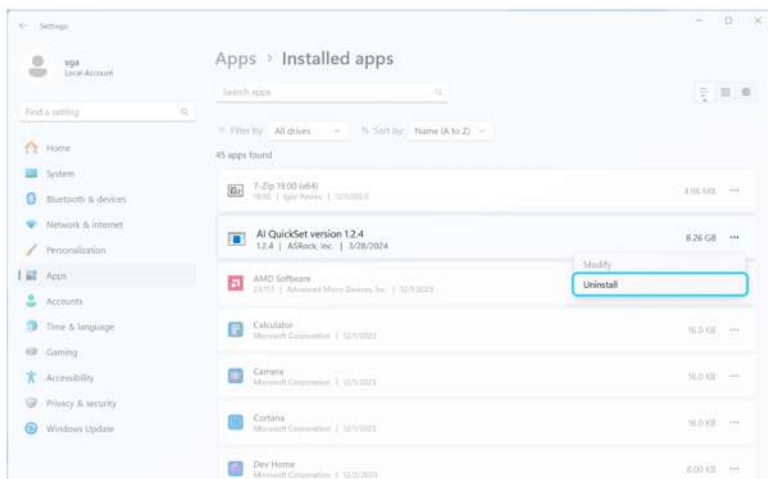

- Click the "Uninstall" button to confirm the removal.
- Click "Yes" to start the uninstall process.



7. Wait for the uninstall process to complete.

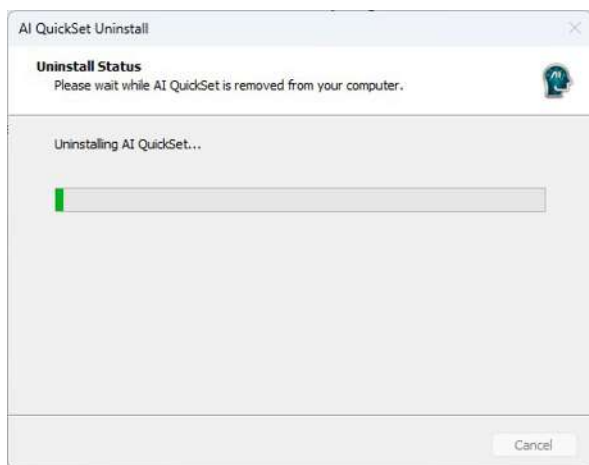


8. When the software has been uninstalled successfully, click "OK" to close the window.




Chapter 6 Troubleshooting

6.1 DirectML Shark

Initialization Failed

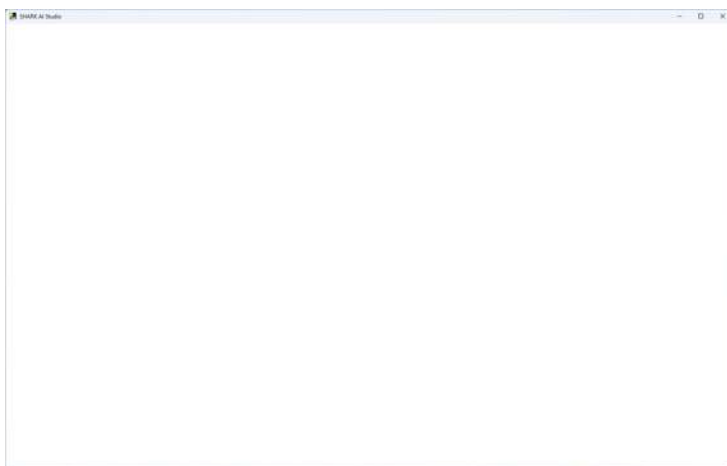

1. Visit <https://developer.microsoft.com/zh-tw/microsoft-edge/webview2> to download "Microsoft Edge WebView2 runtime".
2. When the download process is done, right-click on the "Microsoft Edge WebView2 runtime" installer, and choose "Run as administrator" for installation.

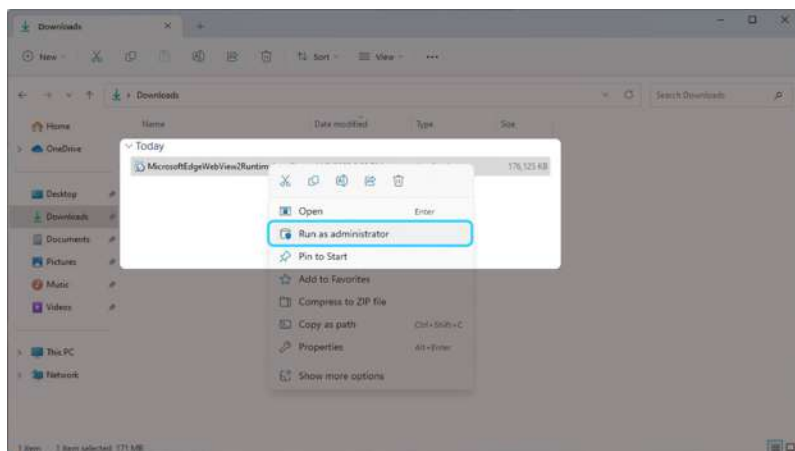

6.2 Other Problems

- If you encounter any other problems, please reboot your computer and install the AI QuickSet software again.

Version 1.1

Published March 2024

Copyright©2024 ASRock INC. All rights reserved.

Copyright Notice

No part of this documentation may be reproduced, transcribed, transmitted, or translated in any language, in any form or by any means, except duplication of documentation by the purchaser for backup purpose, without written consent of ASRock Inc.

Products and corporate names appearing in this documentation may or may not be registered trademarks or copyrights of their respective companies, and are used only for identification or explanation and to the owners' benefit, without intent to infringe.

Disclaimer

The content of this documentation will be subject to change without notice. In case any modifications of this documentation occur, the updated version will be available on ASRock's website without further notice. If you require technical support related to this product, please visit our website for specific information about the model you are using.

ASRock Website: <http://www.asrock.com>

Terms of Notice

Any configuration other than factory specification is not guaranteed.

The pictures in this document are for reference only. The actual user interface may vary with the updated software version.

The open-source artificial intelligence (AI) applications are provided by the third parties, and users may not use these applications except in compliance with their license.

Unless required by applicable law, the software and the open-source artificial intelligence (AI) applications are distributed on an "AS IS" BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND. IN NO EVENT WILL ASROCK INC. BE LIABLE TO USER OR ANY OTHER PARTY FOR ANY DIRECT OR INDIRECT DAMAGES, LOST PROFITS, LOST SAVINGS, OR OTHER INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGES WHICH MAY ARISE OUT OF OR RELATE TO THE SOFTWARE AND THE OPEN-SOURCE ARTIFICIAL INTELLIGENCE (AI) APPLICATIONS.

ASRock Contact Information

If you need to contact ASRock or want to know more about ASRock, you're welcome to visit ASRock's website at <http://www.asrock.com>; or you may contact your dealer for further information. For technical questions, please submit a support request form at <https://event.asrock.com/tsd.asp>

ASRock Incorporation

e-mail: info@asrock.com.tw

ASRock EUROPE B.V.

e-mail: sales@asrock.nl

ASRock America, Inc.

e-mail: sales@asrockamerica.com