

case

LOGIC

PRINTER SLUG  
FOR MANUAL

BRAND: CASE LOGIC

CATEGORY: **BT Speakers**

DESCRIPTION: **10W BT Fabric Speaker w/FM- AC**

FILE NAME: **CL-AU-BS-118-AC RGB Manual**

BARCODE: **805112137862**

INNER BOX QUANTITY: **4**

MASTER CARTON: **24**

PRESS WORK: TRIM TO SIZE, SCORE & FOLD  
WHERE SPECIFIED

SCALE: **100%**

COLOR(S): **BLACK, 1/1.**

SUBSTRATE TYPE: **C2S MATTE ART PAPER 128gsm**

VARNISHING TECHNIQUE:  
**MATTE VARNISHING**

PRESS SPEC COLOR REFERENCES

DIELINE

FOLDING LINES

APPROVAL CHECKLIST:

PRIMARY DESIGNER: IOSIF

DATE: **03.11.2025**

PROOF READ:  
DATE:

APPROVED BY:  
DATE:

AUTHORIZATION  
SIGNATURES:

SCORE AND FOLD AS SHOWN ON THIS PICTURE

DO NOT PRINT "PRINTER SLUG" LAYER!

Read all safety information below and operating instructions before using the Wireless Portable Speaker to avoid injury and damage to your device, and store them for possible future reference. We assume no responsibility for the damage due to improper operation of the Speaker.

**SAFETY INSTRUCTIONS**  
**WARNING:** Do not use this unit for anything other than its intended use. Do not puncture, throw, drop, bend, or modify this product.  
Do not throw this product into fire or water.  
Do not short-circuit the battery with any metal or metallic objects. Do not expose this product to corrosive liquids such as salt water. Do not operate the unit if it has been wet through for a prolong time to prevent against electric shock and/or injury to yourself and damage to the unit. Do not allow children to play with this product as it is not a toy, and may present a choking hazard. Avoid leaving your device in direct sunlight, such as on the dashboard, console, or seat of a vehicle. Do not leave your device, or use your device, in any area where the temperature is likely to drop below 32° F, or may exceed 140° F, such as inside a closed vehicle on a hot day. Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk. Protect your hearing by always listening at a safe level. Prolonged use at elevated volumes may affect your hearing capacity and could result in hearing loss. To avoid damage to the speaker, please only use a USB 5V/1A or higher charger. In order to ensure the battery life, charge normally at least once a month.

**SPECIFICATIONS**  
Bluetooth® Version: 5.3.  
Working distance: 33 ft.  
Charging Interface: USB Type-C.

Input: 5V/1A Max.  
Speaker Size: 52mm.  
Sound Output: 4Ω, 10W (5W X 2).  
Frequency Response: 20Hz - 20kHz.  
Sensitivity: 92 dB ± 2 dB.  
Battery: 800 mAh.  
Speaker Charge time: ± 2 Hr.  
Play Time: 12 Hours per charge, (dependent on volume level).  
Standby Time: 120 days.  
Special Features: TWS Pairing, USB-A Port, 3.5mm AUX Jack and Backside Elastic Strap.

**PACKAGE CONTENTS**  
IPX6 Wireless Portable Speaker, Type-C Charging Cable, AUX Cable & Instruction Manual.

**GETTING STARTED**  
Before using this device, fully charge it.

**CHARGING**  
1. Open a Protective Port Cover on the top of the speaker panel.  
2. Connect the small end of the USB Type-C charging cable (included) to the USB Type-C charge port located on the right side.  
3. Connect the larger end of the cable to your computer's USB-A port or an AC adapter (not included). The LED indicator will turn red while charging. When fully charged the LED red light will disappear.  
4. Unplug the charging cable from the power source.

**PAIRING**  
1. Turn on your Speaker and push the ON/OFF button for 3 seconds to put it in pairing mode.  
2. On your pairing device go to Settings and select Bluetooth® connection.  
3. Turn on Bluetooth® if it's not already on.

4. Select the "CL-BS-118" Speaker name to connect from the list of available devices. "Connected" message will appear to indicate it is connected successfully.  
The Speaker will connect automatically the next time.

**USING THE SPEAKER**  
Power Button/Play/Pause/Reset/Calls/TWS  
Press and Hold for 2 seconds to Power ON.  
Press and Hold for 3 seconds to Power OFF.  
Press and Hold for 8 seconds to Reset the Speaker.  
Press One Time to Play or Pause (When you listening to the music).  
Press One Time to answer an incoming phone call or end the call.  
Press and Hold for 2 seconds to Reject an incoming phone call.  
Quickly press Twice to Enter or Exit True Wireless Stereo (TWS) pairing mode with the same type of Speaker.

⏮ Button Volume Up or Next Song  
Short press: Volume Up.  
Long press: Next Song.

⏭ Button Volume Down or Previous Song  
Short press: Volume Down.  
Long press: Previous Song.

Mode Button: Voice Assistant or Phone Calls  
Press and Hold for 2 seconds to activate Voice Assistant mode. Works With Siri® and Google Assistant™.  
Quickly Press Once to switch modes in the following order: to enter Bluetooth® Mode, to activate 3.5mm AUX Jack, to activate USB Type-A Port and to activate the Ultra Micro SD Port.  
Quickly Press Twice to Redial the last call.

RGB LED LIGHTSHOW BUTTON  
Long Press to turn the RGB light ON or OFF.  
In Bluetooth® Mode, Double Press to disconnect Bluetooth® Mode.  
In Bluetooth® Mode, Long Press for 5 seconds to clear Bluetooth® pairing information.

**PAIRING MODE OF TRUE WIRELESS STEREO (TWS) FUNCTION**  
\*This function requires a second speaker of the same type  
Turn your second speaker ON. Turn your main speaker ON. Quickly Press Two Times the Power Button to enter the TWS Pairing Mode. When it is in pairing, the LED Charge Indicator flashes quickly. After successful connection the Indicator light stays on. Quickly press the Power Button Two Times again to exit TWS pairing mode.

When there is an incoming phone call, while you're listening to the music, the main Speaker will start ringing. You can answer or reject the call.

The TWS pairing function will remember the connected speaker and doesn't need to be connected again after the speakers are turn OFF.

**TROUBLESHOOTING**  
No power:  
Recharge your speaker using the included USB Type-C charging cable. Try using a different cable.

Music is not playing or the volume is too low:  
Make sure your Bluetooth® device has A2DP profile. Check the volume of your smartphone or the Speaker and adjust the volume. Check if the battery level is too low, please recharge it. Check if both devices are paired and connected over Bluetooth®. Restart the Speaker to reconnect to Bluetooth® device.

⏮ Button  
⏭ Button  
Microphone  
RGB LED Lightshow Button  
Power/Play/Pause/Reset/Calls/TWS Button  
Mode/Voice Assistant/Call Button  
3.5mm AUX Jack  
USB Type-C Charge Port  
LED Charge Indicator  
Ultra Micro SD Port  
USB Type-A Port

OUTSIDE PAGES

Make sure you are within 33 ft (10 m) of the effective connection distance. Check if there is any obstacle between the speaker and your device.

Bluetooth® device will not reconnect with the Speaker. Navigate to your Bluetooth® settings menu on your device, tap "CL-BS-118" and select "Forget". Now follow the steps to pair your device again.

**FCC COMPLIANCE STATEMENT**  
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.  
Caution: Any changes or modifications not expressly

approved could void the user's authority to operate the equipment.

**WARRANTY**  
Bytech NY INC. warrants this product to be free from defects in materials and workmanship to the original purchaser for a period of 12 months from the original purchase date. Bytech responsibility with regard to this limited warranty shall be limited solely to repair or replacement at its option of any product which fails during normal consumer use. This warranty does not extend to damage or failure which results from misuse, neglect, accident, alteration, abuse, improper installation or maintenance.  
At any time during the 12 months period following the purchase, if the product fails due to defects in material or workmanship, return the defective product (with freight prepaid) with proof of purchase.

\*All trademarks and copyrights are property of their respective owners.

Apple® and Siri® are trademarks of Apple Inc., registered in the U.S. and other countries. Bluetooth® is a registered trademark of SIG Inc. Google, and the Google Assistant are registered trademarks of Google Inc. registered in the U.S and other countries. USB Type-C® and USB-C® are registered trademarks of USB Implementers Forum, Inc.

This product is not designed, manufactured, sponsored, or endorsed by Apple Inc., SIG Inc., Google LLC, or USB Implementers Forum, Inc.

Bytech and Thule Group have no affiliation to Apple Inc., SIG Inc., Google LLC, or USB Implementers Forum, Inc.

\*Actual products may differ slightly, images are for illustrative purposes only.

Manufactured by Bytech NY INC., an authorized Licensee of Thule Group.


©2025 Thule Group  
42 Silvermine Road, Seymour, CT 06483 USA.  
Avenue Jean Monnet 4, 1348 Louvain-la-Neuve, Belgium.  
Unit 806, 8/F, CTF Life Tower, 18 Sheung Yuet Road, Kowloon Bay, Hong Kong.  
caselogic.com


Contact Info:  
2585 West 13th Street, Brooklyn, NY 11223.  
Manufactured by Bytech NY Inc., an authorized Licensee of Thule Group®.

©2025 BYTECH NY INC. BYTECH™ is a registered trademark of Bytech NY INC. www.bytechintl.com

**WARRANTY: 12 MONTHS**  
Please visit our website: www.Bytechintl.com/warranty or call us at (718) 449-3700.  
Made in China.

LIFE, SIMPLIFIED.





**Bluetooth®**

**WIRELESS SPEAKER**

With TWS Function & RGB LED Lights  
CL-AU-BS-118-AC

Front Cover