



DC80 Mini WiFi Dash Cam User Manual



Model No.: DC80




Table of Contents

Part 1: Before First Use	1-2
Part 2: Detailed User Manual	4-24
Part 2: Detailed User Manual	
What's Included	4
DC80 Diagram	5
Before Using Your DC80 Dash Cam	6-7
1. Charging the Camera	6
2. Installing the Micro SD Card	6-7
Button Specification for Function Operation	8
How to Use Your Conbroy DC80 Dash Cam	9-11
1. Turn on/off the Camera	9
2. How to Record A Video	9
3. How to Take Photos	10
4. How to Playback the Videos/Pictures	10
5. How to Use SOS	11
6. How to Play Videos on Computer	11
How to Set Your Conbroy DC80 Dash Cam	12-15
1. About G-sensor	12
2. About Parking Monitoring	13
3. About GPS	14-15
How to Remote Control Your Conbroy DC80 Dash Cam	16-17
1. Download the App "RoadCam"	16
2. Connect DC80 Dash Cam to Your Phone	16-17
LED Status	18
Technical Specifications	19
FAQs	20
Warranty	21
Disposal	21
Declaration of Conformity	21

Part1: Before First Use

■ Charging the Camera

 Before the first use, charge the camera via USB charger. The dash cam will turn on automatically when charging.

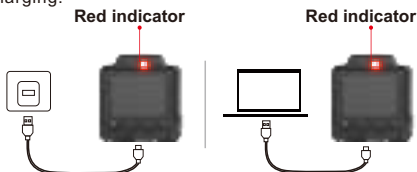

■ Formatting the Micro SD Card

Before the first use, format the Micro SD card to FAT32 format. The camera only supports class 10 micro SD cards with at least a 8GB capacity.



Part1: Before First Use

■Resetting the Camera

If the cam malfunctions for any reason, reset it with the included pin or small paperclip.



Safety precautions

- Read this instruction manual carefully before using the camera. It contains important information for your safety as well as operating and maintenance instructions.
- Follow all safety precautions in order to prevent damage due to improper use of the camera.
- Keep this user manual for future use. Should this camera be passed along to a third party, this user manual should be handed on as well.
- Use the camera only for its intended purpose.
- In the event of improper use or erroneous handling, no liability can be assumed for any possible damage which may occur.
- Never try to repair the camera yourself. Only allow qualified personnel to repair the camera in the event of malfunctions.
- Warning! Never immerse the camera in water or other liquids while cleaning or operating it. Never hold the product under running water.
- Do not open the housing under any circumstances. Do not introduce any metal objects into the interior of the housing.
- Never use accessories which are not recommended by the manufacturer.
- Keep the camera away from all hot surfaces and flames. Protect the camera from extreme heat and cold, dust, direct sunlight, humidity , and water.
- Do not place heavy objects on the camera. The manufacturer is not responsible for any missing video data due to maloperation, microSD card malfunctions, camera angle limitation, etc.

What's included?



Conbrov DC80
Car Dash Cam



Car Charger



Car Bracket



USB Cable



 
Card Reader



Pin




CD




User Manual

 
DC80 Diagram

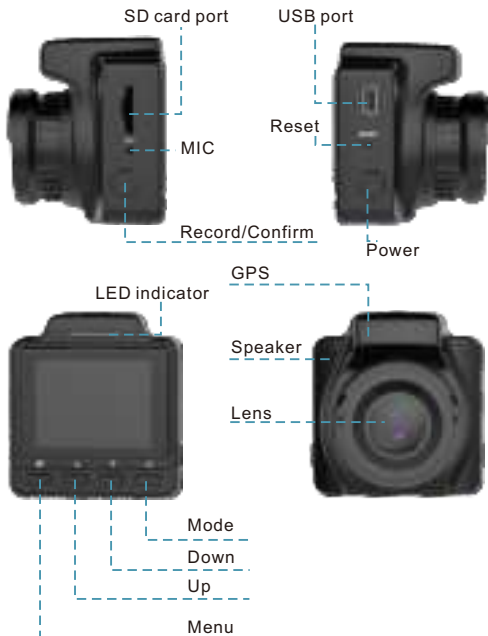

Before Using Your Conbrov DC80 dash cam

 1.Charging Your Camera

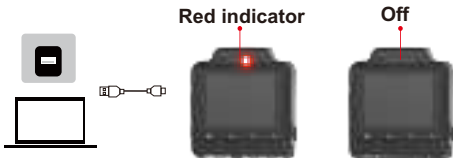

Steady red ●	Charging
Off ○	Fully charged
The screen showing "Low Battery"	Low power 

- (1) You cannot turn off the camera while charging.
- (2) It will record automatically when start the engine.
- (3) The red LED turns off when the camera is fully charged.

2.Installing SD Card



Installing the microSD









Removing the microSD

Before Using Your Conbrov DC80 dash cam

Caution! Format the Micro SD before first use. Doing this, however, will remove all data from the card. Make sure to back up any data before formatting.

- (1) Only supports a Class 10 Micro SD with at least 8GB capacity for recording.
- (2) Do not remove the Micro SD card during operation. It will damage both the memory card and camera.
- (3) Push the Micro SD card into the memory card slot gently until it clicks into place. The card only fits one way, so do not force the card into the port.
- (4) To remove the Micro SD card, make sure the camera is OFF. Press down on the Micro SD and it will pop up, you can then pull it out easily.

Button specification

A: Power	B: Record/confirm
 <p data-bbox="95 403 505 511">Press the power button to turn on the dash cam, the camera make a sound and the LCD screen lights up.</p>	 <p data-bbox="530 415 940 497">Press the button to start recording or taking photo after the camera powers on.</p>
C: Menu	D: Mode
 <p data-bbox="95 771 505 942">In standby mode, press "Menu" button to enter into menu option, you can set parameter information and preview it; when in menu mode, press "Enter", then you can set parameter information and save it.</p>	 <p data-bbox="530 779 885 882">In standby mode, short press modes button, then you can switch between photo and recording mode.</p>
E: Select up/down	F: Reset
 <p data-bbox="105 1231 481 1313">In menu/mode mode, press "up/down" button, then you can choose the menu items.</p>	 <p data-bbox="547 1231 911 1365">If the camera malfunctions for any reason, You can click the reset button to reset. When resetting is successful, restart the camera to use.</p>

How to Use Your DC80 Dash Cam

1. Turn on/off the Camera

The camera will turn on automatically when charging or starting the engine and turn off when stop charging or the engine.

(1) Press power button to switch the camera on. The led will light up blue on the left, which indicates that it is in standby mode.



(2) Press the power button again to switch the camera off. The led blue will turn off.





Note:

1. Stop recording first before turning off the dash cam.
2. The battery power is too low and the camera must be charged.

2. How to Record Manually


Power on the camera, press M button to switch to recording mode, then press the  button to start recording videos, the red icon  flashes on the screen and the Led flashes blue.

In recording mode, press the  button again to stop recording, the  disappears and LED stays blue.




How to Use Your DC80 Dash Cam

3.How to Take Photos

Power on the camera, press M button to switch to photo mode, then press the  button to take a photo, the Led stays blue. The photo will save automatically to the SD card.



4.How to Playback the Video/Photo

In photo mode, press the M button to enter the playback mode, then press up/down to choose the video/ picture file, press  button to play the video.



How to Use Your DC80 Dash Cam

 
 
5.How to Use SOS

In recording mode, press  button to lock the video files and cannot be recovered.




6.How to Play Video on Computer

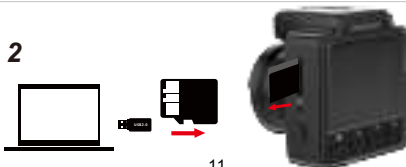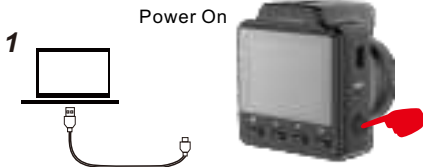

Connect the dash cam to computer via USB cable, power on the dash cam and will show a folder on you computer, you can play the video/picture or save them as you want.



How to Set Your DC80 Dash Cam

Press  button to format the sd card and set the date, parking monitoring, motion detection, record audio, frequency, loop recording ect:




1. About G-sensor

The dash camera will automatically lock videos of unexpected incidents, the sensitivity is optional, In the menu, press up/down button to find the "GSENSOR" then press  button to choose "off", "low", "medium", "high", press  button again to save the option. The sensitivity is default to "medium".



How to Set Your DC80 Dash Cam

2. About Parking monitoring



Short press  button twice, then press down button to choose "parking monitor", and then press  button to choose on or off. Press  button again to save the option.

In menu mode, Press  button again to end menu settings.



How to Set Your DC80 Dash Cam

3. About GPS

1. The dash cam will search GPS signal once powered on, the screen shows  flashing meaning in searching GPS, the  stays on meaning GPS is working.

In menu mode, Press  button again to end menu settings.



2. How to play GPS information

If the GPS working when recording, you can play the videos with GPS on the player that included in the package:

1. Please play the CD in the package to download the "Driving Recorder Player" to computer. please choose the Google Driver.




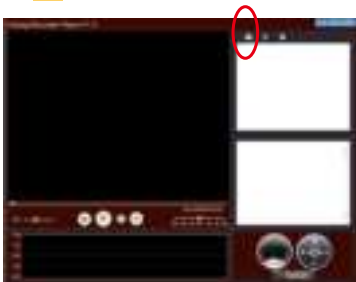 
 PlayerSetup-Baidu-DrivingRecorder...

 PlayerSetup-Google-DrivingRecorder...

How to Set Your DC80 Dash Cam

2.Install the player on computer and open the player.

3.Click the  on the right to choose the video that you want.



4.You can check the location on the player now.






How to Remote Control Your DC80 Dash Cam

1.Download the APP “RoadCam”

Scan the code to download the APP RoadCam, or search the RoadCam on App Store or Google play to download it.



2.Connect DC80 Dash Cam to Your Phone


Power on the dash cam, press the  button twice, press **down** button to choose the wifi, press  button to turn on wifi and press  button again to enter into wifi mode, the screen will show the wifi SSID and PWD.



How to Remote Control Your DC80 Dash Cam

3. Enter into the RoadCam app, click "Add Recorder" to enter your wifi connecting mode, find out the same SSID on the dash cam, and enter into the password as you see on the dash cam. Please note: one dash have only one SSID.



4. Now you have connected the dash cam to your phone successfully. In wifi mode, press down button to choose "wifi off" then press  button to disconnect wifi.

Please Note: 1. In standby mode, press and hold Power button more than 5 seconds to enter wifi mode. In wifi mode, press and hold Power button more than 5 seconds to turn off wifi.

LED status

Power on	Led stays blue
Power off	Led blue turns off
Standby mode	Led stays on blue
Charging	Led stays on red on the right
Fully charged	Led red turns off
Recording	Led flashes blue
Taking photos	Led stays on blue

Technical specifications

Item	Parameter
LCD size	1.5 inch
Power Supply	Car Charger; Output: 5V,1A
Battery Capacity	170mAh
Video Format	H.264 , Audio: AAC
Resolution	720P 1280×720, 1080FHD 1920×1080 1296P 1728×1296
SD Card Capacity Supported Range	MAX 64GB
Automatically power on/off	Recording when start the engine
Picture Format	JPEG
Frequency	50HZ/60HZ
File Format	MOV
Wifi	Optional
GPS	Support
Loop recording	Optional

FAQS

1. Q: What should I do when all the operations malfunction?

A: Please try to reset the camera, there is a pin included in the package, and you can use it to press the reset button to reset the camera.

2. Q: The dash cam cannot record video or take photos?

A: Please check the capacity of SD card, and if it is locked.

3.Q: What should I do when I can't play the video on computer or there is only sound without frame?

A: We recommend replacing a VCL player on the market and restart the computer.

4.Q: What should I do when the Micro SD card can't save the video?

A: Please try to format the micro SD card to FAT32, or you can change a new micro SD card. We recommend using class 10 card with 16GB capacity.

5.Q: What should I do if the G-sensor is very sensitive to trigger?

A: Please set the G sensor to low or mid sensitivity.

6.Q:Why the video file is disrupted by horizontal stripes?

A: Choose the right frequency according local frequency.

Warranty

All products sold by the Conbrov Group are covered by a 12-month full replacement warranty.

Happy with it? Share your experience with an Amazon review.

Or any questions?

Our friendly customer service team is ready to help: support@conbrov.com

Contacting us via the above email address, which is the quickest way to reach our support team.

For the electronic user manual and more information, please visit:



Disposal



Electrical products should not be discarded with household waste. According to the European Directive 2012/19/EC on waste electrical and electronic equipment and its implementation into national law, electrical products used must be collected separately and disposed of at collection points provided for this purpose. Talk with your local authorities or dealer for advice on recycling.

Declaration of conformity

Conbrov Electron Co., Ltd., Room 908 Huiyicaifu Center, c/o Queshan and Longhua Roads, Shenzhen, China, declares under our sole responsibility that the product Starlight Mini Camera T19, to which this declaration relates, meets all relevant European standards and directives. For the complete declaration of conformity visit our website www.conbrov.com.

VIP

Become a member of Conbrov,
Claim your FREE GIFT today!
<http://vip.conbrov.com/>



<https://www.facebook.com/groups/ConbrovVIP/>

Trademarks

All trademarks or registered trademarks are the property of their respective owners.

About Us

Conbrov Electron Co., Ltd. founded in 2003 is an innovative technology research company specialized in personal surveillance cameras and on-dash cameras. Conbrov products and technology are patent protected by PCT or U.S. Patent Office. Based on years of professional experience and knowledge, we are able to provide the best and most efficient products and customer service.

Manufacturer

Conbrov Electron Co., Ltd.
4th Floor, Building D of Baifuli,
Yuan Ye Industrial park
Shenzhen, People's Republic of China