

SHARPER IMAGE®

DESKTOP AQUARIUM

Item No. 207813

User Guide



Thank you for purchasing the Sharper Image Desktop Aquarium. Please take a moment to read this guide and store it for future reference.

FEATURES

- Multifunction aquarium with LCD clock / desk lamp / desk organizer
- Recirculation pump aerates the water
- 0.4 gallon capacity [1.5 liter]
- Includes decorative pebbles and artificial plant
- Multicolored LED interior lights
- Adjustable LED desk light
- Dual compartments for pens, pencils, scissors, etc.
- Backlit LCD digital clock/calendar/thermometer with alarm and snooze
- 5 built-in nature sounds
- Aquarium motor plugs into a USB port
- Clock requires 3 AA batteries

PLEASE NOTE: *Consult with your pet store professional to learn how many fish [and what species of fish] are best suited to live in this aquarium.*

AQUARIUM INSTRUCTIONS

- Fill the tank between the MIN and MAX lines.
- Plug the tank into a USB port with the included USB cable.
- Turn the MOTOR switch ON to circulate [aerate] the water and turn on the multicolored lights at the bottom of the fish tank.
- When the MOTOR switch is OFF, the circulation and colored lights will power OFF.
- The LIGHT switch turns on the LED desk light.

REPLACING THE WATER IN THE AQUARIUM

- Turn the MOTOR and LIGHT switches OFF.
- Bend the LED desk light toward the pen compartments.
- Pour water out slowly from the corner [opposite of the faucet].
- Add new water in its place.

PLEASE NOTE: *Fish are very sensitive to water quality. Consult your pet store professional to learn how to prepare water for your fish.*

INSTRUCTIONS FOR THE LCD CLOCK / CALENDAR

Note: *There are 5 buttons: [MODE], [SET], [UP], [DOWN] and [SOUND].*

NORMAL TIME MODE

 

- Insert 3 AA batteries.
- "AM 12:00" is displayed in 12-hour format.
- Press [SET] to set up Date/Time with the sequence as follows: [Hour] → [Minute] → [Year] → [Month] → [Date] → [Exit].
- Press [UP] and [DOWN] to adjust the settings.
- The day of the week will change automatically [from Monday to Sunday] according to the date.

TIME FORMAT

- Press [UP] to toggle between 12- and 24-hour time formats.

ALARM AND SNOOZE FUNCTION

Press [MODE] to enter alarm setting mode.

1. Under alarm setting mode, press [SET] to set the alarm, with the sequence as follows: [Hour] → [Minute] → [Snoozing] → [Music] → [Exit].
2. Under alarm setting mode, press the [MODE] button to return the normal time display. [If you do not press anything for 1 minute, you will automatically return to normal time display.]
3. Under the alarm setting mode, press the [UP] or [DOWN] button to turn alarm and snoozing ON or OFF. When the alarm is on, the  symbol is displayed. When the snooze is on, the  & SNOOZE symbols are displayed.
4. To silence the alarm, press any button, except [SET], to stop it for about 2 minutes. After this period, the alarm will ring again automatically, and the snooze function will repeat 2 times [for 2 minutes each time]. Press the [SET] button to cancel the alarm.
5. The interval of snooze time is 1 to 60 minutes.
6. After you set the Alarm and Snooze features, you can select your preferred alarm sound from the "MUSIC" menu.

TEMPERATURE MODE

- This mode displays the current room temperature.
- Press [DOWN] to display the temperature in °F or °C.

NATURE SOUNDS

Press [SOUND] to turn on the nature sound with the sequence as follows:

1. Running water and animals
2. Forrest
3. Running water with bird songs
4. Insect sounds
5. Running water
6. Repeating cycle of sounds 1-5

BACKLIGHT

- Press [SOUND] to turn on the nature sound and backlight. Press again to pause the nature sound, and backlight keeps up for 5 seconds
- Press any other button, it will light up for 5 seconds and then turn off.

WARRANTY / CUSTOMER SERVICE

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

SHARPER IMAGE®

The SHARPER IMAGE® name and logo are registered trademarks.

©Sharper Image. All Rights Reserved.