


EPSON


Multimedia Projector

EB-FH08 EB-X52
EB-W55 EB-E12
EB-EA55 EB-EA12
EB-W53
EB-E24
EB-EA24




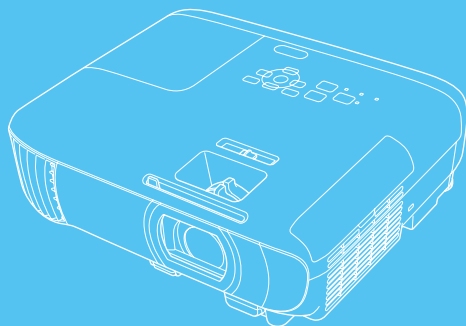






EN	Quick Start Guide	EL	Οδηγός γρήγορης εκκίνησης
DE	Kurzanleitung	TR	Hızlı Başlangıç Kılavuzu
FR	Guide de démarrage rapide	SL	Priročnik za hitri zagon
IT	Guida di avvio rapido	HR	Kratke upute
ES	Guía de inicio rápido	CA	Guia d'inici ràpid
PT	Guia de Referência Rápida	RU	Руководство по быстрой установке
NL	Introductiehandleiding	UK	Коротка інструкція "Початок роботи"
DA	Introduktion	KK	Қысқа іске қосу нұсқаулығы
FI	Pika-aloitusopas	KO	빠른 시작 가이드
NO	Hurtigveiledning	ID	Panduan Ringkas
SV	Snabbstartsguide	AR	دليل البداية السريعة
CS	Úvodní příručka	FA	راهنمای سریع برای شروع بکار
HU	Bevezetés	ZHS	设定手册
PL	Przewodnik szybkiego startu	ZHT	設定説明書
SK	Stručná príručka	TH	คู่มือการใช้งานอย่างง่าย
BG	Ръководство за бърз старт	VI	Hướng dẫn khởi động nhanh
RO	Ghid de pornire rapidă		

1



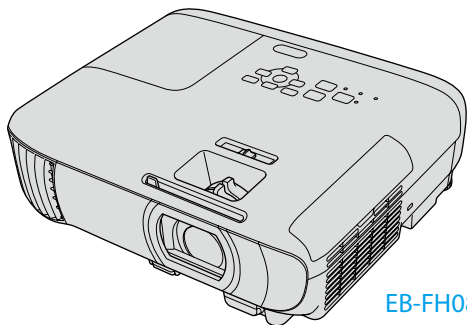


EB-FH08

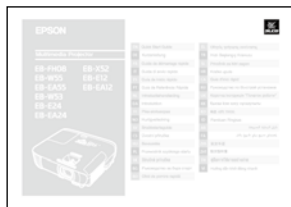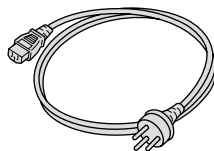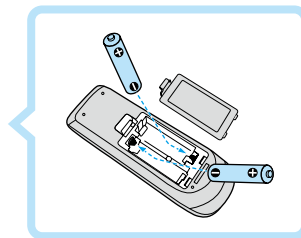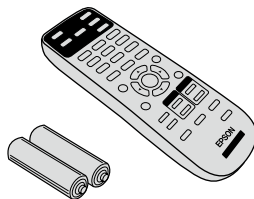


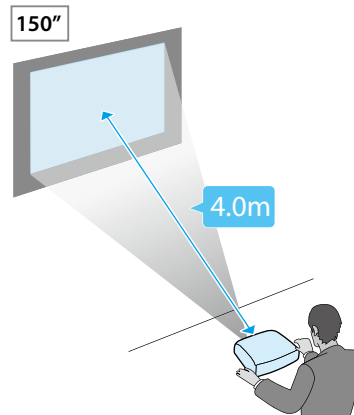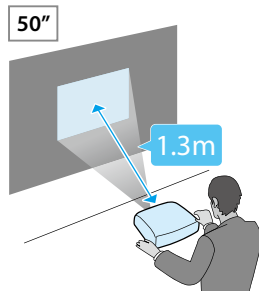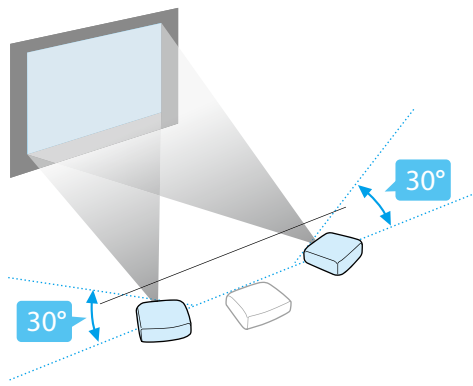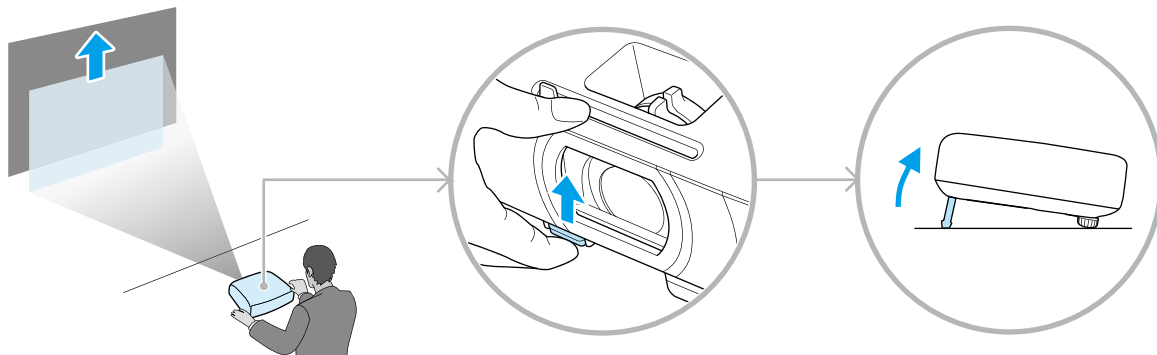


3

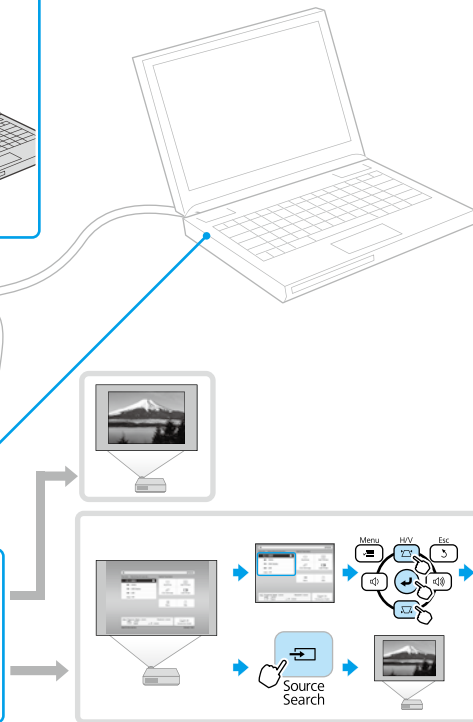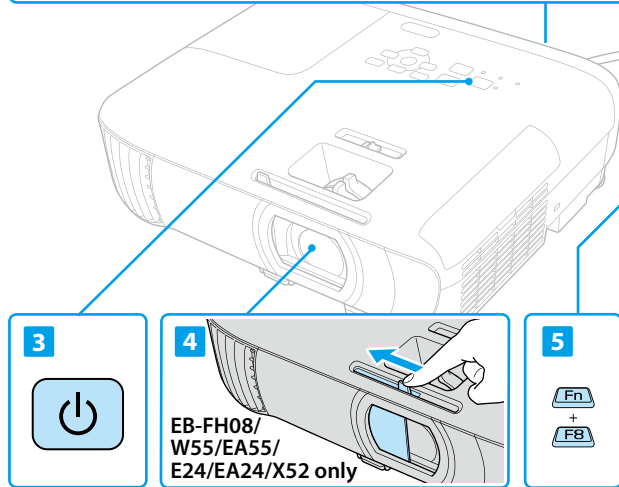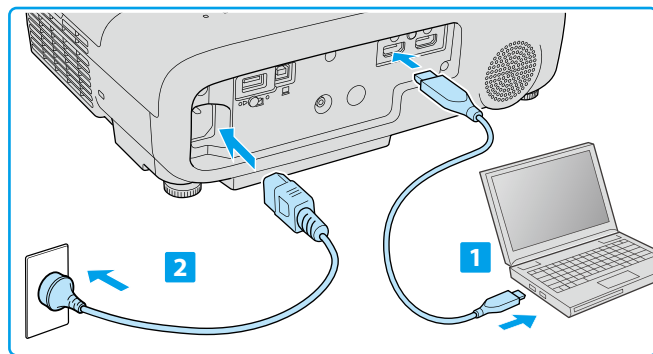


EB-FH08/EB-W55/EB-EA55/EB-X52

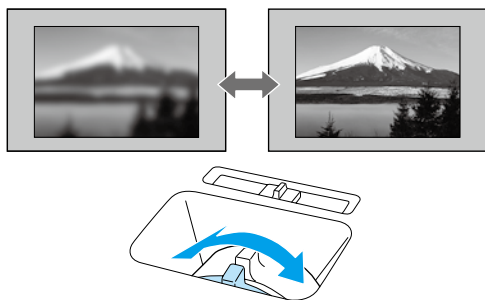


EB-W53/EB-E24/EB-EA24/EB-E12/EB-EA12


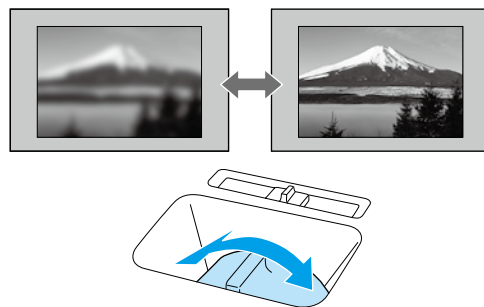


EB-FH08/EB-W55/EB-EA55/EB-X52

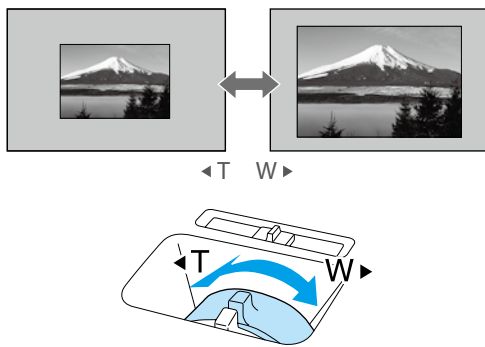


EB-W53/EB-E24/EB-EA24/EB-E12/EB-EA12

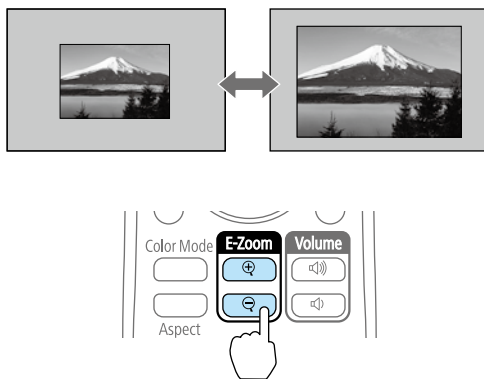

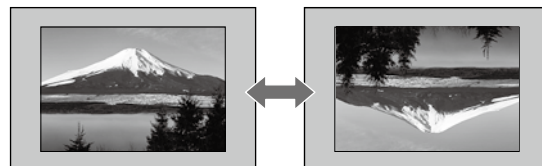
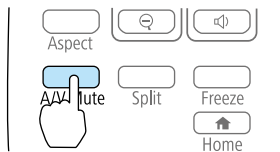


5



EB-FH08/EB-W55/EB-EA55/EB-E24/EB-EA24/EB-X52 only

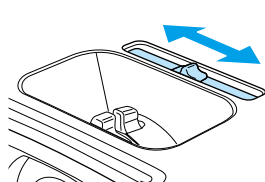



1

 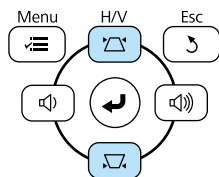

2

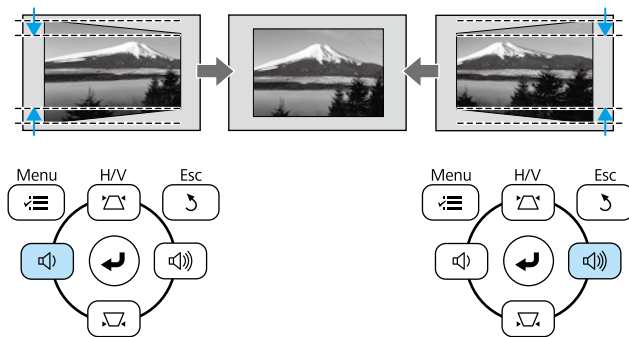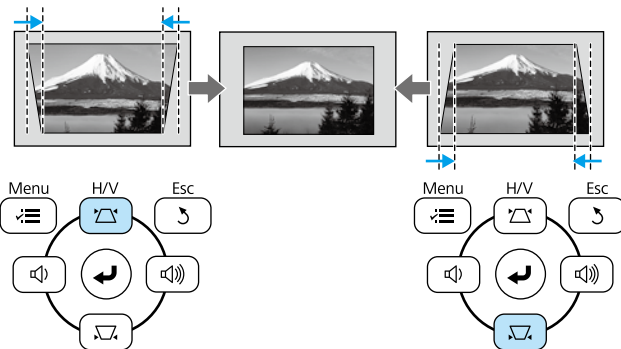

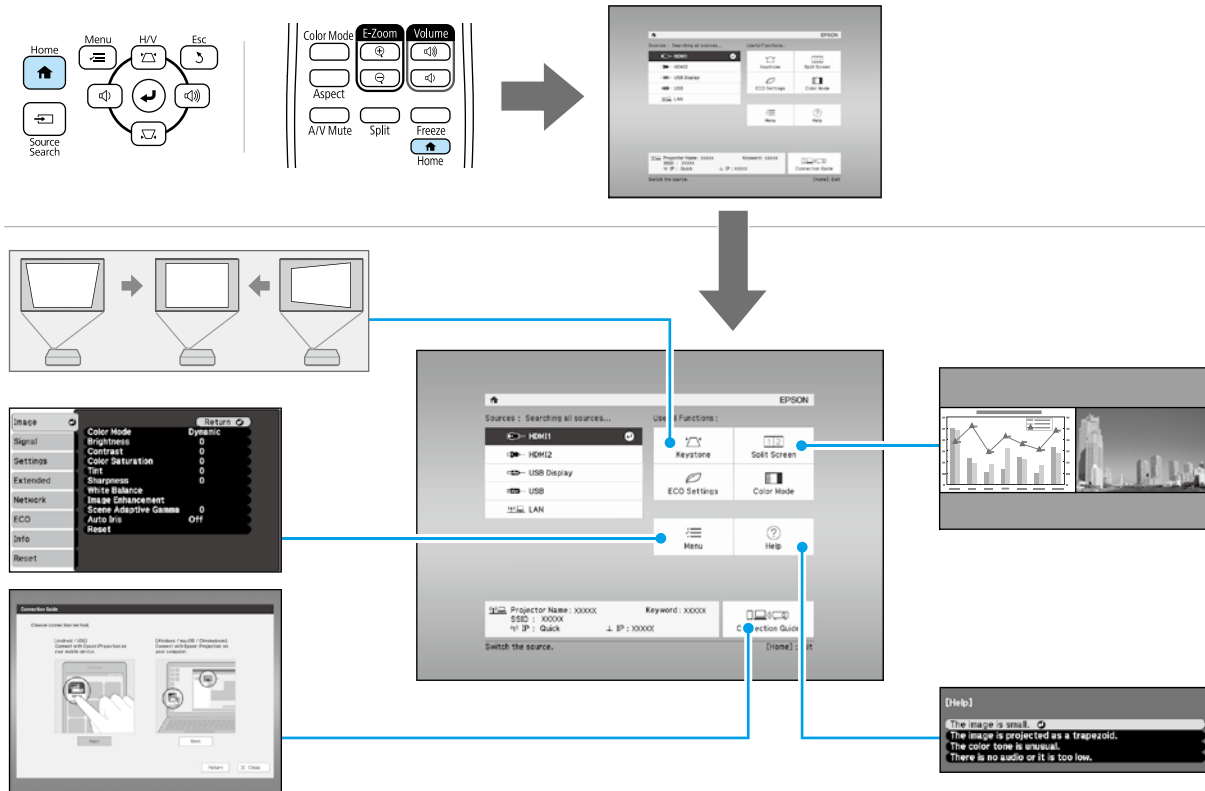

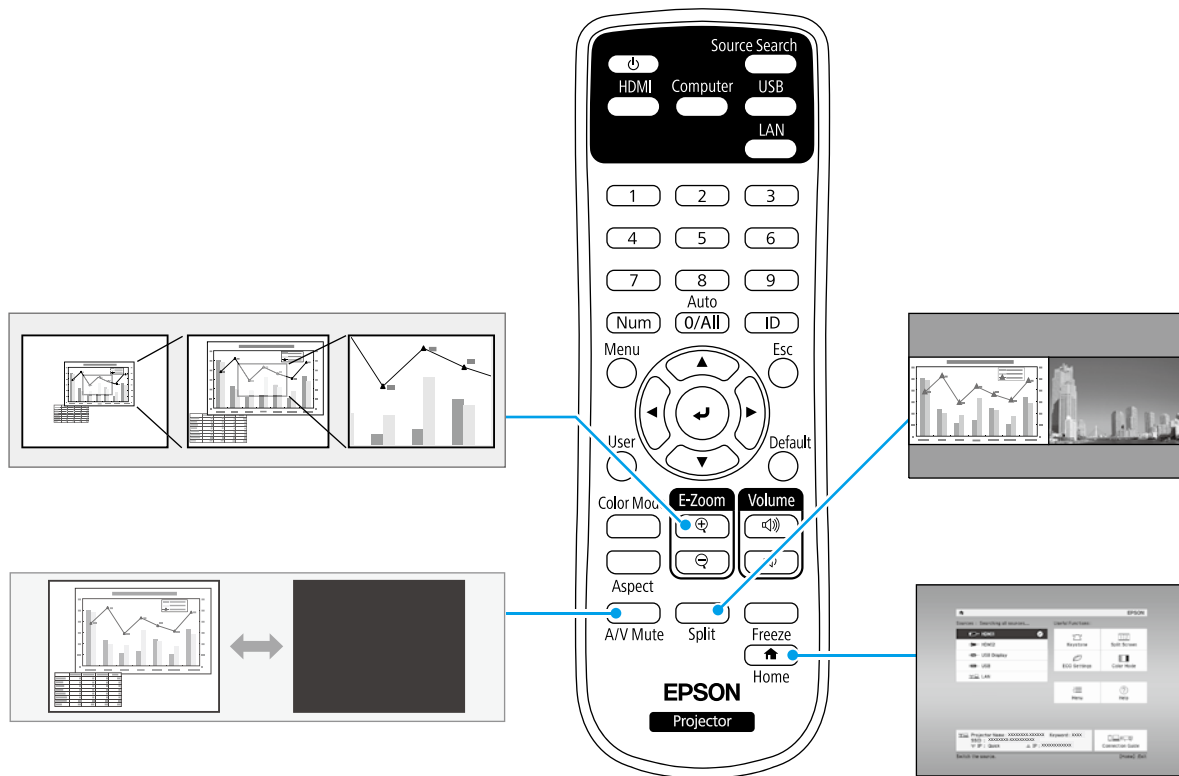

epson.sn

