

ATTACHMENTS

The bristle brush and soft cushion brush attachments easily snap over the soleplate. **Make sure your steamer is off and has cooled before adding or removing attachments.**



Bristle Brush Attachment



Soft Cushion Brush Attachment

CLEANING AND STORING

- 1. Turn the ON/OFF switch to the OFF position and unplug from the power source.
- 2. Wait for the steamer to cool completely for at least 30 minutes.
- 3. Remove the water tank from unit, open bottom cover and empty unused contents. Allow to air dry.
- 4. Collapse telescopic hanger pole.
- 5. Replace water tank.
- 6. Store the unit.

DECALCIFICATION

If the appliance begins to produce steam more slowly than usual or stops producing steam and then starts again, you may need to decalcify your steamer. Decalcification refers to removing the calcium deposits that form over time on the metal parts of the steamer. For best performance from the steamer, decalcify the unit once a month. The frequency depends upon how often you use the steamer.

To decalcify, add a solution of 1/3 white vinegar and 2/3 distilled water in the water tank. Place the water tank in the unit. Plug the unit into electrical outlet. Turn to the ON position and run until half the amount has steamed (1 liter), turn the unit to the OFF position, unplug from electrical outlet, and allow to sit for 30 minutes.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING

- DANGER** — Any appliance is electrically live even when the switch is off. To reduce the risk of death by electric shock: 1. **Always unplug appliance immediately after using.**
- 2. Do not place or store appliance where it can fall or be pulled into a tub or sink.
- 3. Do not immerse the appliance in water or other liquids.
- 4. If an appliance falls into water, unplug it immediately. **Do not reach into the water.**
- 5. Keep the cord away from heated surfaces. Do not allow cord to touch heated surfaces. Do not pull or twist cord. Let appliance cool completely before putting away.
- 6. To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit into a polarized outlet only one way. If the plug does not fully fit in the outlet, reverse the plug and try again. If it still does not fit, contact a licensed electrician to install the proper outlet. Do not change the plug in any way.
- 7. Never drop or insert any object into any opening or hose.
- 8. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- 9. Do not use an extension cord to operate appliance.
- 10. Surfaces of this appliance may be hot when in use. Do not let heated surfaces touch eyes or skin.
- 11. Do not place the steam nozzle directly on any surface or on the appliance power cord while it is hot or plugged in. Use the stand provided.

Repeat the above procedure as many times as necessary until a normal steam rate returns, usually 2–3 times. With each repeat-cycle, use a fresh solution of vinegar and distilled water. Run one cycle of fresh, distilled water without vinegar through the unit at the completion of decalcification before using the unit again to steam garments.

HOW TO STEAM

Grasp the handle of the steam nozzle with the soleplate facing away from you. Begin at the bottom of the fabric to allow the steam to rise inside and outside, removing wrinkles. Slowly move the nozzle from the bottom to the top of the fabric. Some fabrics are best steamed on the underside of the material. This will allow the fibers of the fabric to relax, eliminating wrinkles. Try the multidirectional steam setting for use inside garments, to freshen and help eliminate odors. Use the soleplate to help remove wrinkles in thicker, heavier and less delicate fabrics. Use the soleplate on an ironing board or a similar surface.

NOTE: Test fabric for color fastness in an inconspicuous spot. Drape liners, towels, handkerchiefs, and napkins over a rod or place on a towel rack. Heavier fabrics may require repeated steaming. Repeat as necessary.

With practice, you will gain speed and efficiency. You will soon learn which fabrics require multiple steam applications.

Do not directly touch velvet, silk or other delicate fabrics with the steam head. Use extra caution when steaming delicate fabrics.

Always steam with hose in upright position, so any condensation is free to flow back into the steamer reservoir on the base.

If you steam in a low position, condensation will collect inside the hose. To avoid this, lift the steam handle upward until the hose is extended to its full height.

TO STEAM DRAPES

Wash and dry drapes as directed, according to fabric type. Rehang drapes and steam when they are in place.

CAUTION: Soleplate will be hot when in use. Avoid prolonged contact. Keep steam head moving while steaming your garment.

TROUBLESHOOTING THE STEAMER

- **PROBLEM** – Steamer fails to heat
CAUSE – Steamer not plugged in
SOLUTION – Plug into electrical outlet
- **PROBLEM** – No steam
CAUSE – Water level is low (beep will sound)
SOLUTION – Turn ON/OFF switch off and refill water tank
- **PROBLEM** – Water drips from nozzle
CAUSE – Condensation in hose
SOLUTION – Hold the hose vertically and allow water to drain back into unit
- **PROBLEM** – Poor steam performance
CAUSE – Sediment in tank
SOLUTION – Decalcify reservoir and water tank. See decalcification instructions
- **PROBLEM** – Dye on steam nozzle
CAUSE – Fabric not colorfast / Touching steam nozzle to fabric
SOLUTION – Move steam nozzle 1/2 inch away from fabric during use. Clean steam nozzle with household cleaner and rinse with water
- **PROBLEM** – Discoloring of fabric
CAUSE – Dye on surface of fabric needs special treatment and cleaning / Fabric not suitable for steaming
SOLUTION – Some custom specialty fabrics have dyes that are NOT COLORFAST and are not suitable for steaming. Test fabric for colorfastness in an inconspicuous spot before steaming

NOTE: Amounts of chemicals in water will vary in different areas. To ensure continued operation of the steamer, use only distilled water. Never store without cleaning and removing excess water from the reservoir and water tank.

LIMITED ONE-YEAR WARRANTY
Conair will repair or replace (at our option) your unit free of charge for 12 months from the date of purchase if the appliance is defective in workmanship or materials.

 
To obtain service under this warranty, return the defective product to the service center listed, together with your purchase receipt and \$5.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 12 months from the date of manufacture.

ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 12-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

GET TO KNOW YOUR STEAMER

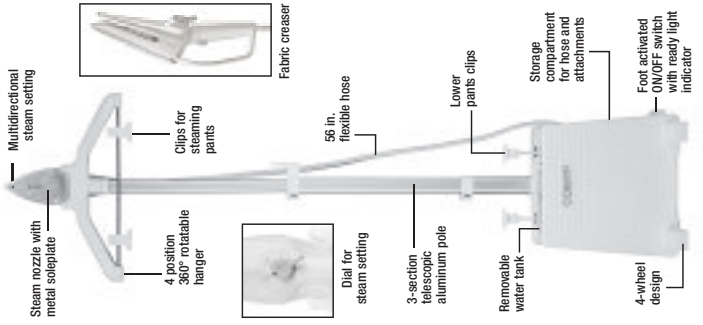

STEAMER ASSEMBLY
Attaching the Telescopic Pole and Rotating Hanger

- 1. Remove the thumb screw from the bottom of the telescopic pole.
- 2. Insert the telescopic pole into the opening on the back of the steamer. Press down firmly to ensure the pole has reached the bottom. Replace the screw securing the pole to the base of the garment steamer.
- 3. Fully extend the telescopic pole, making sure to lock the pole upright by engaging the two clips.
- 4. Place hanger assembly atop the pole, and hang the steam nozzle from the cradle.
- 5. Hang your garment in preparation for steaming away wrinkles. The hanger rotates 360 degrees. Turn the hanger as you wish during steaming.
- 6. When you are ready to steam, fill the water tank from the top opening with distilled water. Note: Do not open the bottom cap as this is used for cleaning or removing excess water only.
- 7. Plug the steamer unit into a standard 120V AC power outlet.
- 8. The bristle brush and soft cushion brush attachments easily snap over the soleplate for use. We recommend using the soft cushion brush attachment when steaming delicate fabrics. **See instruction booklet "Attachments" section.**

SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY

UNPACKING INSTRUCTIONS

Place the box on a large, sturdy, flat surface. Carefully remove the appliance from the packing material. Keep all plastic bags away from children. Some assembly required.

LIMITED ONE-YEAR WARRANTY
Conair will repair or replace (at our option) your unit free of charge for 12 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed, together with your purchase receipt and \$5.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 12 months from the date of manufacture.

ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 12-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

USING PANTS CLIP SYSTEM



(Fig. 3)



This fabric steamer is equipped with a pants clip system for holding pants taut for faster and more effective steaming. You may use the two top pants clips which are attached to the hanger to secure the top of your garment. (Fig. 3) The bottom clips can be adjusted by pulling them up to reach the bottom of the pants you are steaming.

Please note: Some pants may be too long to use the bottom clips. If that is the case, simply use the top clips and let your pants hang freely.

USING THE BUILT-IN CREASER

This fabric steamer is equipped with a built-in creaser. Once the steamer has been set up and turned ON according to the instructions, follow these steps for sharp creases in your garment:

- 1. Move selector switch to the 3-directional steam setting on nozzle.
- 2. Hold sleeve or pants leg by the cuff and slide nozzle over the fabric. Position fabric fully inside the creaser opening on the nozzle head.

 


- 3. Turn the nozzle 90 degrees so the crease is positioned properly. Caution, steam will exit from both sides of the nozzle.
- 4. While maintaining the tension on the fabric, run the nozzle up and down the garment, allowing the steam and tension to create the desired crease.


OPERATING INSTRUCTIONS

FILLING THE WATER TANK (PRIOR TO PLUGGING IN THE APPLIANCE)

Remove the water tank using handle on top of tank. Fill reservoir using opening on top of tank with distilled water until it is filled to the desired level. Do not overfill. Position the water tank on the base and make certain it is seated properly in the unit.



TOP

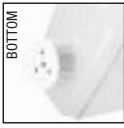 

BOTTOM

(Fig. 4)

DO NOT FILL THE TANK WITH HOT WATER

Do not unscrew the bottom cap unless for cleaning (Fig. 4). NOTE: Be sure to always empty or fill the tank over a sink, being careful not to spill water from small opening on the top of the tank.

ATTACHMENTS

The bristle brush and soft cushion brush attachments easily snap over the soleplate. **Make sure your steamer is off and has cooled before adding or removing attachments.**



Bristle Brush Attachment



Soft Cushion Brush Attachment

CLEANING AND STORING

- 1. Turn the ON/OFF switch to the OFF position and unplug from the power source.
- 2. Wait for the steamer to cool completely for at least 30 minutes.
- 3. Remove the water tank from unit, open bottom cover and empty unused contents. Allow to air dry.
- 4. Collapse telescopic hanger pole.
- 5. Replace water tank.
- 6. Store the unit.

DECALCIFICATION

If the appliance begins to produce steam more slowly than usual or stops producing steam and then starts again, you may need to decalcify your steamer. Decalcification refers to removing the calcium deposits that form over time on the metal parts of the steamer. For best performance from the steamer, decalcify the unit once a month. The frequency depends upon how often you use the steamer.

To decalcify, add a solution of 1/3 white vinegar and 2/3 distilled water in the water tank. Place the water tank in the unit. Plug the unit into electrical outlet. Turn to the ON position and run until half the amount has steamed (1 liter), turn the unit to the OFF position, unplug from electrical outlet, and allow to sit for 30 minutes.

- 4. **Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged, or dropped into water. To reduce the risk of electric shock, do not disassemble or do not attempt to repair the appliance. Incorrect reassembly or repair could cause a risk of fire, electric shock, or injury to persons when the appliance is used. Return the appliance to an authorized service center for examination and repair.**
- 5. Keep the cord away from heated surfaces. Do not allow cord to touch heated surfaces. Do not pull or twist cord. Let appliance cool completely before putting away.
- 6. To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit into a polarized outlet only one way. If the plug does not fully fit in the outlet, reverse the plug and try again. If it still does not fit, contact a licensed electrician to install the proper outlet. Do not change the plug in any way.
- 7. Never drop or insert any object into any opening or hose.
- 8. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- 9. Do not use an extension cord to operate appliance.
- 10. Surfaces of this appliance may be hot when in use. Do not let heated surfaces touch eyes or skin.
- 11. Do not place the steam nozzle directly on any surface or on the appliance power cord while it is hot or plugged in. Use the stand provided.

