



Technical Support and E-Warranty Certificate
www.vevor.com/support

SWIMMING POOL PUMP

USER MANUAL

MODEL : HAP750

We continue to be committed to provide you tools with competitive price. "Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

VEVOR®

TOUGH TOOLS, HALF PRICE

SWIMMING POOL PUMP

MODEL: HAP750




NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

Technical Support and E-Warranty Certificate
www.vevor.com/support

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

MAIN PARTS

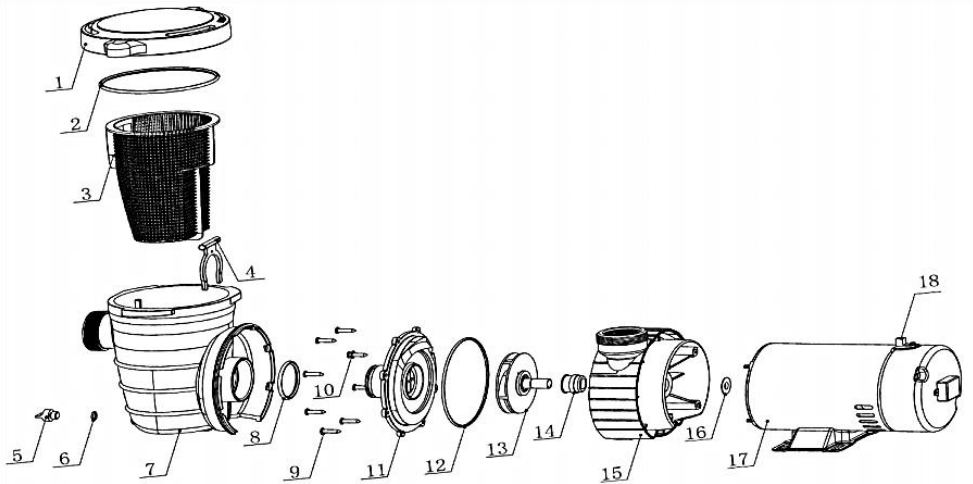

PARTS

1. Strainer Cover	7. Strainer Hosing	13. Impeller
2. O-Ring, Strainer Cover	8. O-Ring, Hosing cover	14. Shaft Seal Assembly
3. Strainer basket	9. Screw	15. Pump Housing
4. C-clip	10. Washer	16. Slinger
5. Drain Plug	11. Hosing cover	17. Motor
6. Drain Plug Gasket	12. O-Ring, Housing	18. Grounding Terminal

INSTALLATION

READ CAREFULLY AND SAVE THIS INSTRUCTION MANUAL

ATTENTION INSTALLER-THIS MANUAL CONTAINS IMPORTANT INFORMATION ABOUT THE INSTALLATION, OPERATION, AND SAFE USE OF THIS PUMP THAT MUST BE FURNISHED TO THE END-USER OF THIS PRODUCT. FAILURE TO READ AND FOLLOW ALL INSTRUCTIONS COULD **RESULT IN** SERIOUS INJURY.

SAFETY PRECAUTIONS

Read this "Safety Precautions" before operation.

The below information should not be neglected for the proper use of this product. Your understanding can prevent harm or danger to the user or others.



The following information is very important for safety in handling this product. Be sure to observe it.	
DANGER	Indicates an imminently hazardous situation that, if not avoided, will result in death or serious injury.
WARNING	Indicates a potentially hazardous situation that, if not avoided, could result in death or serious injury.
CAUTION	Indicates a potentially hazardous situation that, if not avoided, may result in minor or moderate injury, or property damage.
IMPORTANT	 PROHIBITED  ALERT

DANGER	
	Stay off the main drain and away from all suction outlets.
	Strainer cover must be properly secured to prevent violent separation due to pressure in the circulation system.
	Before servicing, turn all the circulation system and pump controls off, make sure the filter manual air relief valve is in the open position, and all pressure is relieved.
	It is highly recommended that this product be installed and serviced by a qualified pool professional.

WARNING	
	Remove pressure test plugs and/or plugs used in winterization of the pool/spa from the suction outlets. Failure to do so will result in an increased potential for suction entrapment.
	Do not permit children to play with this product.
	Before starting the system pump, all system valves must be set to allow system water to return to the pool.
	Do not operate the pool and spa circulation system if a system component is not assembled properly, damaged, or missing
	Before working on any electrical equipment, turn off the power supply to the equipment.
	Connect only to a branch circuit protected by a ground-fault circuit interrupter(GFCI).

CAUTION	
	All electrical wiring must be in conformance with applicable local codes, regulations, and the National Electric Code (NEC)
	It is strongly advised to protect the electrical components from direct sunlight though this pump is designed for outdoor use.
	Place this pump in a well-drained area, one that will not flood when it rains.
	If installed within an outer enclosure or beneath the skirt of a hot tub or spa, adequate ventilation and free circulation of air must be provided to prevent overheating.
	Do not install this pump in a damp or non-ventilated location.It requires free circulation of air for cooling.
	Do not run the pump dry. Water acts as a coolant and lubricant for the mechanical shaft seal. Running the pump dry may damage seals, causing leakage, flooding, and voids warranty. Fill strainer housing with water before starting the motor.

INSTALLATION

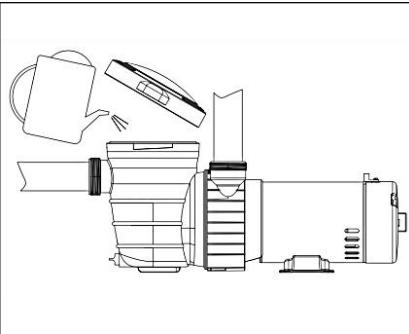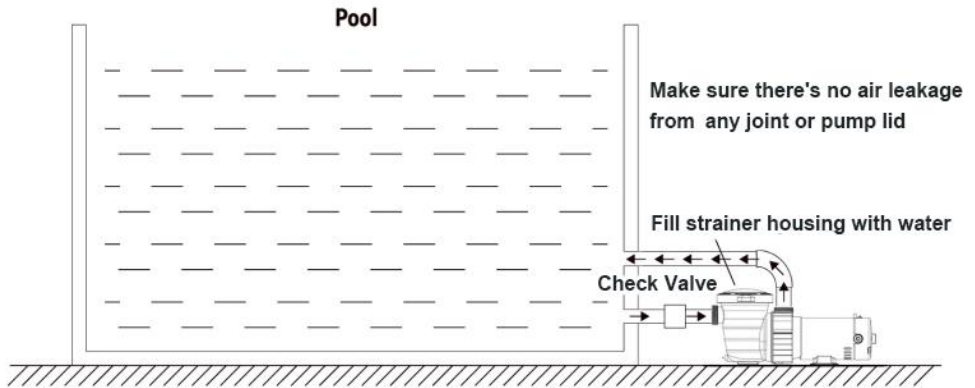

Rotate the fan blade before starting-up, check whether the pump rotation is flexible, then unscrew the water-filling plug, fill the pump chamber with clean water from the water injection hole, then tighten the plug screw after the air has been completely discharged. Set the valve for a smaller water flow when starting-up, and then adjust to your required water flow after water discharging.


Before servicing, all water circulation systems and pump controls must be off position to release all the pressure from the system.

WARNING: This product should be installed and serviced by a qualified pool professional.

This pump is compatible with above-ground pools and spas. Locate the pump as close to the pool and water level as possible. Do not add too many elbow pipes in the plumbing so as to avoid suction reduction. It is highly recommended that the pump be placed in cool, dry places and avoid direct sunlight. Install the pump on a firm, level base or pad to meet all local and national codes. Fasten the pump to a base or pad with screws or bolts to further reduce vibration and stress on pipe or hose joints. The base must be solid, level, rigid, and vibration-free.

WARNING: Keep product away from Children.

Use Teflon tape on the thread before screw fittings to pump inlet and outlet ports so as to avoid leakage. Do not over-tighten the fittings.

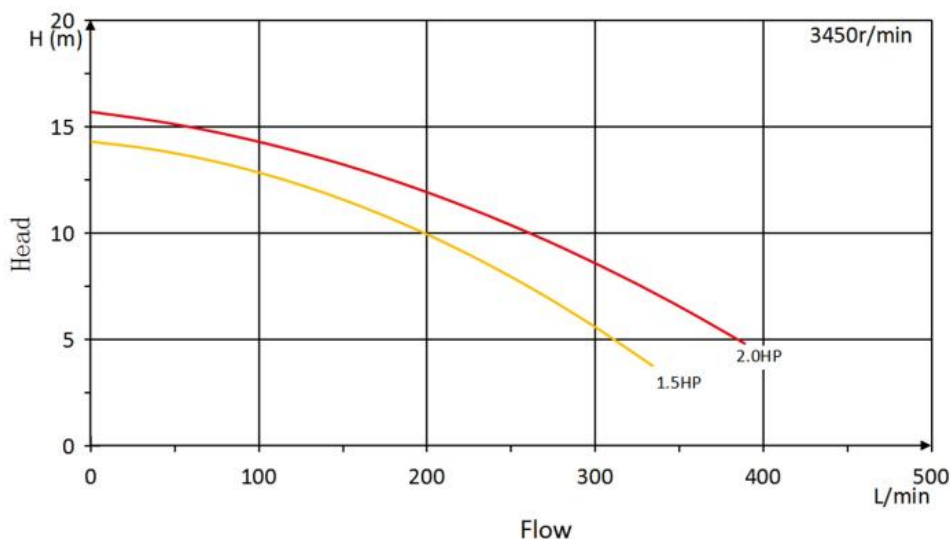


Accessory:

- 1: Manual
- 2: 2 pcs of NPT 1-1/2" adaptor
- 3: 2 pcs of 48.5mm (ID) adaptor
- 4: 1 roll PTFE tape.

Pump discharge port can be turned horizontal:

- Remove pump lid and Strainer.
- Remove C-clip (part# 4 in the parts list).
- Remove the pump strainer body from the pump housing.
- Unscrew the bolts.
- Turn the discharge port to be horizontal.
- Screw back the bolts.
- Re-install the pump strainer body.
- Buckle up the C-clip.
- Put Strainer back into the pump strainer body.
- Fasten pump lid

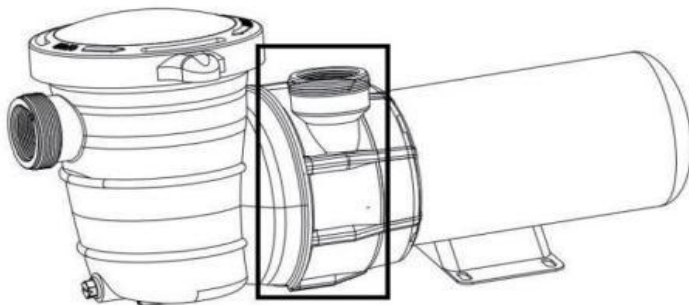

SPECIFICATIONS

Model	HAP750
Input	AC110-120V 60Hz
Power	1.0HP
Max. head	11 m (36 ft)
Max. flow	80 GPM
Work water temperature	0-50°C (32°F-122°F)
Inlet/outlet caliber	NPT 1-1/2

Make sure that the electrical supply available is suitable for the motor's voltage, phase, and cycle.

Voltage from the power must be in the range from 90%to 110% of the motor nameplate rated voltage. Otherwise, the motor may overheat and result in overload tripping and reduced component life.

Install, ground, bond,and wire motor in accordance with local or NEC requirements.

The motor should be grounded permanently by connecting the ground terminal to the electrical service ground.

Bond motor to pool structure.Bonding will connect all metal parts within and around the pool with a continuous wire. Bonding reduces the risk of current passing between bonded metal objects, which could potentially cause electrical shock if grounded or shorted.

PRIMING

Fill strainer housing with water to suction pipe level. If water leakage occurs anywhere on the pump or filter, DO NOT start the pump. If no leakage occurs, stand at least 10 feet from the pump and/or filter and proceed with starting the pump.

TROUBLE SHOOTING

MOTOR WILL NOT START

- Improper or loose wiring connections; open switches or relays; tripped circuit breakers, GFCI's, or blown fuses.
- Manually check rotation of motor shaft for free movement and lack of obstruction.
- If you have a timer, make sure it is working properly. Bypass it if necessary.

MOTOR SHUTS OFF

- Undersized wiring; loose connections; etc.
- Low voltage at motor or power drop (frequently caused by undersized wiring or extension cord use).

MOTOR HUMS BUT DOES NOT START

- Mechanical binding and electrical overload.
- Centrifugal switch stuck in the OPEN position.
- Binding of the motor shaft.

PUMP WON'T PRIME

- Make sure pump strainer housing is filled with water and the cover O-ring is clean; also, be sure it is properly seated in the cover O-ring groove. Make sure the strainer cover is locked firmly in position and lubricated with "Jack's 327" .
- Make sure all suction and discharge valves are fully open and not blocked, that the pool water level is at a proper level and that the skimmer weir is not hung up or stuck on the skimmer wall
- Block off to determine if the pump will develop a vacuum. You should have 5"-6" of vacuum at the strainer cover. You may be able to check

by removing the skimmer basket and holding your hand over the bottom port with the skimmer full and pump running. If no suction is felt, check for line blockage.

A. If pump develops a vacuum, check for a blocked suction line or dirty strainer basket, and an air leak in the suction piping may be the cause.

B. If the pump does not develop a vacuum and the pump has sufficient "priming water":

- i. Re-check strainer housing cover and all threaded connections for suction leaks. Check if all hose clamps are tight.
- ii. Check voltage to ensure that the motor is rotating at full RPM.
- iii. Open housing cover and check clogging or obstruction in suction. Check impeller for debris.
- iv. Remove and replace shaft seal only if it is leaking.

TROUBLE SHOOTING(CONTINUED)

LOW FLOW

- Clogged or restricted strainer or suction line;undersized pool piping.
- Plugged or restricted discharge line or filter, valve partially closed (high gauge reading) . How to correct:Backwash strainer as per manufacturer's instructions;
- Air leak in suction piping causing rumbling in the pump.
- Cavitation due to restricted or undersized suction line or leak at any joint, low water level in the pool, and unrestricted discharge return lines. Correct suction condition or throttle return lines, if practical.

NOISY PUMP

- Vibration due to improper mounting, etc. Put a rubber pad under metal mounting feet.
- Foreign matter in the pump housing. Loose stones/debris hitting the impeller could be the cause;remove any above.
- Motor bearings **are** noisy from normal wear, rust, overheating, or concentration of chemicals causing seal damage which will allow chlorinated water to seep into bearings wiping out the grease causing bearing to whine. All seal leaks should be replaced at once.
- Equipment base vibrating.

Manufacturer: Shanghaimuxinmuyeyouxiangongsi

Address: Baoshanqu Shuangchenglu 803long 11hao 1602A-1609shi
Shanghai

EC REP: SHUNSHUN GmbH.

Römeräcker 9 Z2021,76351 Linkenheim-Hochstetten, Germany

Tel: +49 1727041930 euvertreter@gmail.com

UK REP: Pooledas Group Ltd.

Unit 5 Albert Edward House, The Pavilions Preston, United Kingdom

Tel: 01772418127 pooledas123@gmail.com

Imported to AUS: SIHAO PTY LTD.

1 ROKEVA STREETEASTWOOD NSW 2122 Australia

Imported to USA: Sanven Technology Ltd.

Suite 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730

Made In China

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate

www.vevor.com/support