

## 178\*130mm


## 85%黑色字体印刷 (85% Black print)




1**7**8mm

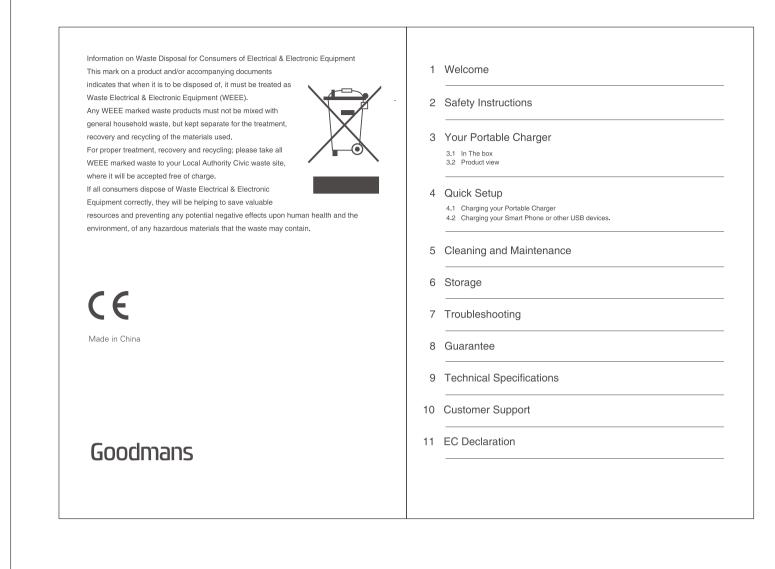


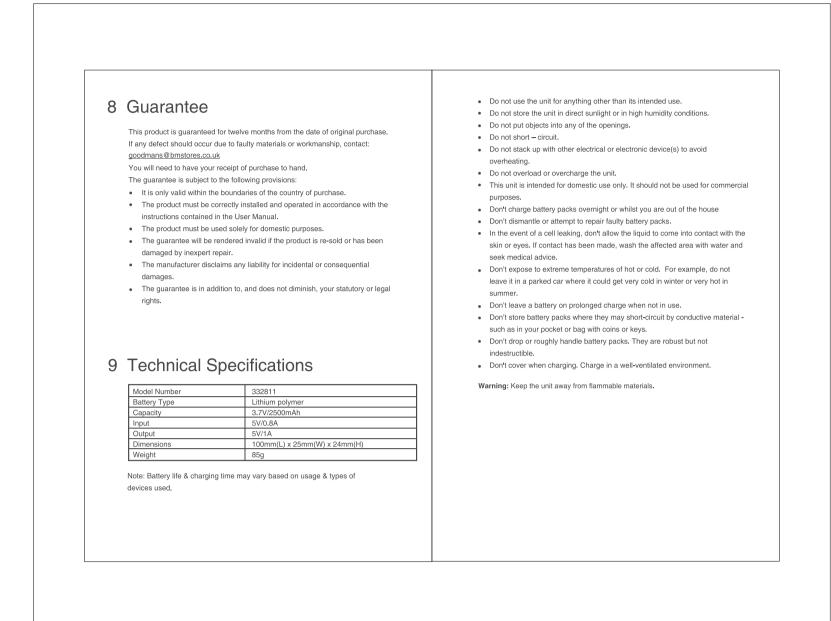


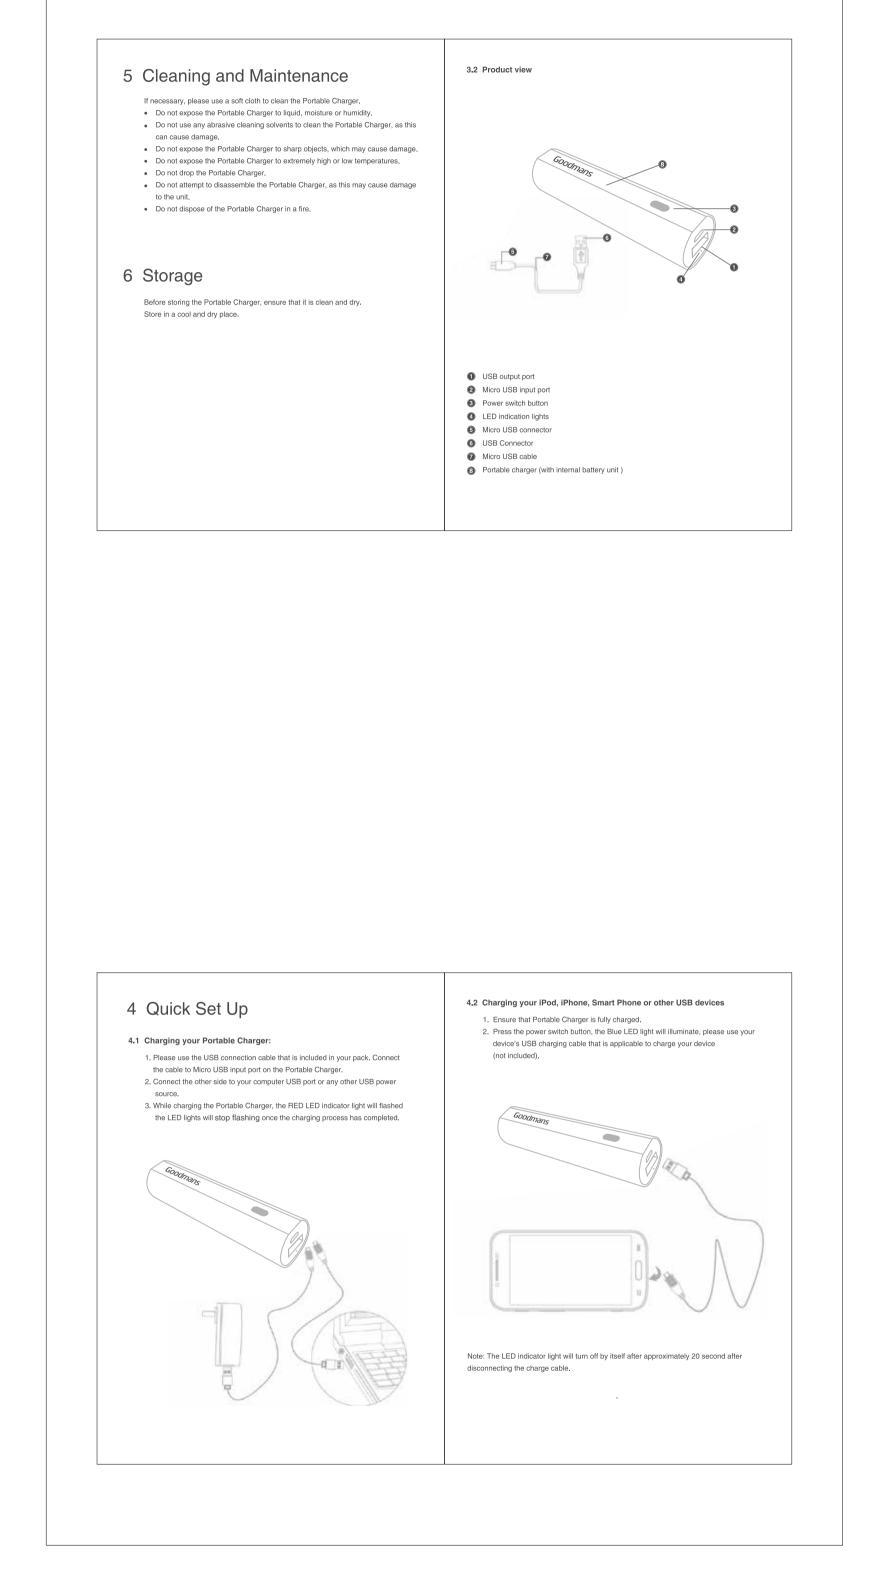

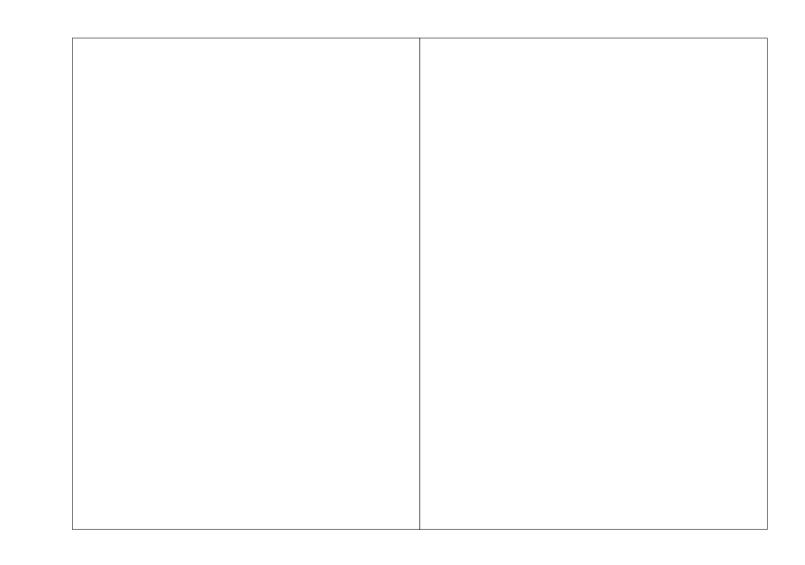


同一张纸 Same piece of paper

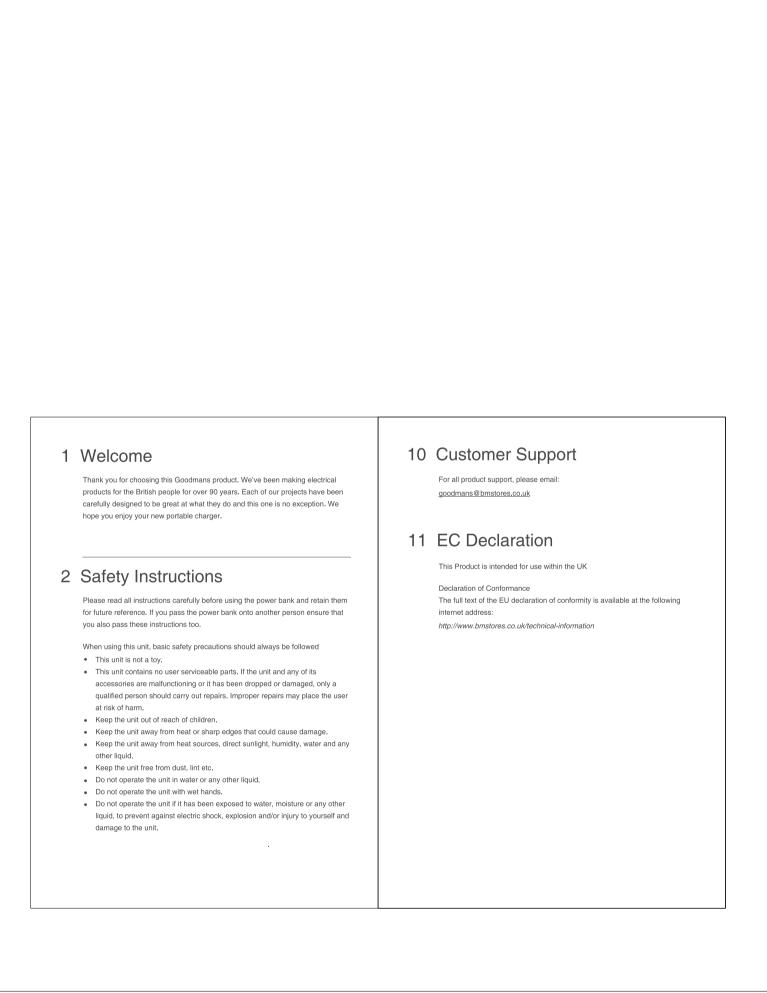

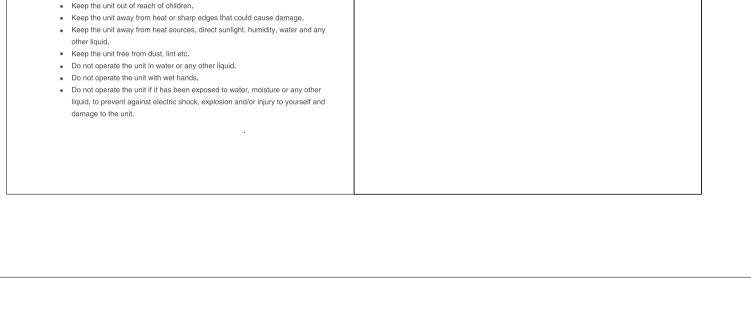



 

7 Troubleshooting

on after pressing the power indicator lights.

time is short.

Please Note

user manual for further information.

lights do not turn on.

Portable Charger charging Continue to use as normal.

Portable Charger cannot • Reconnect the USB charger.

supply power to a portable • Recharge the Portable Charger.

The charge time to the 

• Please use dry cloth to clean it.

portable device is too short. 

• Recharge the Portable Charger

device or the power indicator • Turn the portable device on before charging.

Charging time is too longer 

• Move the unit into a more suitable climate.

Not all device charging support is listed above. Please refer to your device's

The USB cable cannot Please use dry cloth or cleaning brush to the USB port.

What to do

LED indicator does not turn Recharge the Portable Charger and then check the LED

Portable Charger cannot be Connect the USB cable correctly.

3 Your Portable Charger

Carefully remove your portable charger from the box.

If any of these items are missing, please email:

3.1 In The box

Inside the box you will find:

1 x Portable charger

1 x Micro USB cable

Instruction Manual

Goodmans@bmstores.co.uk

