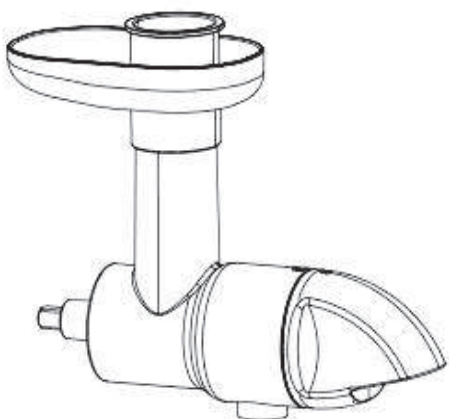




INSTRUCTION MANUAL



Juicing Attachment

Brand:amzchef

Model No.:P-003A

**PLEASE READ INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY
RETAIN THIS MANUAL FOR FUTURE REFERENCE**



Product logo upgrade instructions



Before upgrade



After upgrade

JUICING ATTACHMENT

MODEL:P-003A

ITEM MODEL:P-0HD03A/P-0WF03A/P-0WM03A/
P-0CD03A/P-0KF03A/P-0OT03A

CONTENTS

IMPORTANT SAFEGUARDS.....	1
COMPONENTS.....	2
TO ASSEMBLE.....	3
TO ATTACH.....	4
MAINTENANCE.....	5
WARRANTY.....	7

Manufacturer:

Zhongshan Jimi Electrical Appliance Co., Ltd.

No. 2, Yucheng 2nd Road, Xiaolan Town, Zhongshan City, Guang Dong China.

Contact: Emily Tel: +1 (838) 910 8317 E-Mail: info01@iamzchef.com

IMPORTANTI ISTRUZIONI DI SICUREZZA

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. To protect against risk of electrical shock, do not put mixer in water or other liquid.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience or knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
4. Avoid contacting moving parts. Keep fingers out of discharge opening.
5. Do not operate the mixer with a damaged cord or plug or after the mixer malfunctions, or is dropped or damaged in any manner.
6. The use of attachments not recommended or sold by us may cause fire, electric shock, or injury.
7. Do not use the mixer outdoors.
8. Do not let the cord hang over the edge of table or counter.
9. Never feed food by hand. Always use food pusher.
10. Blades are sharp. Handle carefully.

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING." These words mean:



**You can be killed or seriously injured
if you don't immediately follow instructions.**



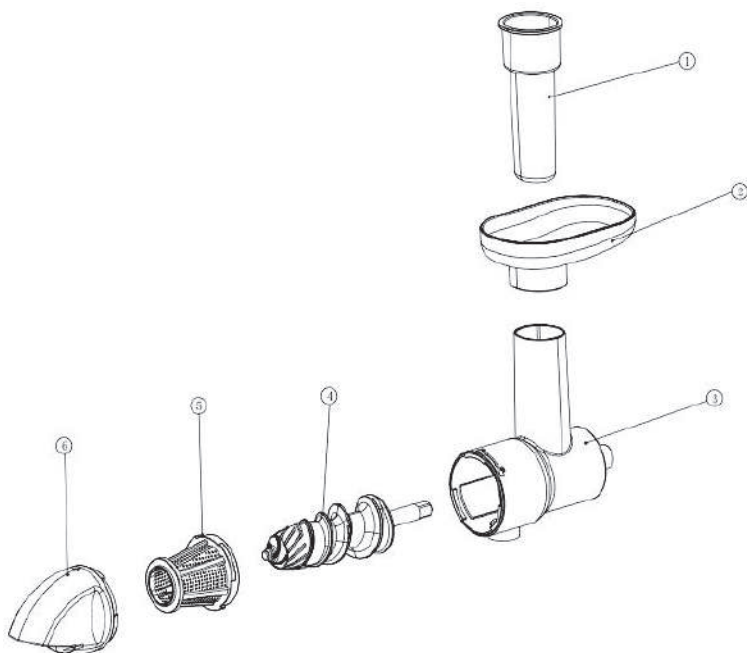
**You can be killed or seriously injured
if you don't follow instructions.**

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

SAVE THESE INSTRUCTIONS

This product is designed for household use only.

COMPONENTI



①Plunger

②Tray

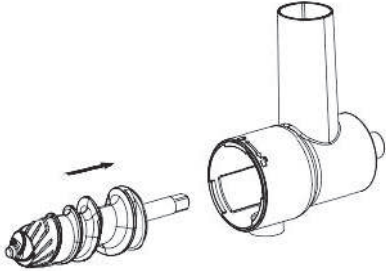
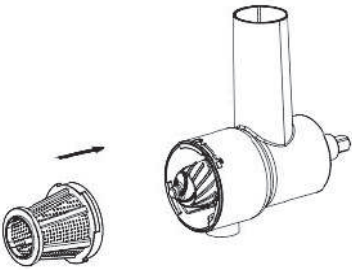
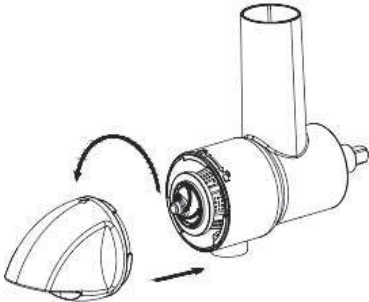
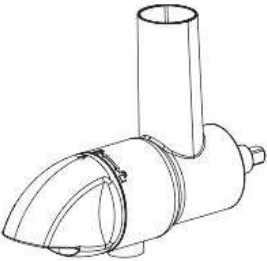
③Feed chute and Drum

④Auger

⑤Juicing screen

⑥End cap

COME ASSEMBLARE

	<p>Place the auger into the drum.</p>
	<p>Insert the juicing screen into the drum.</p>
	<p>Place the end cap onto the drum end and rotate the cap counter-clockwise.</p>
	<p>The attachment is assembled.</p>

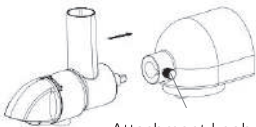
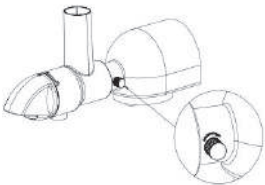
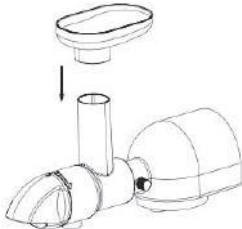
TO ATTACH

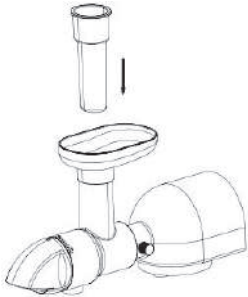
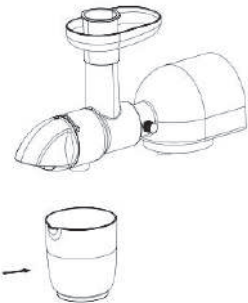
Before attaching accessory, turn off and unplug the mixer.

⚠ WARNING



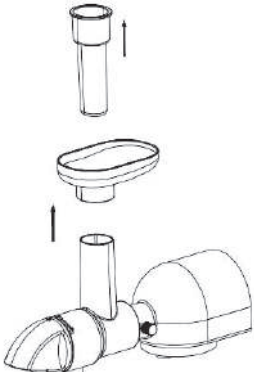
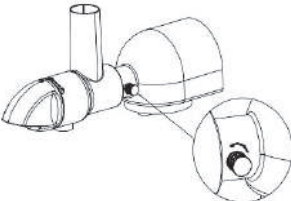
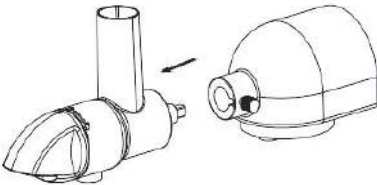
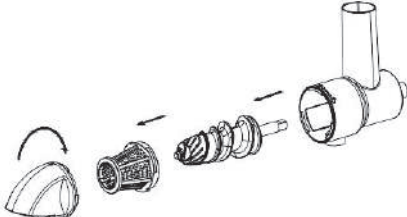
Electrical Shock Hazard
 Plug into a grounded 3 prong outlet.
 Do not remove ground prong.
 Do not use an adapter.
 Do not use an extension cord.
 Failure to follow these instructions can result in death, fire, or electrical shock.

 <p>Attachment knob</p>	<p>Loosen attachment knob by turning it counterclockwise and remove the hub cover.</p> <p>Insert auger shaft into attachment hub socket on the mixer.</p>
	<p>Tighten attachment knob by turning clockwise until attachment is completely secured to Stand Mixer.</p>
	<p>Mount tray onto the upper end of Feed chute.</p>

	<p>Place the few pieces of cut fruit or vegetables into the Feed chute, push them down the drum gently with plunger.</p> <p>(Do not put your finger or any other object into the Feed chute! If the Pulp/Juice Cup is full, disconnect the power supply and clear it up before restart.)</p>
	<p>Place the juice cup under the drum set</p>

MANUTENZIONE

- 1) Before cleaning the juicing attachment, be sure to shut down the switch to disconnect the power supply.
- 2) Clean the attachment after every use.
- 3) Do not try to wash the attachment by dishwasher.
- 4) Before storing it, make sure the attachment is clean and dry.
- 5) Some foods such as carrots may stain the housing. These stains may be removed by the following methods: rub a small amount of oil or shortening over the stains, wash in warm sudsy water and rinse.
- 6) Disassemble the attachment for cleaning by the following steps:

	<p>First remove the plunger and tray.</p>
	<p>Loosen attachment knob by turning it counterclockwise.</p>
	<p>Remove the attachment.</p>
	<p>After removing the attachment, detach the end cap, juice screen and auger in turn, all removable components can be washed with water.</p>

Please send your Amazon order number to our email (**info01@iamzchef.com**) to register AMZCHEF super member.

Once the email is successfully sent:

- ① You will automatically get 1 year of warranty, and upgrade to full replacement guarantee.
- ② If anything goes wrong with your product, we will provide you with a brand new unit as a replacement, or provide you with a full refund.
- ③ If there is a problem with your parts and accessories, you can replace them for free.



Send: info01@iamzchef.com

Subject: Warranty

Amazon Order ID: _____

Please note: Please send us your order number within 2 weeks of receiving the goods to ensure successful registration.

