


# SEIKI | S<sup>HOME</sup>

## **10KG/6KG** **FRONT LOAD** **WASHING/DRYER MACHINE** SC-1060AU10FLC

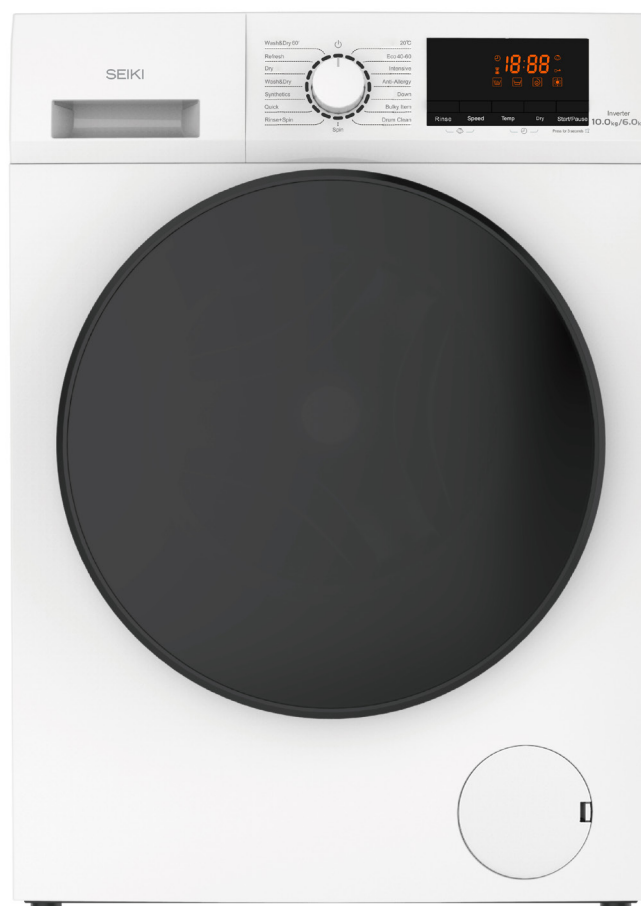

## **INSTRUCTION** **MANUAL**

Please read this manual carefully before using, and keep it for future reference.



# CONTENTS

General Safety	4
Product Overview	8
Operations	10
Getting Started	14
Instructions	18
Cleaning and Maintenance	20
FAQs	22
Specifications	23

# GENERAL SAFETY

## IMPORTANT INFORMATION

Read this manual thoroughly before you start using the Appliance.

The safety precautions instructions reduces the risk of fire, electric shock and injury when correctly complied to.

Please follow all instructions and take notice of all warnings.

Pay close attention to messages that follow this safety alert symbol or the words **DANGER**, **WARNING** or **CAUTION**. These words will be used to alert you of potential hazards that and injure you and others. Following these instruction will tell you how to reduce the chance of injury and the possible dangers if instructions aren't followed.



### WARNING

This symbol indicates when there is a serious risk of injury if you do not pay attention to the warnings.



### CAUTION

This symbol indicates when to be careful to avoid a serious risk of injury to oneself or damage to property.

## ELECTRICAL SAFETY

- **Voltage:** Plug the appliance to a 220-240V, 50Hz, properly earthed power outlet, it must be in good working order.
- **Power connection:** Do not use an adaptor or an extension cord.  
Plug the power plug directly into a separate power point that cannot be accidentally turned off, and that is easily accessible so you can switch it off if needed.
- **Power cord:** Do not kink or damage the power supply cord. Make sure it is behind the appliance so no one can step on or place anything on the power supply cord or against it. A damaged power plug may overheat and cause a fire.
- **Damaged cord:** Do not use a cord that shows cracks or damage. Any damage to the cord may cause a short circuit, fire and/or electric shock.  
Contact our support centre on [info@ayonz.com](mailto:info@ayonz.com) for advice
- **Disconnection:** Never pull the power cord to unplug appliance. Grip the plug and pull straight out from the power point.
- **Electrical work:** If the installation of this appliance requires any electrical work, make sure it is carried out by an electrician.

# GENERAL SAFETY INSTRUCTIONS (Cont.)

To reduce risk of fire, electric shock or injury, always follow these basic precautions and accident prevention measures when using this appliance, including the below:

**NOTE:** This appliance should be installed by an authorized technician else warranty will be void.

## INSTALLATION

- The product is heavy, be careful when moving it. To avoid back or other injury, have 2 people lift or mechanical aid when installing.
- When unboxing, thoroughly inspect the appliance carefully for any damage. If there is any damage, do not install the appliance. Contact our support centre on [info@ayonz.com](mailto:info@ayonz.com) for advice.
- While installing the appliance make sure that the power cord is not bent or flattened.
- Make sure to remove all packaging materials such as foams and tapes before installing the appliance.
- Make sure if the machine is to be placed on carpet that the ventilation openings in the base are not obstructed
- Install the appliance on a flat level and stable ground.

## WARNING

- Make sure that transport packaging is removed from the rear of the appliance. Do not overload the appliance with too many clothes.
- Exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels.
- Appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the appliance, in such a way that a full opening of the product door is restricted.

# GENERAL SAFETY INSTRUCTIONS (Cont.)

## USAGE CONDITIONS AND RESTRICTIONS

- Supervision over children is to ensure that they do not play with the appliance. Never allow them to use, play with or crawl inside the appliance. Cleaning and maintenance must not be done by children.
- This appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are being supervised or been given instructions on how to use of the appliance in a safe way and understand the hazards with using this appliance incorrectly. Children being supervised not to play with the appliance
- Only for indoor domestic use only. It is not to be used for industrial or commercial use.
- Do not use this product for anything other than its intended purpose, and only use it as described in this manual. Do not attempt to alter or modify this appliance.
- In the process of a hot wash, the door window can become hot. Make sure not to touch it or that no children or pets come into contact with the door window.
- Ensure that emptying all pockets of every item to make sure that there is no hard, sharp objects such as coins, safety pins, bra wires, nails or screws can cause damage to the appliance and has a chance to block the pump.
- Damage or malfunction caused from foreign objects is not covered by your warranty to the appliance.
- Do not operate this appliance outdoors.
- Incorrect use can result in property damage, injury or death. We assume no liability for misuse of the appliance or noncompliance with these instructions.
- Maximum load is 6.0kg for Drying / 10.0kg for Washing.
- Do not block any ventilation openings. Ensure that vents are not covered by anything.
- Do not use this product for anything other than its intended purpose, and only use it as described in this manual. Do not attempt to alter or modify this appliance.
- This appliance is intended to be used in household and similar applications such as:
  - Staff kitchen areas in shops, offices and other working environments;
  - Farm houses;
  - By clients in hotels, motels and other residential type environments;
  - Bed and breakfast type environments;
  - Areas for communal use in blocks of flats or in launderettes.

# GENERAL SAFETY INSTRUCTIONS (Cont.)

- Only load items that are suitable for the appliance.
- Do not place any open source flames on the appliance such as candles, etc..
- The door/window will be hot after a long cycle, be sure not to touch the window and to keep children away from the appliance.
- **WARNING:** Never stop the appliance before the end of the cycle unless all items are quickly removed and spread out so that the heat is dissipated.
- The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.
- The only part that can be changed is the filter, other than this nothing else in the appliance contains user serviceable parts. Do not open, disassemble or try to repair the appliance yourself. Only have this appliance serviced by a qualified technician.
- Incorrect use can result in property damage, injury or death. We assume no liability for misuse of the appliance or noncompliance with these instructions.

## CLEANING AND MAINTENANCE

- Before cleaning or maintenance, always unplug the appliance from the power socket. Make sure you pull by the plug, not the cord as this can damage the power cord and cause a hazard.
- Only the filter requires regular cleaning, everything else is non user-serviceable parts. Do not try to repair, disassemble or modify the appliance.
- Check and clean the lint filter on a regular basis
- **Service:** Never try to repair, modify or replace any part of the appliance, unless this manual says you can do so. All other servicing is to be done by a qualified technician, or contact our support centre on [info@ayonz.com](mailto:info@ayonz.com) for advice.

# GENERAL SAFETY INSTRUCTIONS (Cont.)

## CAUTION

**ITEMS BELOW ARE NOT SUITABLE FOR DRYING. IT CAN CAUSE FIRE IN THE APPLIANCE OR EXTENSIVE DAMAGE. DO NOT PLACE FOLLOWING IN THE APPLIANCE**

- Items containing rubber or foam like rubber or any other similar textured materials.
- Items that are spotted or soaked with cooking oil or any other flammable items. These other items include kerosene, stain removers, dry-cleaning solvents, alcohol, petrol, turpentine, waxes, hair care products, wax removers.
- Washing the items vigorously beforehand in hot water with extra detergent will reduce, but not completely eliminate the hazard.
- Undergarments that contain metal reinforcements (such as underwire bras). Plastic articles such shower caps and waterproof bibs.
- Rubber-backed articles, clothes with foam rubber pads, pillows, galoshes and rubber coated tennis shoes.
- Fabric softeners or similar products unless recommended by product manufacturer for use in a clothes dryer.

## CAUTION

- Do not use the appliance if industrial chemicals have been used for cleaning.
- Do not dry unwashed items in the appliance.
- Do not allow lint to accumulate around the appliance. Clean the Lint Trap and filter after every use.
- Enough ventilation has to be provided to avoid the backflow of gases into the room from appliances burning other fuels including open fires.
- Remove all objects from pockets such as lighters and matches.
- If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in appliance, they should first be washed in hot water with extra detergent - this will reduce, but not eliminate, the hazard.



**WARNING: Risk of fire**

This symbol alerts you to take care as oil-affected items can ignite, especially when exposed to heat, such as in a clothes dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation causes heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so it will create a fire hazard.



# GENERAL SAFETY INSTRUCTIONS (Cont.)

Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the appliance.

- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the appliance.
- Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.
- The final part of the appliance cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.
- Remove all objects from pockets such as lighters and matches.
- Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in the appliance. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so create a fire hazard.
- If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in the appliance, they should first be washed in hot water with extra detergent - this will reduce, but not eliminate, the hazard.


## **WARNING:**

Never stop the appliance before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.



## **IMPORTANT**

Before using the washing machine, you must remove the 4 transport bolts from the rear of the machine.


If you do not remove these transport bolts before first time use, you will damage the unit and also void warranty. You must remove these transport bolts before first time use.

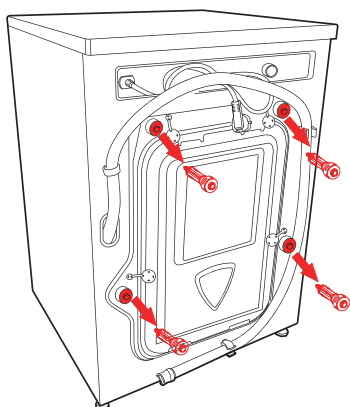

# PRODUCT OVERVIEW

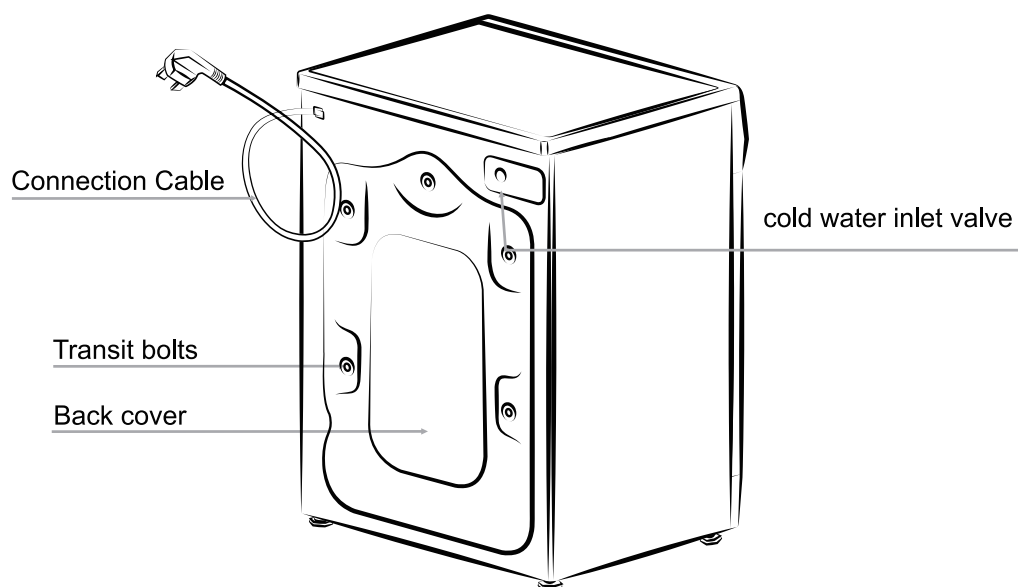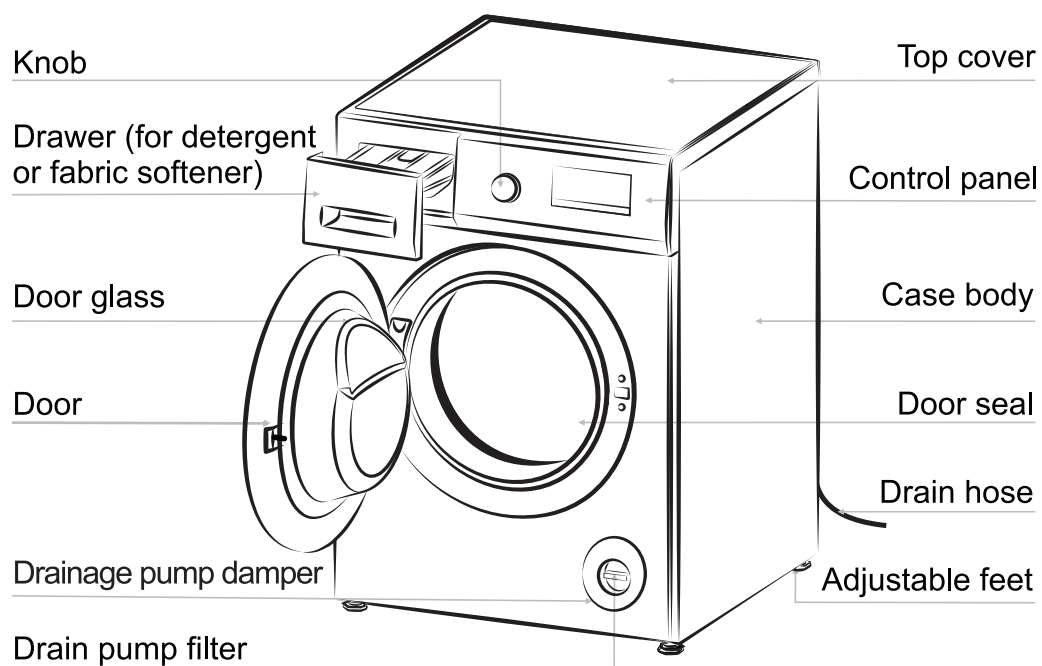


## Accessories

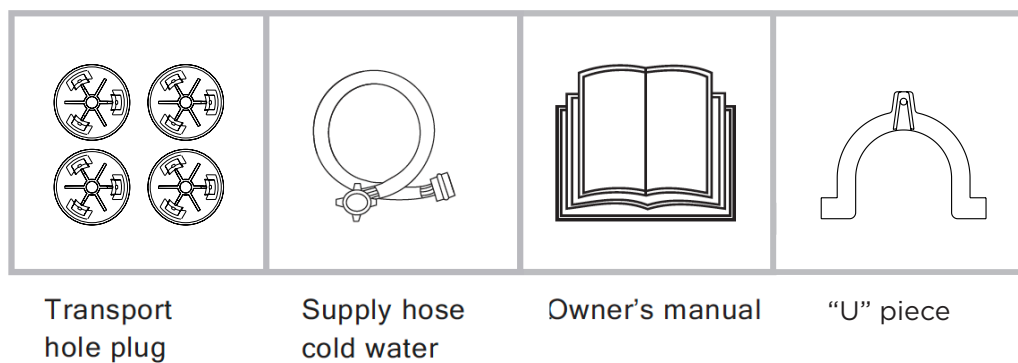


# PRODUCT OVERVIEW (Cont.)

## CONTROL PANEL

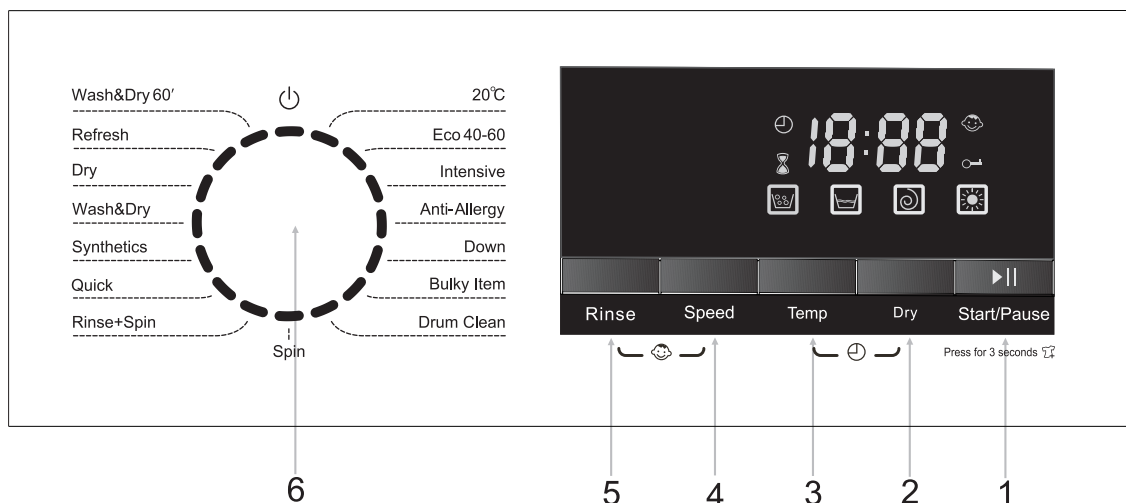

1. **START/PAUSE:** Press this button to start or pause the washing cycle. The door can not be opened when the machine starts. You can press this button for 3 seconds to pause wash cycle and add clothes, but if the water level or the temperature of the drum is high, the door will not open.
2. **DRY:** Press this button repeatedly to set the drying time. If the laundries want to be dry after being washed, press this button.
3. **TEMP:** Press this button repeatedly to change the wash temperature.
4. **SPEED:** Press this button repeatedly to change the spin speed.
5. **RINSE:** Press this button repeatedly to change the rinse times.
6. **KNOB:** Turn this knob clockwise or anticlockwise to select the required wash program. Once the “Start/Pause” button is pressed and the machine is running, the program can not be changed.

 
**NOTE:** For your safety, please not turn the knob to the position “” and get clothes while the machine is running. Because the temperature of water may be high and it may scald you. The door lock will open automatically at the end of a wash cycle while the temperature of the drum is cool down.


### Note:
 
#### Child lock (“Rinse ” + “Speed”)

The function of “Child lock” is to lock the control panel to prevent the misuse by children .

1.Press the “Rinse” and “Speed” buttons at the same time for 3 seconds.

When the icon “” is lighted up on the screen, the function works. This function can be selected during a washing cycle.

2.When this function works, all keys and knob are not available, except for the knob turn to the position “”.

# OPERATION

## The selectable options and functions of different programs






















 

 









Program	Weight (kg)	Time (min)	Temp (°C)	Rinse times	Spin speed (rpm)	Dry time (min)
20°C	7	57	20	2/3/4/5	0/400/600/800/1000/1200	0/60/90/120/150/180/210/240/270/300/330
Eco40-60	10	227	--	3	1400	0/60/90/120/150/180/210/240/270/300/330
Intensive	10	116	--/20/40/60	2/3/4/5	0/400/600/800/1000/1200/1400	0/60/90/120/150/180/210/240/270/300/330
Anti-Allergy	6	131	90	2/3/4/5	0/400/600/800/1000	--
Down	4	63	--/20/40	3/4/5	0/400/600/800	--
Bulky Item	10	99	--/20/40/60	3/4/5	0/400/600/800	--
Drum Clean	0	102	60/90	2	600	30
Spin	10	11	--	--	0/400/600/800/1000/1200/1400	0/60/90/120/150/180/210/240/270/300/330
Rinse+Spin	10	16	--	1/2/3/4	0/400/600/800/1000/1200/1400	0/60/90/120/150/180/210/240/270/300/330
Quick	3.5	30	--	2/3/4	0/400/600/800/1000/1200	--
Synthetics	5	72	--/20/40/60	2/3/4	0/400/600/800	0/60/90/120/150/180/210/240/270/300
Wash&Dry	6	233	--	2	400/600/800/1000/1200/1400	60/90/120/150/180/210/240/270/300/330/360
Dry	6	70	--	--	0/400/600/800/1000/1200/1400	60/90/120/150/180/210/240/270/300/330/360/390
Refresh	4	30	--	--	--	30
Wash&Dry 60'	1	60	--	2/3/4	0/400/600/800/1000/1200	30

## Icon explanation

	Digital display: This icon shows the time, speed, rinse times, Error code.
	Remaining time: This icon will shining once the display show the remaining time.
	Delay time: This icon will shining once the display show the delay time.
	Child lock: This icon will shining once child lock function is selected, otherwisw will gone.
	Door lock: This icon will shining when door lock is working, otherwise will gone.
	Drying phase: this icon will flicker during the drying phase.
	Washing phase: this icon will flicker during the washing phase.
	Rinse phase: this icon will flicker during the rinse phase.
	Spin phase: this icon will flicker during the spin phase.

# OPERATION (Cont.)

**Programme chart**

Programme	Washing symbol	Fabric
20°C	   	Cottons, linens or cotton mix fabrics, e.g. towelling, underwear, T-shirts etc.
Eco40-60	   	Cottons, linens or cotton mix fabrics, e.g. table linen, underwear, T-shirts etc.
Intensive	   	Cottons, linens or cotton mix fabrics.
Anti-Allergy		Washing clothes at 95°C , which would help for sterilization and disinfection.
Down	 	Down jacket or down coat.
Bulky Item	   	Clothes with large volume.
Drum Clean	 	This program is used to clean the drum. Don't put any clothes into the drum while running this program.
Spin		Separate spin for cotton and linen items.
Rinse+Spin		This program can be used for rinsing items which can be washed in a Cotton program. Don't add any detergent.
Quick	  	Synthetic or mixed fabrics, underwear, coloured garments, non-shrink shirts.
Synthetics	 	New clothes or a small amount of clothes which is not that dirty.
Wash&Dry		This program can be used to dry a small amount of clothes.
Dry		This program can be used to dry clothes.
Refresh		This program can be used to remove the peculiar smell and folds of clothes.
Wash&Dry 60'	   	This program can be used to wash and dry a small amount of clothes.

## Note:

- When washing cycle is finished, the machine will change into standby mode. And the power will be off after 10 minutes without any control on the control panel.
- The machine is fitted with balance control device, which ensures the machine is stable during the spin. To protect the machine, it will cut in if the laundry is not evenly distributed in the drum. The laundry is redistributed by reverse rotation of the drum. This may happen several times before the unbalance disappears and normal spinning can resume. If after 15 minutes, the laundry is still not evenly distributed in the drum, the machine will not spin. In this case, redistributed the load manually and reselect the spin programme. The test program Eco40-60 is for cottons, linens or cotton mix fabrics. Eco40-60 is the one recommended for a normally soiled load equal to the rated load capacity in the product literature.

## Door Lock

- When the machine is started, the door is locked.
- When the temperature inside the drum is above 60°C, the door is locked.
- When the water is above a certain level, the door is locked.
- When the washing cycle is finished, the door is unlocked.

# GETTING STARTED

Before installing your appliance, read all safety instructions in this manual, especially the sections on electrical safety and installation.

## UNPACKING

- When unpacking the appliance, be sure to keep all the packaging materials until you have made sure your new appliance is undamaged and in good working order. Plastic can be a suffocation hazard for babies and young children, make sure the materials are out of their reach.

## TRANSPORTATION



- **CAUTION: VERY HEAVY!** Be sure to team lift the appliance with someone or mechanical aid is required when moving the appliance. Keep the appliance upright as possible when moving the appliance.

# GETTING STARTED (Cont.)

## LEVELING THE APPLIANCE

**IMPORTANT!** Make sure to level the appliance carefully with a spirit level to ensure the most accurate leveling of the appliance. This is a must if your floor is unbalanced to level the washing machine.

- Make sure to position the appliance on a level and stable ground. If the floor is uneven you can adjust the feet by twisting the feet. Make sure to slightly incline the appliance first then adjust the leveling feet by twisting it clockwise or counter clockwise depending if you are raising or lowering the feet.

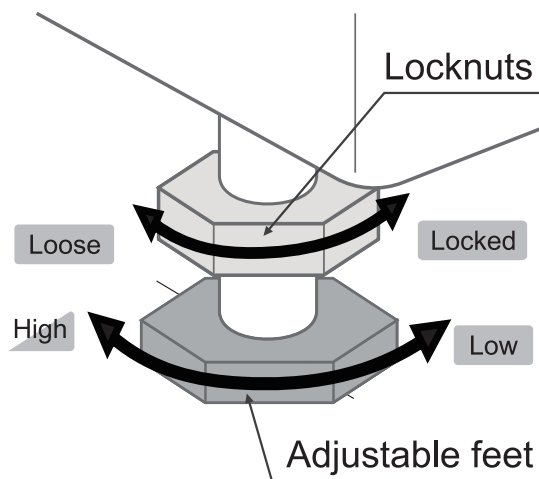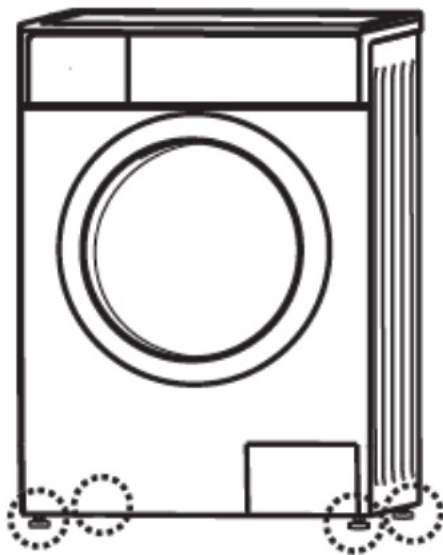

- By placing a spirit level on top of the appliance you can check correctly to aid you in adjusting the feet leveling nuts to adjust the appliance to be completely level.

**Note:** Make sure to avoid direct sunlight onto the appliance.


# GETTING STARTED (Cont.)

## CONNECTING THE WATER INLET HOSE


**IMPORTANT!** To prevent leakage or water damage please follow the below instructions. Do not kink, crush, modify or sever the water inlet hose.

- Connect the inlet pipe as indicated, there are two steps of connecting the inlet pipe.

1. Connect the inlet hose to the machine.

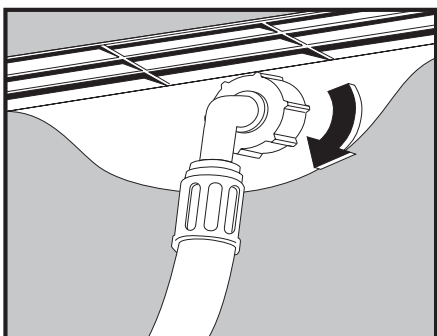

2. Connect the inlet hose to a tap with 3/4" thread.

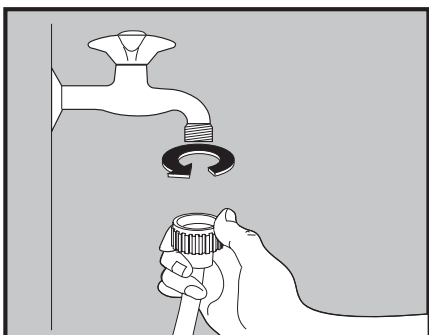



# GETTING STARTED (Cont.)


## CONNECTING THE DRAIN HOSE

- Do not kink or protract the drain hose. Position the drain hose correctly otherwise damage will result in water leakage.
- Do not bend the drain hose or place it under the washing machine.
- Be sure to only use new hose sets when connecting the Washing Machine. Do not re-use old hoses.

### 1. Direct into a sink


If the outlet spigot has not been used before, remove any blanking plug that may be in place. Push the drain hose onto the spigot and secure with a clip if required, ensure a loop is formed in the drain hose to prevent waste from the sink entering the washing machine.

If required, the drain hose can be extended to a length of 4 m.

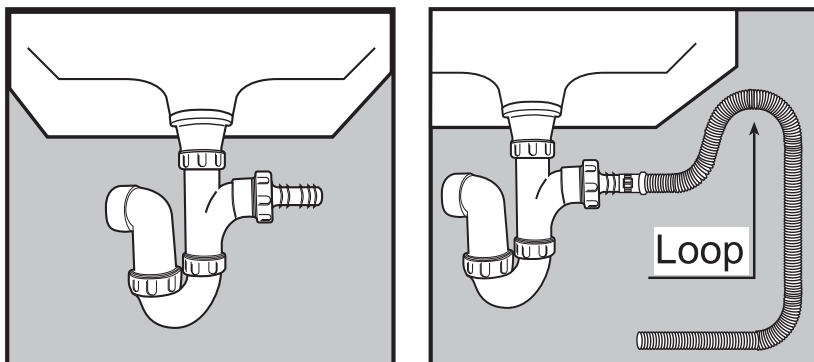

### 2. Connected securely to a standpipe

Firstly form a hook in the end of the drain hose using the “U” piece supplied. Place the drain hose into your standpipe, which should have an internal diameter of approximately 38mm thus ensuring there is an air break between the drain hose and standpipe. When discharging into a standpipe ensure that the top of the standpipe is no more than 90cm and no less than 60cm above floor level.

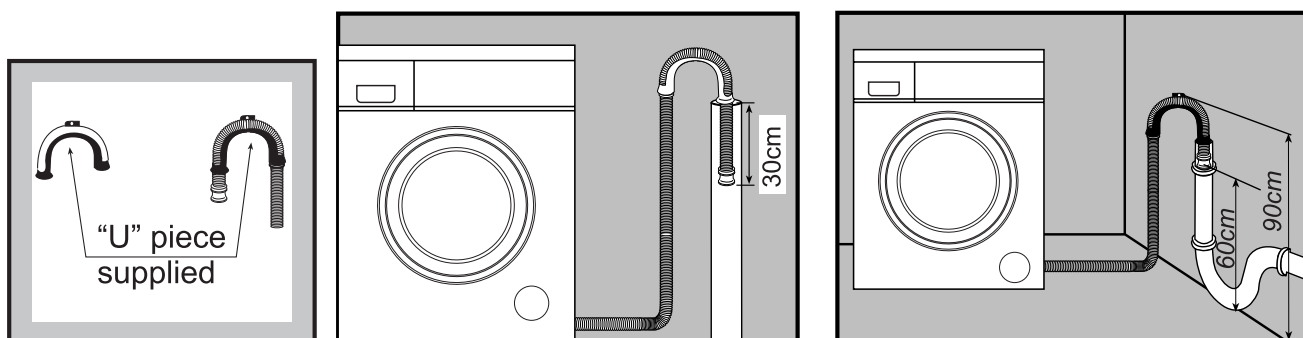


# INSTRUCTIONS

## BEFORE FIRST USE


- Make sure the washing machine is completely level as to previous instructions on how to level your washing machine.
- Make sure the water inlet hose is installed correctly.
- Make sure that the washing machine is plugged into the power socket.
- When the water inlet hose is installed, turn on the water supply on the tap.

After the above steps have been completed, In a few simple steps you can select the type of wash you want and get started.


- Make sure that the appliance is in a correct working temperature (0-40°C). If the appliance is used under 0°C the inlet valve and draining system may be damaged.
- Make sure that all labels are checked on items if they can be washed.
- Use non-foaming or less-foaming detergents which are more suitable for washing machines to wash correctly.

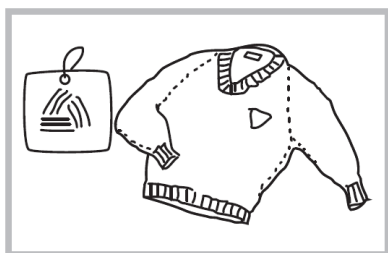


Check the label

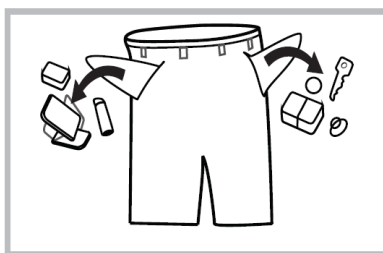


Take out the items out of the pockets

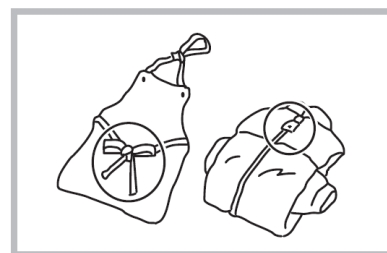


Knot the long strips, zip or button

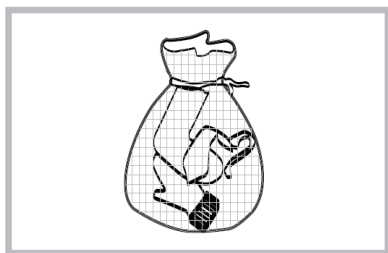

Put small clothes into the pillow slip

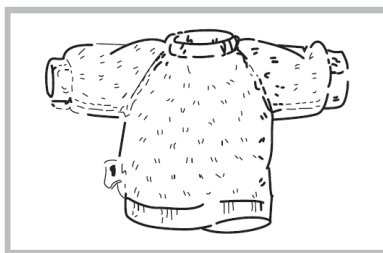

Turn easy-pilling and long-pile fabric inside out

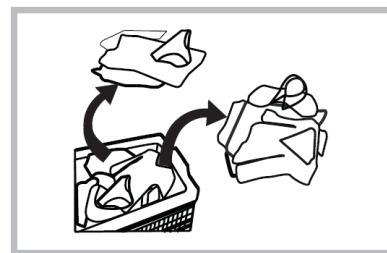

Separate clothes with different textures







## WARNING

- Never use the washing machine to wash a single item at any given time, if you need to urgently wash an item, we suggest placing a few clothing items in there.
- Make sure that all labels are checked on items if they can be washed.
- Use non-foaming or less-foaming detergents which are more suitable for washing machines to wash correctly.
- Maximum load is 6.0kg for Drying / 10.0kg for Washing.

# INSTRUCTIONS (Cont.)

## WASH CARE SYMBOLS

When choosing a wash program, check for any labels on your clothes and follow the instructions. below are some commonly used symbols.

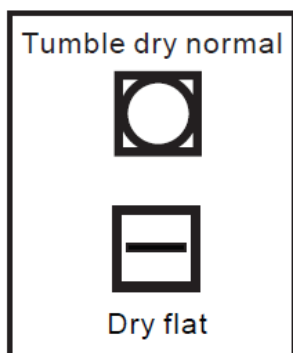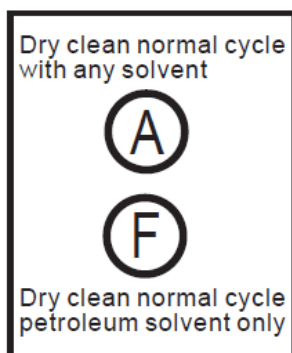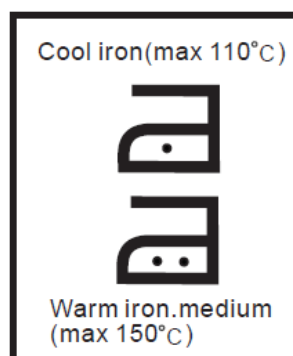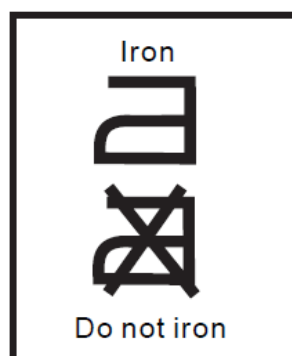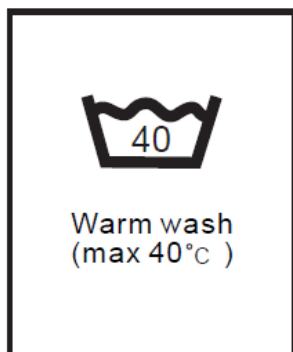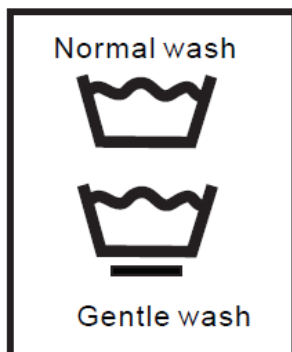

# CLEANING AND MAINTENANCE

## **WARNING:**

- Before starting maintenance, ensure that the appliance is unplugged and close the tap.

## **CLEANING THE CABINET**

Proper maintenance on the washing machine can extend its working life.



The surface can be cleaned with diluted non-abrasive neutral detergents when necessary. If there is any water overflow, use a wet cloth to wipe it off immediately. Make sure no sharp items are used to clean the appliance.

- Use a gentle cloth to wipe off the water and dirt on the surface of the washing machine after every use. Detergent, properllant and other chemicals are not allowed to be used to clean the washing machine surface as it can damage the plastic accessories.

## **CLEANING THE DRAWER**

Remove detergent residues regularly. Clear the drawer following these:


- Pull out the drawer until a resistance is felt. Press down the release catch and at the same time pull the drawer right out of the machine.
- Remove the siphon from compartment and clean it.
- Clean the dispenser using a brush and warm water.

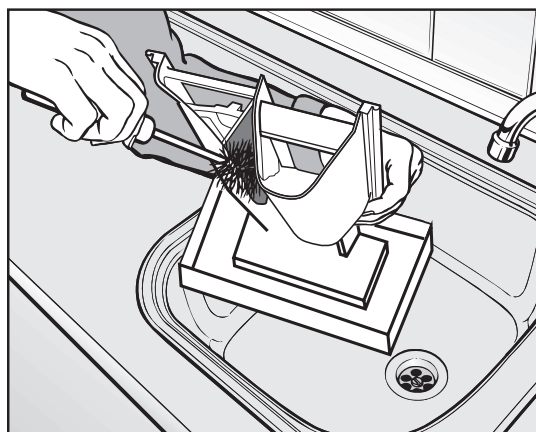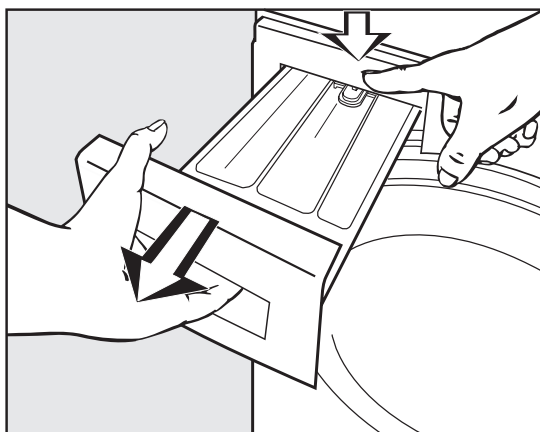

# CLEANING AND MAINTENANCE (Cont.)


## CLEANING THE DRAWER HOUSING

Use a bottle brush to remove detergent residues inside the drawer housing.

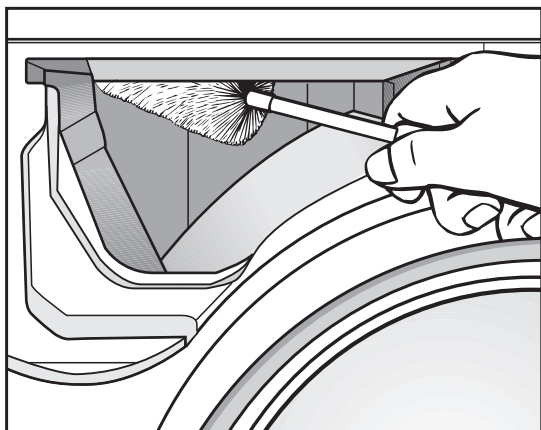

## CLEANING THE WATER INLET FILTER

Use pointed nose pliers to withdraw the plastic filter. Clean, put back and secure. These filter should be checked every 6 months or so, or more often if there are frequent interruptions to the water supply.

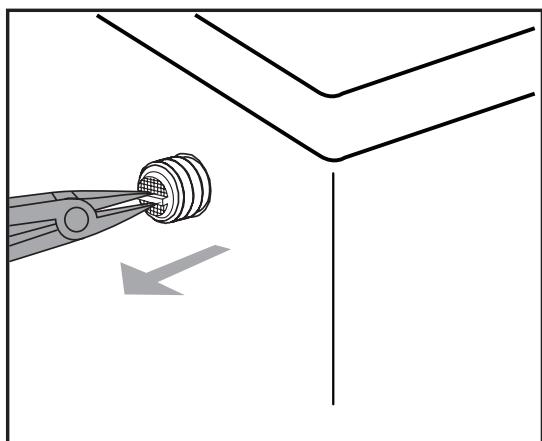



## CAUTION!

- Make sure that valve cap is reinstalled properly, cap plates should be inserted aligning to hole plates otherwise water may leak.
- When the appliance is in use and depending on the programme selected there can be hot water in the pump. Never remove the pump cover during a wash cycle, always wait until the appliance has finished the cycle, and is empty. When replacing the cover, ensure it is securely re-tightened.

# CLEANING AND MAINTENANCE (Cont.)

## CLEANING THE DRAIN PUMP FILTER

1. Disconnect the machine from the mains electricity supply and open the lower cover with a screwdriver.
2. Place a container under the pump. Unscrew and remove the filter.
3. Clean the filter carefully.

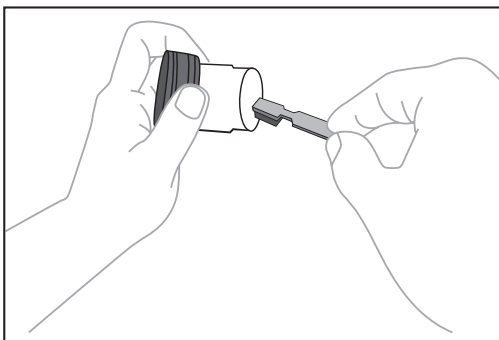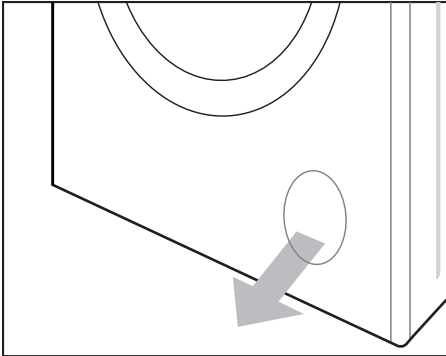

# FAQs

Please be sure to contact our call centre on [info@ayonz.com](mailto:info@ayonz.com) if you cannot identify the issue with the below information.

Problem	Error Code	Possible Cause	Solutions
The machine fills overtime.	“E01” is on the screen.	1. The water tap is not open. 2. The drain hose is put down. 3. The water inlet valve is damaged.	1. Open the water tap. 2. hook up the hose. 3. Change the water inlet valve.
There is a Door lock alarm.	“E02” is on the screen.	1. The door is not locked well. 2. garment is caught between the door and the seal. 3. The door lock is damaged.	1. Lock the door well. 2. Put the garment into the drum. 3. Change the door lock.
The machine drains overtime.	“E03” is on the screen.	1. The drain hose is squashed or kinked. 2. The drain pump filter is block. 3. The drainage system pipes are blocked.	1. Check the drain hose. 2. Clean the filter. 3. Check the drainage system and clean it.
Water overflows the machine. / Water sensor works abnormal.	“E04” is on the screen.	1. The water inlet valve is damaged. 2. The connection between the water sensor and wire is not secure. 3. The water sensor is damaged.	1. Change the water inlet. 2. Check the connection and ensure it is secure. 3. Change the water sensor.
The motor does not work.	“E05” is on the screen.	1. The connection between the motor and wire is not secure. 2. The motor is protected because of over-heat. 3. The motor is damaged.	1. Check the connection and ensure it is secure. 2. Check if the machine is overloaded. Switch off the machine, and retry when the motor becomes cool. 3. Change the motor.
There is a heating tube fault.	“E06” is on the screen.	1. The connection between the heating tube and wire is not secure. 2. The heating tube is damaged.	1. Check the connection and ensure it is secure. 2. Change the heating tube.
There is a temperature sensor fault.	“E07” is on the screen.	1. The connection between the wire and temperature sensor is not secure. 2. The temperature sensor is damaged.	1. Check the connection and ensure it is secure. 2. Change the temperature sensor.
long cooling	“Edc” is on the screen.	1. The dry cooling time is over ten minute at the end of drying.	1. Check the tap and ensure it's open. 2. Check the water and ensure it's cold.
Inverter fails to start	“E09” is on the screen.	1. The connection between the inverter and wire is not secure. 2. The inverter is damaged.	1. Check the connection and ensure it is secure. 2. Change the inverter. 3. Restart the machine.

# SPECIFICATIONS

<b>Power Supply</b>	220-240V ~ 50Hz
<b>Standard Water Pressure</b>	0.02MPa~0.8MPa
<b>Washing/Dry Capacity</b>	10KG / 6KG
<b>Rated Power</b>	2000W
<b>Dimensions</b>	595 x 665 x 845 mm (W x D x H)
<b>Weight</b>	Net: 69 kg
	Gross: 73 kg











**CUSTOMER HELPLINE:**

info@ayonz.com  
02 8279 8606

**DISTRIBUTED BY:**

Ayonz Pty Ltd