



magnifi MAXSR™

Maximum-Performance Home Theater Sound Bar System™

Quick Start Guide

Thank you for your Polk purchase. If you have a question or comment, please feel free to call or email us.

Technical Assistance

In North America, call Polk Customer Service at
800-377-POLK(7655) (M-F, 9 a.m.–5:30 p.m. EST)

Outside the US, call **+1-410-358-3600**

email **polkcs@polkaudio.com**

Polk Audio
1 Viper Way, Vista, CA 92081
U.S.A.

The complete owner's manual can be found online at
www.polkaudio.com/products/magnifimaxsr

Polk Audio is a DEI Holdings, Inc. Company. Polk Audio and Polk, are registered trademarks of Polk Audio, LLC.
Chromecast Built-in is a trademark of Google Inc.

All other trademarks, product names, logos, and brands referenced herein are the property of their respective owners.

What's in the Box



Sound bar



 
6.5' (2m) high-speed HDMI cable



Sound bar power cord



6' (1.8m) Optical cable




Sound bar power supply




6' (1.8m) 3.5mm AUX cable



 (2) wall mounting brackets
(screws and fasteners not included)

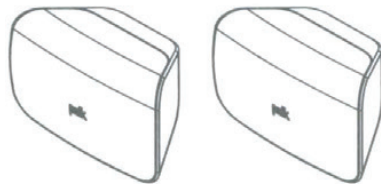

 (2) SR1 Wireless Surrounds




(2) Surrounds
Power Supplies



Remote control



 2(AAA) Batteries

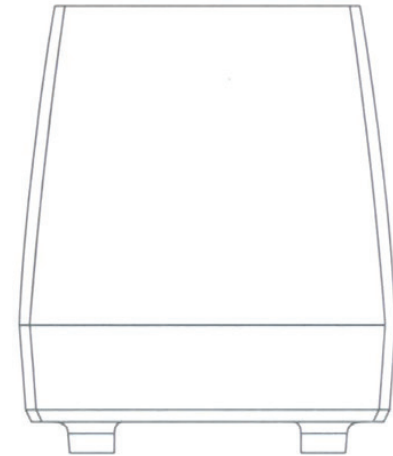

Subwoofer



Subwoofer power cord



Product Literature

 
Setup

Connecting to Your TV

1.


Is an HDMI input jack on your TV labeled “ARC”?

YES

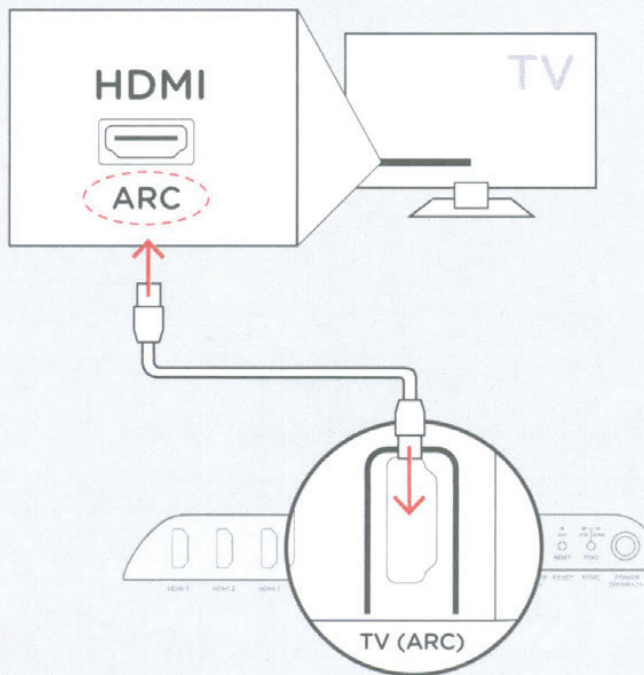

Connect the included **HDMI cable** to the HDMI jacks labeled with “ARC” on both the TV and the sound bar.

 NO

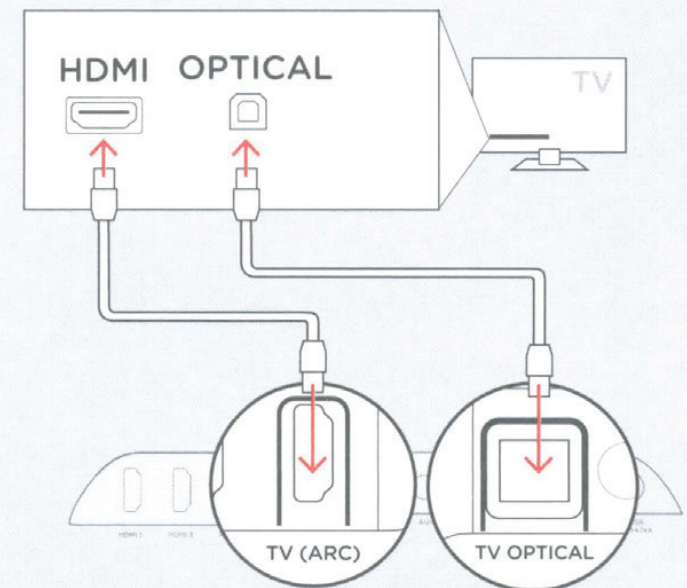


Connect the included **Optical cable** between the TV and sound bar.

Connect the included **HDMI cable** to any available HDMI jack on the TV and to the “TV ARC” connector on the sound bar.

2. Placing the sound bar


For the best listening experience, position the sound bar centered under your TV.

 Note: For wall mounting instructions, see Advanced Setup on p.17 and included wall mounting template

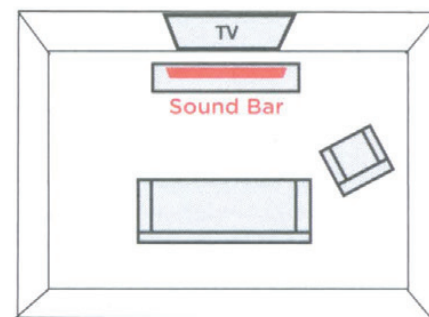


3. Connecting the sound bar to an AC outlet

 During startup, you will see a blinking orange light on the front.

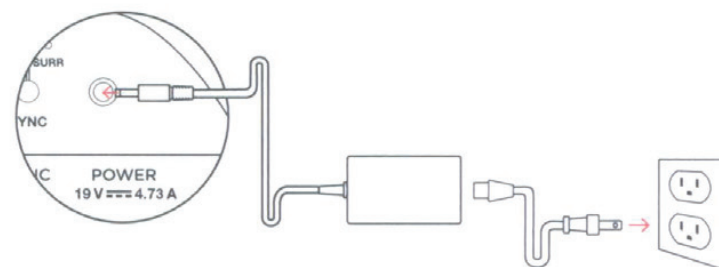


4. Placing the subwoofer

 For best performance place on the same wall as the TV, no more than 30ft (10m) from the bar.

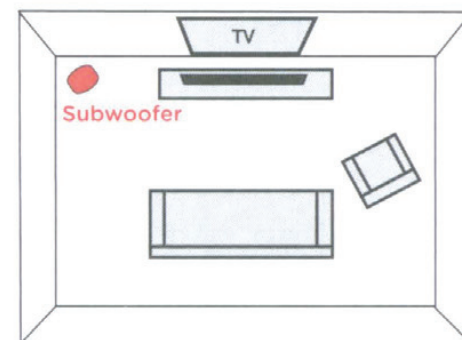

5. Connecting the subwoofer to an AC outlet

 
A solid green light will be visible on the back of the subwoofer to indicate that it is paired to the sound bar.

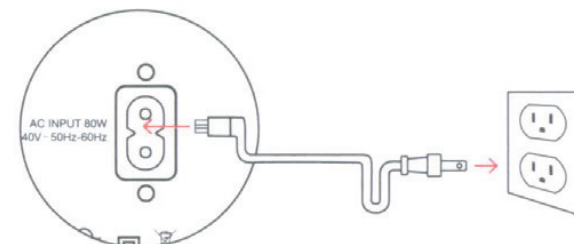

6.

Placing or mounting the surrounds

 
Place the surround speakers on the left and right sides and equidistant from the main listening position. Make sure you place the speaker marked “L” on the left and the speaker marked “R” on the right. If you decide to mount the surrounds, Please refer to the wall mounting template for instructions.

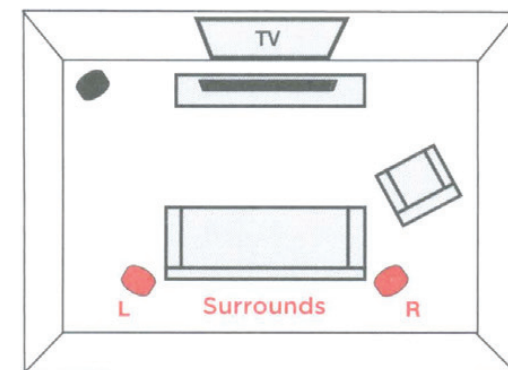

7.

Connecting the surrounds to an AC outlet

 
A flashing green light will be visible on the back of the surrounds.

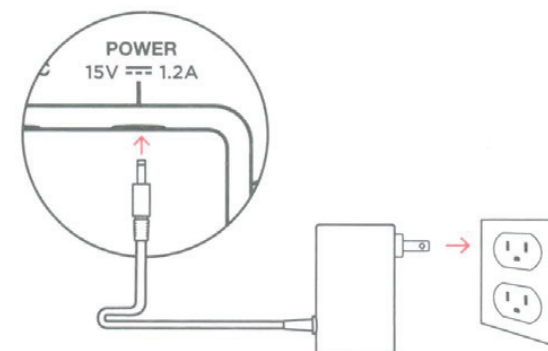

8.

Installing remote batteries

 Insert the provided AAA batteries.

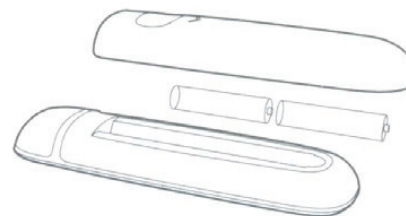


9. Verifying your connections

Turn on your TV and verify that you are seeing video and hearing sound from the sound bar.

If you do not hear sound and do not see any lights on the front of your sound bar, press the power button on the sound bar to turn it on.

 Note: If you are hearing sound from both your TV and your sound bar, you must manually turn off your TV speakers using the Settings Menu on your TV. Please refer to your TV's owner's manual for instructions.

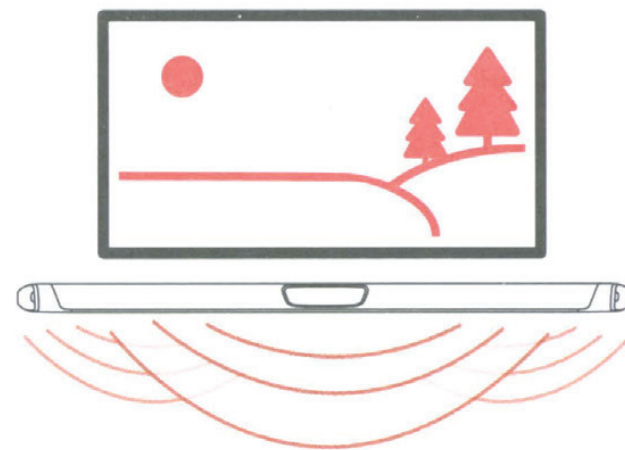

Using your TV remote to control the volume

The MagniFi MAX comes pre-configured to respond to volume and mute commands from the most popular TV remotes including: Samsung, LG, Sony, Vizio, and other major brands.*

*All other trademarks, product names, logos, and brands referenced herein are the property of their respective owners

NOTE: If the MagniFi MAX remote does not work with your TV, follow the instructions on page 15 to get the MagniFi MAX to learn your TV remote control commands.

Listening to Music via Chromecast Built-in

 
 
Chromecast Built-in Benefits

MagniFi MAX features Chromecast Built-in which lets you easily:

1. Stream music from your favorite apps over Wi-Fi or Ethernet.
2. Create a whole-home audio experience. Multi-room sync let's you play the same song across Chromecast built-in compatible speakers in your house at the same time.
3. Use Google Assistant on a Google Home speaker to control music playback on the MagniFi MAX using voice commands.

Chromecast Built-in Setup

1. Download the free Google Home app and follow the in-app instructions to connect the Polk MagniFi MAX to your Wi-Fi or Ethernet network.
2. For more detailed setup information about Google Home and Chromecast Built-in for audio, visit: <https://support.google.com/googlehome> and <https://support.google.com/chromecastbuiltin>

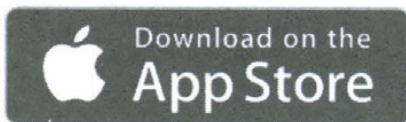

3. When streaming from a Chromecast-enabled app, a white light will appear on the sound bar.


Receiving Automatic Updates - Highly Recommended

 
Occasionally Polk may provide periodic software updates via the Internet which improve product performance and expand the list of built-in TV remote controls.



We highly recommend that you connect your sound bar to your home network. To receive automatic updates, you do not need to register your product or provide your email address. Simply connect your sound bar to your network via Wi-Fi or Ethernet (cable not included) using the free Google Home app on iOS or Android devices.


Listening to Music via *Bluetooth*[®]

1. To connect your device using *Bluetooth*, press the *Bluetooth* button  on the sound bar or remote. A blue light will slowly pulse on the sound bar as it waits to connect to your bluetooth device.




2. Go to the *Bluetooth* settings section in your phone, tablet or computer and select “Polk MagniFi MAX”. The light will turn solid blue when your *Bluetooth* device is connected.

 
Remote Control

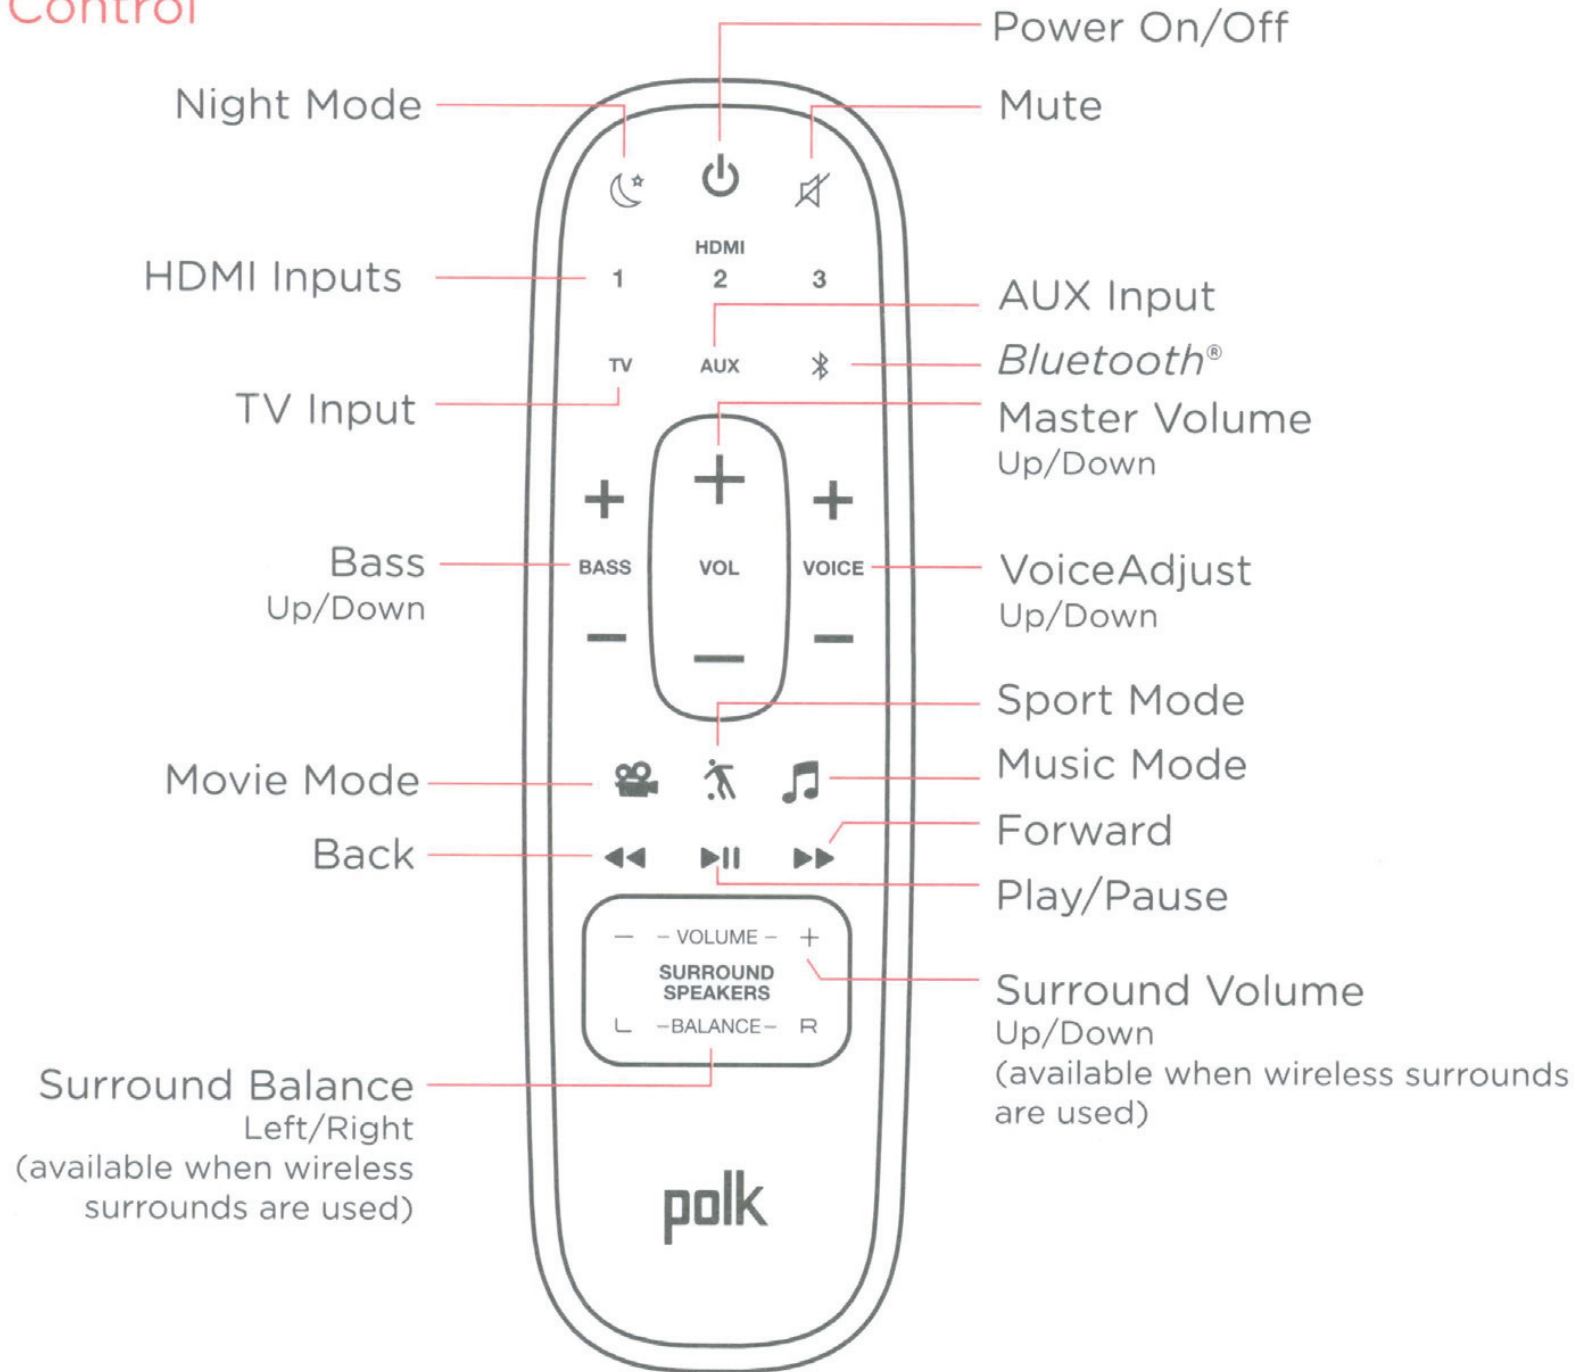

Sound Bar Top Panel

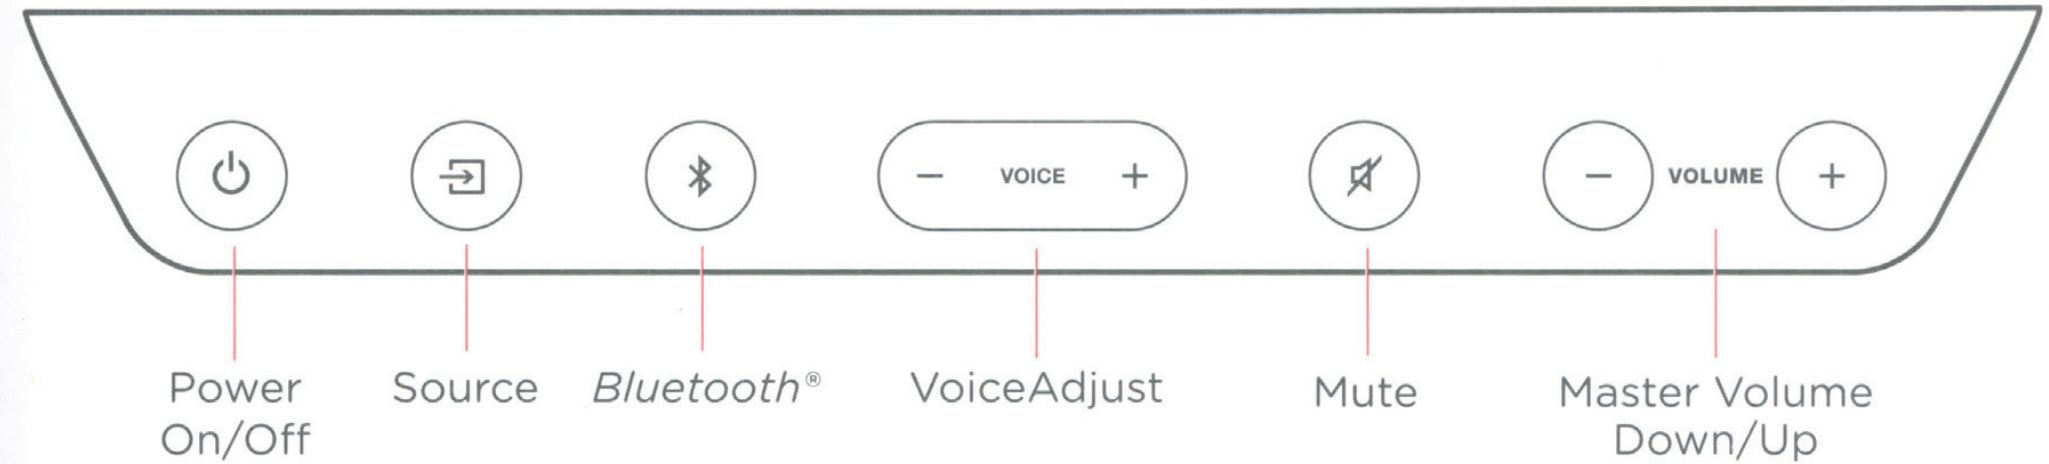 




Sound Bar Back Panel

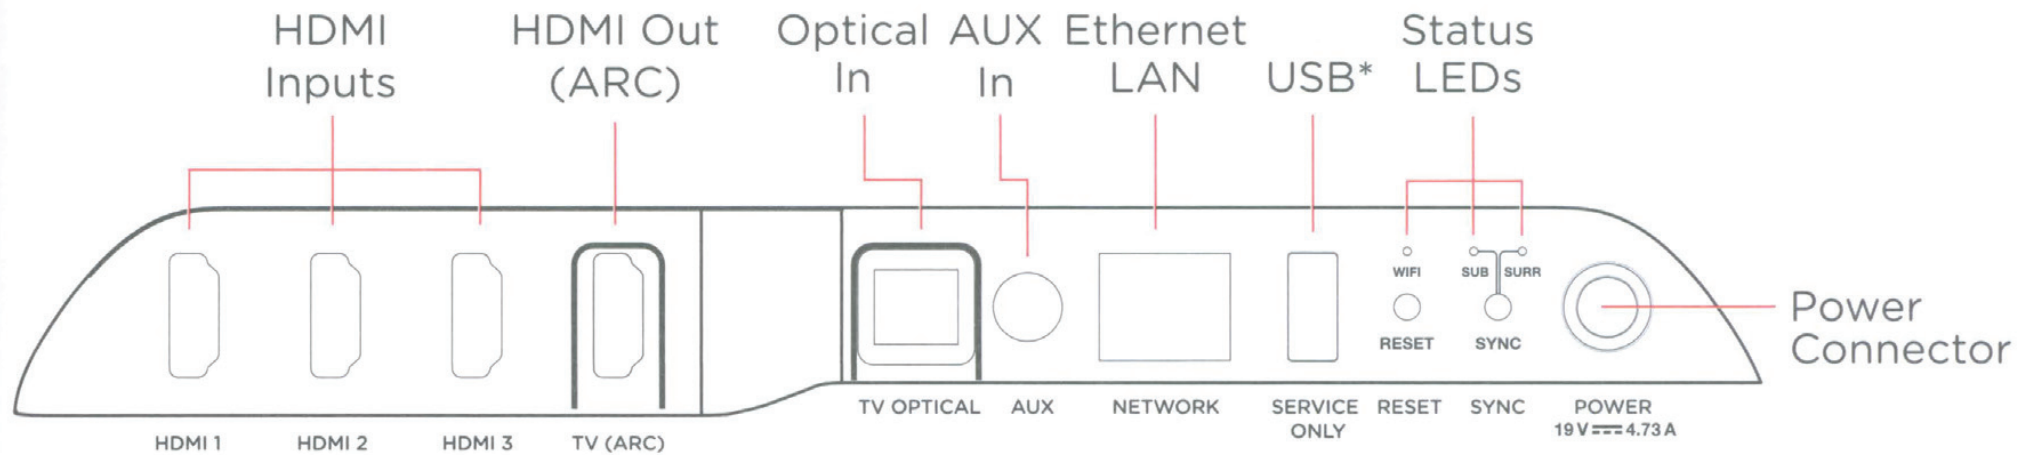 


*Factory use only

Visual Indicators

   The front of the sound bar contains a horizontal row of lights that provide status indications, such as source, volume and listening modes.

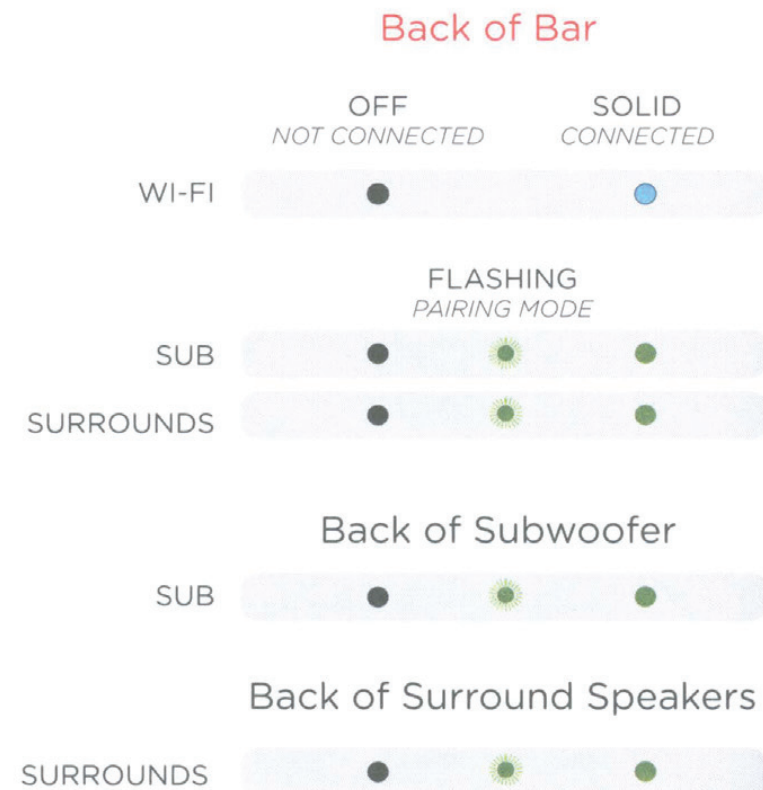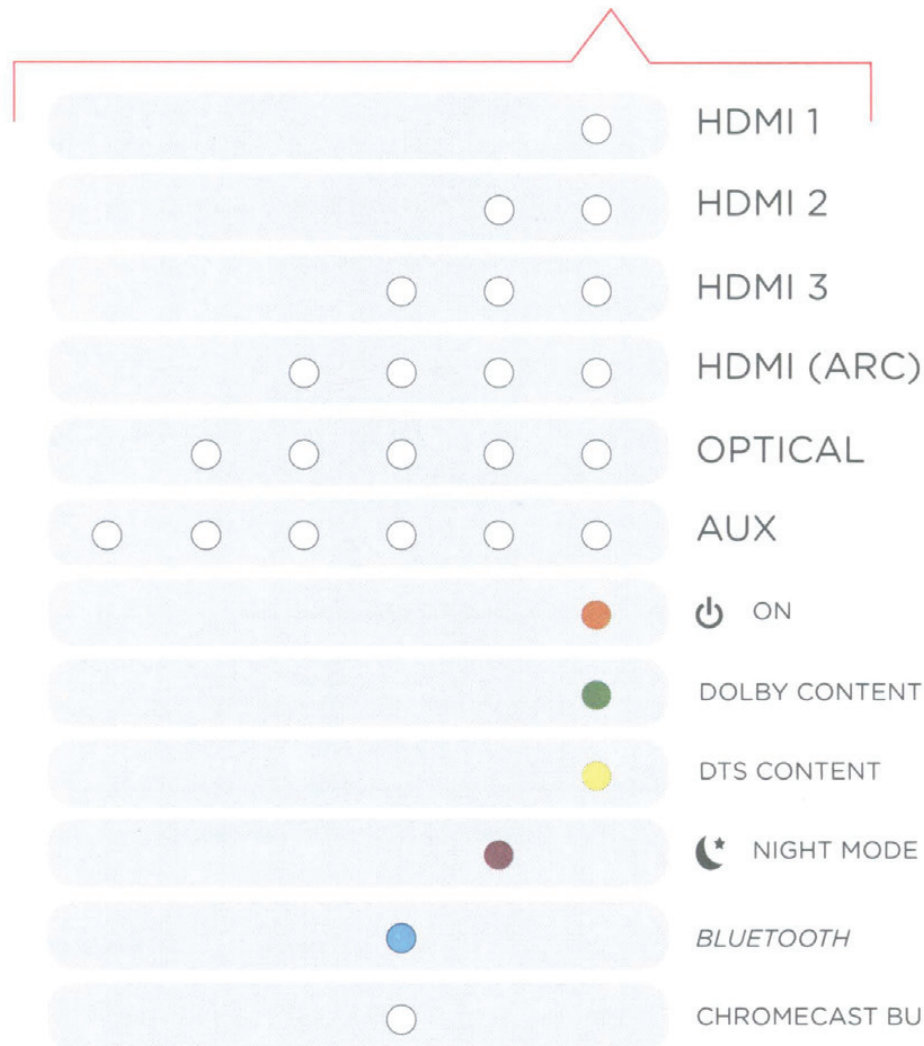

Optimizing Your Listening Experience

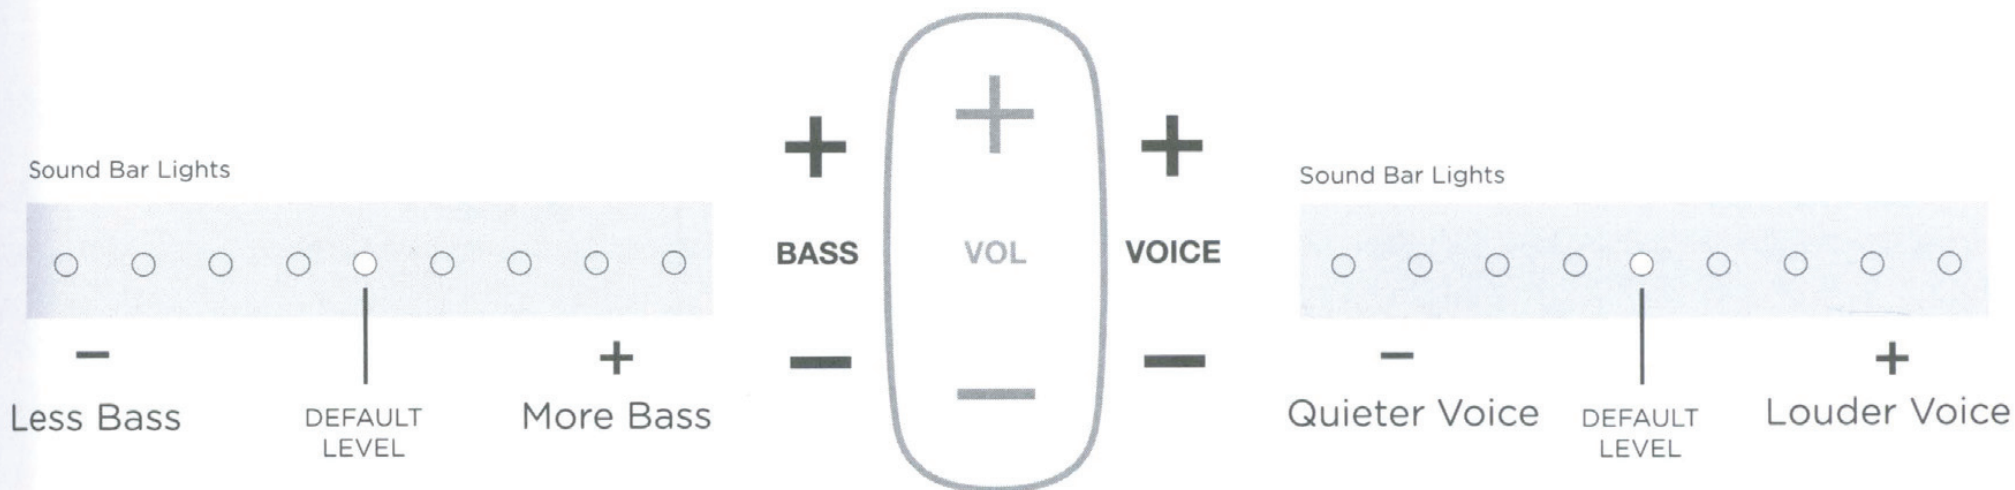 

Bass Control

Easily adjust low-frequency volume for more or less impact.



Easily adjust dialogue levels to improve clarity when watching TV shows, movies, and sports.

Optimizing Your Surround Speakers



Volume Control

Easily adjust volume for more or less impact.

Balance Control

Easily adjust the balance for left and right weighted sound.

Using Your TV or Cable/Satellite Remote to Control the MagniFi MAX

There are several ways to use your TV, cable, or satellite remote to control MagniFi Max

HDMI CEC CONTROL

If your TV is connected via HDMI and your TV supports CEC (and it is enabled in the TV settings menu), you can control the volume and mute functions on MagniFi MAX from your TV without any further setup.

PRELOADED IR CODES

If your TV is connected via optical or your TV is connected via HDMI but your TV does not support CEC, you may be able control the volume and mute functions on MagniFi MAX from your TV without any further setup if your TV is one of supported brands and was manufactured within the last 5 years. Visit the Polk web site for details.

IR LEARNING FUNCTION


If your TV is connected via optical and it is not one of the more popular brands, you can teach your IR (infrared) remote to control volume, mute and other functions (such as source selection or bass volume) on your sound bar.

Using the IR Learning Function

IMPORTANT: Hold both remotes about 12" (30cm) directly in front of the MagniFi MAX when pressing their respective buttons and make sure your remotes have fresh batteries.



Entering IR Learn Mode

Make sure your sound bar is powered on, then press and hold the  Source button on the sound bar for about 3 seconds. When you hear a two-note tone release the button. You should now see white lights on the front of the sound bar bouncing left and right.

STEP 1: Select a button on your MagniFi Max remote

Press and release the button on the MagniFi MAX remote that you want to learn (ex: Volume Up). You will hear a single tone and see all white lights fading in and out together.

STEP 2: Select a button on your TV remote

Briefly tap the corresponding button on your TV remote. You will hear a two-note tone and see white lights counting down from left to right as the received IR command is processed.

STEP 3: Verify the results

- If you see the white lights fading in and out again, repeat step 2.
- If you hear a two-note tone and see ●●●●●●●●●● the command was not learned. Please try again.
- If you hear a single tone and see ●●●●●●●●●● the command was successfully learned.

STEP 4: Learn Another Code


When you see the white lights on the front of the sound bar bouncing left and right again, you are ready to select your next function to learn by repeating steps 1-3.

Exiting IR Learn Mode

Press and hold the  Source button on the sound bar again for about 3 seconds. When you hear a two-note tone release the button.

NOTE: The soundbar will automatically exit IR learn mode if it has not received any IR commands for 60 seconds. All learned IR commands will automatically be saved.

CLEARING ALL LEARNED IR CODES

Press and hold the  Source button on the sound bar for about 10 seconds. You will hear a two-note tone. Continue holding the button and release the button after you hear a three-note tone.

Advanced Setup

Connecting a cable box, game console or other HDMI sources to your MagniFi MAX (figure 1)

Magnifi MAX supports up to three HDMI sources. It will pass-through 4K and HDR signals to your TV if you are using the HDMI-ARC connection between the sound bar and TV. You will need to use High Speed HDMI cables for 4K content.


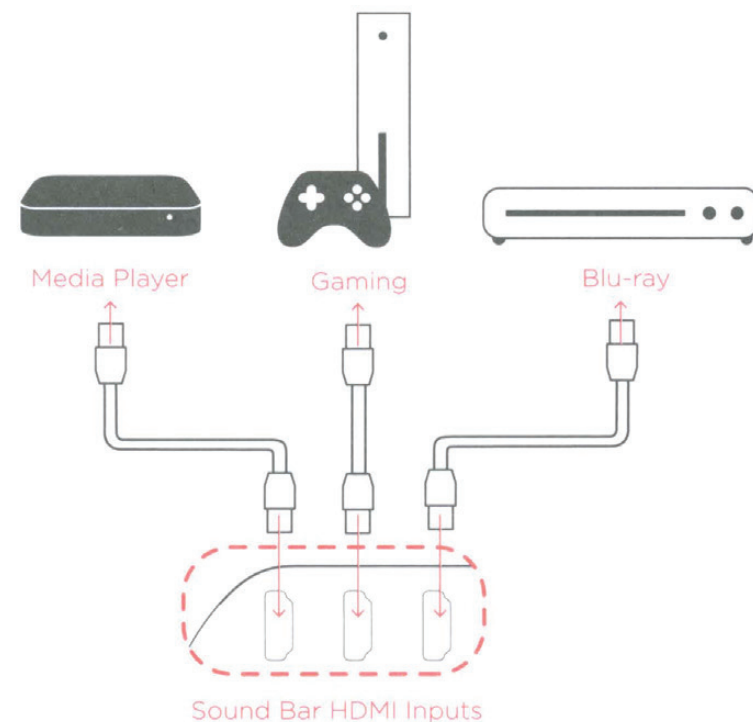 


FIGURE 1

Using the optical input for an audio source (figure 2)

If you want to use the Optical input on the sound bar for another audio source such as a CD player, follow these steps:

 - 1) Connect your TV to MagniFi MAX using HDMI-ARC.
- 2) Connect the supplied Optical cable between the CD player and sound bar.
- 3) The TV button on the remote will toggle between the HDMI-ARC (4 white lights) and Optical (5 white lights) input sources as long as audio is available.

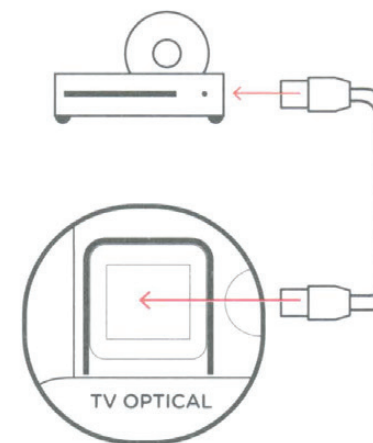


Sound Bar Optical Input

FIGURE 2

Wall mounting your MagniFi MAX & SR1 Wireless Surround Speakers

 Wall mounting templates are provided for both the bar and the surround speakers. For proper installation, please refer to the instructions printed on the templates. Screws for attaching the brackets to the wall are not included. Choose the screw type and length appropriate to your home's construction. If in doubt, consult a professional.

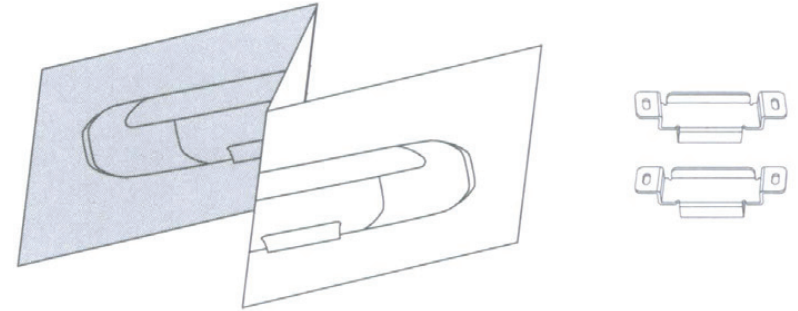

My TV doesn't have an HDMI or Optical outputs

If your TV does not have an HDMI ARC or Optical output you can connect the sound bar to your TV using the included 3.5mm analog AUX cable.

- 1) Connect the included AUX cable between your TV's audio output and the AUX input on the back of the sound bar.
- 2) Select AUX on the sound bar remote control.
- 3) Turn up the volume and make sure you hear sound from the sound bar.
- 4) Turn off the TV's speakers using your TV's Settings menu under "audio" or "speakers".

Note: Dolby 5.1 and DTS audio decoding are not supported when using the AUX input.

I Don't Hear Sound from my Subwoofer

- 1) Verify that the Subwoofer is plugged in to a power source.
- 2) Check the green light on the back of the subwoofer.
 - If it is solid green, turn up the Bass using the remote control.
 - If it is flashing green you need to sync the subwoofer to the soundbar using the following instructions

Syncing the Subwoofer to the Soundbar

- 1) Press the power button on the soundbar to turn it on.
- 2) On the back of the **SOUNDBAR**, press and hold the **SYNC** button until you hear a tone (about 3-4 seconds) and then release the button. The SUB and SURR lights above the **SYNC** button will flash green
- 3) On the back of the **SUBWOOFER**, press and hold the SYNC button until you hear a tone (about 10 seconds) and the light on the back of the subwoofer turns solid green.

Syncing the Surround Speakers to the Soundbar

*Note: You must sync **BOTH** surround speakers **AND** the subwoofer.*

- 1) Press the power button on the soundbar to turn it on.
- 2) Sync the subwoofer using the instructions above.
- 3) On the back of EACH of the SURROUND SPEAKERS, press and hold the SYNC button until the light on the bottom of the speaker turns solid green (about 10 seconds).
- 4) When BOTH LEFT and RIGHT surround speakers are paired to the bar you will hear a tone from the bar.

Note: If you hear a two note descending tone from the bar syncing failed. Please try again.

Sound Modes



Music Mode and All Stereo mode

Music Mode Gives you balanced sound and smoother bass while minimizing spatialization effects to ensure more natural sound reproduction.

All Stereo Mode provides room filling sound by mirroring the front left and right channels to the surround left and right speakers. Use the Music button to toggle between Music Mode and All Stereo mode when listening to 2 channel audio.



Night Mode

Reduces bass and volume dynamics while improving voice intelligibility for low-volume listening.



Movie Mode

Acoustically optimized for both movie and TV content. It also provides a bass boost, increased spatialization and enhances Voice Adjust levels for improved dialogue clarity. It is the default sound mode for HDMI and Optical input sources.



Sport Mode

Enhances dialogue-rich content, like sporting events, news casts and talk shows. Uses Voice Adjust to boost dialogue clarity and optimizes the subwoofer volume levels.

About Polk SDA® Technology

The MagniFi MAX features patented Polk SDA Surround technology creating an expansive multi-dimensional soundstage and detailed stereo image. SDA both heightens and widens the sound stage providing an immersive room-filling sound without sacrificing clarity. SDA also compliments Dolby and DTS encoded content creating an incredible cinematic experience.

About Built-in Polk VoiceAdjust® Technology

The MagniFi MAX features customizable voice levels in the sound bar allowing you to tailor your listening experience however you prefer, to reproduce clear, crisp dialogue and never miss a single word of your favorite movie, TV show or sporting event.



1 Viper Way
Vista, CA 92081
800-377-7655
www.polkaudio.com



72-BM8414-QSGB3

HBP3825C



SOFTWARE UPDATE AVAILABLE!

Why Update?

Get latest features, performance improvements and enhancements for your Polk sound bar.

How to Update?

1. Download the free Google Home app.
2. Use the app to connect the sound bar to your wireless network.
3. Once connected, sound bar updates automatically.



CONTACT POLK TECHNICAL SUPPORT FOR ADDITIONAL HELP

<https://www.polkaudio.com/contact-us> • email: polkcs@polkaudio.com • +1-410-358-3600



Software Update Available on the Polk MagniFi MAX & MAX SR

Why Update?

Get the latest features, performance improvements and enhancements by connecting your MagniFi MAX or MAX SR sound bar to your wireless network.

How to Connect and Update your Sound Bar?

1. Download the free Google Home app from either the Google Play Store or Apple App Store
2. Use the app to connect the sound bar to your home wireless network
3. The sound bar will update automatically overnight once connected

Need Help?

 
Contact Polk Technical Support for additional help

<https://www.polkaudio.com/contact-us>

email: polkcs@polkaudio.com

Call: 1.800.377.POLK (7655) option 1 or 1-410-358-3600



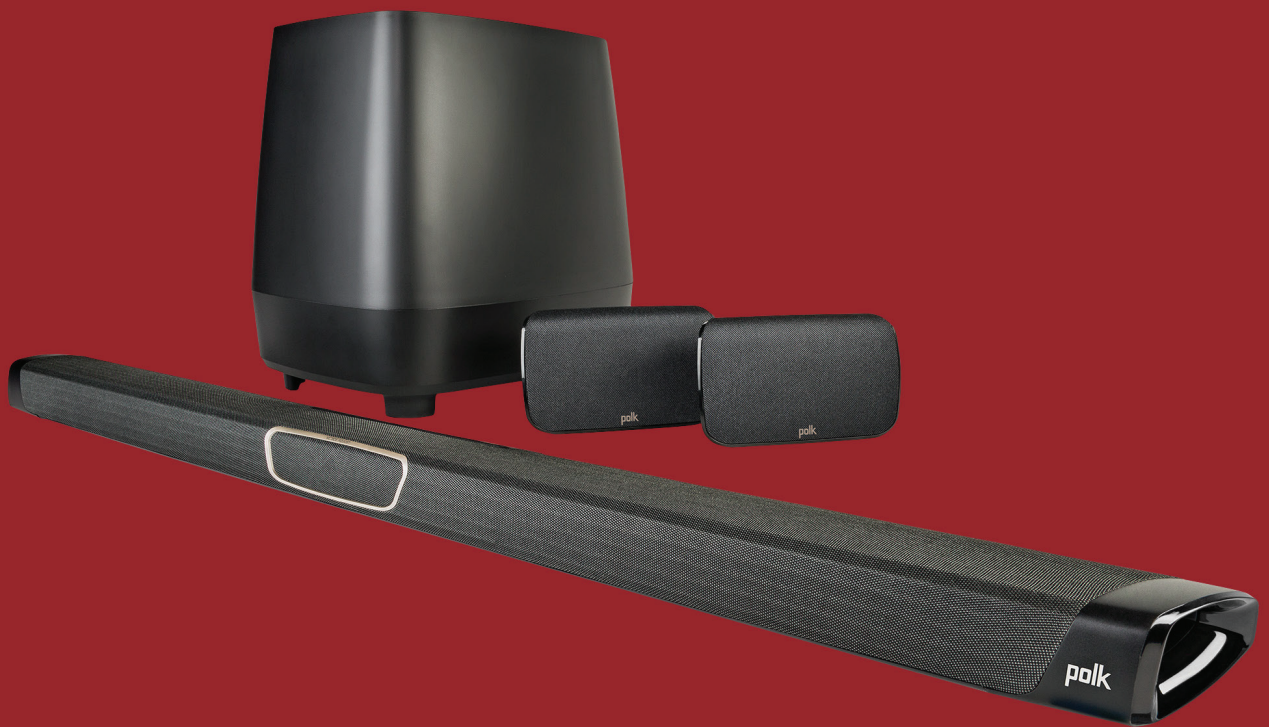

magnifi MAXSR™

Maximum-Performance True 5.1
Home Theater Sound Bar System



magnifi MAXSR™



Specifications

Drivers	(4) 1" x 3" (25 x 75mm) full-range drivers, (2) 0.75" (19mm) tweeters and (1) 1" (25mm) center channel driver 8" (200mm) ported, wireless subwoofer (1) 3" round driver in each SR1 wireless rear speaker
Inputs	(3) built-in 4K HDMI inputs (HDCP 2.2 compliant), (1) HDMI (ARC) output, optical input for TV audio, AUX 3.5mm, Bluetooth, Google Home featuring Chromecast for audio, Ethernet (RJ45) for music streaming
Frequency Response	35Hz - 20kHz
Included in Box	MagniFi MAX sound bar Wireless Subwoofer (2) Polk SR1 wireless rear speakers Deluxe remote control (2) AAA batteries Sound bar power adapter with power cord Subwoofer power cord 6.5' (2m) high-speed HDMI cable 6' (1.8m) Optical cable 6' (1.8m) 3.5mm AUX cable (2) wall-mounting brackets (screws and fasteners not included) Sound bar wall-mount template Literature
Wall Mountable	Yes
SKU #	AM8414 INTL: AM8415
UPC	747192128241 INTL: 747192128258
Warranty	1 Year Amplifiers / 3 Years Speakers
Dimensions	Bar: 43"W x 2.09"H x 3.78"D 1092.4mm W x 53.1mm H x 96mm D Sub: 12.11"W x 14.53"H x 14.62"D 307.6mm W x 369.2mm H x 371.4mm D

The Polk MagniFi MAX SR maximum-performance true 5.1 home theater sound bar system provides bigger, more dynamic surround sound than traditional sound bars—and is optimized to make movies, TV, sports and music come alive. It features patented SDA surround technology for a wider, more immersive listening experience and Polk VoiceAdjust technology for crystal clear dialogue—and it's equipped with Polk Smart Remote technology, so it works with your TV's remote control right out of the box. Includes a wireless subwoofer and two Polk SR1 wireless rear speakers for true surround sound—plus, HDMI (4k compatible) and optical cables for quick and easy setup. And, Google Chromecast Built-in and Bluetooth technologies let you stream all of your favorite music. Compatible with most major TV manufacturers.

Features

Patented Polk SDA Surround Technology

Creates an expansive soundstage and detailed stereo image, while delivering a natural multi-dimensional sound experience you would expect from a concert or theater by eliminating cross-talk found in all other sound bars and TV speakers.

Polk VoiceAdjust Technology

Customize the voice levels in the sound bar however you prefer to reproduce clear, crisp dialogue and never miss a single word of your favorite movie, TV show or sporting event.

Google Chromecast Built-in

Stream music from your favorite apps over Wi-Fi, connect to your Google Home speaker and control your music with voice commands via Google Assistant.

True 5.1 Wireless Surround Sound

Seven driver array, the included powerful wireless subwoofer and two Polk SR1 wireless rear speakers create an immersive multi-dimensional sound via 5.1 Dolby Digital, DTS and exclusive Polk SDA surround technology for an incredible room-filling listening experience.

Built-in Remote Control Compatibility

Control volume and mute with most Samsung, LG, Vizio, and Sony TV remotes (works with both optical HDMI connection), as well as most CEC enabled TVs – no programming or learning required.

Low-Profile

Slim design won't block your TV's remote sensor.

Exclusive Full Complement Deep Bass Technology

Included 8" ported wireless subwoofer give you a massive boost of core-pounding deep bass impact that takes home theater and music listening to a whole new level.

Movie, Music and Sport Modes

One button preset EQ settings for Movies, Music and Sports optimize the sound bar and subwoofer to ensure you get the clearest dialogue, big surround sound and deep bass for the best audio and home theater experience.

Night Mode

Lowers the bass and increases VoiceAdjust delivering clear dialogue all without raising the master volume.

 


SR1 WIRELESS SURROUND MOUNTING TEMPLATE

SR1 WIRELESS SURROUND GABARIT D'INSTALLATION


- 1) USE A LEVEL AND TAPE TO PLACE THE TEMPLATE ON THE WALL AT THE DESIRED LOCATION.
2) MARK THE HOLES - ARE THE HOLE LOCATIONS PRE-PUNCHED? IF NOT THE USER NEEDS TO MARK WITH A SHARP TOOL.
- 1) UTILISEZ UN NIVEAU ET FIXEZ LE GABARIT AVEC DU RUBAN ADHÉSIF POUR LE PLACER SUR LE MUR À L'ENDROIT VOULU SOUS LE TÉLÉVISEUR.
2) MARQUEZ LES TROUS. LES TROUS SONT-ILS DÉJÀ PERCÉS? SINON, VOUS DEVEZ LES MARQUER AVEC UN OUTIL POINTU.

- 2) USE THE APPROPRIATE HARDWARE (NOT INCLUDED) FOR YOUR WALL TO SECURE THE SURROUND TO THE WALL.
UTILISEZ L'ÉQUIPEMENT APPROPRIÉ (NON INCLUS) POUR ATTACHER LES HAUT-PARLEURS SURROUND AU MUR.

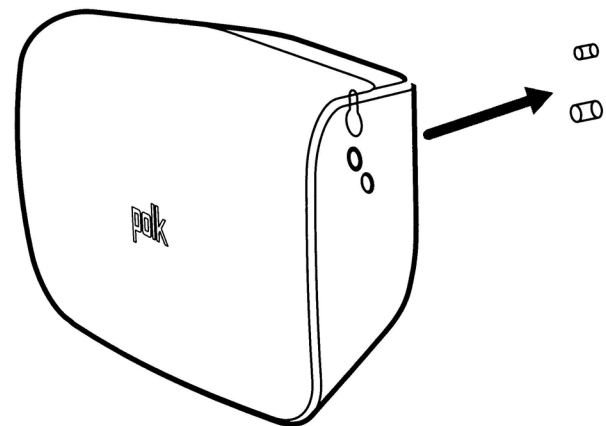

- 3) PLACE THE SURROUNDS OVER THE HARDWARE AND SECURE IN THE KEYHOLE SLOT

 PLACEZ LES HAUT-PARLEURS SURROUND SUR LE MATÉRIEL ET SÉCURISEZ-LE DANS LA FENTE DE TROU DE SERRURE

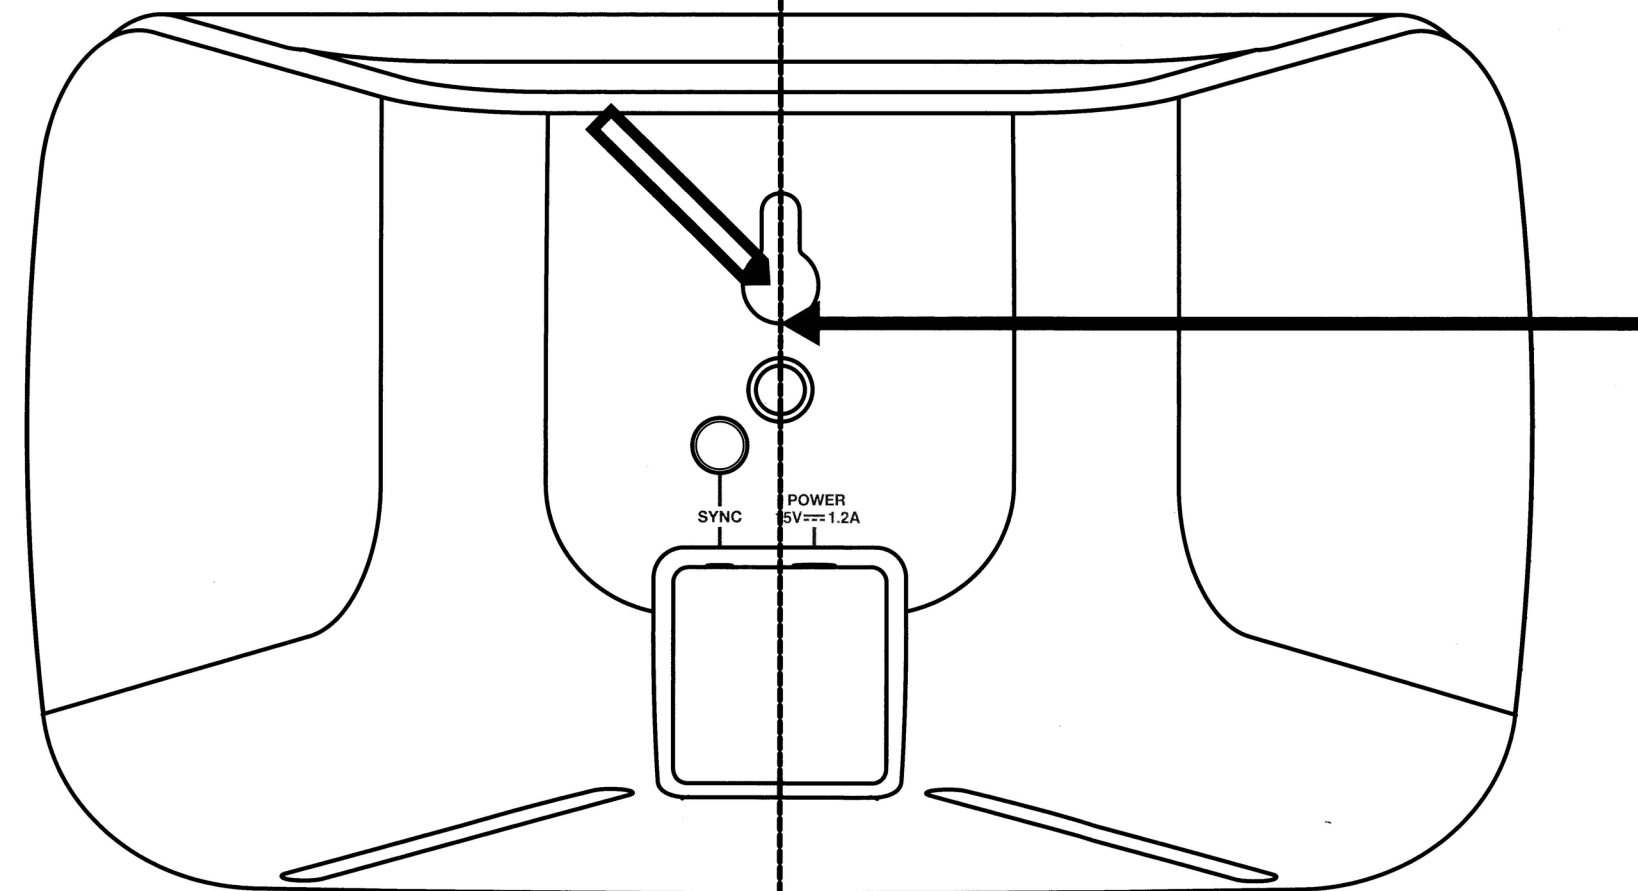


MARK HERE
MARQUEZ ICI

← *Center Line*
Ligne centrale



MAGNIFI MAX BAR MOUNTING TEMPLATE/MAGNIFI MAX GABARIT D'INSTALLATION DE LA BARRE

 LEAVE SPACE BETWEEN THE SOUND BAR AND YOUR TV/LAISSEZ DE L'ESPACE ENTRE VOTRE BARRE DE SON ET VOTRE TÉLÉVISEUR

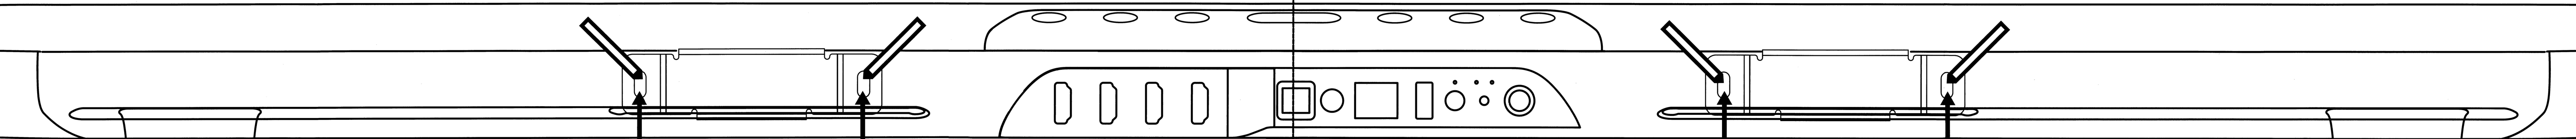

MARK HERE
MARQUEZ ICI

MARK HERE
MARQUEZ ICI

MARK HERE
MARQUEZ ICI

MARK HERE
MARQUEZ ICI

← *Center Line*
Ligne centrale

1 1) USE A LEVEL AND TAPE TO PLACE THE TEMPLATE ON THE WALL AT THE DESIRED LOCATION BELOW THE TV.

2) MARK THE HOLES - ARE THE HOLE LOCATIONS PRE-PUNCHED? IF NOT THE USER NEEDS TO MARK WITH A SHARP TOOL.

1) UTILISEZ UN NIVEAU ET FIXEZ LE GABARIT AVEC DU RUBAN ADHÉSIF POUR LE PLACER SUR LE MUR À L'ENDROIT VOULU SOUS LE TÉLÉVISEUR.

2) MARQUEZ LES TROUS. LES TROUS SONT-ILS DÉJÀ PERCÉS? SINON, VOUS DEVEZ LES MARQUER AVEC UN OUTIL POINTU.

2 USE THE APPROPRIATE HARDWARE (NOT INCLUDED) FOR YOUR WALL TO SECURE THE INCLUDED MOUNTING BRACKETS TO THE WALL.

UTILISEZ L'ÉQUIPEMENT APPROPRIÉ (NON INCLUS) POUR FIXER LES SUPPORTS DE MONTAGE INCLUS SUR LE MUR.

 
NOTE: IF YOU ARE UNSURE OF WHAT MOUNTING HARDWARE TO USE, PLEASE CONSULT A PROFESSIONAL
NOTE: SI VOUS N'ÊTES PAS CERTAIN DES OUTILS D'INSTALLATION QUE VOUS DEVEZ UTILISER, VEUILLEZ CONSULTER UN PROFESSIONNEL.

NOTE: RECOMMEND USING A LEVEL TO ENSURE THE SOUND BAR IS MOUNTED LEVEL ON YOUR WALL.

NOTE: IL EST RECOMMANDÉ D'UTILISER UN NIVEAU POUR S'ASSURER QUE LA BARRE DE SON SOIT INSTALLÉE DE NIVEAU SUR VOTRE MUR.

3 PLACE THE SOUND BAR ON THE MOUNTING BRACKETS AND ADJUST HORIZONTALLY TO BE CENTERED UNDER THE TV.

PLACEZ LA BARRE DE SON SUR LES SUPPORTS DE MONTAGE ET AJUSTEZ-LA HORIZONTALEMENT POUR QU'ELLE SOIT CENTRÉE SOUS LE TÉLÉVISEUR.

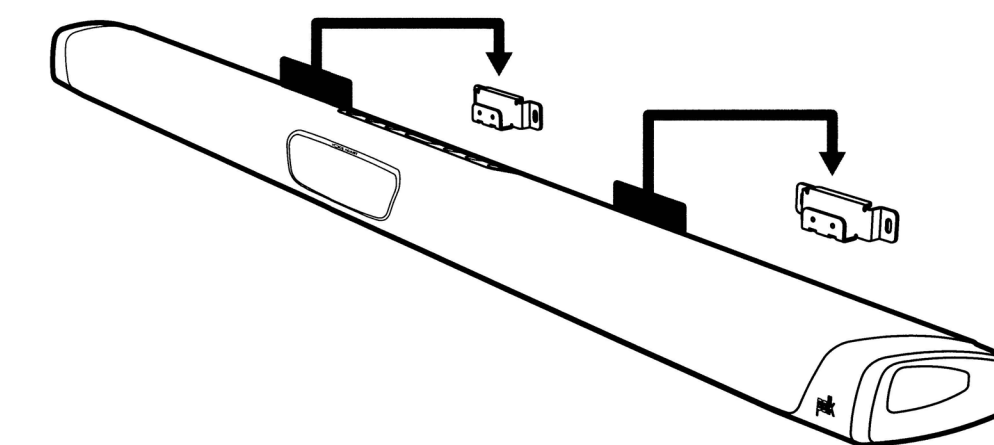



Register your new Polk product online now for a chance to win \$500 of Polk product!

www.polkaudio.com/registration

Benefits


- **Permanent record of your purchase, in case you misplace your original receipt.**
- **Enters you in our monthly FREE drawing for \$500-worth of Polk speakers.**
- **Allows you to enroll in Club Polk Benefits:**
 - Informative Polk website forums
 - Special discounts in the Polk web store
 - Advance notice of Polk promos
 - Discounts on authorized Polk parts
 - Stay up-to-date on all the latest news and announcements about your product

No Internet access? Call Polk Customer Service at 1-800-377-7655 (US & Canada only).

Outside the US & Canada, call 410-358-3600. We'll walk you through the simple registration process!

We take your privacy seriously. Polk does not share or sell information to any other parties, unless directed by court order. Registering your product has no effect on your warranty. Warranties apply as stated in your important product information guide. Please be sure to keep your original purchase receipt.

Questions? Concerns? Contact Polk Customer Service from 9am - 5:30pm, M-F, EST (USA)
1-800-377-7655 US & Canada only | 410-358-3600 outside US & Canada | polkcs@polkaudio.com

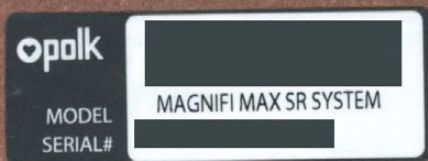 

HBP3778A



magnifi MAX™

magnifi MAXSR™

SR1 Wireless Surrounds™

Important Product Information

Safety Precautions

FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference, and
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF Radiation Exposure Statement

1. This transmitter must not be colocated or operating in conjunction with any other antenna or transmitter.
2. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

3. FCC RF Warning

This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provide with antenna installation instructions and transmitter operating conditions for satisfying RF exposure compliance.

IC RF Radiation Exposure Statement

This device complies with the Canada portable RF exposure limit set forth for an uncontrolled environment and are safe for intended operation as described in this manual. The further RF exposure reduction can be achieved if the product can be kept as far as possible from the user body or set the device to lower output power if such function is available.

Canada, Industry Canada (IC) Notices

This Class B digital apparatus complies with Canadian ICES-003. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that permitted for successful communication.

This device complies with Industry Canada licence-exempt RSS standard(s).

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Radio Frequency (RF) Exposure Information

The radiated output power of the Wireless Device is below the Industry Canada (IC) radio frequency exposure limits. The Wireless Device should be used in such a manner such that the potential for human contact during normal operation is minimized.

This device has also been evaluated and shown compliant with the IC RF Exposure limits under mobile exposure conditions. (antennas are greater than 20cm from a person's body).

2.412~2.472GHz Band

This device operates in the 2.412~2.472GHz range.

5.15~5.25GHz Band

Operations in the 5.15-5.25GHz band are restricted to indoor use only.

Slave Equipment:

This device is slave equipment, the device is not radar detection and not ad-hoc operation in the DFS band.



Sound United Europe,
a division of D&M Europe
B.V. ; Beemdstraat 11; 5653
MA Eindhoven



Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide

blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. The equipment could be used at maximum 45 degree C ambient temperature
16. Do not open the equipment to reduce the risk of electrical shock. For safety reasons it is only allow to the opened by qualified service personnel.
17. **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. And the apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
18. The AC inlet is used as the disconnect device and shall remain readily operable.
19. The product shall be used on open bench.
20. No naked flame sources, such as lighted candles, should be placed on the apparatus.



21. CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

 
22. The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.

23. WARNING: If battery compartment does not close securely, stop using the product and keep it away from children and pets.

24. WARNING: Do not recharge non-rechargeable batteries.

25. WARNING: Avoid exposure to extreme heat or cold.

WARNING: Please refer to the information on exterior bottom enclosure for electrical and Safety information before installing or operating the apparatus.

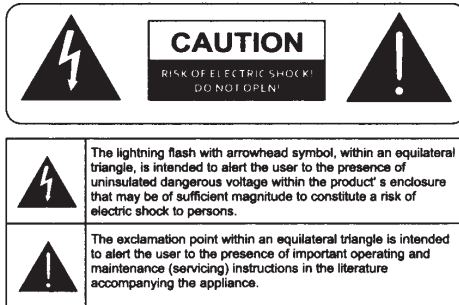

EU Compliance Information

Eligible to bear the CE mark; Conforms to European Union Low Voltage Directive 2014/35/EC; European Union EMC Directive 2014/30/EU; European Union Restriction of Hazardous Substances Recast (RoHS) Directive 2011/65/EU; European Union

WEEE Directive 2012/19/EU; European Union Eco-Design Directive 2009/125/EC; European Union Registration, Evaluation,

Authorization and Restriction of Chemicals (REACH) Directive 2006/121/EC; European Union Radio Equipment Directive 2014/53/EU



Declaration of Conformity (DoC)

Hereby, Polk Audio LLC, declares that this equipment is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU

Customers can download a copy of the original DoC for our radio equipment from our website below:

[Http://www.polkaudio.com](http://www.polkaudio.com)

Electromagnetic compatibility and Radio spectrum Matters (ERM); Wideband transmission systems; Data transmission equipment operating in the 2,4 GHz ISM band and using wide band modulation techniques;

Harmonized EN covering the essential requirements of article 3.2 of the RED Directive.

- EN 301489-1

Electromagnetic compatibility and Radio Spectrum Matters (ERM); ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 1: Common technical requirements

- EN 301489-17

Electromagnetic compatibility and Radio spectrum Matters (ERM); ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 17: Specific conditions for 2.4 GHz wideband transmission systems and 5 GHz high performance RLAN equipment

- EN 62479

Assessment of the compliance of low power electronic and electrical equipment with the basic restrictions related to human exposure to electromagnetic fields (10 MHz to 300 GHz)

Type of Wireless	Operating Frequency	Maximum RF Power
Bluetooth	2402-2480MHz	9.1 dBm
WiFi	2412-2472MHz 5180-5320MHz 5500-5700MHz	19.6 dBm 20.1 dBm 19.8 dBm
Wireless Subwoofer	5743-5840MHz	7.6 dBm
Wireless Sound bar	5743-5840MHz	7.2dBm
Wireless Surrounds	5743-5840MHz	6.9dBm

5.15 - 5.35 GHz band is restricted to indoor operations only in the following countries

AT	BE	BG	CZ	DK	EE	FR	DE	IS	IE	IT	EL	ES	CY	LV	LI	LT
LU	HU	RS	MT	NL	NO	PL	PT	RO	SI	SK	TR	FI	SE	CH	UK	HR

1-Year Limited Warranty

Polk Audio, LLC ("Polk") warrants to the original retail purchaser that Polk Audio branded wireless speakers, will be free from defects in materials and workmanship for a period of (1) one year, under normal use and conditions. Should this product prove to be defective in material or workmanship, Polk will, at its option, (a) repair the product, or (b) replace the product. If the product model is no longer available and cannot be repaired effectively, or replaced with an identical model, Polk may, at its sole and absolute option, replace the unit with a current model of equal or greater value.

To obtain warranty service, please visit the Polk Audio website at www.polkaudio.com. You may also contact Polk Audio Customer Service at 1-800-377-7655 for instructions on where to send the product. You will be required to provide an original receipt or bill of sale, identifying you as the original purchaser and identifying the purchase made through an authorized Polk retailer. You will need to ship the product, prepaid and insured, together with the proof of purchase to Polk Audio, 1 Viper Way, Vista, CA 92081. Risk of loss or damage in transit shall be borne by the purchaser. Freight collect shipments will be refused.

This warranty is non-transferable and does not apply to any product that has been modified or used in a manner contrary to its intended purpose. This limited warranty is void if the product has an altered or missing serial number, or if the product was purchased from someone other than an authorized dealer. This limited warranty is void if the product has been damaged by accident or unreasonable use, neglect, improper service or other causes not arising out of defects in material or construction. Product(s) which are found to be damaged by abuse resulting in thermally damaged voice coils are not covered by this warranty but may be replaced at the sole and absolute discretion of Polk. This warranty terminates if you sell or otherwise transfer the product to another party. This limited warranty does not cover cosmetic damage, paint damage, damage to other components, parts or premises, or any consequential damages which may result for any reason.

Polk does not warrant that the product will operate without interruption or that the product will operate error-free. Certain external conditions which are out of Polk's control may affect the overall performance of the product, including, but not limited to, wireless network configuration, performance of the wireless network, distances between product and the wireless network connection and/or content sources, third party devices, radio and/or environmental interference with the product.

Polk may offer access to third party content or third party content providers via the Product. Polk reserves the right to alter, change, discontinue or modify access to any third party content or any third party content provider at any time, for any reason. Polk disclaims all warranties and representations offered by any third party content or third party content provider.

Polk shall have no obligation to provide any updates or upgrades to the product, but in the event that it does, such updates and upgrades shall be deemed the "product", and shall be subject to the terms and conditions stated herein.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE. ALL WARRANTIES, INCLUDING BUT NOT LIMITED TO EXPRESS WARRANTY, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, NON-INFRINGEMENT AND THE IMPLIED CONDITION OF SATISFACTORY QUALITY ARE EXPRESSLY EXCLUDED AND DISCLAIMED TO THE MAXIMUM EXTENT ALLOWED BY LAW, AND POLK NEITHER ASSUMES NOR AUTHORIZES ANY PERSON TO ASSUME FOR IT ANY LIABILITY IN CONNECTION WITH THE SALE OF THE PRODUCT. POLK HAS ABSOLUTELY NO LIABILITY FOR ANY ACTS OF THIRD PARTIES. SOME STATES DO NOT ALLOW THE EXCLUSION OF CERTAIN IMPLIED WARRANTIES, OR CONDITIONS ON AN IMPLIED WARRANTY, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. POLK DOES NOT ACCEPT LIABILITY FOR SPECIAL, INDIRECT, INCIDENTAL, PUNITIVE OR CONSEQUENTIAL DAMAGES, LOST PROFITS, LOST SAVINGS OR DAMAGES RESULTING FROM IMPROPER USE, OR THE INABILITY TO USE THE PRODUCT. THE MAXIMUM LIABILITY FOR WHICH POLK MAY BE RESPONSIBLE SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSIONS MAY NOT APPLY TO YOU.



For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, DTS in combination with the Symbol, and DTS Digital Surround are registered trademarks or trademarks of DTS, Inc. in the United States and/or other countries. © DTS, Inc. All Rights Reserved.



1 Viper Way
Vista, CA 92081
800 638 7276
www.polkaudio.com



72-P0LKM2-SAFB3

HBP3776F