

ENGLISH

Introduction	3
Care and maintenance	3
Features	3
Connectivity	3
Drivers	4
Microphone	4
Battery	4
Product content	4
General overview	4
Main Functions	5
Switching on the device	5
Switching off the device	5
Charging the battery	5
Bluetooth® pairing	5
Auto power off function	5
Playback control	5
Play/Pause	5
Volume +/Volume -	5
Skipping to the next/previous track	5
Call control	5
Answering/Ending a call	5
Rejecting a call	5
Voice Assistant	5
Warranty	6
Trademarks	6
Declaration of conformity	6



Introduction

- Thank you for trusting our company and buying the new *Earphones Bluetooth® Style 1*. We hope you enjoy the product.
- We recommend reading this manual before you start using your *Earphones Bluetooth® Style 1*.

Care and maintenance

- Do not expose your *Earphones Bluetooth® Style 1* to impacts, dust, humidity or high temperatures.
- Do not use neither corrosive nor abrasive cleaning products.
- Keep the earphones clean and free of dust using a soft, dry cloth.
- Do not dismantle the device. All repair works should be carried out exclusively by qualified staff of Energy Sistem Technology, S.A.
- Please make sure your *Earphones Bluetooth® Style 1* are off when you are not using them. Do not let them completely discharged for a long time.

Features

Connectivity

- Bluetooth® 5.1 wireless technology

- Supports HSP / HFP / A2DP / AVRCP protocols
- Compatible with SBC codecs
- Multipoint connection
- Range: 20 m
- Frequency band: 2.4 GHz
- Maximum output power: <20 dBm

Drivers

- Frequency response: 20 - 20,000 Hz
- Driver diameter: 14 mm
- Maximum power: 5 mW
- Type: dynamic
- THD: < 1%

Microphone

- Sensitivity: -42 dB $\pm$ 3 dB (@1 kHz)

Battery


- Capacity: 100 mAh / 3.7 V
- Type: lithium-polymer battery
- Battery life: 8 hours*
- Charging port: USB Type-C
- Charging time: 2 hours

Note: Approximate battery life at a medium volume level. Higher volume means higher battery consumption.

Product content

- Earphones Bluetooth® Style 1
- USB Type-C charging cable

General overview

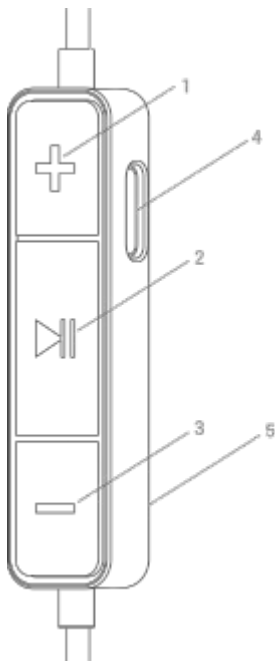

1. Volume +
2. Multifunction button
3. Volume -
4. USB charging port
5. LED indicator
6. Microphone

Main Functions

Switching on the device

Press and hold the *Multifunction button (2)* for 2 seconds to switch on the device. The *LED indicator (5)* will light up blue and you will hear a confirmation sound.

Switching off the device

To switch off the device, press and hold the *Multifunction button (2)* for 3 seconds. The *LED indicator (5)* will glow red for 2 seconds and you will hear a confirmation sound.

Charging the battery

When the battery level of your *Earphones Bluetooth® Style 1* is low, you will hear a warning sound and the *LED indicator (5)* will flash red. Connect the *charging cable* to the *USB charging port (4)*.

The *LED indicator (5)* glows red while charging the battery and turns blue once the battery is fully charged. The charging process takes approximately two hours.

Important: We recommend not leaving your *Earphones Bluetooth® Style 1* unused for long periods of time with an empty battery. We advise you to charge the earphones' battery at least once a month.

Bluetooth® pairing

Switch off the *Earphones Bluetooth® Style 1* and press and hold the *Multifunction button (2)* for approximately 4 seconds, until the *LED indicator (5)* starts flashing blue. Your earphones enter search mode, meaning you can pair them with your source device. Select *Earphones Bluetooth® Style 1* on your device screen and press "connect". Both devices will be connected immediately and without codes. You will hear a confirmation sound when both devices are paired.

If you previously paired the earphones with a device, there is no need to repeat the pairing process. Just switch on your *Earphones Bluetooth® Style 1* and enable the Bluetooth connection on your smartphone, tablet, laptop, etc.

Auto power off function

To optimise battery life, the *Earphones Bluetooth® Style 1* turn off automatically after 5 minutes in Bluetooth search mode, if not synchronised with any other device.

Playback control

Play/Pause

Press the *Multifunction button (2)* to pause or resume playback.

Volume +/Volume -

Press *Volume + (1)* to turn up the volume or *Volume - (3)* to turn it down.

Skipping to the next/previous track

Press and hold *Volume + (1)* to skip to the next track or *Volume - (3)* to switch to the previous track during music playback.

Call control

Once the *Earphones Bluetooth® Style 1* and your smartphone are synchronised, you can control calls from the earphones.

Answering/Ending a call

To answer an incoming call or hang up, press the *Multifunction button (2)* once.

Rejecting a call

Press and hold the *Multifunction button (2)* for 2 seconds.

Voice Assistant

Press the *Multifunction button (2)* twice while playback is paused.

Warranty

Find the full warranty terms and conditions at:

<https://www.energysistem.com/terms-warranty>

Trademarks

All company, brand and product names are trademarks or registered trademarks of their respective companies. Specifications are subject to change without notice.

© 2022 by Energy Sistem Technology, S.A. All rights reserved.

Declaration of conformity

Issuer's name: Energy Sistem Technology, S.A. - CIF: A53107488

Address: C/ Calpe, 1 - 03509 Finestrat, Alicante (Spain)

We declare under our sole and exclusive responsibility that the product:

Description: Bluetooth® earphones

Brand: Energy Sistem

Model: Earphones Bluetooth® Style 1

Manufacturer: Energy Sistem Technology, S.A.

Manufacturing country: China

referred to in this declaration complies with the essential norms and standards

- EN 50663:2017
- EN 62479:2010
- EN 62368-1:2014+A11:2017
- EN 301 489-17 V3.2.2 (2019-12)
- EN 301 489-1 V2.2.3 (2019-11)
- EN 300 328 V2.2.2 (2019-07)

in conformity with the provisions of the Directive 2014/53/EU of the European Parliament and of the Council of 16th April 2014.

Finestrat, 1st June 2022



Miguel Ángel Aragüez García
Innovation and Technology Director

