


Quick Setup Guide

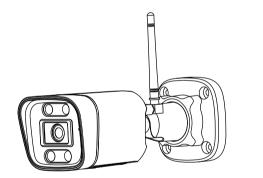


To view this guide in other languages (e.g. Nederlands, Deutsch, Français, Español), and for detailed manuals, tools, etc., please visit foscam.com/downloads

305503000880

Setting Up Your Foscam Security Camera

1 Getting Started


Package Contents

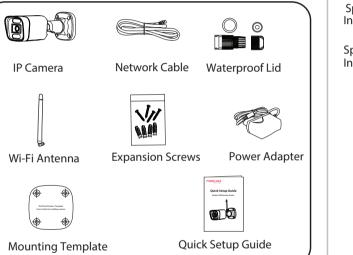

Security Tips

- Please change the camera's password regularly, using a combination of numbers, letters and special characters.
- We recommend that you regularly update your camera with the latest available software and firmware to ensure the best experience with your camera.

2 Physical Description

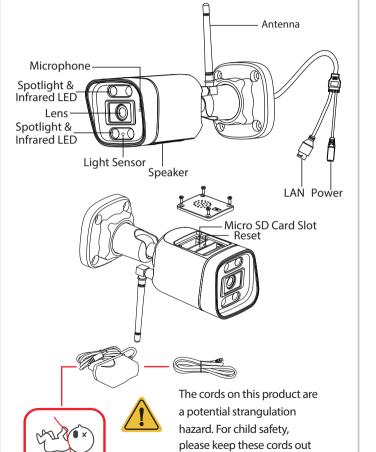

of the reach of children.

3 Setting Up Your Camera: Connection via the Foscam App (Recommended)

Before You Get Started

Scan the OR code below to download and install the Foscam APP.








To ensure a smoother video experience on your smart phone, it is recommended that your smart phone meet the following specifications:

- iOS: version 11 or higher.
- Android: 5.0 or higher, using a device with a Graphics Processing Unit (GPU).


Note: For the best experience, please update the APP to the latest version!

WiFi Connection

1. Please tighten the antenna clockwise and make sure it is in a vertical position.

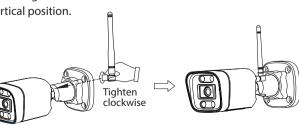

2. Plug the power adapter into the camera, and please wait for a few seconds until hearing the "Ready for WiFi configuration"

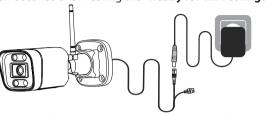


3. Make sure that your smart phone is connected to your WiFi router.



4. Open the foscam APP and please register a Foscam account, or sign in if you have one already.




5. Follow the steps below:

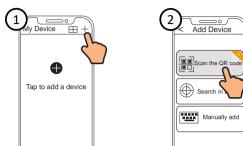






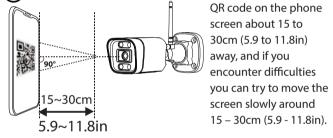




Note: If the adding process fails, please reset your camera and try adding again according to the above method.

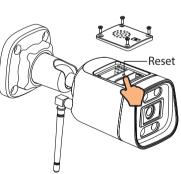





Save (

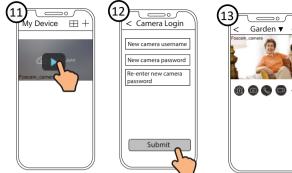

4 PC Access Your Camera

■ Foscam VMS

Foscam VMS is a new tool for PCs. It does not require plug-ins and is compatible with Windows & Mac, supporting all Foscam HD cameras and up to 36 cameras at the same time. If you would like to manage multiple cameras, we suggest you install Foscam VMS. You can download the "Foscam VMS " Windows version from **foscam.com/yms**, and can download the "Foscam VMS" Mac version from the APP store:


https://apps.apple.com/cn/app/foscamvms/id1521202507?mt=12

Note: For the best experience, please update Foscam VMS to the latest version!


Add the IP Camera

- 1. Run Foscam VMS, then create a local administrator account
- 2. Tap the "+" icon on the Foscam VMS and follow the setup wizard to add vour camera.

Please visit **foscam.com/downloads** to view the user manual and for additional detailed steps.

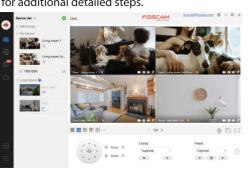

5 Hardware Installation

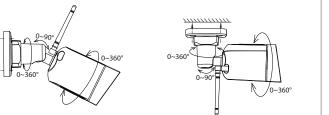

Point the camera at the desired location and use the screws provided to mount it.


Please Note:

Ensure that rain or water will not reach the connector ports at the end of the tailcable. These connectors are not weather-resistant.

6 Important Notice

■ Camera Username & Password

The camera username & password are used to access and manage your camera. Having a strong password can significantly improve the security of your camera. If you have forgotten either of them, please press the "Reset" button.

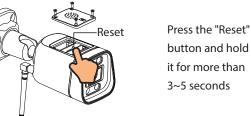


Storage Media

Your camera supports cloud, NVR (Network Video Recorder). and Micro SD card (supports FAT32 and exFAT format) storage formats.



(FAT32 & exFAT)


How to format Micro SD card, please follow the steps below:

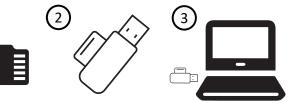


Scan the QR code below to download the Open the "FoscamFormat" Tool





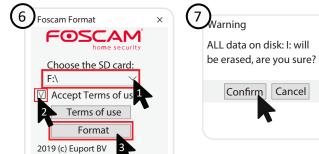


"FoscamFormat" Tool

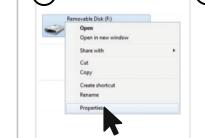

Foscam Format


Format ready

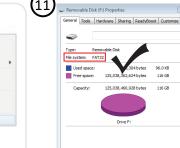

OK Cancel Apply

Safety Tips



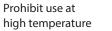



Prohibit use at

low temperature





Keep away





power supply

7 Product Performance

WLAN frequency range: 2412MHz - 2472MHz and 5725MHz - 5850MHz Maximum transmission power: < 18dBm

Wireless Standard: IEEE802.11b/g/n (2.4GHz) IEEE802.11a/n/ac (5GHz)

Power Supply: DC 12V 1.0A 12W

Keep away

from fire

\/\


Use the supplied

Use the correct

screw pack


8 Troubleshooting

IP cameras is not powering on

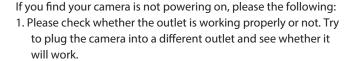

- 2. Please check whether the DC adapter is working or not. If you have another 12V/1A power adapter which is working, please try with another power adapter and see whether it will work.
- 3. If it still won't work, please contact Foscam support.

• How to re-configure the WiFi connection for Foscam cameras after router changed?

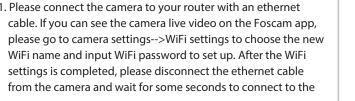



2. There is a need to reset the camera first. Please refer to https://www.foscam.com/fags/view.html?id=13 to see the reset steps.

Then please open the Foscam app to scan the OR-code of your camera to set up the wireless connection for the camera. Please make sure your cellphone is connected to that new WiFi.







CE Certificate statement Website: https://www.foscam.com/company/ce-certificate.html

Exporter and Importer Information Opened to Public: https://www.foscam.com/company/open-information.html



Co., Ltd







Addr: Room 901-902, Building 1B, Shenzhen International Innovation Valley, Xingke 1st Street, Nanshan District, Shenzhen, Guangdong, China, 518055

www.foscam.com

Due to product upgrades and other reasons, this guide may be slow to update, resulting in slight inconsistencies with the official website information. Please take the official website (www.foscam.com) information as the current standard.



FCC Warning

15.19 Labeling requirements.

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

approved by the party responsible for compliance

15.21 Information to user. Any Changes or modifications not expressly

could void the user's authority to operate the equipment. 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital

limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and,

device, pursuant to part 15 of the FCC Rules. These

not installed and used in accordance with the instructions, may cause harmful interference to

radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause

-Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit

different from that to which the receiver is connected. -Consult the dealer or an experienced radio/TV

technician for help.

1. This Transmitter must not be co-located or

or transmitter.

exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated

harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -Reorient or relocate the receiving antenna.

FCC RF Radiation Exposure Statement:

operating in conjunction with any other antenna 2.This equipment complies with RF radiation

with minimum distance 20cm between the radiator and your body.