

100mm

100mm

STRONG

STRONG

User Guide

EN

Strong Streaming Devices Remote Control

Power Adapter HDMI Cable (Optional)

Strong User Guide

**Picture just for reference, please make the object as the standard.*

EN

NOTE:
Before the begin, locate and insert the 2 AAA batteries into the MECOOL Streaming Devices / Google TV / remote control. (This product is not equipped with AAA batteries, users should prepare by themselves).

EN

- Power on MECOOL Streaming Devices.
- Connect MECOOL Streaming Devices and TV via HDMI cable.
- Select correct HDMI input on TV.

1. Keep router near to MECOOL Streaming Devices.
2. Perform remote control pairing according to the operation method prompted by the interface.

EN

Welcome

English
French
German
Italian
Spanish

3. Complete the simple setup of the box according to the instructions of the boot wizard.

DATA PROTECTION

Please be aware that MECOOL, its manufacturing partners, the application providers and the providers of the services may collect and use technical data and related information, including but not limited to technical information about this device, systems, and application software and peripherals. MECOOL, its manufacturing partners, the application providers and the providers of the services may use such information to improve its products or to provide services or technologies to you, as long as it is in a form that does not personally identify you. Additionally, please keep in mind that some services provided already in the device or installed by you may request a registration for which you have to provide personal data. Besides that, please be aware that some services which are not pre-installed but can be installed may collect personal data even without providing additional warnings and that MECOOL can not be held liable for a possible breach of data protection by services not pre-installed.

STORAGE

Your device has been carefully checked and packed before shipping. When unpacking it, make sure that all the parts are included and keep the packaging away from children. We recommend that you keep the carton during the warranty period, to keep your device perfectly protected in the event of repair or warranty.

SOFTWARE DESCRIPTION

This product includes a software that is restricted to be modified by a third party. The manufacturer reserves the right to publish software updates for maintenance or introducing new features.

OPERATING ENVIRONMENT

Do not install this equipment in a confined space such as a bookcase or similar unit. Do not use the set near damp, and cold areas, protect the set from overheating. Keep away from direct sunlight. Do not use the set near dust place. Do not place candles near the opening area, to avoid flammable foreign material from entering the device.

DECLARATION

Subject to alterations, in consequence of continuous research and development technical specifications, design and appearance of products may change. The terms HDMI and HDMI High Definition Multimedia Interface, and the HDMI logo are trademarks or registered trademarks of HDMI Licensing Administrative - Inc. in the United States and other countries.
© VIDEOSTRONG 2023. All rights reserved.

WARNING

Observe warnings/accessories specified or provided by the manufacturer (such as the exclusive supply adapter, battery etc.). Any other adapter may cause damage to the device. Such damage is not covered under warranty. Please refer to the information on the product enclosure for electrical and safety information before installing or operating the apparatus. To reduce the risk of fire or electric shock, do not expose the apparatus to air or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus. The ventilation should not be impeded by covering the ventilation openings with items, such as newspaper, tablecloth, curtains, etc. The batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like. The main plug/appliance coupler/direct plug-in socket is used as disconnector device, the disconnected device shall remain readily operable.

CAUTION

Change of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type. Risk of explosion if the battery is replaced by an incorrect type. Disposal of battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion. Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas. A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

REMARK

This equipment is a Class II or double insulated electrical appliance. It has been designed much a way that it does not require a safety connection to electrical earth. For the terminals marked with symbol "⚡" may be of sufficient magnitude to constitute a risk of electric shock. The external wiring connected to the terminals requires installation by an instructed person or the use of ready-made leads or cords.

REMARK

Arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product enclosure that may be of sufficient magnitude to constitute a risk of electric shock. Warning to reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel. The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.

WEEE DIRECTIVE

Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which is connected.
- Consult the dealer or an experienced technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. (Example: use only shielded interface cables when connecting to computer or peripheral device). This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement: The equipment complies with FCC Declaration exposure limits set forth for uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

DE

- MECOOL Streaming-Geräte einschalten.
- Vorhanden Sie MECOOL Streaming-Geräte und TV über HDMI-Kabel.
- Wählen Sie den richtigen HDMI-Eingang am Fernseher.

1. Halten Sie den Router in der Nähe von MECOOL Streaming-Geräten.
2. Führen Sie die Kopplung der Fernsteuerung gemäß der von der Schnittstelle veranlassenen Betriebsmethode durch.

DE

Welcome

English
French
German
Italian
Spanish

3. Schließen Sie die einfache Einrichtung der Box gemäß den Anweisungen des Boot-Assistenten ab.

FR

- Allumez le périphérique de streaming mecool.
- Connectez votre appareil de streaming mecool et votre télévision via un câble HDMI.
- Sélectionnez l'entrée HDMI correcte sur la télévision.

1. Gardez votre routeur près de votre appareil de streaming mecool. Assurez-vous qu'Internet est disponible.
2. Appariement à distance selon les méthodes de fonctionnement indiquées par l'interface.

FR

Welcome

English
French
German
Italian
Spanish

3. Suez les instructions de l'assistant de guidage pour terminer la configuration simple de la boîte.

IT

- Accendere i dispositivi di streaming MECOOL.
- Collegare dispositivi di streaming MECOOL e TV tramite cavo HDMI.
- Selezionare l'ingresso HDMI corretto sul televisore.

1. Mantieni il router vicino ai dispositivi di streaming MECOOL. Assicurarsi che Internet sia disponibile.
2. Eseguire l'accoppiamento del telecomando in base al metodo operativo richiesto dall'interfaccia.

IT

Welcome

English
French
German
Italian
Spanish

3. Completa la semplice configurazione della casella secondo le istruzioni della procedura guidata di avvio.

ES

- Encienda la fuente de alimentación del dispositivo de streaming mecool.
- Conecte el dispositivo de streaming mecool y el televisor a través del cable HDMI.
- Seleccione la entrada HDMI correcta en la televisión.

1. Mantenga el enrutador cerca del dispositivo de streaming mecool. Asegúrese de que Internet esté disponible.
2. Emparejamiento remoto de acuerdo con el método de operación recomendado por la interfaz.

ES

Welcome

English
French
German
Italian
Spanish

3. Complete la configuración simple de la Caja de acuerdo con las Instrucciones del asistente de Guía.

PT

- Ligue os dispositivos MECOOL Streaming.
- Conecte dispositivos MECOOL Streaming e TV via cabo HDMI.
- Selecione a entrada HDMI correta na TV.

1. Mantenha o roteador perto de MECOOL Streaming Devices. Verifique se a Internet está disponível.
2. Execute emparelhamento de controle remoto de acordo com o método de operação solicitado pela interface.

PT

Welcome

English
French
German
Italian
Portuguese

3. Complete a configuração simples da caixa de acordo com as instruções do assistente de inicialização.

RU

- Включите питание потокового устройства MECOOL.
- Подключите потоковое устройство MECOOL к телевизору по кабелю HDMI.
- Выберите правильный вход HDMI на телевизоре.

1. Поддержите маршрутизатор в близости к потоковому устройству MECOOL. Убедитесь, что Интернет доступен.
2. Дистанционно сопоставление осуществляется в соответствии с методами работы, указанными в интерфейсе.

RU

Welcome

English
French
German
Italian
Russian

3. Выполните простые настройки поля в соответствии с инструкциями мастера загрузки.

Dear Customer

Thank you for your purchase. We hope that our product can meet your needs and expectations. If you have any problem with the product, please do not hesitate to contact us. We would like to take all responsibilities and provide the best service for you. Thank you again and best wishes to you!

Android TV is the name of this device's software experience and is a trademark of Google LLC. Google, YouTube, Google Home, and other marks are trademarks of Google LLC. Google Assistant is not available in certain languages and countries. Availability of Services varies by country and language. Disney+ may not be available in certain countries.

Customer Service Email
service@mecool.com

要求: 80g书纸+黑色印刷+双排骑马钉 (24P)
尺寸: 100x103mm, 公差±1mm

- 要求:
- 1、文字内容印刷效果需清晰可识
 - 2、印刷效果不可有拖花, 重影
 - 3、印刷颜色需现场看色签样
 - 4、不可有脏污或刮伤
 - 5、打双排钉, 钉要打平, 不可伤纸