

## 广州宠小到大智能科技有限公司

地址:广州市海珠区上冲南约13号之一106、107

电话:+86 400-600-2707

网站:www.pawgether.cn

邮箱:business@pawgether.cn

## Guangzhou PawGether Pet Product Technology Co., Ltd

Unit 106-107, No. 13 Shangchongnanyue, Haizhu, Guangzhou,

Guangdong, China, 510000

+86 400-600-2707

www.pawgether.cn

business@pawgether.cn



APP Download / 下载



Website 官网



CS 1


# 产品使用手册

## INSTRUCTION MANUAL

COMFY SMART 1

智能猫砂盆

Smart Cat Litter Box

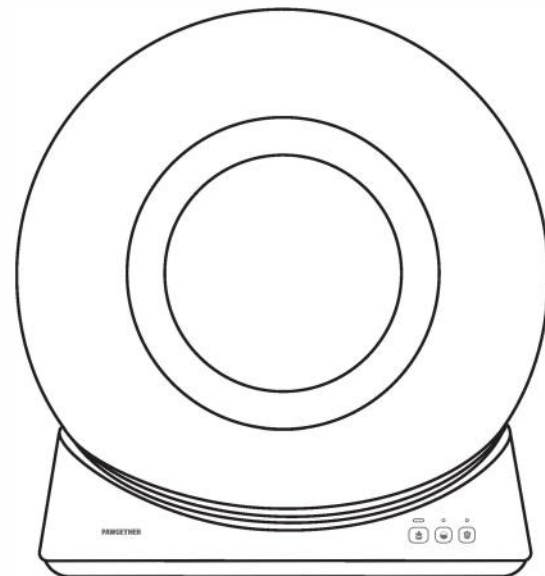



在此,首先感谢您购买宠小到大PAWGETHER宠物产品,为正确安全使用本产品,请您详细阅读并理解本使用说明书,并妥善保管以备查阅。若不按要求操作或自行改造发生产品故障,或导致宠物受到伤害,本公司将不承担任何责任。

本说明书的解释权和修改权归本公司所有,说明书的内容及产品的规格技术说明如有变更,恕不另行通知。

# 目录

## CATALOGUE

CS 1



### 中文版说明书 2-19

产品示意图	2-3
产品清单	4
产品安装	4-6
让猫咪适应设备	7
产品清洁	7-8
指示灯状态与按键功能	9-10
连接APP	11-12
操作指南	13-17
注意事项	18
故障指南	18-19
保修说明	37

### ENGLISH MANUAL 20-37

Product Introduction	20-21
Product List	22
Installation	22-24
Help Cats Adapt to the Device	25
Product Cleaning	25-26
Indicator Light Status and Button Functions	27-28
App Setup	29-30
Instruction	30-34
Attention	35
Trouble Shooting	35-36
Warranty	37

## 产品示意图

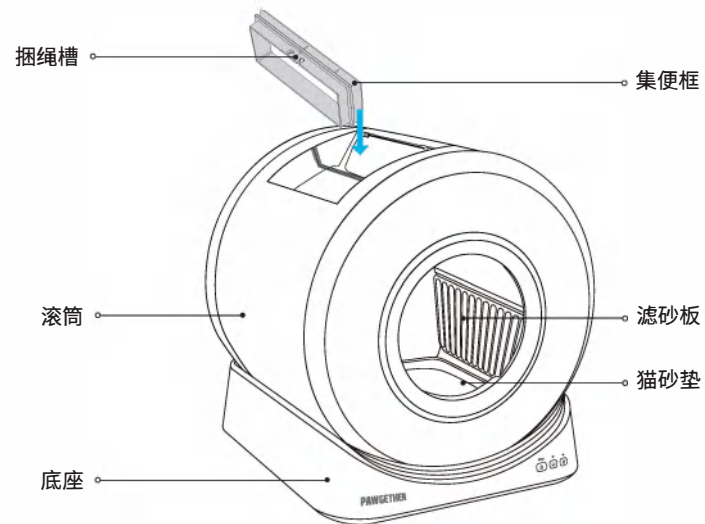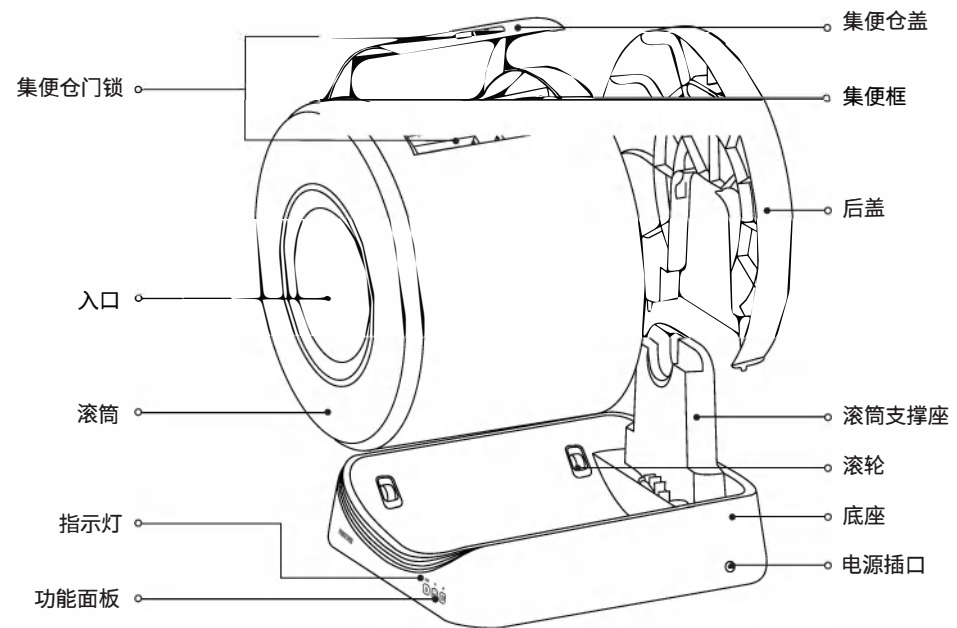


型号	CS 1	最大承重	20kg
尺寸	520x556x540mm	最大猫砂容量	4L
额定电压	12V $\equiv$ 1A	额定功率	12W
执行标准	GB4706.1-2005	适用猫砂:豆腐猫砂、膨润土猫砂、矿砂、混合猫砂 (建议长度12mm以内)	


## 🐾 产品清单




主机

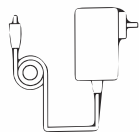

适配器

 

1卷垃圾袋

 

说明书

**\*注意：**

电源适配器装在小盒中。

在安装完成之前，请勿丢弃包装。


## 🐾 产品安装

### 一、主机安装与拆卸


1. 拆开包装，取出设备。

2. 将设备放置在平坦的硬质地面上；请将滚筒放置在主机底座的滚筒支撑座上，再把后盖插入底座的卡槽中。

(注：拆卸设备时，请依次按【拆卸顺序】的①、②顺序先提起后盖再提起滚筒)

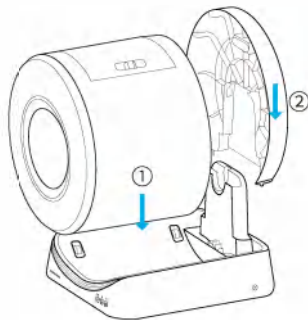


【组装顺序】

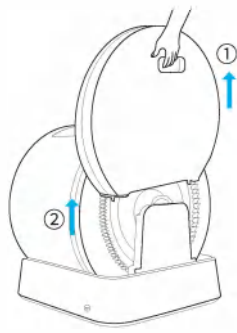


【拆卸顺序】

3. 请先加入猫砂后再接通电源，等待设备复位完成后即可开始使用。

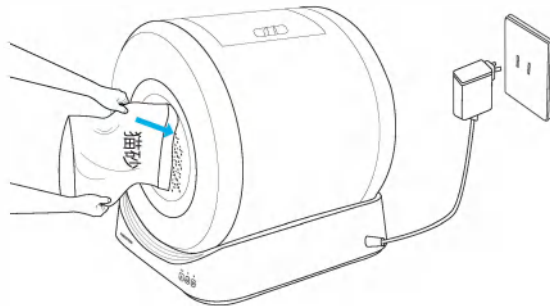

### 二、集便袋安装


1. 手指捏住集便仓门锁打开仓盖；

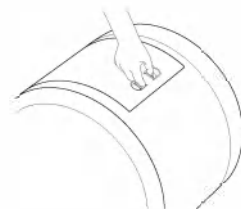

2. 往上提取出集便框；




3. 将垃圾袋开口从集便框捆绳槽一端套入并开口往后翻折；

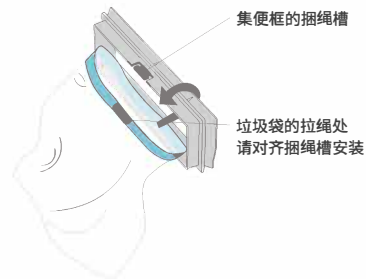

集便框的捆绳槽

垃圾袋的拉绳处  
请对齐捆绳槽安装


4. 将垃圾袋的绳子绕在集便框的**捆绳槽**内固定, 再把集便框支架沿着集便仓的卡槽插入, 关闭集便仓盖, 请确保仓门完全闭合。

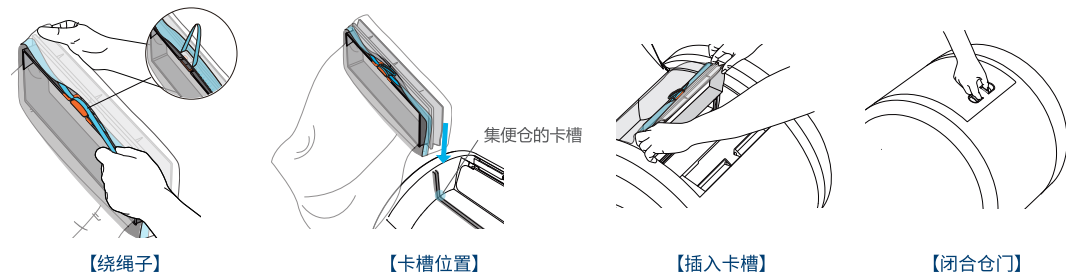

### 三、倾倒&更换猫砂

1. 换砂前请确保集便仓内垃圾袋安装到位, 并有充足剩余空间可供换砂。(建议提前清空集便仓内所有便团垃圾, 防止堵塞)
2. 长按3s“**倾倒键**”(🗑️), 或在APP内点击**倾倒猫砂**(🗑️)图标, 执行一键换砂功能。
3. 等待设备倾倒猫砂, 直至发出“Bi~”一声后, **设备暂停运行**, 请清空集便仓内的猫砂, 更换新的垃圾袋, 往滚筒内加入新的猫砂。
4. 完成添加猫砂后, 请单击设备上“**抚平键**”(👉), 或在APP内点击**确认**键, 完成换砂操作, **设备恢复运行**。

注: 若误触倾倒猫砂功能, 可以再次长按“倾倒键”(🗑️)取消倾倒猫砂即可自动复位。

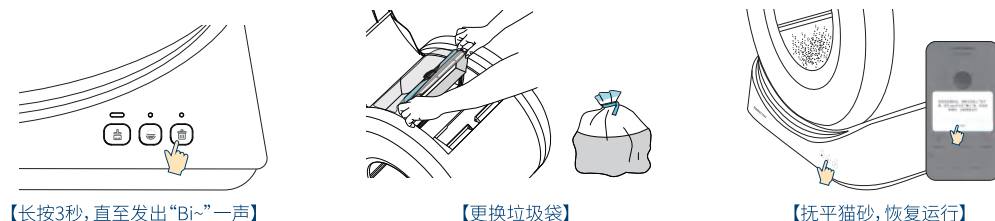

## 🐾 让猫咪适应设备

为了猫咪能更快地适应使用本设备, 如果极少数猫咪一开始无法适应智能猫砂盆, 建议参考以下建议帮助猫咪适应使用:

1. 先将本设备与猫咪之前使用的猫砂盆放在一起(不要移动旧猫砂盆的位置), 并从之前的猫砂盆中取出一些旧猫砂铺在本设备的新猫砂上面, 好奇的猫咪会在一两天内进入本设备一探究竟。
2. 如果猫咪还是不感兴趣, 可以用猫薄荷或猫咪喜欢的食物、物品进行引导, 引导猫咪进入本设备。
3. 也可以考虑在本设备内加入专门用来训练猫咪使用猫砂盆的猫砂。
4. 开始更换使用本设备时, 最好不要更换之前一直在使用的猫砂品牌/品种, 因为可能会增加猫咪的抵触情绪和产生焦虑。
5. 如果猫咪生性胆小, 在开始使用本设备时, 可以拔掉电源, 待猫咪逐渐适应后再通电使用。
6. 请不要再清理旧猫砂盆内的猫砂, 猫咪天性喜爱干净的猫砂, 越来越脏的猫砂对猫咪是一种暗示, 猫咪会重新去选择干净的猫砂如厕。
7. 一旦猫咪开始在本设备内如厕, 请马上撤掉旧的猫砂盆。


## 🐾 产品清洁

定期清洗, 保证卫生健康

### 1. 一键清空猫砂


参照【倾倒&更换猫砂】步骤, 将猫砂清空后断开电源。

### 2. 依次取出后盖和滚筒

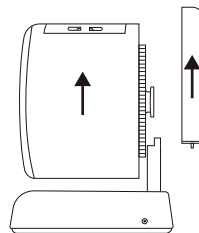


### 3.清洗部件

- (1) 如有必要, 请用湿巾擦拭清洁滚筒内部和后盖, 清洁后请务必确保各部件完全干燥, 才可组装复位使用。  
(可直接水洗部件包括后盖、滤砂板)
- (2) 底座部件外表面和滚筒可用湿巾擦拭(设备内含电子部件, 不可直接水洗)。

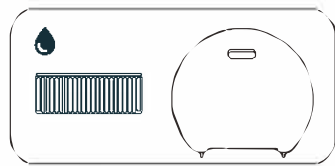


【后盖和滤砂板可直接水洗】

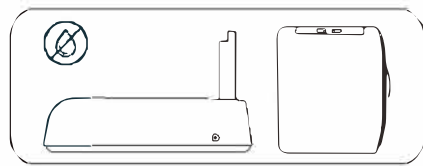

【底座和滚筒, 不可直接水洗】

#### 拆除滤砂板:

- ① 手掌握住滤砂板顶端并往前方微微提起, 使滤砂板弯曲, 同时另一只手把滤砂板从卡槽处脱离出来。

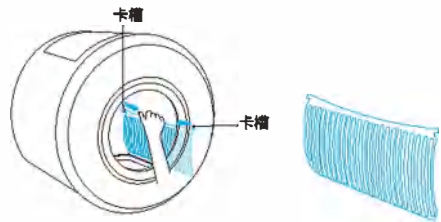


【脱离卡槽】

【弯曲后的滤砂板】

#### 安装滤砂板:


- ① 把滤砂板一端先卡进卡槽, 使滤砂板弯曲后, 将滤砂板的另一端卡进卡槽。

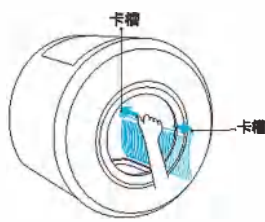

【卡进卡槽】




4. 清洗晾干后, 按照【主机安装与拆卸】、【集便袋安装】、【倾倒&更换猫砂】的说明重新装好机器后接通电源。
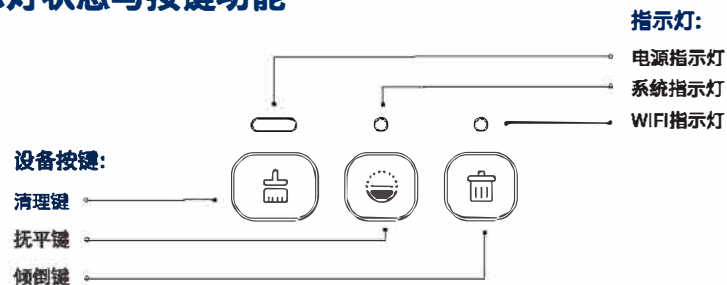
## 指示灯状态与按键功能



### 一、指示灯状态

电源指示灯	白灯快闪3次: 设备处于童锁锁定状态	
	白灯常亮: 设备正常工作中	
	白灯闪烁: 设备正在复位	
系统指示灯	绿灯闪烁: 设备清理猫砂中	
	绿灯常亮: 清理猫砂已暂停	
	蓝灯闪烁: 设备抚平猫砂中	红灯闪烁: 1. 设备运行状态下, 设备受到外在压力; 2. 设备运行状态下, 猫咪靠近设备; 3. 后盖未安装到位;
	蓝灯常亮: 抚平猫砂已暂停	
	白灯闪烁: 设备倾倒猫砂中	
	白灯常亮: 倾倒猫砂已暂停	! 红绿灯交替闪烁: 滚筒运行受阻, 请检查!








WIFI指示灯	蓝灯快闪  ：蓝牙配网中
	蓝灯慢闪  ：AP配网中
	蓝灯熄灭  ：设备已连接WIFI

首次使用设备，开机前3分钟，设备会自动进入蓝牙配网模式 (蓝灯闪烁)

\*3分钟内，设备联网成功后，WIFI指示灯熄灭；

\*若设备突然断网，或者未成功连接WIFI，**WIFI指示灯持续闪烁蓝灯**

## 二、按键功能

 清理键	单击 <b>清理键</b> ：进行清理猫砂；再次单击，暂停/恢复清理猫砂。
	清理期间长按3s <b>清理键</b> ：取消清理，设备自动进行复位。
 抚平键	单击 <b>抚平键</b> ：进行抚平猫砂；再次单击，暂停/恢复抚平猫砂。
	抚平期间长按3s <b>抚平键</b> ：取消抚平，设备自动进行复位。
 倾倒键	长按3s <b>倾倒键</b> ：进行倾倒猫砂；再次单击，暂停/恢复倾倒猫砂。
	倾倒期间长按3s <b>倾倒键</b> ：取消倾倒，设备自动进行复位。
 清理键 +  倾倒键	<b>同时长按8s清理键 + 倾倒键：设备恢复出厂设置并重置WIFI功能。</b>
 清理键 +  抚平键	同时长按3s <b>清理键 + 抚平键</b> ： 上锁/解锁设备 (在APP端，可设置童锁保护功能模块的启用与取消)

## 连接APP

### 一、下载“宠小到大智能”APP

#### • 安卓用户

- 1.扫描二维码，直接进入下载界面。根据页面指引，下载安装APP。
- 2.在手机软件商城搜索“宠小到大智能”下载安装APP。

#### • 苹果用户

- 1.扫描二维码，直接进入下载界面。根据页面指引，下载安装APP。
- 2.使用苹果“APP Store”，搜索“宠小到大智能”并下载APP







APP Download / 下载

### 二、下载后根据提示注册登录账号

### 三、设备配网

#### 1、蓝牙配网模式 (WIFI指示灯蓝灯快闪)

- 设备接电后，同时长按8s (“**清理键**” + “**倾倒键**”)，设备WIFI指示灯**蓝灯快闪** ，即进入蓝牙配网状态，请运行APP并打开**手机蓝牙**  进行连接。

- 打开APP, 首页点击 **添加设备** ➕, 进入后等待搜索并待“发现设备...”弹出后, 点击 **添加** 即可;  
或在“智能猫砂盆”点击“Comfy Smart 1”图标, 进入后右上角“热点配网”切换到“蓝牙配网”, 根据指示连接设备即可。



① 请确保手机连接2.4G的WiFi, 打开蓝牙



② 进入添加设备页面, 等待搜索并弹出添加



方法二, 选择连接设备图标, 进行手动配网

2、热点配网模式 (WIFI指示灯蓝灯慢闪)

- 打开APP, 点击 **添加设备** ➕ 跳转到添加设备界面 点击“Comfy Smart 1”图标, 进入后为“热点配网”, 根据图示配网。
- ★ 1. 选择连接设备WIFI网络 (仅支持2.4G网络, 暂不支持5G)。  
2. 热点配网时指示灯必须为 **蓝灯慢闪状态** 。



① 进入添加设备页面, 点击Comfy Smart 1猫砂盆图标



② 根据图示, 连接设备

🐾 操作指南

一、主页面

清理模式:

- 自动清理模式
- 手动清理模式 (幼猫模式)

抚平猫砂  
立即清理



编辑猫砂盆

设置

今日如厕次数

今日平均如厕时长

倾倒猫砂

日志模块



## 1.清理工作模式和如厕数据

**(自动清理模式):**宠物每次如厕后,设备等待相应时间后再进行自动清理(初始默认为1分钟)

**(手动清理模式):**幼猫保护,纯手动模式,开启该模式后设备不执行自动清理和定时清理功能



自动清理模式



手动清理模式

“今日如厕次数”和“今日平均如厕时长”为如厕数据板块,记录今日猫咪的如厕数据。

点击该界面模块可查看如厕数据图

点击**(立即清理)**按钮:立即清理猫砂

点击**(抚平猫砂)**按钮:立即抚平猫砂

点击**(倾倒猫砂)**按钮:立即将所有猫砂倾倒至集便袋



点击如厕板块



如厕数据图

## 2.如厕记录

日志模块,点击该界面模块可查看更多详细的设备反馈信息。



点击该界面模块



查看更多详细的设备反馈信息

## 二、设置页面

### 1.设备设置


- ⌚ **定时清理**:设备将在设定时间点定时进行自动清理
- 📅 **延时清理时间设置**:宠物每次如厕后,设备等待相应时间后再进行自动清理(初始默认为1分钟)
- 🐾 **幼猫模式**:纯手动模式,开启该模式后设备不执行自动清理和定时清理功能
- 🌙 **夜间勿扰模式**:在设定时间段内,设备不执行自动清理和定时清理功能
- 🕒 **深度清理**:开启后,每次清理时设备会连续执行清理两次
- 💧 **辅助掩埋**:开启后,每次清理时会让猫砂更完全地包裹排泄物
- 💡 **指示灯**:关闭或开启设备指示灯
- ↔️ **单位切换**:根据单位切换
- 🕒 **智能猫砂盆开关**:一键开启或关闭设备
- 🔒 **童锁保护开关**:开启后,设备的按钮30秒无操作后将自动上锁
- 🏠 **恢复出厂设置**:设备恢复出厂模式,将清除所有数据



## 三、共享及解绑设备

点击APP猫砂盆操作界面右上角 **编辑** 按钮。

- 1.点击**共享设备**,输入被分享人的APP账号或点击**更多**通过其它路径分享即可。
- 2.点击**移除设备**,可解除APP与设备的连接;点击**解绑并清除数据**可解绑设备并清除所有如厕数据。

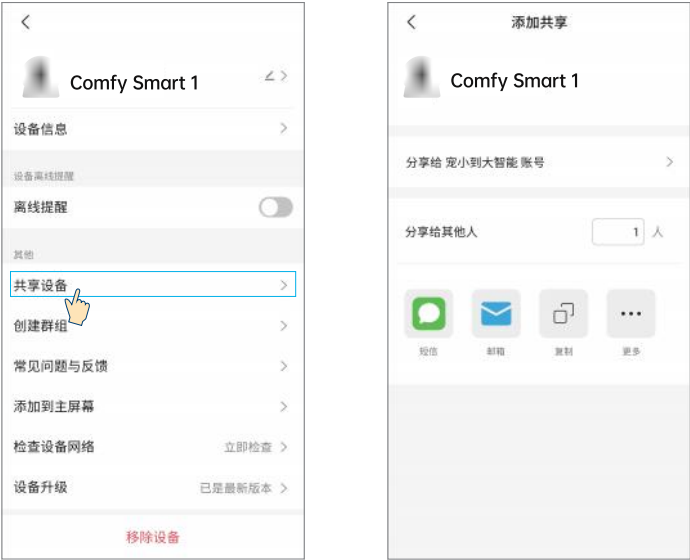

① 编辑猫砂盆界面

② 共享设备

🐾 注意事项



- 请严格按照本说明书安装和使用本设备；
- 本设备不适合身体、感官或精神能力下降或缺乏经验和知识的人(包括儿童)使用，除非他们已由负责其安全的人员监督或指导他们使用本设备；
- 应监督儿童以确保他们不会将本设备当作玩具使用；
- 不能由儿童在没有监督的情况下进行清洁和用户维护；
- 本设备仅适用于6月龄以上且体重在1.5kg以上的猫咪；
- 请怀孕待产和哺乳期猫咪禁止使用，以免将幼猫生产或遗留在猫砂盆内造成危险；
- 本设备内部有重量传感器，搬运设备时请注意轻抬轻放。如果在搬运后设备出现无法操作的情况，请通过手机APP关闭猫砂盆智能开关，再次开启使其复位，或者拔掉电源再次连接使其复位；
- 本设备需放置于干净平整的硬质地面上，滚筒上不能放置任何物品；
- 本设备底座部分禁止浸水或泡水；
- 请在室内阴凉干燥处使用，远离火源，避免阳光直射；
- 请勿将设备放置于高温高湿环境中；
- 请使用原装适配器，否则会损坏设备或者造成安全隐患；
- 请勿在猫砂盆底部与周边垫放其他物品；
- 虽然本设备是低电压运行，但电源线被咬破还是有漏电风险，一旦破损请及时联系售后；
- 请勿自行拆卸修理本设备，使用中如有问题请及时联系售后。

🐾 故障指南

异常情况	对应方法
指示灯不亮	<ul style="list-style-type: none"><li>• 请确保猫砂盆正常连接适配器，电源供电正常，设备处理开机状态；</li><li>• APP端打开设备指示灯开关和猫砂盆智能开关。</li></ul>


系统指示灯:红灯闪烁	<ul style="list-style-type: none"><li>• 请检查设备后盖是否安装到位；</li><li>• 提醒:有宠物靠近猫砂盆，设备暂停工作；</li><li>• 滚筒安装不到位，请断开电源后，确认滚筒安装到位。</li></ul>
系统指示灯: 红绿灯交替闪烁	<p>设备运行受阻</p> <ul style="list-style-type: none"><li>• 请检查确认滚筒安装到位; 集便仓门闭合到位；</li><li>• 请检查确认传动齿轮处没有异物阻塞滚筒运行；</li><li>• 请检查确认设备后盖安装到位，底座上方及滚轮上没有猫砂等异物影响滚筒运行。</li></ul>
设备单击按键后 白灯闪3秒，滚筒没运行	<ul style="list-style-type: none"><li>• 设备童锁保护已上锁，请同时长按3s“<b>清理键</b>”(🧹)+“<b>抚平键</b>”(🌀)进行解锁。</li></ul>
按键无反应	<ul style="list-style-type: none"><li>• 设备童锁保护已上锁，请同时长按3s“<b>清理键</b>”(🧹)+“<b>抚平键</b>”(🌀)进行解锁；</li><li>• 请断开电源，请确认四个支撑脚处于同一水平面上，再接通电源。</li></ul>
移动猫砂盆底座后，设备 无法正常运行	<ul style="list-style-type: none"><li>• 请使用手机APP选中该设备，在设置界面内关闭智能猫砂盆开关后，再次打开开关；</li><li>• 请断开电源，请确认四个支撑脚处于同一水平面上，再接通电源。</li></ul>
长时间显示猫咪如厕	<ul style="list-style-type: none"><li>• 请断开电源，请确认四个支撑脚处于同一水平面上，再接通电源。</li></ul>
搜索不到设备	<ul style="list-style-type: none"><li>• 请确认手机的WIFI功能、蓝牙以及定位功能均为开启状态，以及使用的无线网络为<b>2.4G</b>网络，且可正常联网工作，请将手机靠近设备和路由器，确保设备处于原装适配器的供电状态下。</li></ul>
可以搜索到设备， 但连接失败	<ul style="list-style-type: none"><li>• 请确认手机的WIFI功能、蓝牙以及定位功能均为开启状态，以及使用的无线网络为<b>2.4G</b>网络，且可正常联网工作；</li><li>• 请将手机靠近设备和路由器；</li><li>• 确保设备处于原装适配器的供电状态下。</li></ul>
其他产品电气故障	<ul style="list-style-type: none"><li>• 请联系客服，应由有资格的专业人员维修。</li></ul>

## PRODUCT INTRODUCTION

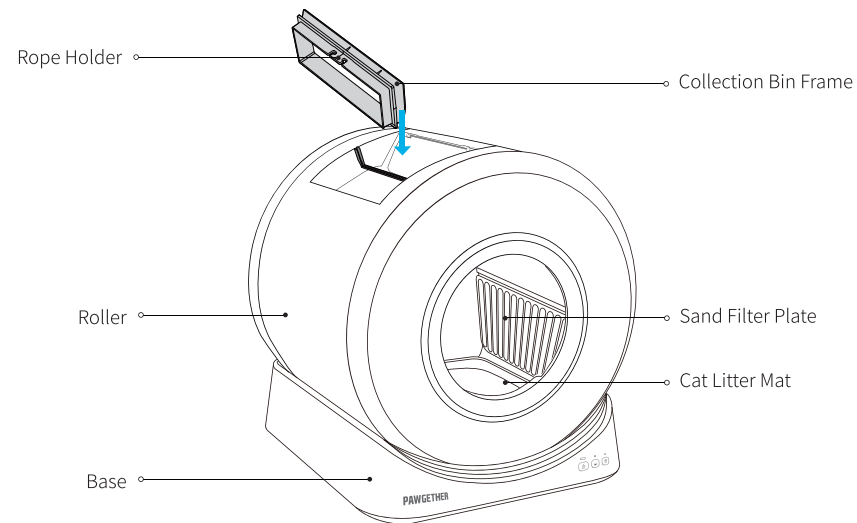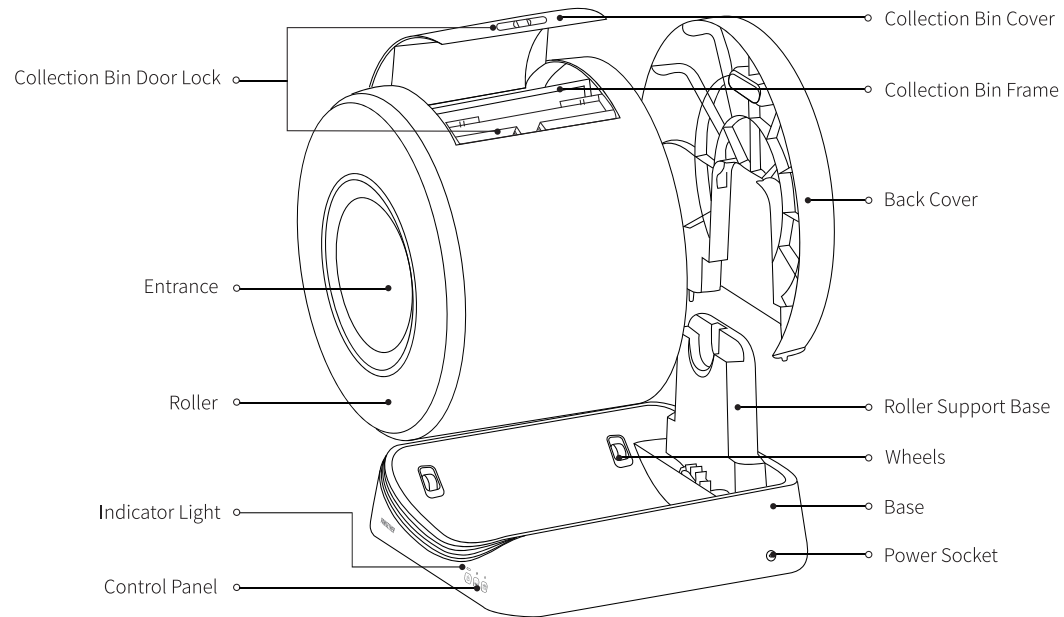


Model	CS 1	Maximum Load Capacity	20kg
Size	520x556x540mm	Maximum Litter Capacity	4L
Rated Voltage	12V --- 1A	Rated Power	12W
Implementation Standard	GB4706.1-2005	Suitable for Cat Litter: Tofu Cat Litter, Bentonite Cat Litter, Mixed Cat Litter (with particles up to 12mm in length)	


## PRODUCT LIST

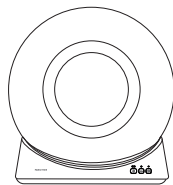

Main Device

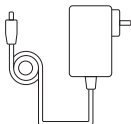

Power Adapter

 

1 Roll of Trash Bag



Instruction Manual

### \* NOTE:


- The power adaptor is packed in a small box.
- Do not discard the packaging until the setup process is completed.

## INSTALLATION


### \* Installation and Disassembly of the Main Device

1. Unpack and remove the device.
2. Place the device on a flat, hard surface; place the roller axis on the roller support base, then insert the back cover into the slot of the base.

(Note: When disassembling the device, please lift the back cover first, as indicated by ① and ②, then lift the roller.)

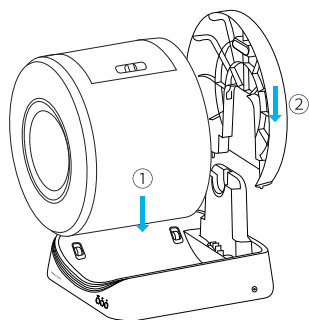


(Assembly Sequence)

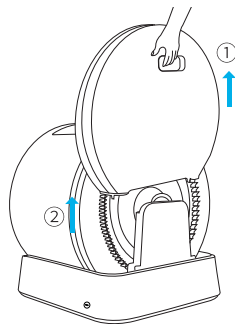


(Disassembly Sequence)

3. Add cat litter and then plug in the power. Waiting for the device to automatically reset before using.

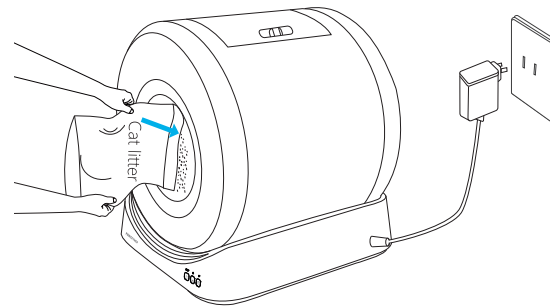


### \* Installation of the Trash Bag


1. Pinch the collection bin door lock with your fingers to open the bin cover.

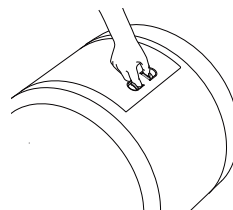


2. Lift the collection bin frame up.

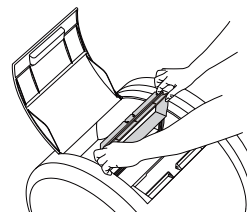

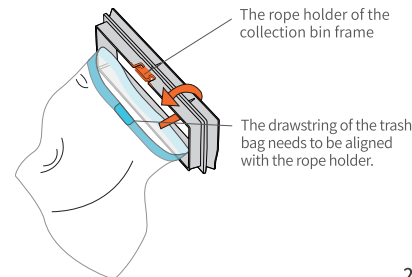


3. Insert the opening of the trash bag into the side with the rope slot of the collection bin frame and fold the opening backward.

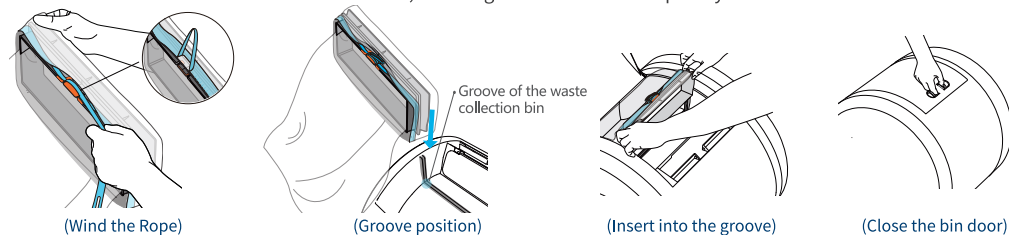


4. Secure the bag's rope around the collection bin frame's **rope slot**, then insert the collection bin frame along the slot on the waste collection bin. Close the bin cover, ensuring the bin door is completely closed.



### \* Emptying & Replacing Cat Litter

1. Before emptying or replacing the litter, please ensure that the trash bag inside the waste collection bin is properly installed and has sufficient space for emptying litter. (It is recommended to empty all waste inside the trash bag in advance to prevent blockage.)
2. Press and hold the **"Empty button"**  for 3 seconds, or click the **(Empty Litter)**  icon in the APP to perform emptying litter function.
3. Please wait for the device to empty cat litter. After hearing a **"Bi~"** sound and the device pauses, empty the cat litter from the waste collection bin, replace the trash bag, and add new cat litter in the roller.
4. After adding new cat litter, click the **"Smooth button"**  on the device, or click **(Confirm)** in the APP to complete the litter empty operation, and the device will resume operation.

Note: If the litter emptying function is accidentally triggered, you can press and hold the button for 3 seconds again to cancel the emptying process

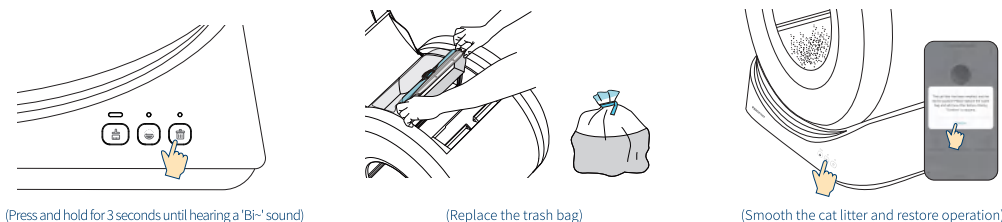

(Press and hold for 3 seconds until hearing a 'Bi~' sound)

(Replace the trash bag)

(Smooth the cat litter and restore operation)

## HELP CATS ADAPT TO THE DEVICE

To help cats adapt to use this device more quickly, here are suggestions for those few cats that may initially struggle:

1. Place this device alongside the cat's previous litter box (without moving the old box) and sprinkle some old litter from the previous box onto the new litter in this device. Curious cats may explore the new device within few days.
2. If the cat remains uninterested, use catnip or the cat's favorite treats or items to guide them into the new device.
3. Consider adding specially designed litter for training cats to use the litter box inside this device.
4. When transitioning to this device, it's advisable not to change the brand/type of litter previously used, as this can create resistance and anxiety in cats.
5. For timid cats, when initially introducing this device, turn off the power and gradually reintroduce it once the cat has adapted.
6. Avoid cleaning the old litter box, as cats naturally prefer clean litter. Increasingly dirty litter signals to cats, encouraging them to choose a cleaner spot for elimination.
7. Once the cat starts using this device, promptly remove the old litter box.


## PRODUCT CLEANING

### Regular Cleaning Steps

#### 1. One-Click to Empty Cat Litter


Refer to the steps for **"\* Emptying & Replacing Cat Litter"** to empty the cat litter, and then disconnect the power.

#### 2. Remove the Back Cover and Roller in Sequence

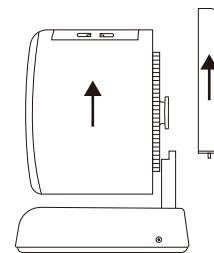


### 3. Clean the Components

- (1) If necessary, use a damp cloth to wipe and clean the interior of the roller and the back cover. After cleaning, make sure all components are completely dry before reassembling for use. (The back cover and sand filter plate can be directly washed)
- (2) The exterior surface of the base and roller can be wiped with a damp cloth (the device contains electronic components and cannot be directly washed with water).

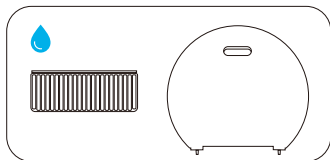


(The back cover and sand filter plate can be directly washed)

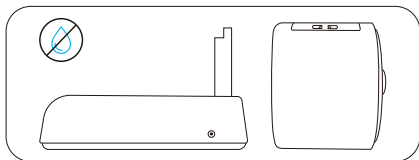


(Contains electronic components, not suitable for direct water washing)

#### Remove the Filter Plate:

- ① Hold the top of the sand filter sand plate and slightly lift it forward to bend the plate, while using another hand to detach the sand filter plate from the slot.

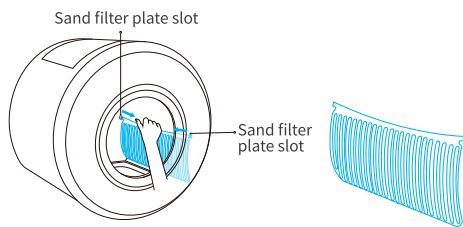


(Detach from the slot)

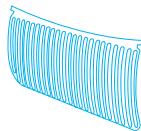

(Slightly Bent sand filter board)

#### Install the Filter Plate:

- ① Insert one end of the sand filter plate into the slot, bend the sand filter plate, and then insert the other end into the slot.

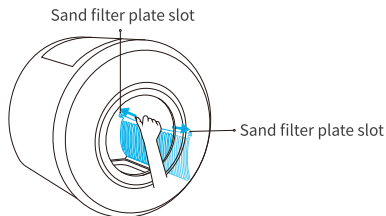

(Fit into the slot)

4. After cleaning and drying, follow the instructions for "Installation and Disassembly of the Main Device", "Installation of the Trash Bag", and "Emptying & Replacing Cat Litter" to reassemble the device and reconnect the power.


## 🐾 INDICATOR LIGHT STATUS AND BUTTON FUNCTIONS

#### Indicator Light:

 



 




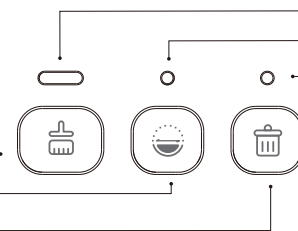


- Power Indicator Light
- System Indicator Light
- WIFI Indicator Light





#### Device Buttons:

- Clean Button
- Smooth Button
- Empty Button



### \* Indicator Light Status








 Power Indicator Light	White Light Quickly Flashes 3 Times  : The device is locked (under child lock protection).
	Solid White Light  : The device is operating normally.
	White Light Flashes  : The device is in the process of restoring.
 System Indicator Light	Green Light Flashes  : The device is cleaning cat litter.
	Solid Green Light  : Cleaning cat litter process is paused.
	Blue Light Flashes  : The device is smoothing cat litter.
	Solid Blue Light  : Smoothing cat litter process is paused.
	White Light Flashes  : The device is emptying cat litter.
	Solid White Light  : Emptying cat litter process is paused.
<b>Red Light flashes  :</b> 1. External pressure detected while the device is in operation; 2. Pets approaching the device during operation; 3. Back cover is not installed properly; <b>⚠️ Red and Green Lights flashes alternately:</b> The roller operation is obstructed. Please check!	

 WIFI Indicator Light	Blue Light Flashes Quickly  : Bluetooth pairing mode is on.
	Blue Light Flashes Slowly  : AP (Access Point) pairing mode is on.
	Blue Light Off  : The device has been connected to WIFI.

When using the device for the first time, in the first 3 minutes before startup, the device will automatically enter Bluetooth pairing mode (blue light flashing).

- \* Within 3 minutes, once the device successfully connects to the network, the WIFI indicator light will turn off.
- \* If the device loses network connection suddenly or fails to connect to WIFI, **the WIFI indicator light will continue flashing blue.**

## \* Button Functions

 Clean Button	Click the <b>Clean Button</b> : Start the cat litter cleaning process. Click it again to pause/resume the cleaning process.
	Press and hold the <b>Clean Button</b> for 3 seconds during the cleaning process: Cancels cleaning, and the device will automatically restore.
 Smooth Button	Click the <b>Smooth Button</b> : Start the cat litter smoothing process. Click it again to pause/resume the smoothing process.
	Press and hold the <b>Smooth Button</b> for 3 seconds during the smoothing process: Cancels smoothing, and the device will automatically restore.
 Empty Button	Press and hold the <b>Empty Button</b> for 3 seconds: Start the cat litter emptying process. Click it again to pause/resume the emptying process.
	Press and hold the <b>Empty Button</b> for 3 seconds during the emptying process: Cancels emptying, and the device will automatically restore.
 Clean Button +  Empty Button	Simultaneously <b>press and hold the Clean Button + Empty Button</b> for 8 seconds: <b>Resets the device and the WIFI function to the factory settings.</b>
 Clean Button +  Smooth Button	Simultaneously <b>press and hold the Clean Button + Smooth Button</b> for 3 seconds: Locks/unlocks the device. (You can enable or disable the child lock protection function on the app.)

## 🐾 APP SETUP

### \* Download the " PAWGETHER SMART " APP

#### • For Android User

- 1.Scan the QR code to download and install the APP.
- 2.Use "Google Play Store" to search and download "PAWGETHER SMART" APP.

#### • For APPLE User

- 1.Scan the QR code to download and install the APP.
- 2.Use " APP Store " to search and download" PAWGETHER SMART " APP.









APP Download

### \* Register and Log In


### \* Network Connection

#### 1. Bluetooth Networking Setup (WIFI indicator blue light flashes quickly)


- After powering on the device, simultaneously press and hold the **"Clean button"**  and the **"Empty button"**  for 8 seconds. The WIFI indicator **blue light**  flashes quickly, indicating that the device has entered Bluetooth pairing mode. Please run the APP and enable **Bluetooth**  on your phone to connect.
- Run the APP and tap **Add Device**  on the homepage. Wait for the device to be discovered until **"Device Found..."** appeared, and then click **adding** . Alternatively, in the "Smart Cat Litter" section, tap on the **"Comfy Smart 1"** icon, then switch to "Bluetooth Pairing" in the upper right corner, and follow the instructions to connect the device.



①Make sure your phone is connected to a 2.4G WIFI and Bluetooth is enabled.

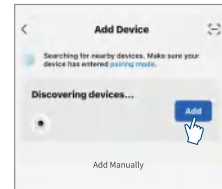

②Go to the device adding page and wait for the prompt to appear for adding.

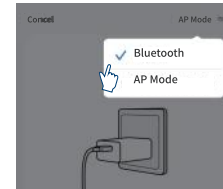


Method 2: Select the device connection icon to manually configure the network.



## 2. Hotspot Pairing Setup (WIFI indicator blue light flashes slowly)

- 1. Run the app and click **Add Device** +. On the device adding page, tap on the "Comfy Smart 1" icon, then switch to "Hotspot Pairing" mode and follow the on-screen instructions.
- ★ 1. Choose the device's WIFI network (only supports 2.4G network).  
2. The indicator light must be **flashing slowly in blue** during hotspot pairing.

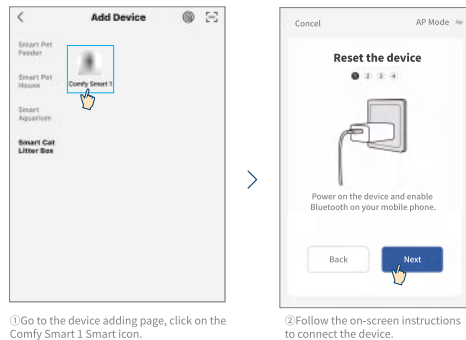


## INSTRUCTION

### \* Main Page

Cleaning Mode:


- Automatic Cleaning Mode
- Manual Cleaning Mode (Kitten Mode)

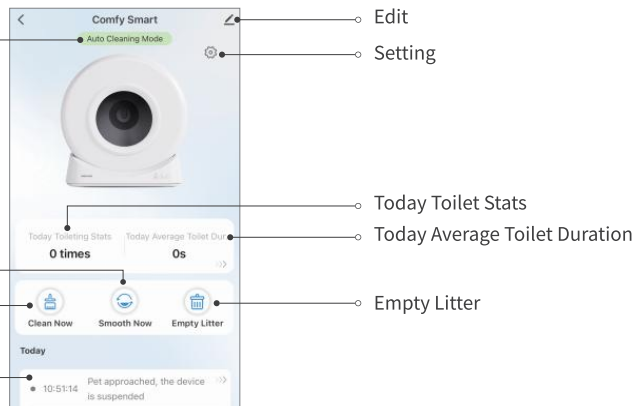

## 1. Operation Mode and Toileting Data

**Automatic Cleaning Mode**: After each use, the device waits for a certain time before automatically cleaning (initially set to 1 minute).

**Manual Cleaning Mode**: For kitten protection, only manual cleaning allowed, where the device won't perform automatic or scheduled cleanings.

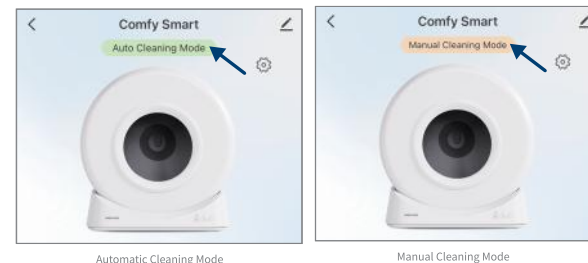


"Today Toilet Stats" and "Today Average Toilet Duration" display toilet data for the day. Click the interface to view the toilet data graph.

Click **Clean Now** button: Clean the cat litter.


Click **Smooth Now** button: Smooth the cat litter.

Click the **Empty Litter** button: Empty the cat litter.

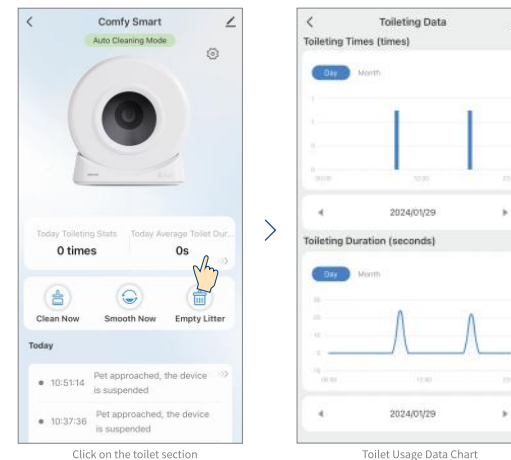


2. Toileting Records

Log Module: Clicking on this interface module to view more data from the device.

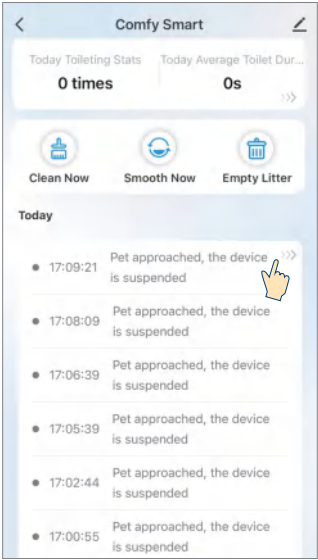

Swipe down and click on the arrow or tap on the blank space in the module


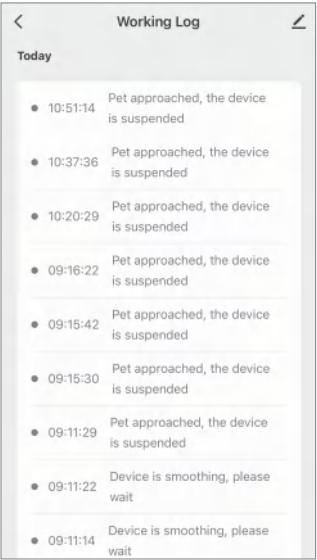


View more detailed device feedback information

\* Settings Page

1. Device Settings


- Scheduled Cleaning:** The device will automatically clean at the preset time.
- Delay Cleaning Time Setting:** After each use, the device waits for a certain time before automatically cleaning (initially set to 1 minute).
- Kitten Mode:** Manual cleaning mode, after enabling this mode, the device will not perform automatic or scheduled cleaning functions.
- Night Disturbance Mode:** Within the preset time period, the device will not perform automatic or scheduled cleanings.
- Deep Cleaning:** After enabled, the device performs two consecutive cleanings each time.
- Assist Burying:** After enabled, it enhances burial by ensuring cat litter more completely covers waste during cleaning.
- Indicator Light:** Turn on or off the device indicator light.
- Unit Switching:** Switch units according to preference.
- Smart Litter Box Switch:** One-click to turn the device ON or OFF.
- Child Lock Protection:** After enabled, the device buttons will automatically lock after 30 seconds of inactivity.
- Restore Factory Settings:** Restores the device to factory settings, and clear all data.

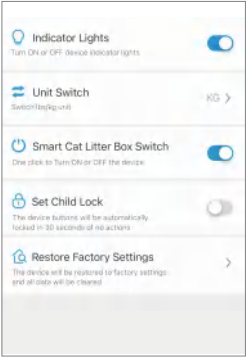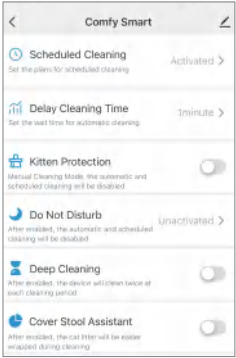


## \* Share and Unbind Device

Click the **Edit** button in the upper right corner of the Cat Litter Box operation interface.

- 1.Click **Share Device**, then click "Add Sharing". Input the recipient's APP account or click "More" to share through other paths.
- 2.Click **Remove Device** to unbind the device.  
Click **Unbind and Clear Data** to unbind the device and erase all data.

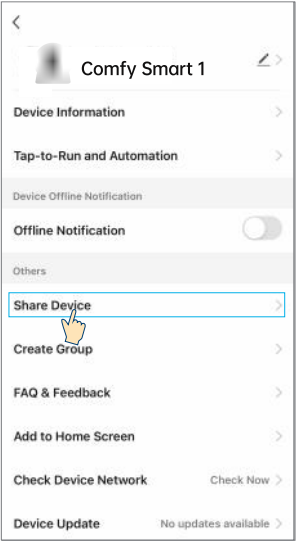

①Edit Cat Litter Box Interface

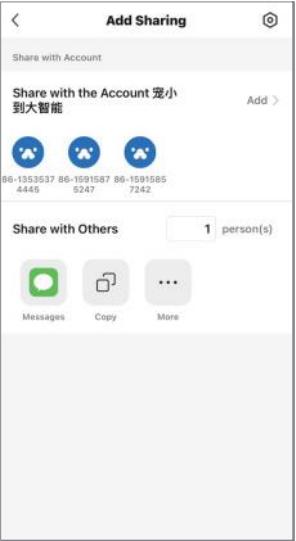





②Share Device

## PAW ATTENTION

- Please strictly follow this manual for the installation and use of this device.
- This device is not intended for use by individuals with limited physical, sensory, or mental capabilities, or lack of experience and knowledge (including children), unless supervised or guided by someone responsible for their safety.
- Children should be supervised to ensure they do not use this device as a toy.
- Cleaning and user maintenance should not be performed by children without supervision.
- This device is only suitable for cats aged 6 months and older, weighting over 1.5 kg.
- Pregnant, birthing, and lactating cats are prohibited from using this device to avoid potential danger to kittens being born or left in the litter box.
- The device contains a weight sensor inside. When moving the device, please lift and place it gently. If the device becomes inoperable after moving, please use the mobile app to turn off the smart switch for the litter box, then turn it on again to reset. alternatively, unplug the power and reconnect to reset.
- This device should be placed on a clean, flat, and hard surface. Do not place any items on the roller.
- The base of this device is prohibited from being immersed or soaked in water.
- Please use this device in a cool, dry indoor area, away from heat sources, and avoid direct sunlight.
- Do not place the device in a high-temperature or high-humidity environment.
- Please use the original adapter to avoid damaging the device or causing safety hazards.
- Do not place any other items on the bottom and surrounding area of the litter box.
- Although this device operates at low voltage, there is a risk of electric shock if the power cord is damaged by biting. Contact customer service promptly if the cord is damaged.
- Do not disassemble or repair this device on your own. If there are any issues during use, please contact customer service promptly.

## PAW TROUBLE SHOOTING

Abnormal Situations	Corresponding Methods
Indicator Light not on	<ul style="list-style-type: none"><li>●Please ensure the cat litter box is properly connected to the adapter, the power supply is functioning normally, and the device is in the startup state.</li><li>●The indicator light switch on the APP is enabled; and the smart litter box switch on the APP is turned on.</li></ul>

System Indicator Light: flashing red	<ul style="list-style-type: none"><li>• Please check if the device back cover is installed properly.</li><li>• Pets approach the device and it stops working temporarily.</li><li>• Roller is not installed properly, please disconnect the power and ensure the roller is installed correctly.</li></ul>
System Indicator Light: alternately red and green flashing	<ul style="list-style-type: none"><li>• Device operation is obstructed</li><li>• please check if the roller, waste collection bin door are installed properly.</li><li>• Please ensures the transmission gear are free of obstructions.</li><li>• Please ensure the back cover is correctly installed and there are no obstacles above the base or on the wheels stopping the roller operating.</li></ul>
Power Indicator White Light: quickly flashes 3 times but the roller does not operate	<ul style="list-style-type: none"><li>• The child lock protection on the device is activated. Please simultaneously press and hold the <b>"Clean button"</b>  and the <b>"Smooth button"</b>  for 3 seconds to unlock.</li></ul>
No Response From Buttons	<ul style="list-style-type: none"><li>• The device is locked for child protection. Please simultaneously press and hold the <b>"Clean button"</b>  and <b>"Smooth button"</b>  for 3 seconds to unlock.</li><li>• Please disconnect the power, ensure that the four support feet are on the same horizontal plane, and then reconnect the power.</li></ul>
Device Malfunction After Moving the Litter Box Base	<ul style="list-style-type: none"><li>• Please use the App to turn off the smart litter box switch at the settings interface, and then turn it on again.</li><li>• Please disconnect the power, ensure that the four support feet are on the same horizontal plane, and then reconnect the power.</li></ul>
Continuous Display of Cat Littering	<ul style="list-style-type: none"><li>• Please disconnect the power, ensure that the four support feet are on the same horizontal plane, and then reconnect the power.</li></ul>
Device not Found During Search	<ul style="list-style-type: none"><li>• Please confirm that the phone's WI-FI, Bluetooth, and location functions are enabled. Make sure it is using a <b>2.4G</b> network and it is working properly. Stay close to the device and router, and ensure the device is powered by the original adapter.</li></ul>
Device is Found But Connection Fails	<ul style="list-style-type: none"><li>• Please confirm that the phone's WI-FI, Bluetooth, and location functions are enabled. Make sure it is using a <b>2.4G</b> network and it is working properly. Stay close to the device and router, and ensure the device is powered by the original adapter.</li></ul>
Other Electrical Malfunctions	<ul style="list-style-type: none"><li>• Please contact customer service for assistance.</li></ul>

## 保修说明 WARRANTY

用户姓名 Customer Name		联系电话 Phone Number	
通讯地址 Address			
产品型号 Product No.		购买时间 Purchase Time	
订单编号 Order No.			
退换货原因 Reason for Return or Exchange			

The Comfy Smart 1 has a one-year warranty from the date of purchase. If quality issues arise within 12 months and are verified by our company, the product qualifies for warranty service. The following reasons are not covered by the warranty:

1. Damage caused by failure to use, maintain, and store according to the requirements of the used manual.
2. Damage caused byimproper repair by an unauthorized service person.
3. Damage caused by force majeure of natural factors and human factors.
4. Damage caused by the power supply voltage not matching the product nameplate.
5. The normal fading of the product during use, wear and consumption are not covered by the warranty.

智能猫砂盆Comfy Smart 1保修期为一年,自产品购买之日起12个月内,产品出现质量问题,经本公司核实后,产品享受质保服务。下列原因不属于保修范围:

- 1、未按照使用手册要求使用、维护、保管而造成的损坏。
- 2、由非授权服务者维修不当造成的损坏。
- 3、因不可抗力的自然因素及人为因素造成的损坏。
- 4、因电源电压或频率与产品铭牌不符而造成损坏。
- 5、产品使用过程中正常的褪色,磨损和消耗不在保修范围内。

## FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.