



 
 
Original	Replacement	Original	Replacement
 Power Receiver	 Power	 2 Receiver	 2
 Enter Receiver	 Ok	 3 Receiver	 3
 Up Receiver	 Up	 4 Receiver	 4
 Down Receiver	 Down	 5 Receiver	 5
 Right Receiver	 Right	 6 Receiver	 6
 Left Receiver	 Left	 7 Receiver	 7
 Return Receiver	 Back	 8 Receiver	 8
 Q/Setup Receiver	 Smart	 9 Receiver	 9
 Home/Audio	 Media	 0/11 Receiver	 0
 Play Receiver	 Play	 +10/--/--10/Dimmer/D.Tun Receiver	 Shift + Guide
 I<< Receiver	 I<<	 CLR/Sleep/12 Receiver	 Pre Ch
 >>I Receiver	 >>I	 Movie Tv/Red/Search	 Red
 << Receiver	 <<	 Music/Green/Repeat Receiver	 Green
 >> Receiver	 >>	 Game/Yellow/Random Receiver	 Yellow
 Pause Receiver	 Pause	 Stereo/Blue/Mode Receiver	 Blue
 Stop Receiver	 Stop	 Vol+ Receiver	 Vol +
 1 Receiver	 1	 Vol- Receiver	 Vol -





Original	Replacement	Original	Replacement
 CH Disc/Album+ Receiver	 Ch +	 Yellow Tv	 Subt
 CH Disc/Album- Receiver	 Ch -	 Blue Tv	 TV/R
 Power Tv	  Shift + Power	 1 Tv	 Shift + 1
 Input Tv	 AV	 2 Tv	 Shift + 2
 CH+ Tv	 Shift + Ch +	 3 Tv	 Shift + 3
 CH- Tv	 Shift + Ch -	 4 Tv	 Shift + 4
 Up Tv	 Shift + Up	 5 Tv	 Shift + 5
 Enter Tv	 Shift + Ok	 6 Tv	 Shift + 6
 Down Tv	 Shift + Down	 7 Tv	 Shift + 7
 Right Tv	 Shift + Right	 8 Tv	 Shift + 8
 Left Tv	 Shift + Left	 9 Tv	 Shift + 9
 Menu/Prev CH	 Menu	 0/11 Tv	 Shift + 0
 Top Menu/Guide	 Shift + Menu	 +10/--/--10 Tv	 Guide
 Return Tv	 Shift + Back	 CLR/Sleep/12	 Shift + Pre Ch
 Q/Setup Tv	 Shift + Smart	 Vol+ Tv	 Shift + Dual
 Red Tv	 Options	 Vol- Tv	 Shift + Options
 Green Tv	 Dual	 AUX	 Text



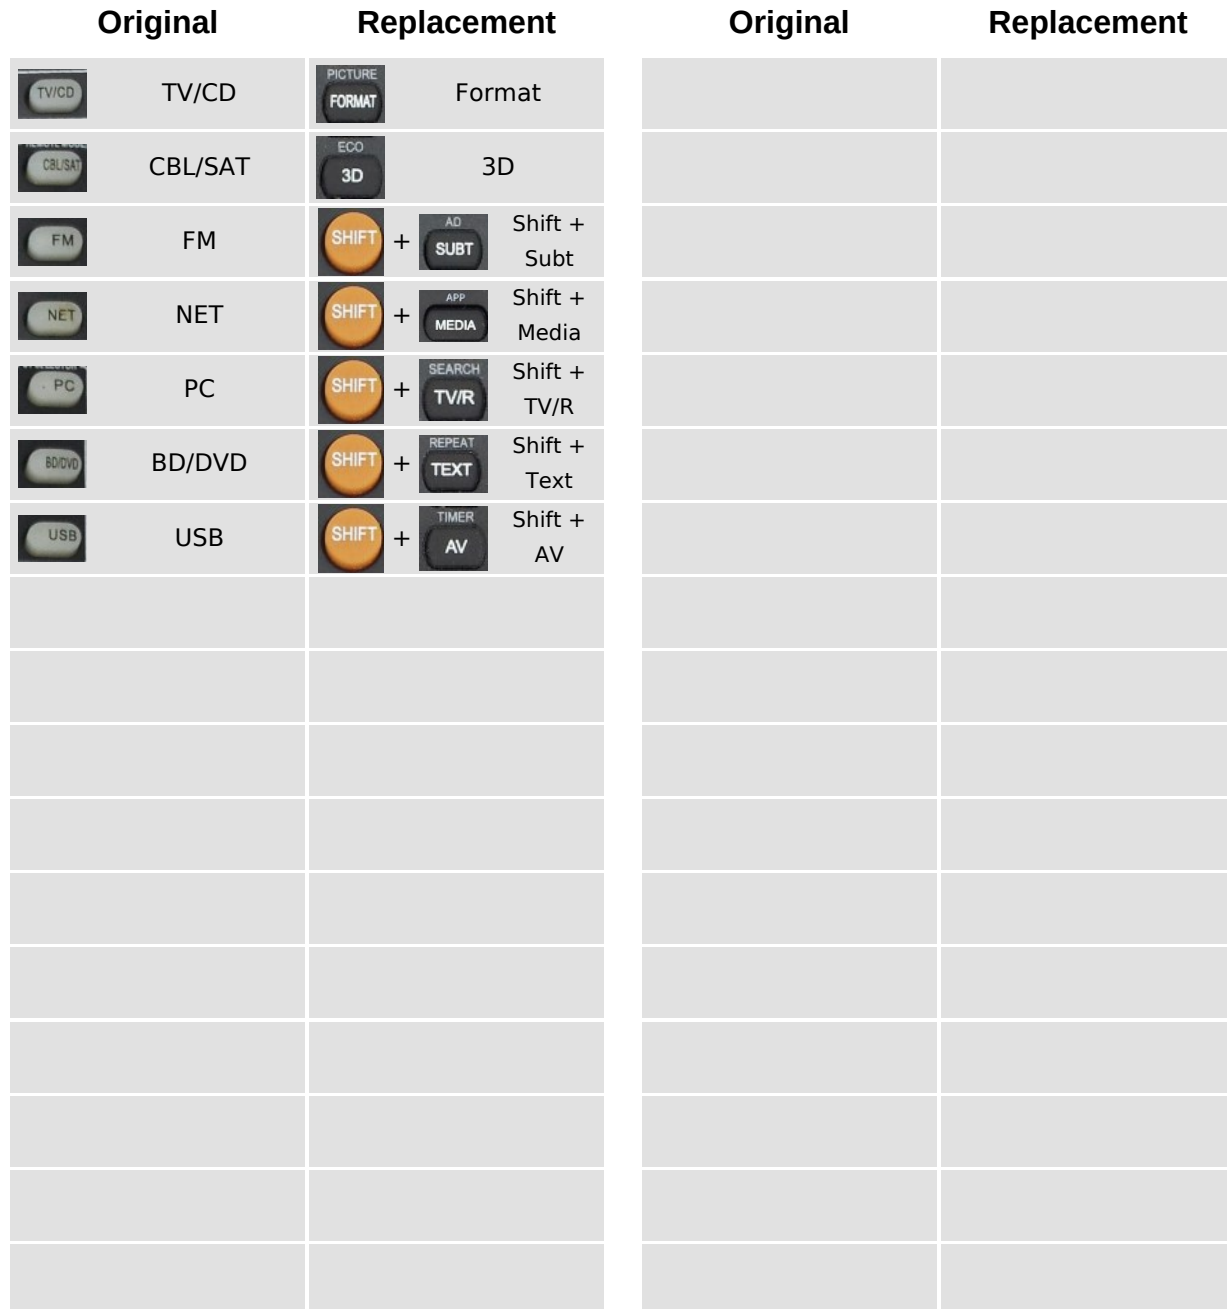



 
 
Original	Replacement
 Power BD/DVD	 Power
 Menu/Prev CH	 Menu
 Top Menu/Guide BD/DVD	 Options
 Q/Setup	 Smart
 Return BD/DVD	 Back
 Home/Audio	 Media
 Enter BD/DVD	 Ok
 Up BD/DVD	 Up
 Down BD/DVD	 Down
 Right BD/DVD	 Right
 Left BD/DVD	 Left
 I<< BD/DVD	 I<<
 >>I BD/DVD	 >>I
 << BD/DVD	 <<
 >> BD/DVD	 >>
 Play BD/DVD	 Play
 Pause BD/DVD	 Pause

Original	Replacement
 Stop BD/DVD	 Stop
 Movie Tv/Red/Search	 Red
 Music/Green/Repeat at BD/DVD	 Green
 Game/Yellow/Random BD/DVD	 Yellow
 Stereo/Blue/Mode BD/DVD	 Blue
 1 BD/DVD	 1
 2 BD/DVD	 2
 3 BD/DVD	 3
 4 BD/DVD	 4
 5 BD/DVD	 5
 6 BD/DVD	 6
 7 BD/DVD	 7
 8 BD/DVD	 8
 9 BD/DVD	 9
 0/11 BD/DVD	 0
 +10/--10/D.Tun/Dimmer BD/DVD	 Guide
 CLR/Sleep/12	 Pre Ch



BD/DVD



Original	Replacement	Original	Replacement
 CBL/SAT	 Text	 << CBL/SAT	 Shift + Ch -
 Vol+ Receiver	 Vol +	 >> CBL/SAT	 Shift + Ch +
 Vol- Receiver	 Vol -	 Play CBL/SAT	 3D
 Power CBL/SAT	 Shift + Power	 Movie Tv/Red/Search	 Dual
 CH Disc/Album+ CBL/SAT	 Ch +	 Music/Green/Repe at CBL/SAT	 Subt
 CH Disc/Album- CBL/SAT	 Ch -	 Game/Yellow/Ran dom CBL/SAT	 AV
 Menu/Prev CH CBL/SAT	 Shift + Menu	 Stereo/Blue/Mode CBL/SAT	 Format
 Top Menu/Guide CBL/SAT	 Shift + Options	 1 CBL/SAT	 Shift + 1
 Return CBL/SAT	 Shift + Back	 2 CBL/SAT	 Shift + 2
 Q/Setup	 Shift + Smart	 3 CBL/SAT	 Shift + 3
 Up CBL/SAT	 Shift + Up	 4 CBL/SAT	 Shift + 4
 Enter CBL/SAT	 Shift + Ok	 5 CBL/SAT	 Shift + 5
 Down CBL/SAT	 Shift + Down	 6 CBL/SAT	 Shift + 6
 Right CBL/SAT	 Shift + Right	 7 CBL/SAT	 Shift + 7
 Left CBL/SAT	 Shift + Left	 8 CBL/SAT	 Shift + 8
 Pause CBL/SAT	 Shift + Pause	 9 CBL/SAT	 Shift + 9
 Stop CBL/SAT	 Shift + Stop	 0/11 CBL/SAT	 Shift + 0



 
 




Original	Replacement	Original	Replacement
 Power TV/CD	 Power	 Stop TV/CD	 Stop
 CH/Disc+ TV/CD	 Ch +	 Movie Tv/Red/Search	 Red
 CH/Disc TV/CD	 Ch -	 Music/Green/Repeat at TV/CD	 Green
 Return TV/CD	 Back	 Game/Yellow/Random TV/CD	 Yellow
 Q/Setup TV/CD	 Smart	 Stereo/Blue/Mode TV/CD	 Blue
 Home/Audio	 Media	 1 TV/CD	 1
 Up TV/CD	 Up	 2 TV/CD	 2
 Down TV/CD	 Down	 3 TV/CD	 3
 Right TV/CD	 Right	 4 TV/CD	 4
 Left TV/CD	 Left	 5 TV/CD	 5
 Enter TV/CD	 Ok	 6 TV/CD	 6
 I<< TV/CD	 I<<	 7 TV/CD	 7
 >>I TV/CD	 >>I	 8 TV/CD	 8
 << TV/CD	 <<	 9 TV/CD	 9
 >> TV/CD	 >>	 0/11 TV/CD	 0
 Play TV/CD	 Play	 +10/--10/D.Tun/Dimmer TV/CD	 Guide
 Pause TV/CD	 Pause	 CLR/Sleep/12	 Pre Ch



TV/CD

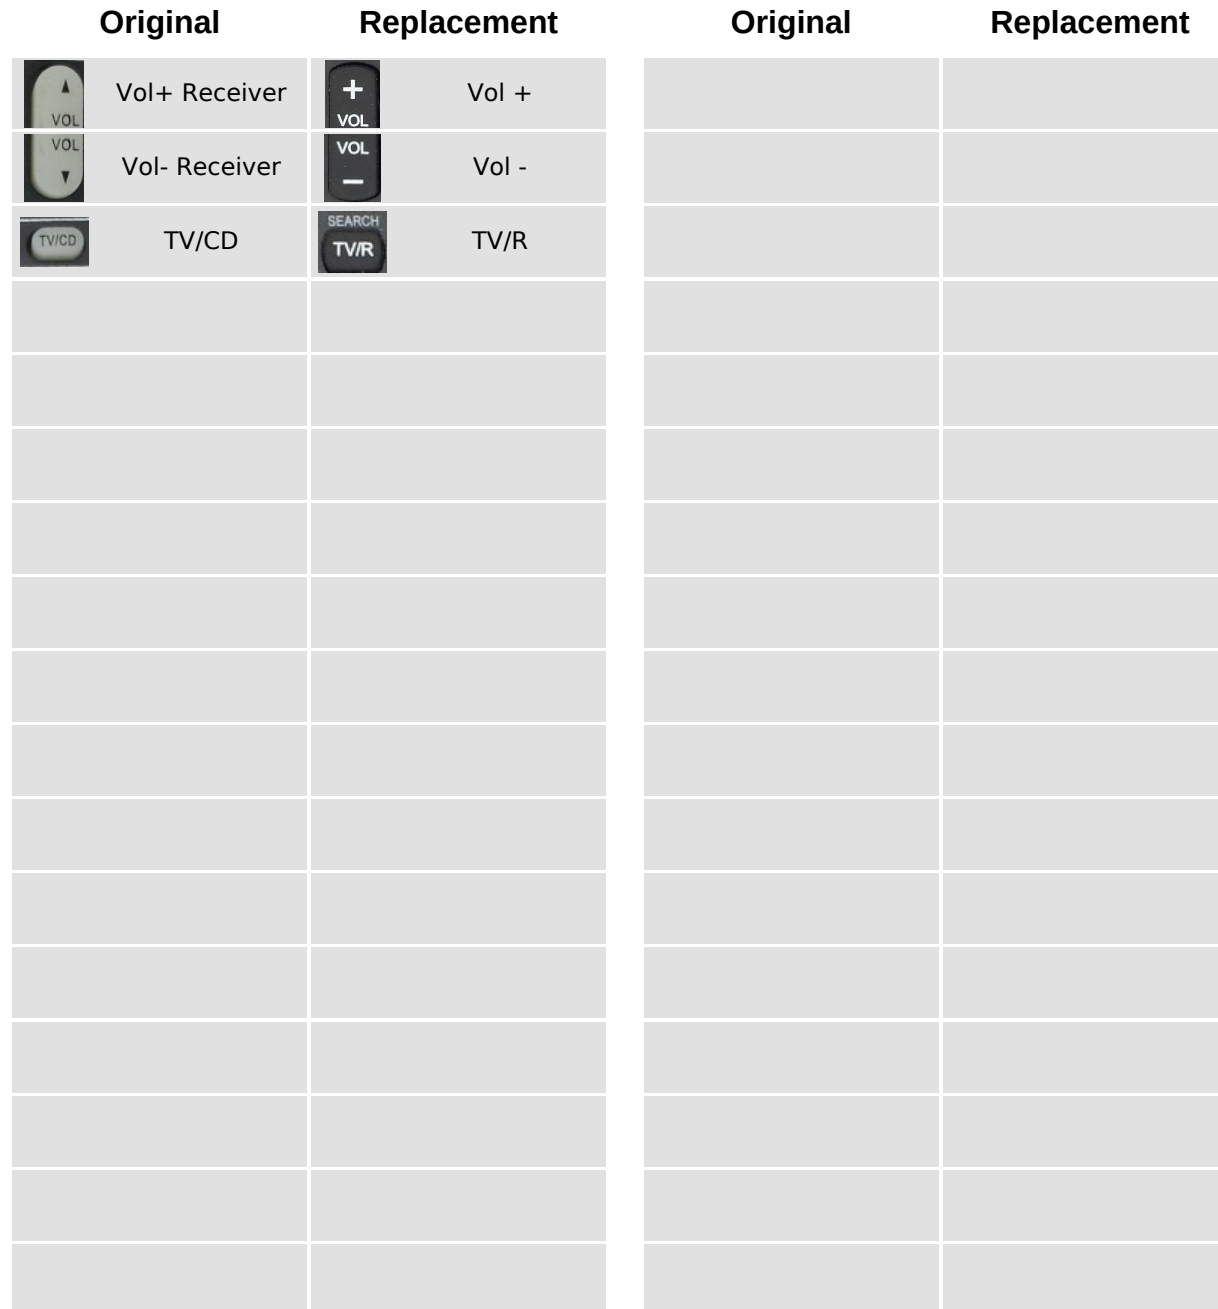



Original	Replacement	Original	Replacement
 Power Receiver Zone 2	 Power	 << Zone 2	 <<
 Vol+ Zone 2	 Vol +	 Pause Zone 2	 Pause
 Vol- Zone 2	 Vol -	 Stop Zone 2	 Stop
 CH Disc/Album+ Zone 2	 Ch +	 Movie	 Red
 CH Disc/Album- Zone 2	 Ch -	 Tv/Red/Search	 Green
 Up Zone 2	 Up	 Music/Green/Repeat at Zone 2	 Yellow
 Enter Zone 2	 Ok	 Game/Yellow/Random Zone 2	 Blue
 Down Zone 2	 Down	 Stereo/Blue/Mode Zone 2	 1
 Right Zone 2	 Right	 1 Zone 2	 2
 Left Zone 2	 Left	 2 Zone 2	 3
 Return Zone 2	 Back	 3 Zone 2	 4
 Q/Setup Zone 2	 Smart	 4 Zone 2	 5
 Home/Audio Zone	 Media	 5 Zone 2	 6
 I<< Zone 2	 I<<	 6 Zone 2	 7
 >>I Zone 2	 >>I	 7 Zone 2	 8
 Play Zone 2	 Play	 8 Zone 2	 9
 >> Zone 2	 >>	 9 Zone 2	 0
		 0/11 Zone 2	 0



