

# REMINGTON®

EST. NEW YORK 1937

 
 


 
 
 
 
 
 
## Style Series Rotary Shaver R4

 [remington-europe.com](http://remington-europe.com)

**Register online for an EXTRA year guarantee**

Visit [uk.remington-europe.com/product-registration](http://uk.remington-europe.com/product-registration) You must register within 28 days of purchase.

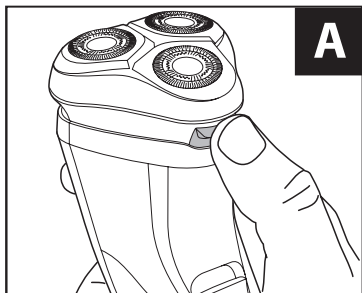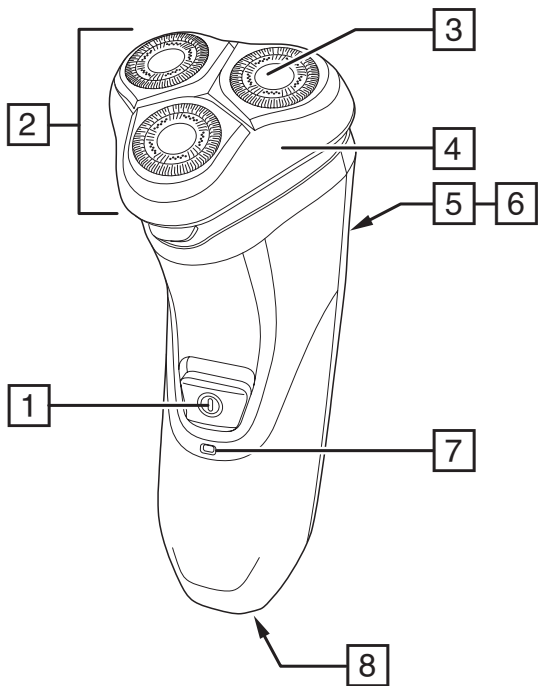

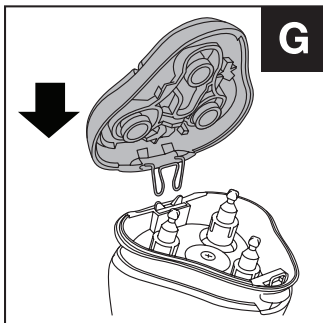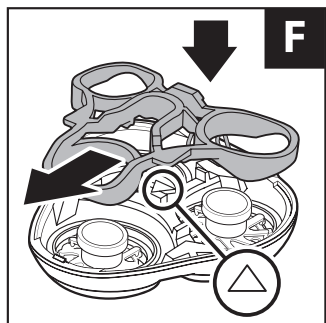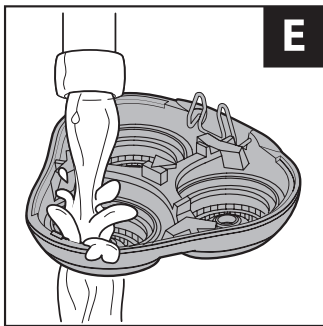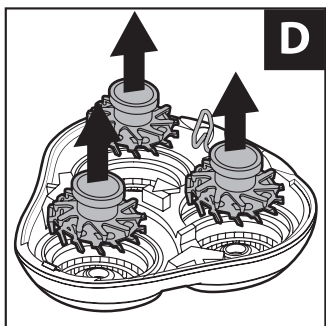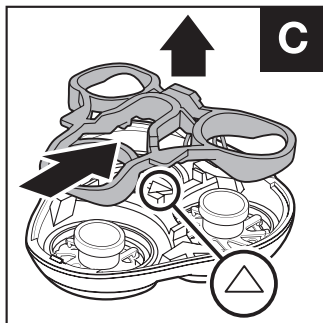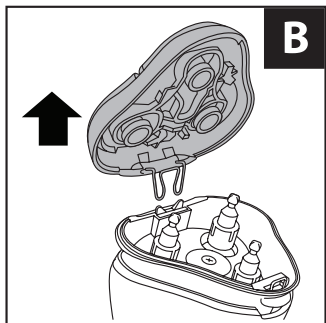

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

---

## **IMPORTANT SAFEGUARDS**

---

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury.
- The adaptor contains a transformer. Do not cut off the adaptor to replace it with another plug, as this causes a hazardous situation.
- **WARNING:** Keep the appliance dry.
- Do not use the product with a damaged cord. A replacement can be obtained via our International Service Centres.
- **WARNING:** For recharging the battery, only use the charger supplied with the appliance – type reference SW-047010UK.
- Always replace a damaged adaptor with one of the original type.
- Do not use the appliance if it is damaged or malfunctions.
- Do not use attachments other than those we supply.
- This appliance should never be left unattended when plugged into a power outlet, except when charging.
- Keep the power plug and cord away from heated surfaces.
- Do not plug or unplug the appliance with wet hands.
- Do not twist or kink the cable, or wrap it round the appliance.
- This appliance is not intended for commercial or salon use.

---

## PARTS

---

- |                                      |                             |
|--------------------------------------|-----------------------------|
| 1. On/off switch                     | 7. Charging indicator light |
| 2. Pivoting head and cutter assembly | 8. Power connector          |
| 3. Flexing heads                     | <i>Not shown</i>            |
| 4. Hairpocket                        | 9. Adaptor                  |
| 5. Detail trimmer                    | 10. Cleaning brush          |
| 6. Trimmer release button            | 11. Stubble head guard      |
- 

## GETTING STARTED

---

### CHARGING YOUR SHAVER

- It is recommended to fully charge your appliance before using it for the first time.
  - Ensure the product is switched off.
  - The adaptor automatically adjusts to a main voltage between 100V and 240V.
  - Connect the shaver to the adaptor and then to the mains.
  - The indicator light below the power switch will light up to indicate the product is charging.
  - Charge time for the battery from empty to full charge is 16 hours. Remove from charging after 16 hours and the charging indicator will turn off.
  - Run time from fully charged is up to 40 mins.
  - Note: To preserve the life of your batteries, let them run out completely every 6 months and then fully charge.
  - Do not recharge your shaver after each use as this will shorten the life of the battery.
- 

## INSTRUCTIONS FOR USE

---

### SHAVING

1. Slide the power switch to turn on.
2. Stretch the skin with your free hand so the hairs stand upright.
3. Only apply light pressure on the shaving head while shaving (pressing too hard can damage the heads and make them vulnerable to breakage).
4. Use short, circular strokes.

### TRIMMING

1. Push the trimmer button to release the detail trimmer.
2. Hold the trimmer at a right angle to your skin.
3. Place the trimmer at desired trim line for a quick, easy professional trim.
4. To retract the trimmer, push down until it locks into position.

### STUBBLE LOOK

- Fit the stubble head guard to your shaver for a 3-day stubble look.

---

## TIPS FOR BEST RESULTS

---

- Ensure your skin is dry. Always hold the shaver at right angles to the skin so that all three heads are touching the skin with equal pressure.
- Use moderate to slow stroking movements. The use of short circular motions in stubborn areas may obtain a closer shave, especially along the neck and chin line.
- DO NOT press hard against the skin in order to avoid damage to the rotary heads.

---

## CARE FOR YOUR SHAVER

---

- Care for your appliance to ensure a long lasting performance. We recommend you clean your appliance after each use.
  - Ensure the appliance is switched off and unplugged from the mains before cleaning.
1. Open the shaver head by pressing the release button (Fig. A).
  2. Empty out any hair clippings.
  3. Pull the shaver head upwards to remove it from the body (Fig. B).
  4. Locate the centre arrow and slide the retainer in the opposite direction to release it. Once released, lift it out of the shaver head (Fig. C). Make a note of the correct orientation of the retainer to make refitting easier.
  5. Carefully brush away any hairs from the cutters.
  6. For a more thorough cleaning, lift out the three cutters (Fig. D).
  7. Wash the shaving head under running water (Fig. E). Allow to dry thoroughly.
  8. Carefully refit the three cutters.
  9. Refit the retainer. Locate the centre arrow and slide the retainer in the same direction as the arrow until it clicks into place (Fig. F).
  10. Once the shaver head is assembled, align the spring hinge with the slot at the back of the hair pocket and press into place (Fig. G). Snap the head assembly closed.

### TRIMMER

Lubricate the teeth of the trimmer every six months with a drop of sewing machine oil.

---

## REMOVING THE RECHARGEABLE BATTERY

---

We strongly recommend that a professional removes the rechargeable battery. Parts of the shaver case, and tools have sharp edges and may cause injury if not handled correctly.

- The rechargeable battery must be removed from the appliance before it is scrapped.
  - Disconnect the charging adapter before removing the battery.
1. Run the shaver until the motor stops.
  2. Unplug the shaver.
  3. Unscrew the 2 screws on rear housing (one is located under the trimmer).
  4. Pry off the rear housing and expose the battery.
  5. Lift the battery carrier and circuit board out of the shaver body then cut the tabs holding the batteries to the circuit board.
- Used batteries must be removed from the appliance and disposed of at an appropriate official recycling/collection point.
  - Do not attempt to operate the shaver once you have opened it.

---

## ADAPTER SPECIFICATIONS

---

|                                              |                                                                                                                   |
|----------------------------------------------|-------------------------------------------------------------------------------------------------------------------|
| Manufacturer address and registration number | Spectrum Brands (UK) Limited, Regent Mill, Fir Street, Failsworth, Manchester M35 0HS<br>Company number: 02394603 |
| Adapter model number                         | SW-047010UK                                                                                                       |
| Input voltage                                | 100 - 240 V~                                                                                                      |
| Input AC Frequency                           | 50/60Hz                                                                                                           |
| Output voltage                               | 4.7 V ---                                                                                                         |
| Output current                               | 0.1 A                                                                                                             |
| Output power                                 | 0.47 W                                                                                                            |
| Average active efficiency                    | ≥40.4%                                                                                                            |
| Efficiency at 10%                            | -                                                                                                                 |
| No load power consumption                    | ≤0.1W                                                                                                             |

---

## RECYCLING

---



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/ collection point.

---

## SERVICE AND GUARANTEE

---



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under

any economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the Crimea region.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

Register at: <https://uk.remington-europe.com/product-registration>

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts\* are excluded and are only covered by a 1 year warranty.

\*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

---

## SERVICE CENTRE

---

### UNITED KINGDOM

☎ 0800 212 438 (free call mainland UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

[www.remington.co.uk](http://www.remington.co.uk)

Product support:

[productsupport@remington.co.uk](mailto:productsupport@remington.co.uk)

### IRELAND

☎ 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12

<https://ie.remington-europe.com>

Product support:

[productsupport@remington.co.uk](mailto:productsupport@remington.co.uk)





# **Ref. No. R4002**

## **Type No. R07A**

23/UK/ R4002 T22-7003092-B Version 12 /23

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

[remington-europe.com](http://remington-europe.com)

© 2023 Spectrum Brands, Inc.