 
 
 
 
 




Original	Recharge
	 Power
	 Shift + Sleep / Timer
	 Sleep / Timer
	 Shift + 3
	 D.Menu / Top
	 Setup / OPT /
	 Smart / List
	 Display / Media
	 Shift + 9
	 I<< / Preset-
	 Play / Slow
	 Pause / Step / Freeze
	 >>I / Preset+
	 << / Tune-
	 Stop / Hold
	 >> / Tune+
	 Shift + >>I / Preset+

Original	Recharge
	 AV / Input / RDS
	 Vol+
	 Shift + I<< / Preset-
	 Mute / Dimmer
	 Vol-
	 Shift + Mute / Dimmer
	 Info / Angle
	 Up
	 Left
	 OK
	 Right
	 Back / Return
	 Down
	 Menu / Home
	 Blue / Prime Video / Random
	 Green / APP / Repeat
	 TV/Radio /





Original	Recharge
MODE	FORMAT
Mode	Picture / Format
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
+10	Guide / EPG / -/--
0	0
CLEAR	Exit / Cancel / Clear

Original	Recharge

