



## PARTS LIST

**A:** Programmer Panel

**B:** 1 to 4 Adapter




A



B





## DIMENSIONS

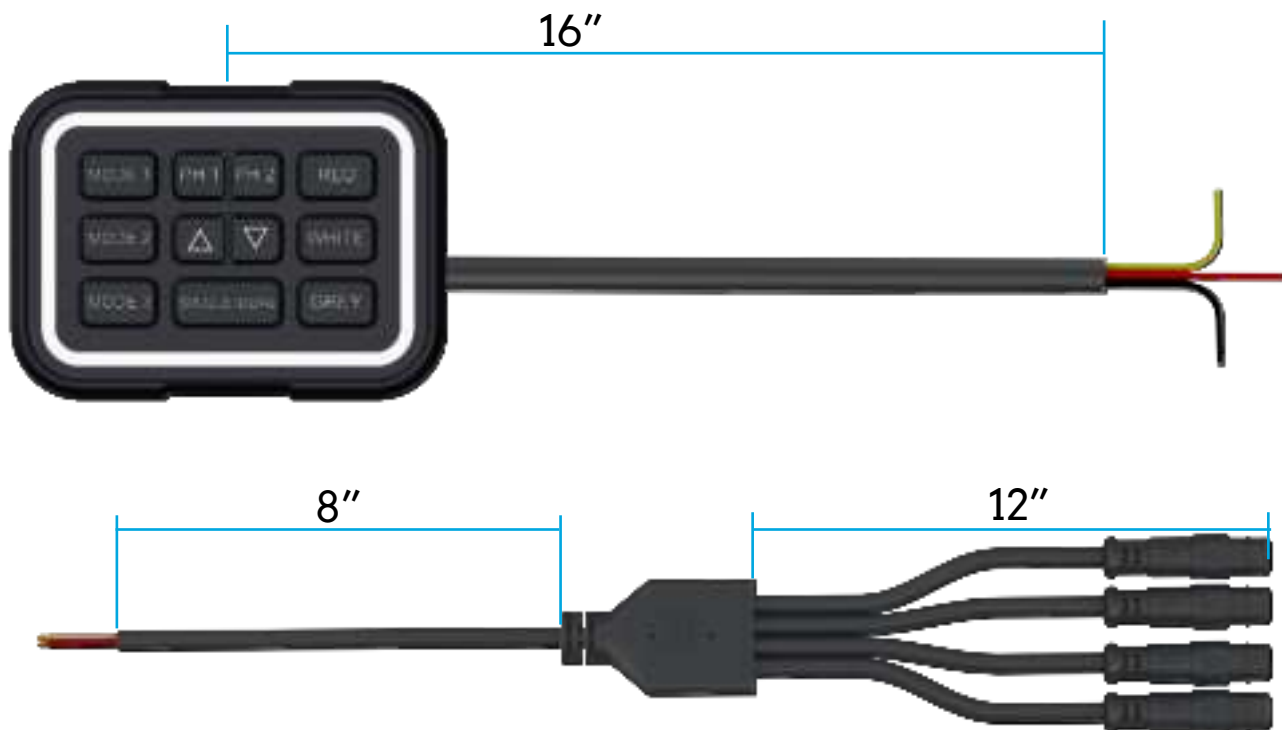








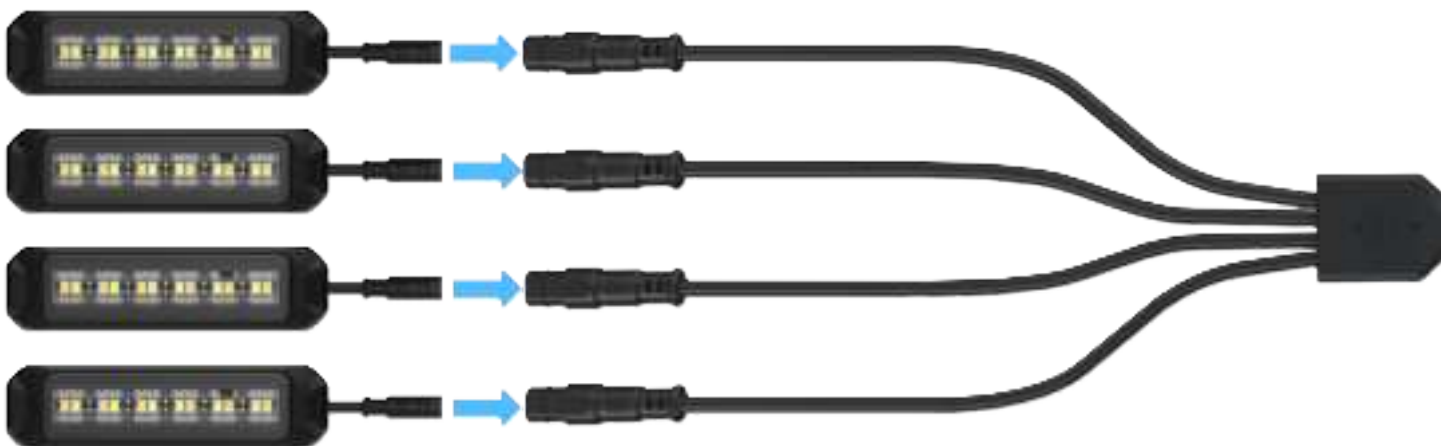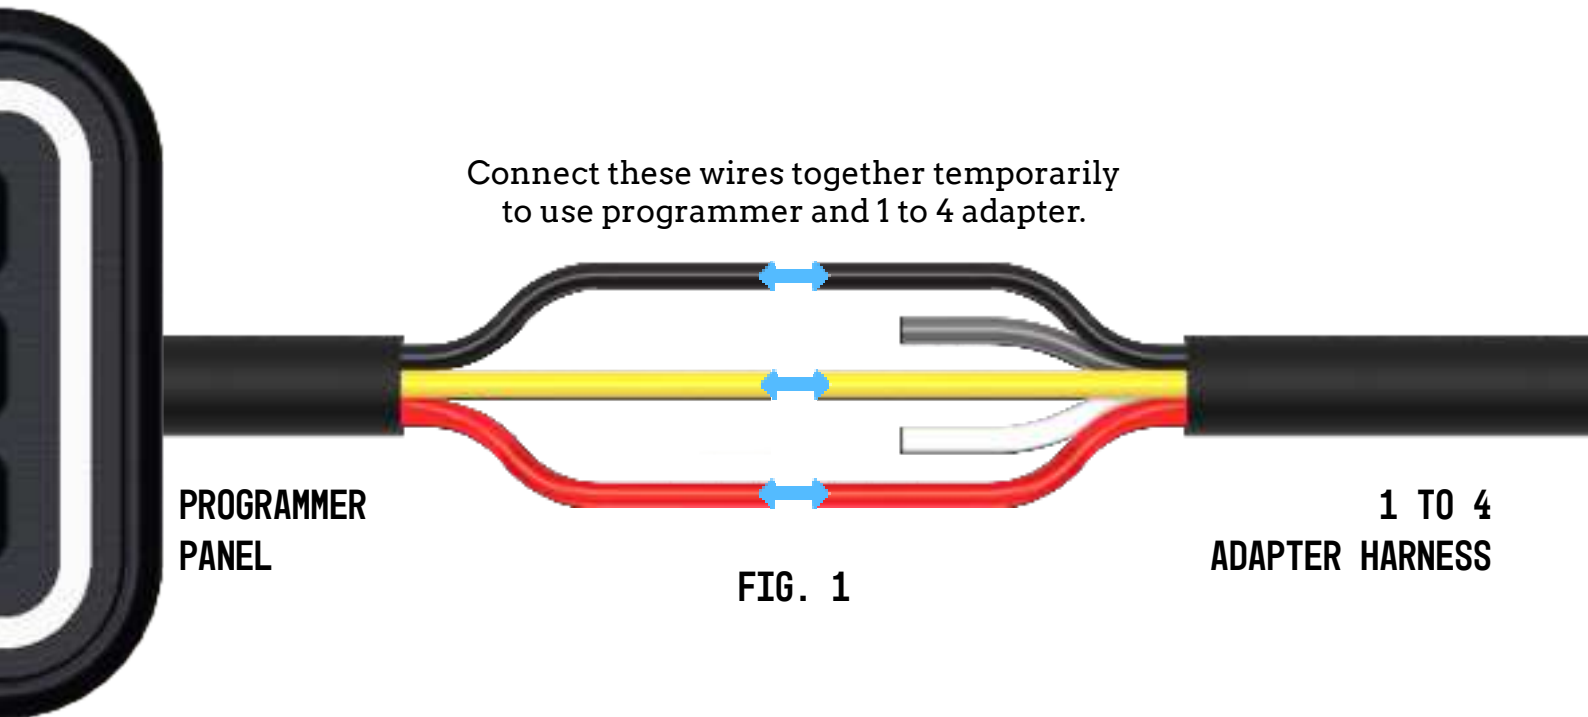



## STEP 1 - CONNECT THE PERIMETER STROBE LIGHTS

1. Connect the **BLACK**, **YELLOW**, and **RED** wires together. Do not connect the **GREY** and **WHITE** wire. (Fig. 1)
2. Plug the perimeter strobe lights into the 1 to 4 adapter. (Fig. 2)

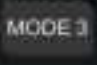



# PROGRAMMER PANEL

PROGRAMMER PANEL	
FUNCTION	
	<b>Mode 1 Button:</b> · Press to select the mode 1 strobe pattern. · Long press 2s to set the current strobe pattern as mode 1.
	<b>Mode 2 Button:</b> · Press to select the mode 2 strobe pattern. · Long press 2s to set the current strobe pattern as mode 2.
	<b>Mode 3 Button:</b> · Press to select the mode 3 strobe pattern. · Long press 2s to set the current strobe pattern as mode 3.
	<b>Phase Button:</b> · Press PH1 and PH2 to set the wig wag strobe mode.
	<b>Strobe Pattern Select Button:</b> ▲ Press to last strobe pattern.      ▼ Press to next strobe pattern.
	<b>Single/Dual Color Button:</b> · Press to select single or dual color mode
	<b>Grey Wire Button:</b> · Press to program the grey wire of strobe lights. · Press and hold for 2s to memorize the strobe pattern.
	<b>Red Wire Button:</b> · Press to program the red wire of strobe lights. · Press and hold for 2s to memorize the strobe pattern.
	<b>White Wire Button:</b> · Press to program the white wire of strobe lights. · Press and hold for 2s to memorize the strobe pattern.



## STEP 2 – PROGRAM THE PERIMETER STROBE LIGHTS

**Note:** Make sure the **YELLOW** wires of the programmer and 1 to 4 adapter are connected before the programmer is powered on.

1. Power on the programmer by applying power to the **RED** and **BLACK** wire to turn it on.
2. Press the single/dual color button to select the color mode you want. The programmer halo will show the color mode you select.
3. Press the **GREY/RED/WHITE** wire button to program each wire.
4. Select the strobe pattern:
  1. Press the strobe pattern select button to change the strobe pattern.
  2. Press the **MODE 1/MODE 2/MODE 3** button to select your preset favorites strobe pattern.
5. Long press the mode button for 2s to memorize the strobe pattern.



### NOTE:

More information and videos are available online at BUILT BRIGHT website:  
[www.built-bright.com](http://www.built-bright.com)