

TOWER®

over 100 YEARS of quality




SMARTSTART™

CLASSIC ALUMINIUM COOKWARE CARE & USE MANUAL



GREAT BRITISH DESIGN, INNOVATION
AND EXCELLENCE SINCE 1912

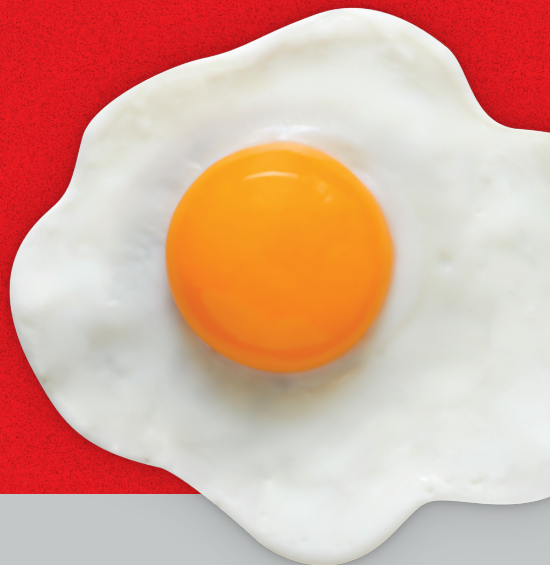

INSTRUCTIONS

Suitable for all hobs including induction.

Match the diameter of the cooker to the diameter of the pan.

When using on gas cooker, ensure the flame **DOES NOT** extend up the sides of the pan. Avoid using metals tools as these can damage the surface of the pan. Non-stick surfaces really don't like being overheated. Extreme heat over a long period will damage the non-stick properties and reduce the pan's lifespan, so lower the heat to a sensible temperature and enjoy great cooking results.

SAFETY NOTE

Avoid sudden temperature changes. **DO NOT** immerse a hot pan in cold water. **NEVER** leave cookware unattended.

CLEANING INSTRUCTIONS

Wash before first use in warm soapy water then rinse and dry thoroughly. The cookware is dishwasher suitable although we recommend hand washing and drying with a soft tea towel to prolong the life of the pan, particularly as dishwasher detergents can be extremely corrosive on cookware. To remove stubborn grease, soak the pan in warm soapy water before cleaning. **DO NOT** use harsh detergents, steel wool or coarse scouring pads to clean pans. Dry immediately and thoroughly.

STORAGE

Store in a cool dry place, if stacking, place a layer of protector sheet between the pans to avoid scratches or damages.

We hope you enjoy your product for many years. As a thank you for purchasing one of our fantastic products, we are offering you an extra 1 years peace of mind. To receive your extra 1 years guarantee, register your product online by visiting: www.towerhousewares.co.uk Should you have a problem with your product, or need any spare parts, please contact our Service Department on: +44 (0) 333 220 6066.

Your warranty becomes void should you decide to use non Tower spare parts. Spare parts can be purchased from www.towerhousewares.co.uk

