 


anko

Spin and Pedal Mop Set



Spin and Pedal Mop Set

included	
Bucket*1	
Mop Plate*1	
Lower Pole*1	
Middle Pole*1	
Upper Pole*1	
Microfiber Mop Pad*2	

Spin and Pedal Mop Set

Mop Assembly

- 1.Screw poles 1, 2 and 3 together tightly (see Fig. A).
- 2.Now that the mop handle pole is assembled, tightly screw the pole into the mop plate(see Fig.B).
- 3.Gently press the white back side of the microfiber mop pad onto the mop plate(see Fig.C).The smoother mop pad is more suitable for use on tile, the rough mop pad is more suitable for use on the wood floors.

 


Fig.A

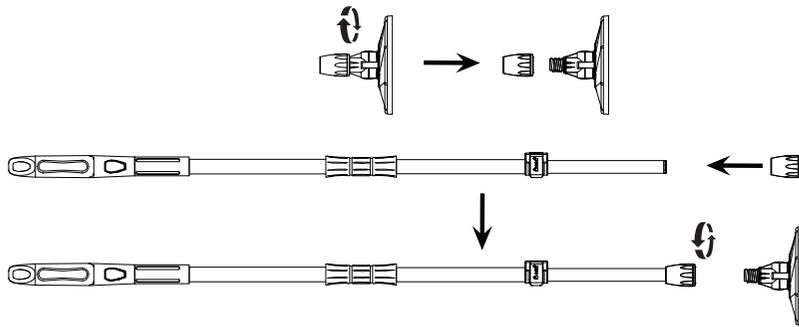


Fig.B

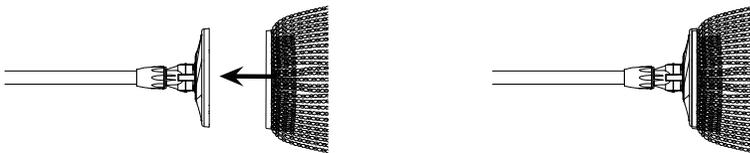


Fig.C

How to use

1. When washing the mop, place your hand on the handle to ensure that the lock is open (as shown in Figure 1).

2. Place the mop vertically downward (90° downward) for easy cleaning (as shown in Figure 2).

3.

Foot method: To thoroughly remove the water, place the mop in the bucket and use your foot to step on the mop repeatedly for water removal (as shown in Figure 3).

Hand method: For thorough water removal, place the mop head into the spin basket, grip the upper and middle rods with both hands, then repeatedly pump the handle up and down to extract water (as shown in Figure 4)

4. Special drain plug under the bucket (as shown in Figure 5).



Fig.1

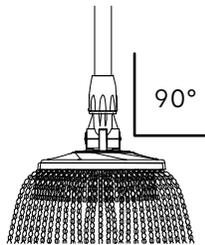


Fig.2

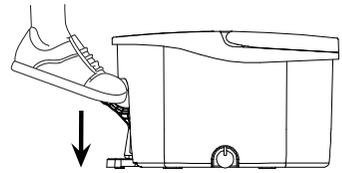


Fig.3

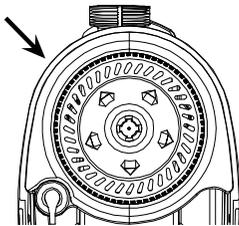


Fig.4



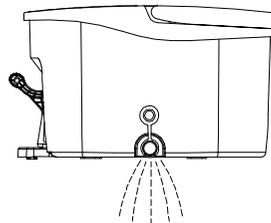



Fig.5

Cleaning And Disinfecting Products


Feel free to add cleaning or disinfecting products to the mop water for an even deeper clean. We recommend using streak and residue-free cleaners so that there is no need for rinsing.

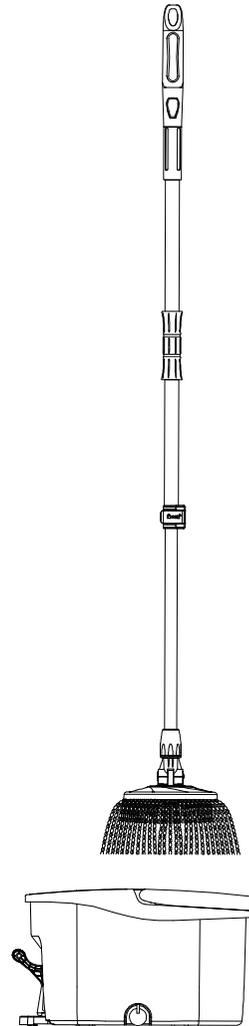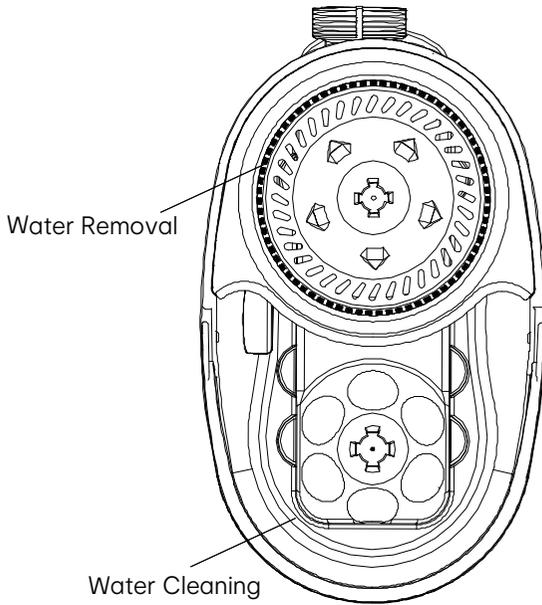


Details of use

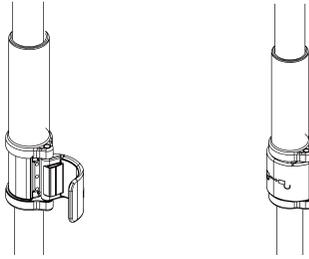

The length of the handle is adjustable to suit your needs (Note: Switch to "OFF" position when you want to adjust the length and switch to "ON" position when you complete adjusting).

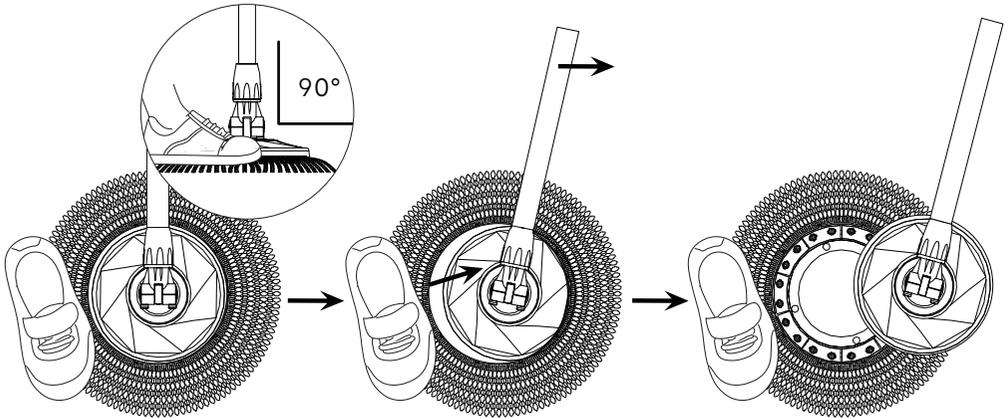

Just step on the microfiber cloth and push the handle out from the top head when you want to detach the mop head.

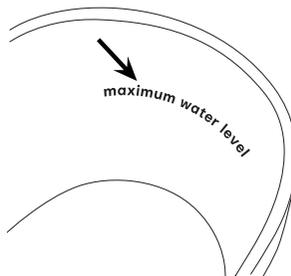

Fill the water into the bucket. Do not exceed the maximum water line indicated in the bucket.

Water Removal

Drain Plug

Water Bucket

Hang Hook

Stainless Steel

Lock Button

180° Rotation

360° Rotation Disc

Water Removal Step

KEYCODE

KMART: 43-533-213 TARGET: 70-902-556

MADE IN CHINA

CUSTOMER SERVICE:

KMART AU: 1800 124 125

KMART NZ: 0800 945 995

TARGET AU: 1300 753 567