


Correct use of the tool

Place the tool flat on the tyre, & push the manual tread reader down until it stops.

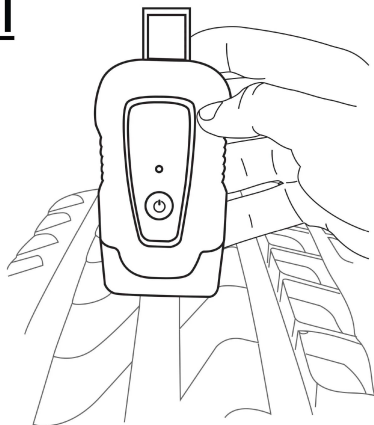

 Place the TDR100 on a flat surface and fully depress the pin. Press and hold the Power button until the LED flashes.

Simplified EU Declaration of Conformity

Bartec Auto ID Ltd hereby declares that this device is in compliance with the essential requirements and other provisions of Directive 2014/53/EU (RED).

The full text of the EU Declaration of Conformity is available at:
<https://www.bartecautoid.com/tpms-downloads.html>

Manufacturer's name: Bartec Auto ID Ltd

Manufacturer's address:

Unit 9 Redbrook Business Park
Wilthorpe Road
Barnsley
S75 1JN
Tel: +44 (0) 1226 770581

Authorised Representative: Bartec Auto ID GmbH

Authorised Representative address: Bartec Auto ID GmbH

August-Thyssen-Str. 23-25
56070 Koblenz
Deutschland
Tel: +49 (0) 261 988 886 82


For more
Information



Full Manual



TDR QuickStart Guide

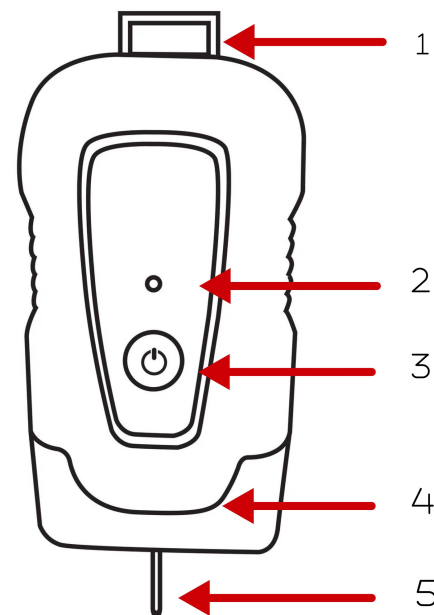


1. Manual Tread Reader
2. Power on/off light
3. Power on/off
4. End cap
5. Tread pin

Getting started

Insert the AAA batteries.
Power the Tread-Rite on.
Pair with a TPMS tool.
Calibrate the Tread-Rite when prompted.
Register with the Tread-Rite APP


Fitting the batteries

Remove the end cap, insert 2 x AAA batteries & refit the end cap.

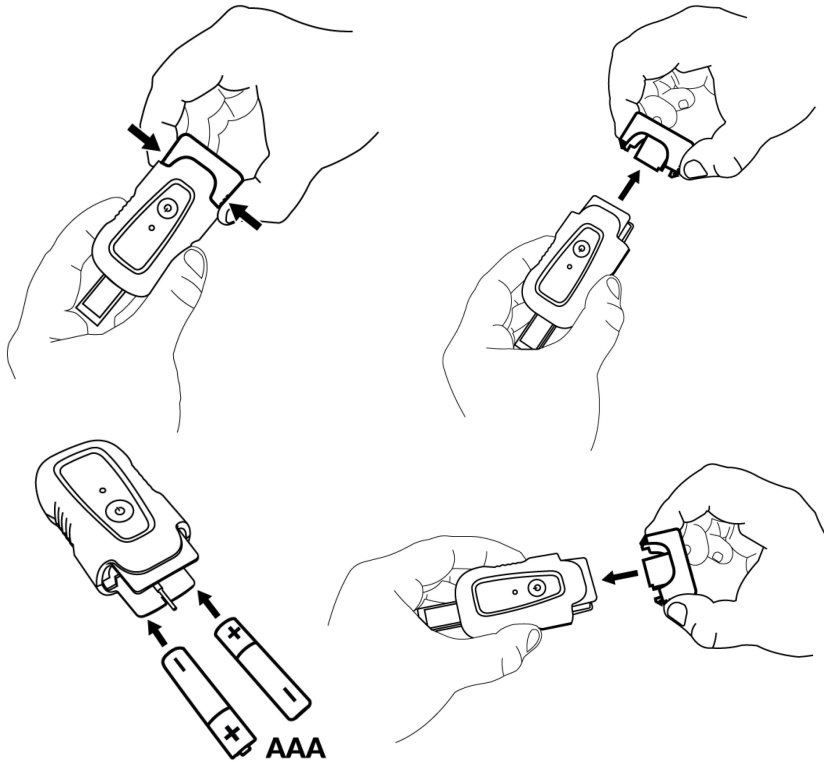

Power on

Press the power on/off button - the green power light will show when the Tool is on & ready to use.

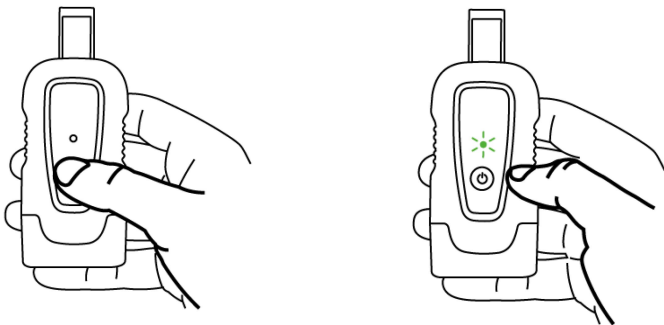

Pairing with the Tool


Ensure your TPMS tool has v6.0 or later software installed. From the Service Menu of your TPMS tool, select Check: Wheel & Tyre.

Power on the Tread tool. The Tread tool will automatically connect to the TPMS tool and is now ready to take measurements.

Calibration

The Tool needs to be calibrated the first time you use it or when the below yellow message appears on your TPMS tool.

Put the tool onto a flat surface, so that the tread pin is pushed in. Press & hold the power on/off button on for 4 seconds or until the green light flashes.

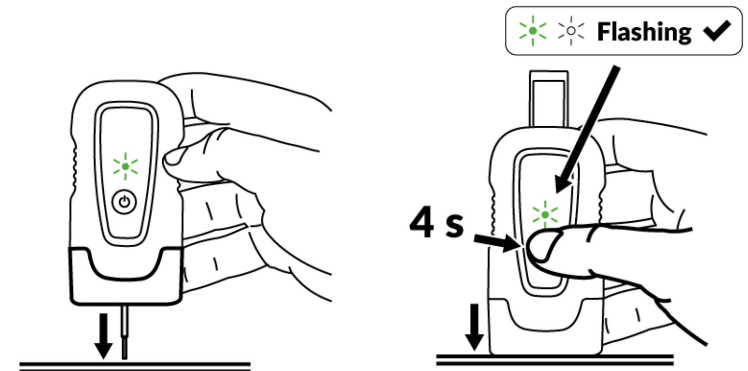

*Follow the instructions on the TPMS Tool/APP.



Calibration is required to proceed with taking measurements. Press Enter to continue.