


Dahua camera LED brightness setting

1. Use the "Config Tool"  to search for the camera IP, open the **IE** and log in to the camera web page.



2. Click "Setting-Camera-Conditions-Illuminator" to select the mode, on, off or manual.

