



Count on it.

Form No. 3447-596 Rev A

Parts Catalog

CM-958H-SED

Concrete Mixer

Model No. 68007—Serial No. 322000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Main Frame Assembly 4

Axle Assembly 6

Hub Assembly No. 139-1328 8



Engine and Belt Assembly 10

Drum Assembly 12

Cowl Assembly 14

Attachments and Accessories 16


Main Frame Assembly

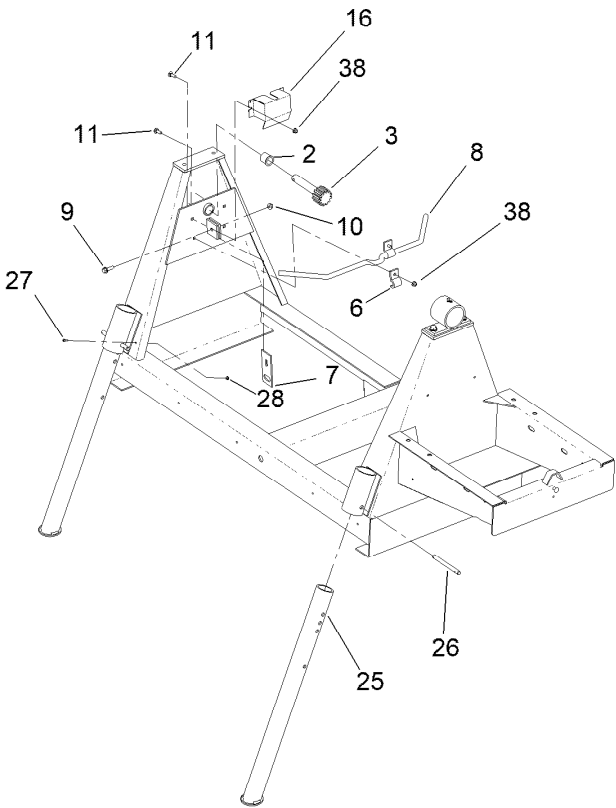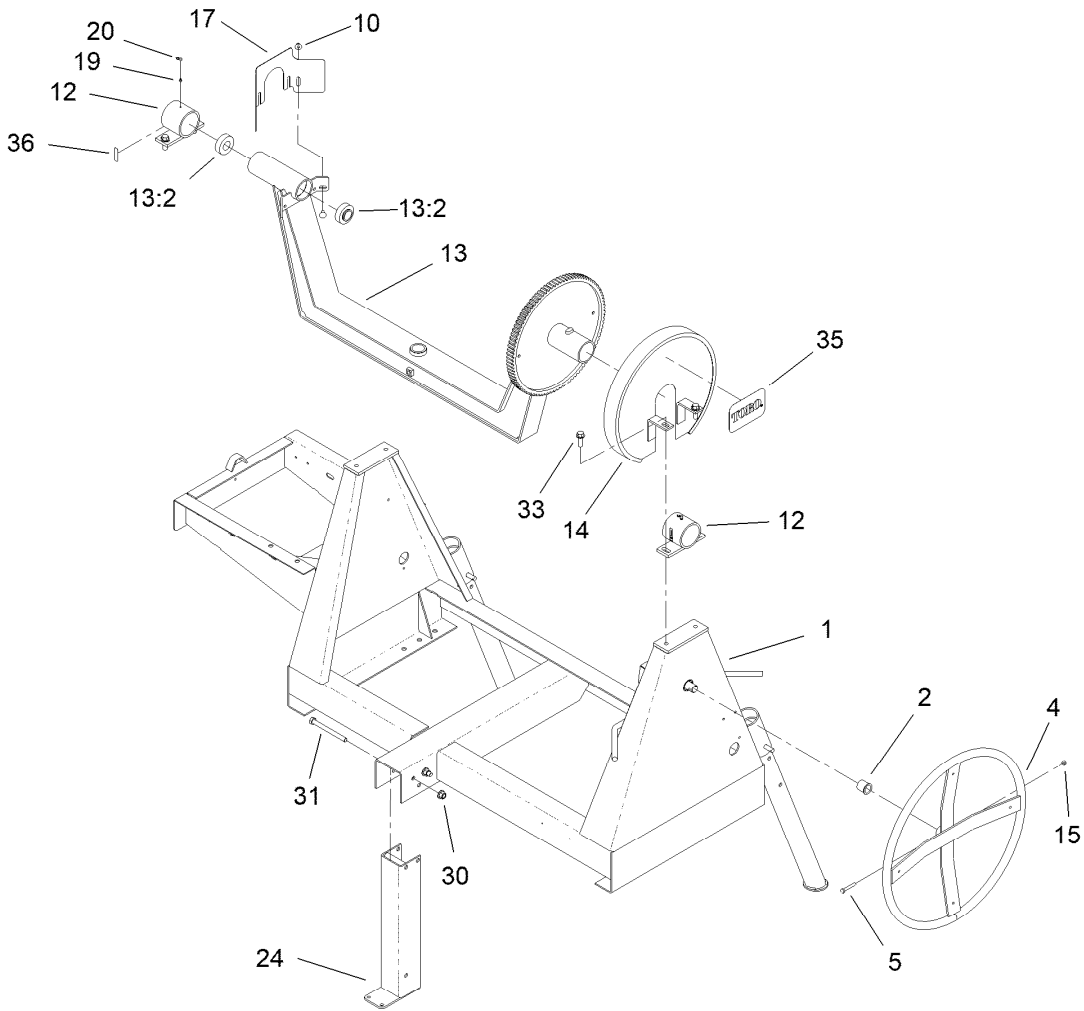

Main Frame Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-8685-03	1	Frame	16	ST27618-03	1	Guard-Brake, Lower
2	ST32032	2	Bushing-Nylon	17	130-2208-03	1	Guard-Pinion
3	140-5722	1	Shaft-Tilt	19	ST46042	2	Fitting-Grease
4	ST22096-03	1	Handwheel	20	ST47001	2	Cap-Plug
5	322-10	1	Screw-HH	24	ST21875-03	1	Post-Foot
6	ST27559-03	2	Bracket-Handle	25	ST21874-03	2	Leg-Stabilizer
7	ST27619-03	1	Dog-Brake	26	ST80039	2	Pin-Clevis, Lanyard
8	127-5593	1	Handle-Brake	27	3290-500	2	Screw-PPH
9	3234-24	1	Screw-HHF	28	3296-2	2	Nut-Lock, NI
10	104-8301	3	Nut-HF, NI	30	99-5107	2	Nut-Lock
11	3230-2	4	Bolt-CARR	31	325-22	2	Screw-HH
12	ST24349-03	2	Trunnion	33	ST80031	4	Screw-HWH
13	125-6308	1	Yoke ASM	35	99-4693	1	Decal
13:2	ST32039	2	Bearing	36	125-8175	2	Decal-Grease
14	ST27617-03	1	Guard-Brake, Upper	38	104-8300	4	Nut-HF, NI
15	3296-29	1	Nut-Lock, NI				


Axle Assembly

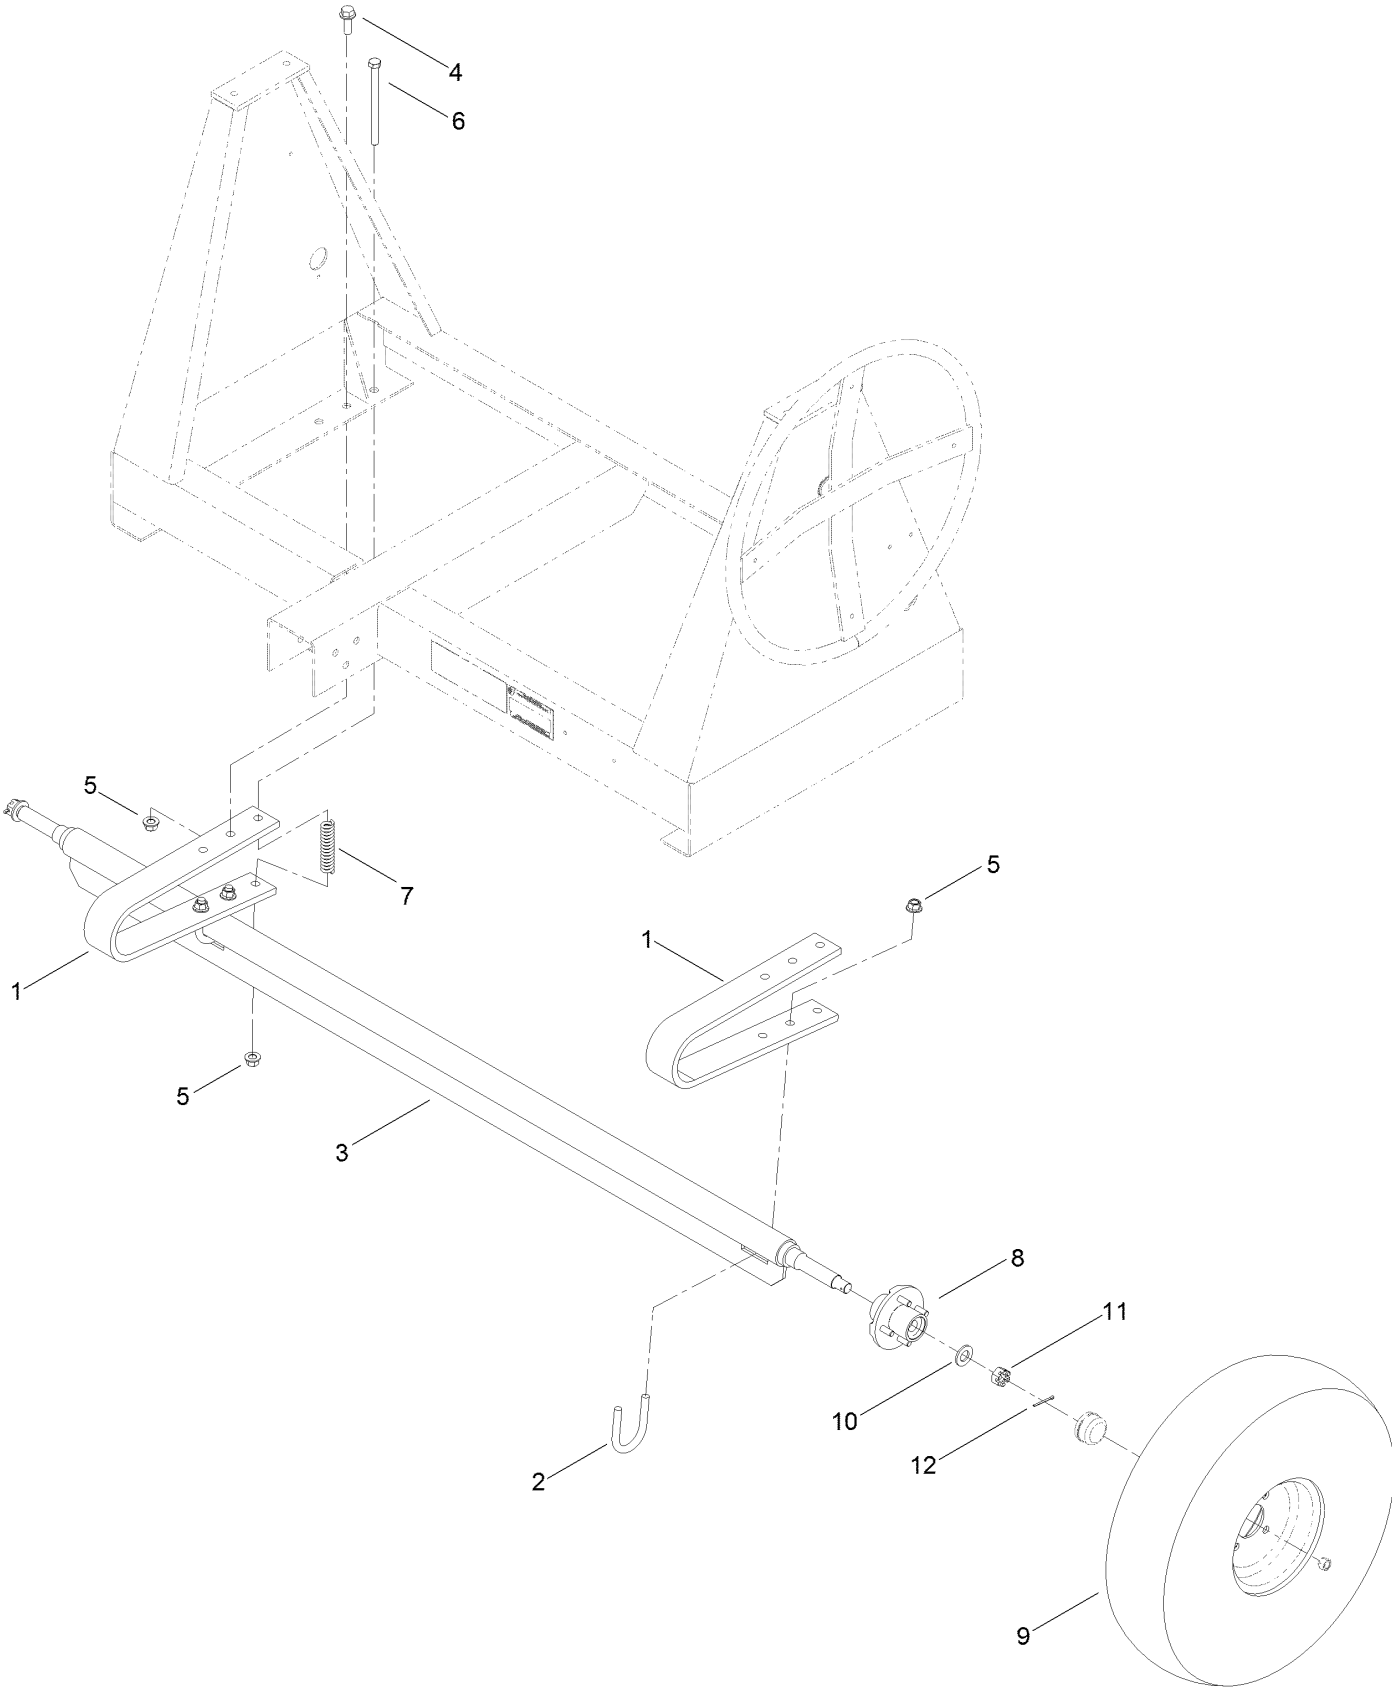

Axle Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	ST26971	2	Spring-Leaf	7	ST34972	2	Spring-Coil
2	ST26195	2	Bolt-U	8	139-1328	2	Hub ASM
3	ST21873-03	1	Axle-Spring	9	ST32307	2	Tire And Rim ASM
4	100-6116	4	Screw-HHF	10	3256-28	2	Washer-Flat
5	99-5107	10	Nut-Lock	11	ST80054	2	Nut
6	325-33	2	Screw-HH	12	3272-13	2	Pin-Cotter

Hub Assembly No. 139-1328

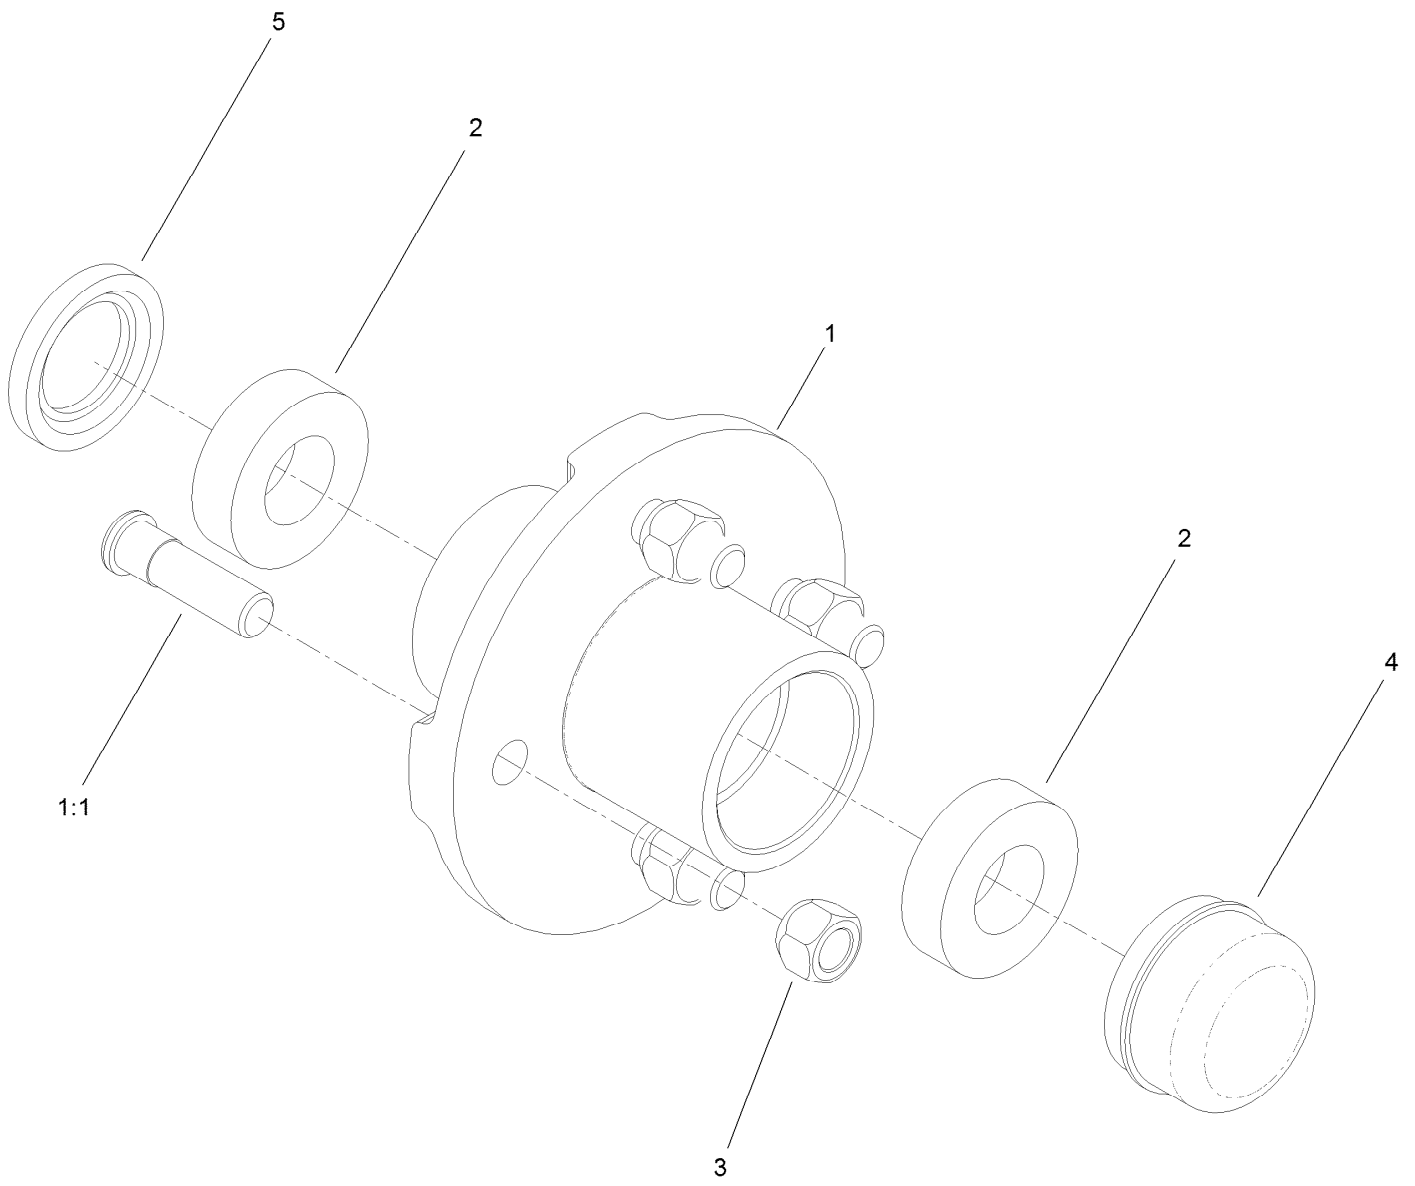


Hub Assembly No. 139-1328 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	139-1327	1	Hub-4In
1:1	ST39190	4	Stud-Wheel
2	ST32233	2	Bearing-Roller

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
3	ST80045	4	Nut-Lug
4	ST34573	1	Cap-Dust
5	ST32052	1	Seal-Hub, Wheel

Engine and Belt Assembly

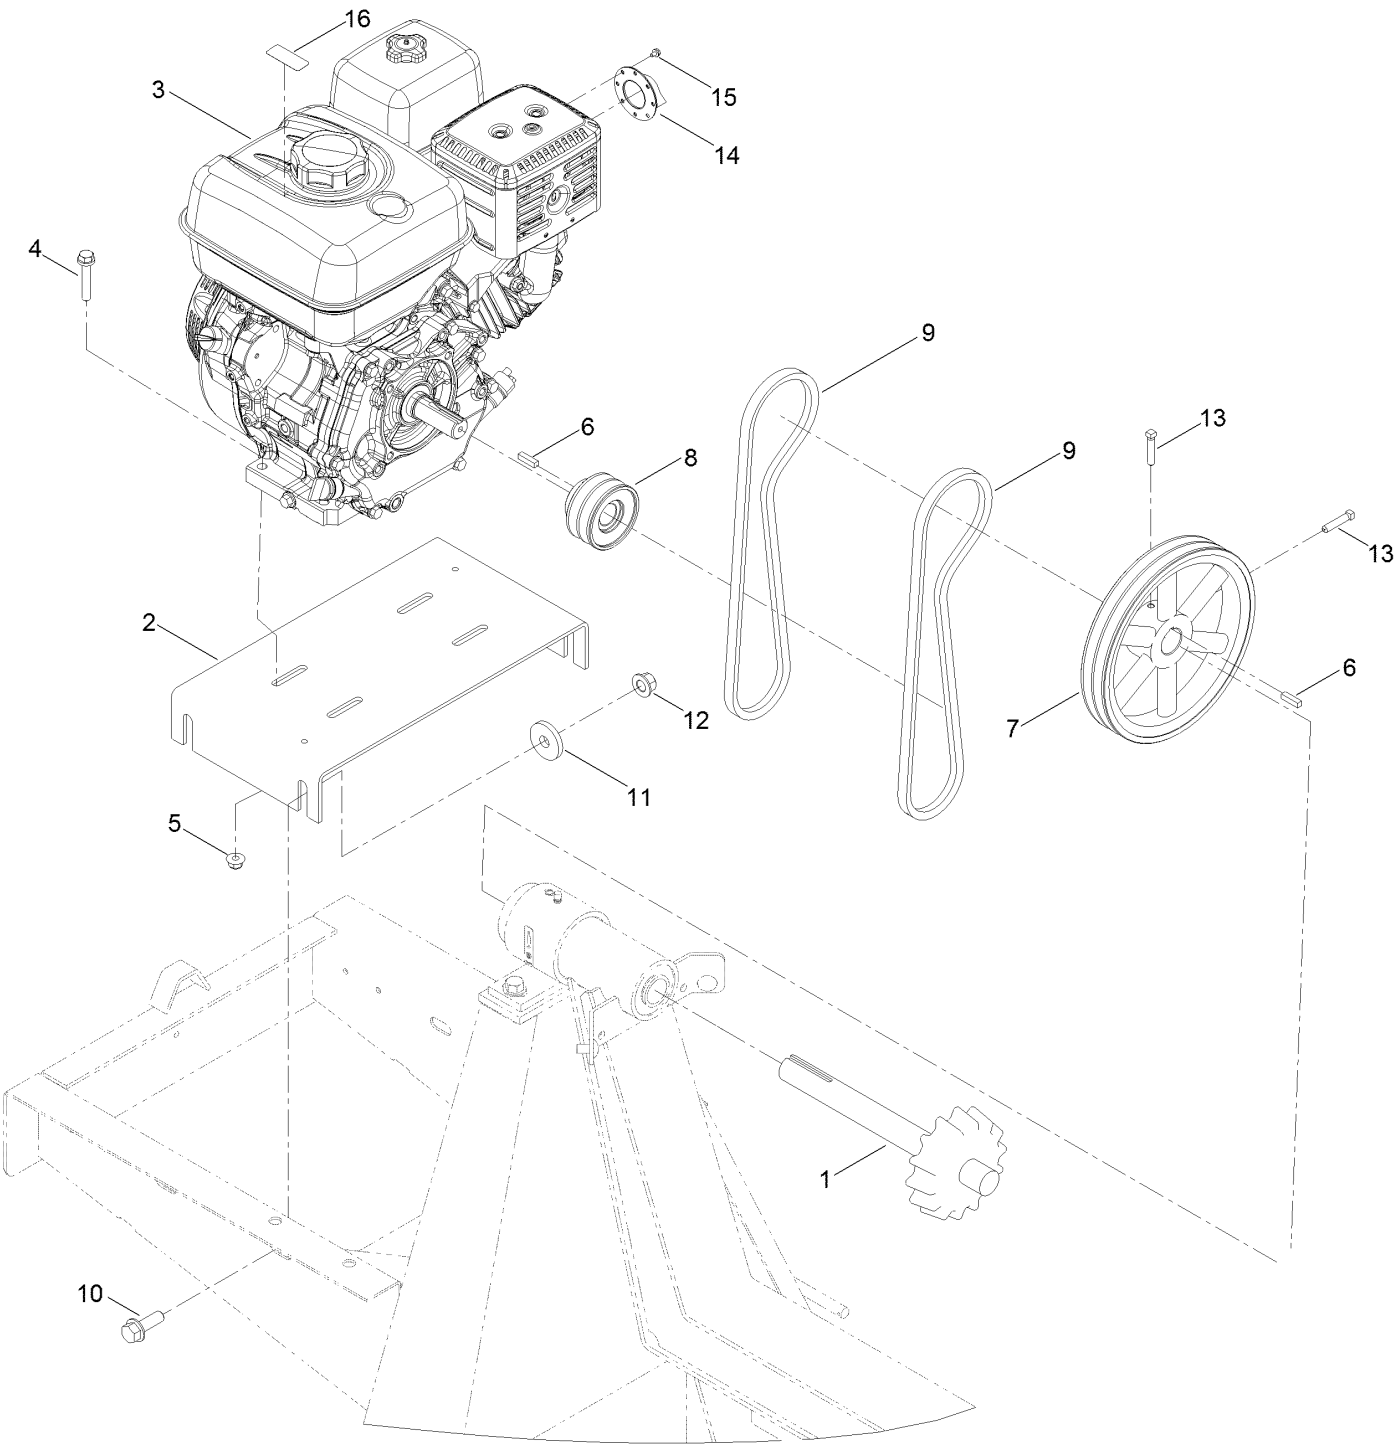


Engine and Belt Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	ST21487	1	Shaft-Drive	9	127-0075	2	Belt-V
2	127-7579-03	1	Base-Engine, 95Cm	10	100-6116	4	Screw-HHF
3	125-4812	1	Engine-Honda, Gx240 ●	11	ST26326	4	Washer-Flat
4	108-3742	4	Screw-HHF	12	99-5107	4	Nut-Lock
5	104-8301	4	Nut-HF, NI	13	909546	2	Screw-Set
6	5-7280	2	Key	14	120-1886	1	Deflector-Exhaust, Honda
7	ST34986-03	1	Sheave	15	127-7578	3	Screw-HWH
8	ST34984	1	Sheave	16	130-8322	1	Decal-Warning, Ethanol

● Obtain parts from www.honda-engines.com


Drum Assembly

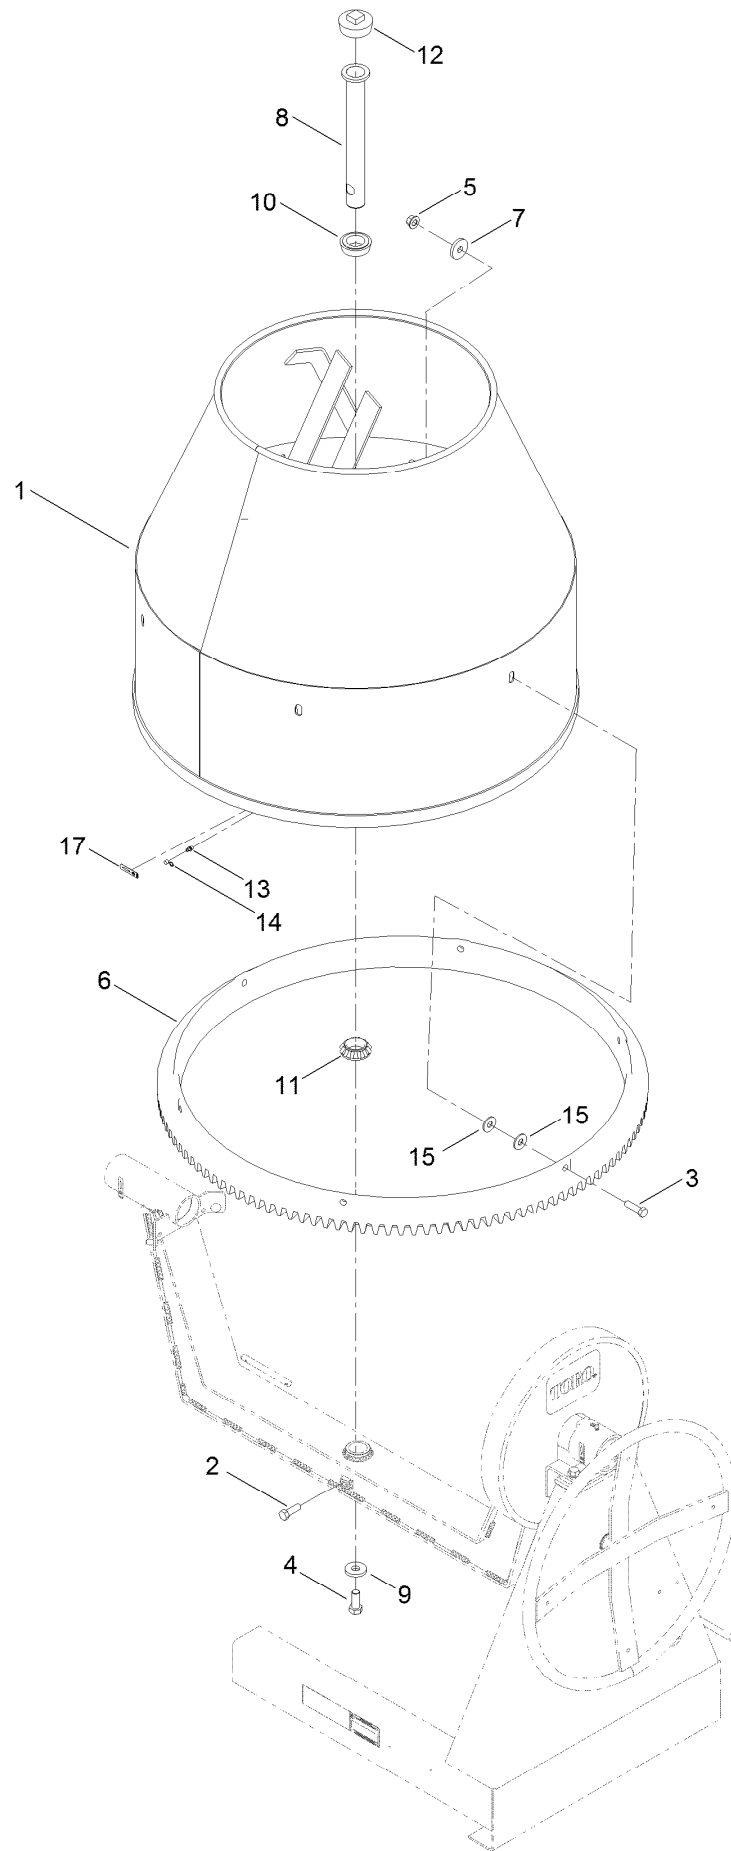

Drum Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-6306-01	1	Drum	9	ST27413	1	Washer-Flat
2	325-6	1	Screw-HH	10	ST32086	1	Bearing
3	325-7	6	Screw-HH	11	ST32161	1	Bearing-Roller
4	327-4	1	Screw-HH	12	ST46022	1	Plug
5	99-5107	6	Nut-Lock	13	ST46057	1	Fitting
6	ST26317-01	1	Gear-Ring	14	ST47001	1	Cap-Plug
7	ST26326	6	Washer-Flat	15	3256-6	12	Washer-Flat
8	ST27267	1	Spindle	17	125-8175	1	Decal-Grease

Cowl Assembly

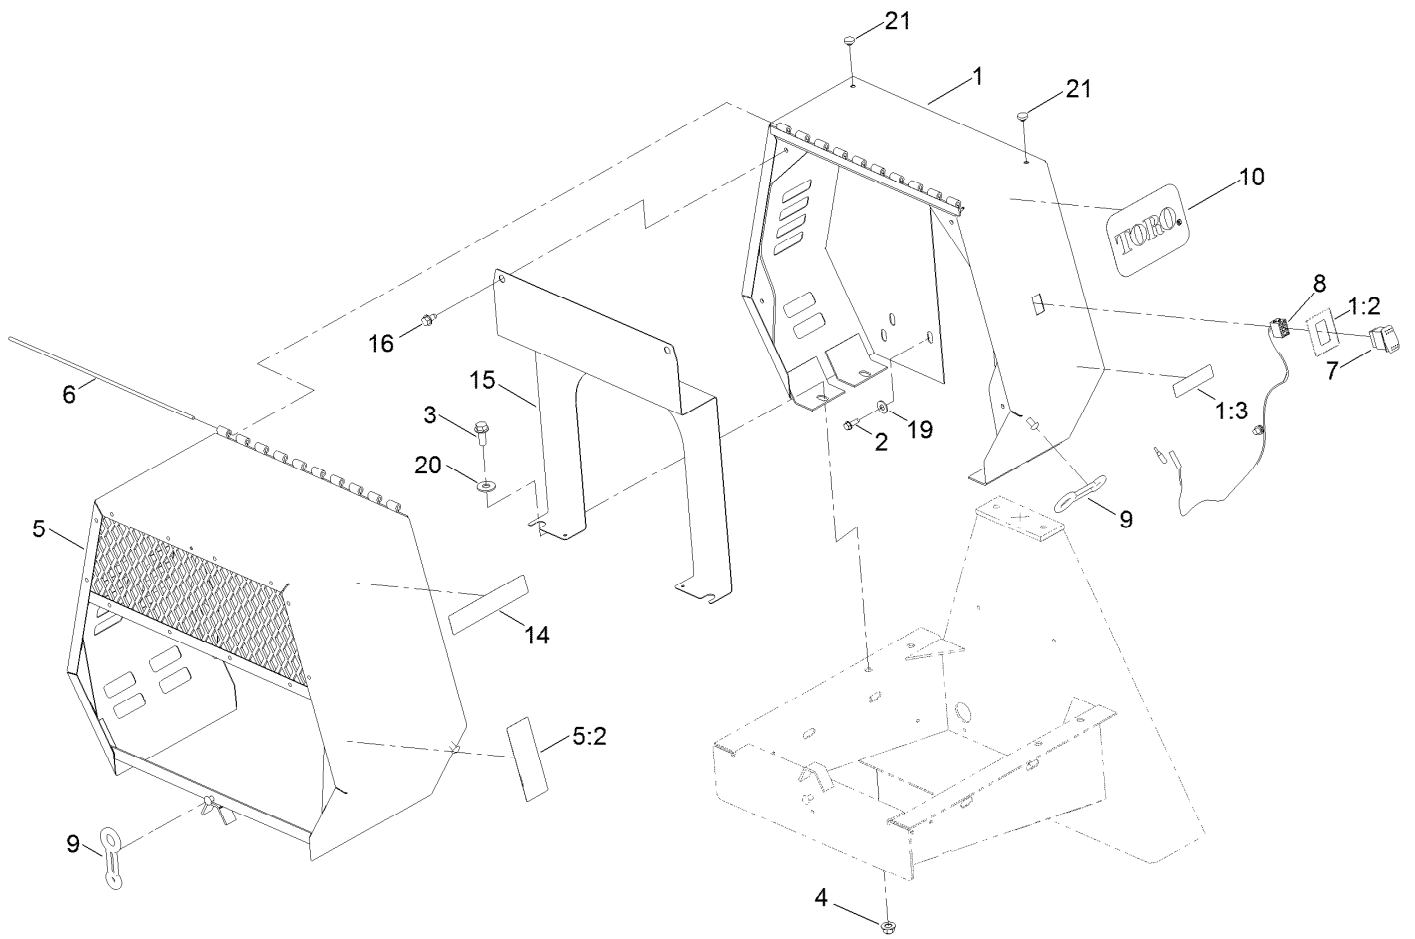

Cowl Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-2811	1	Stationary Cowl ASM	8	125-4877	1	Harness-Wire, Mixer
1:2	125-4940	1	Decal-Stop, Engine	9	ST47182	3	Latch-Rubber
1:3	133-8062	1	Decal-Arrestor, Spark	10	67-7320	2	Decal
2	701243	2	Screw-Thd Roll, HWH	14	125-4937	2	Decal
3	3234-38	4	Screw-HHF	15	125-8218-03	1	Plate-Engine
4	99-5107	4	Nut-Lock	16	110-9380	2	Screw-HWH
5	127-1685	1	Movable Cowl ASM	19	3256-4	2	Washer-Flat
5:2	125-4939	1	Decal-Warning	20	3256-6	2	Washer-Flat
6	ST44368	1	Pin	21	1-513658	2	Bumper
7	95-8999	1	Switch				

Attachments and Accessories

For 68007 CM-958H-SED Concrete Mixer

Product Name	Model/Part
Trailer Light Kit.....	68063
Pintle Tow Pole Hitch, End-Dump Concrete Mixer	68130
Stamped Tow Pole Hitch, End-Dump Concrete Mixer	68131
1in Pin Tow Pole Hitch, End-Dump Concrete Mixer	68132

Notes:

Notes:

Notes:



Count on it.