背面

前面

TECHNICAL SPECIFICATIONS

Wireless Transmission Range> 10 meter Speaker Unit:5.25"*1(Bass)+2.25" *2(Tweeter) BT Version: 5.0

Playback Time: 6-8 Hour| Charge Time: 6-8 Hour Input Voltage: 5V—— 2A Charging Port Type: Type C 5V

FEATURES

True Wireless Stereo -TWS Pairing
Dual Bass Radiator
Bass Boost Function
Dazzling RGB Light with 6 Magic Effects Audio In: USB/SD Card/BT/AUX Playback/Mic

Support Karaoke Function Connect Wired and Wireless Mic

IPX6 Waterproof -Water Splash Proof

Playback time may vary as per music volume level and music intensity

BATTERY INDICATION

 


 






THUNDER BASS 100X BUTTON DEMONSTRATION





GENERAL INSTRUCTION AND WARNING

- 1. Read all the instructions before using the product.
- 1. Need all the dissuscent seems experience for product.
 2. Do not useforce this speaker in extreme temperature.
 3. Please store it in cool and dry area, Keep away from anything that generates heat, such as stower, radiator, flammable items etc.
 4. In order to have hearing protection and an extended speaker life, Avoid listening on
- 5. When cleaning the device, Use a soft dry cloth. For more sever stains, Please dampen the cloth with water only. Anything else has the chance of damaging the material.

 6. Only use attachments/accessories specified by the manufacturer.

ACCESSORIES

- Type-C charging cable
 3.5mm AUX cable
 Belt
 Wireless microphone

FCC Warning

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These I imits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used i n accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the

- --Reorient or relocate the receiving antenna.
 --Increase the separation between the device and receiver
- -Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party r esponsible for compliance could void the user's authority to operate the equipment

AUDIO FUNCTIONS INSTRUCTION



Press the button to boost the sound of playing audio. Press one time for Turbo Level 1
Press two time for Turbo Level 2. Button's LED brightness will also vary.
Long Press the button to turn on TWS mode. (Refer TWS MODE Section)



there is any abnormal Jam or device doesn't work properly then short press the reset bu reset the machine. RESET BUTTON on the rear side of device near Charging port.

1. BT MODE









- 1.1 Before using Bluetooth function. First turn on the power of PARTYBOX by Long pressing INPUT button, It will turn on within 3 Seconds. The default mode is
- 1.2 Flashing of Blue Light indicates that the partybox is ready to pair.
 1.3 Turn on the Bluetooth device and Search for "Electro Thunder Bass"
- Connect and paired. Connect and paired.

 1.4 The voice prompt will say BLUTEOOTH CONNECTED when it is paired successfulland It will say BLUTEOOTH DISCONNECTED when unpaired successfully.
- 1.5 After connected successfully, Start experiencing the Wireless marvelous sound
- 2. AUX MODE
- 2.1 Press the INPUT button to turn on AUX function, The Voice Prompt will say AUX MODE.
- 2.2 Connect 3.5mm AUX cable to the AUX port on the rear side of PARTYBOX.

3. USB / SD CARD MODE

- 3. Unsert the USB Flash Drive/SD Card in the port on rear side to play the music.
 3.2 If any other function is playing then it will change to USB/SD Card mode after inserting drive. The Voice Prompt will say USB MODE/SD Card mode.
 3.3 Fast Forward/ Backward of music is workable in USB/SD Card mode only.



4.1 Power on the Second PARTYBOX for TWS pairing, Turn on the Bluetooth mode.
Blinking of Blue Light indicate that Second PARTYBOX is ready to pair.
4.2 Press the BASS BOOST buttons of both the PARTYBOX as at the same time. The VoicePrompt will say TWS Mode. TWS mode will not work if any Bluetooth device is already connected.

an early connected.

Al. 3 After Successfully connected the voice prompt will say TWS PAIR CONNECTED.

Now, Start experiencing the True Wireless Stereo sound.

Al. To play via Bulenooth Audio device follow the Bluetooth Connectivity steps and connect to PARTYBOX.

4.5 General operations like Play/Pause/Volume/Next/Previous can be performed by either of the PARTYBOX.

. KARAOKE FUNCTION

5.1 To use the Karaoke function insert the MIC cable Port into the MIC Port at the rear side. (Not included)

5.2 To use Wireless Karaoke function, Turn on the Wireless MIC Switch. Once the Power is ON, It will connect automatically with the PARTYBOX.



5.3 MIC Volume Adjustment- Long Press the LED Button to Adjust the MIC VOLUME The voice prompt will say MIC Volume, Use Volume Knob UP/Down to increase and decrease the MIC volume.

54.4 MIC EXCHANGE Adjustment - Again Long Press the LED Button to Adjust the MIC ECHO. The voice prompt will say MIC ECHO. Use Volume Knob UP/Down to increase and decrease the MIC Echoes.

ELECTRO Thunder Bass



User manual

FCC ID: 2BB37-ELLCTB100X

100mm 100mm 100mm