

HOLMAN

QuikDial™

Dual Outlet Digital Tap Timer



www.holmanindustries.com.au

User Guide

Contents

Overview	3
Main Components	3
Additional Functions	4
Specifications	4
Setup	5
Battery Installation	5
Setup Process	5
Zone	6
Set Clock	8
Start Time	9
How Long (Watering Duration)	10
How Often (Watering Interval)	11
Operation	13
Automatic Watering	13
Manual Watering	14
Maintenance	15
Cold Weather	15
Batteries	15

PRODUCT CODE: C06002



QuikDial™

Our **QuikDial Tap Timers** have a simple and intuitive setup system that is quickly completed in 5 steps.

DIAL TO SELECT



ON OFF

WATER CONTROL

PRESS TO CONFIRM



SCAN FOR MORE INFO

Overview

Main Components

1. **ZONE 1** outlet
2. **ZONE 2** outlet
- i** Each outlet is 20mm BSP with 12mm snap-on connection included
3. 20/25mm BSP tap nut inlet
4. Tap connection locking nut
5. Display
6. **ON/OFF**
7. Main dial
8. Battery compartment:
i Requires 2× AA alkaline batteries only (not included)



Overview (continued)

Additional Functions

i Inactivity on your **QuikDial Tap Timer** controls for 6 seconds will return to the default system mode displaying the current time

⚠ **Removing the AA batteries will reset all clock and schedule settings**

i To reset your **QuikDial Tap Timer**, remove the batteries and twist the main dial until the display is completely blank

⚠ **For use with cold water only**

Specifications

Interval scheduling	1, 2, 3, 6 or 12 hours, or 1-7 days
Watering duration	1-99 minutes
Working pressure	30-1200 kPa
Maximum flow rate	25 L/min
Connections	20/25mm BSP inlet / 20mm BSP outlet
Working temperature	3°C to 50°C
Batteries	2× AA alkaline (not included)

Overview (continued)


Setup

Battery Installation

1. Install 2× 1.5v AA alkaline batteries into your **QuikDial Tap Timer**, as indicated in the battery compartment [a]




- i** After installing the batteries, the display will flash and your **QuikDial** will make clicking noises as part of the start-up phase
- i** Once the start-up process is complete, the clock will display as follows, with the time separator flashing [b] and the battery indicated as full [c]

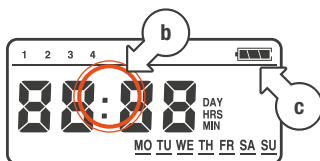

Setup Process

 - i** Your **QuikDial** features a quick setup process across 5 key steps. Use the main dial to scroll through the main menu for each step




Setup (continued)

Zone


- i** This process is to select which zones will be watered as part of your schedule

1. Turn the main dial to select **ZONE [a]** in the main menu

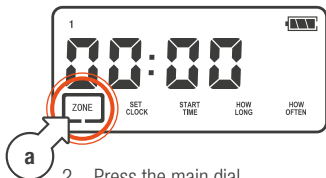

2. Press the main dial to edit zones

- i** The zone selector [b] will flash around **ZONE 1** and indicate as **ON** [c]

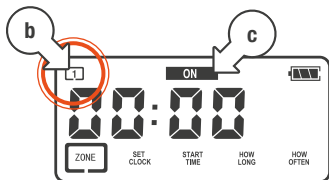


- i** By default, **ZONE 1** is **ON**, and **ZONE 2** is **OFF**

3. Press the main dial to toggle **ZONE 1 ON** or **OFF** as desired


- i** When a zone is turned **OFF**, the zone number [d] will disappear and the **OFF** indicator [e] will be displayed

- i** The zone selector [f] will remain flashing

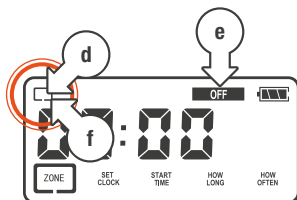

4. Turn the main dial to the next zone

- i** The zone selector [g] will flash around the next zone and indicate as **OFF** [h]

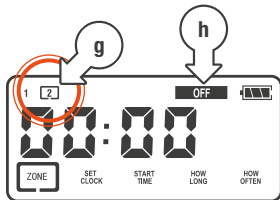


Setup (continued)

Zone (continued)


5. Press the main dial to toggle the zone **ON** or **OFF** as desired
6. Repeat [steps 4-5](#) for the remaining zones
7. After **ZONE 2** has been set to **ON** or **OFF**, turn the main dial one more step

i The zone selectors will flash around both zones [i], and the status of each zone will be indicated by their respective numbers being present (**ON**) or missing (**OFF**)

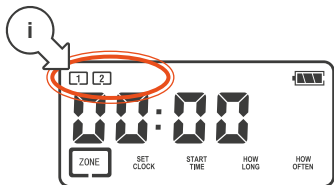

i Alternatively, to go back and change your zone settings, turn the dial another step and repeat [steps 3-7](#)

i Once your zones are confirmed, **ZONE** will flash in the main menu [j] and the active zones will be shown [k]

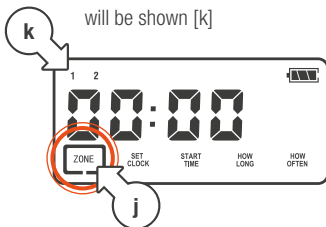


8. To confirm your zone settings, press the main dial

Setup (continued)

Set Clock

- i** This process is to set the system clock for your **QuikDial**
- i** Your **QuikDial** system time is always in 24-hour format (military time)


1. Turn the main dial to select **SET CLOCK** [a] in the main menu

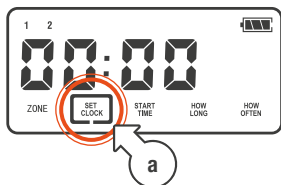

2. Press the main dial. The current *hour* [b] will begin flashing




3. Turn the main dial to adjust the *hour* to the current time
4. Press the main dial to confirm the current *hour*. The current *minute* will begin flashing [c]

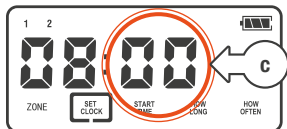

5. Turn the main dial to adjust the *minute* to the current time
6. Press the main dial to confirm the current *minute*

- i** **SET CLOCK** will flash again in the main menu [d], to indicate the system time [e] has been set

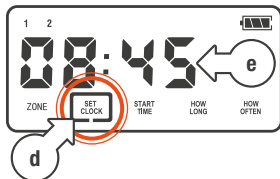

Setup (continued)


Start Time

i This process is to set the **START TIME** for watering of your active zones

i This **START TIME** is applied to all zones, but is only active on the zones that have been toggled **ON** in the previous instructions

i Refer back to [Zone](#) for more information on enabling or disabling zones

1. Turn the main dial to select **START TIME** [a] in the main menu

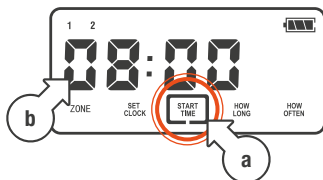

i This will display the current **START TIME** [b]. By default, this is set to **08:00** (8:00 am)

2. Press the main dial. The **START TIME** hour [c] will begin flashing



3. Turn the main dial to adjust the *hour* to the desired **START TIME**
4. Press the main dial to confirm the *hour*. The **START TIME** *minute* will begin flashing [c]




5. Turn the main dial to adjust the *minute* to the desired **START TIME**

Setup (continued)

Start Time (continued)


6. Press the main dial to confirm the *minute*

- i** **START TIME** in the main menu [d] will flash again, to indicate it has been set [e]

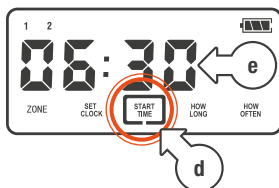


How Long (Watering Duration)

- i** This process is to set the watering duration of your active zones
 - i** This duration is applied to all zones, but is only active on the zones that have been toggled **ON** in the previous instructions
 - i** Refer back to [Zone](#) for more information on enabling or disabling zones
1. Turn the main dial to select **HOW LONG** [a] in the main menu

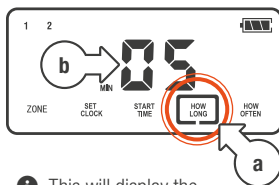

- i** This will display the current watering duration [b]. By default, this is set to 5 minutes
2. Press the main dial. The duration in minutes [c] will begin flashing

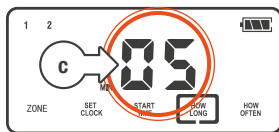


Setup (continued)

How Long (continued)

3. Turn the main dial to adjust duration as desired
4. Press the main dial to confirm the duration


- i** **HOW LONG** in the main menu [d] will flash again, to indicate the duration has been set [e]

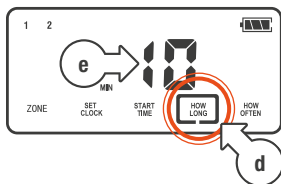

How Often (Watering Interval)

- i** This process is to set the interval time between watering sessions of your active zones
- i** This interval is applied to all zones, but is only active on the zones that have been toggled **ON** in the previous instructions
- i** Refer back to [Zone](#) for more information on enabling or disabling zones


1. Turn the main dial to select **HOW OFTEN** [a] in the main menu
- i** This will display the current watering interval [b]. By default, this is set to 1 day

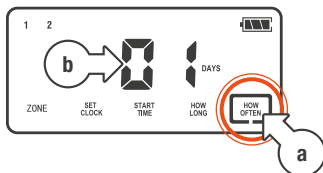

Setup (continued)


How Long (continued)

2. Press the main dial. The interval [c] will begin flashing

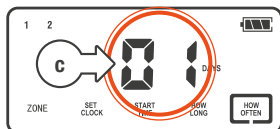

3. Turn the main dial to adjust the interval length in **DAYS** from 1 to 7


- i** For shorter watering intervals in **HOURS** [d], turn the main dial beyond 7 days. The interval will now show as 1 hour

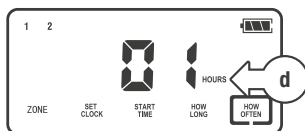


- i** Keep turning the main dial to adjust the watering interval in **HOURS**

- i** Hourly watering intervals are available in 1, 2, 3, 6 or 12 hours

- i** To go back to setting the interval in **DAYS** [e], keep turning the dial beyond 12 hours. The interval will return to 1 day

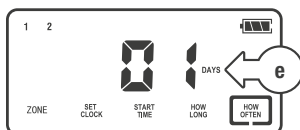

4. With the desired interval time showing, press the main dial to confirm



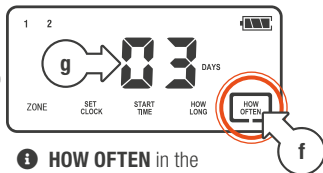


- i** **HOW OFTEN** in the main menu [f] will flash again, to indicate the interval has been set [g]

Operation

Automatic Watering


1. For automatic watering, ensure **ZONE**, **SET CLOCK**, **START TIME**, **HOW LONG** and **HOW OFTEN** have all been set correctly as per the previous instructions
2. After a period of inactivity on your **QuikDial** controls, the set watering schedule will be active in the background as per your confirmed settings
 - i In this state, your **QuikDial** display will cycle between the current time [a] and the amount of time left before your **NEXT** watering session [b]
3. When the current interval time [b] lapses, the zones will start watering in sequential order
 - i During watering, the sprinkler animation [c] will be active, the current zone [d] will flash, and the remaining watering time [e] will also flash as it counts down
 - i Additional zones scheduled for watering will also show [f]

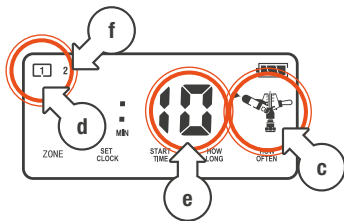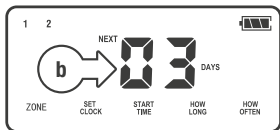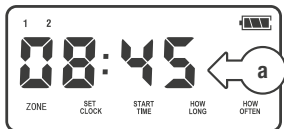

Operation (continued)


Manual Watering

1. For manual (instant) watering, press **ON/OFF**
2. The zone selector [a] will flash. Twist the main dial to select a zone

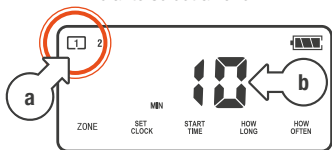

3. Press the main dial to water immediately for the pre-set duration [b]. By default, this is 10 minutes

- i** During watering, the sprinkler animation [c] will be active, and the current zone [d] will flash

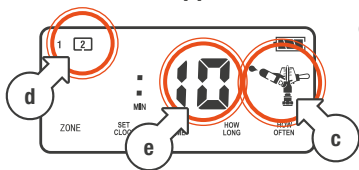

4. Once watering, the remaining time [e] will also flash to indicate it is adjustable
5. Turn the main dial to adjust the watering time as desired


- i** The minimum watering time is 1 minute
- i** The maximum watering time is 99 minutes
- 6. After a short period of time, the remaining watering time will stop flashing to indicate it has been set
- i** To stop watering before the remaining time has lapsed, press **ON/OFF** and your **QuikDial** will return to the default display

- i** If the remaining time stops flashing before you were able to adjust it, press **ON/OFF** to stop watering, and restart the manual watering process from [Step 1](#)

Operation (continued)

No/Suspended Watering Mode

1. To stop all automatic watering, press the **Menu dial** for 3 seconds
2. The display will enter **non watering mode** [a]
3. To return to scheduled automatic watering, press the **Menu dial** for 3 seconds
4. The **non watering icon** will disappear and your automated watering will continue

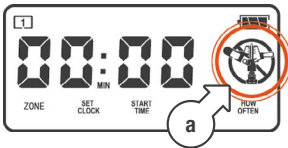

Maintenance

Cold Weather

 Your **QuikDial** should be removed from the tap and stored away during winter

 **Keep your tap timer out of freezing conditions as this can damage internal components**


Batteries

 Remove batteries from your **QuikDial** during periods of non-use—this will erase all settings

 **Battery leakage can cause corrosion and damage to your *QuikDial***

 **Do not mix old and new batteries**

 **Do not use rechargeable batteries**

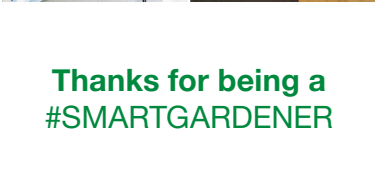

**We really appreciate having you as a customer, and
would like to say thank you for choosing us.**

We recommend registering your new product on our website. This will ensure we have a copy of your purchase and activate an extended warranty. Keep up to date to with relevant product information and special offers available through our newsletter.

www.holmanindustries.com.au/product-registration/



HOLMAN

For the #SMARTGARDENER   

Copyright © 2023 Holman Industries