 



ARCHETYPE

INSTRUCTION MANUAL


ROGUE AUTOMATIC

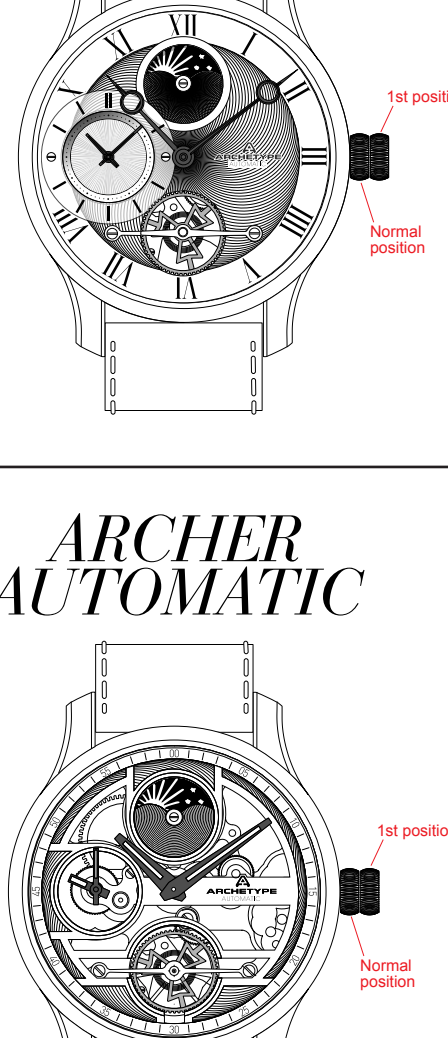

 DORIAN AUTOMATIC

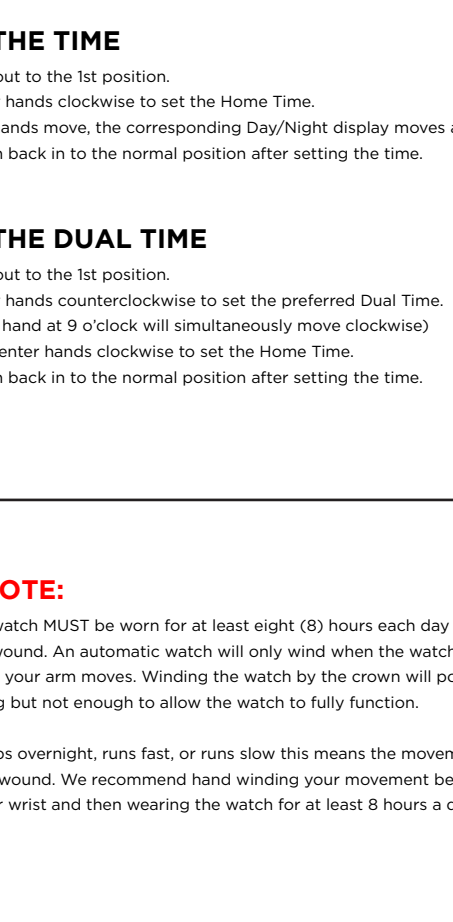

ARCHER AUTOMATIC

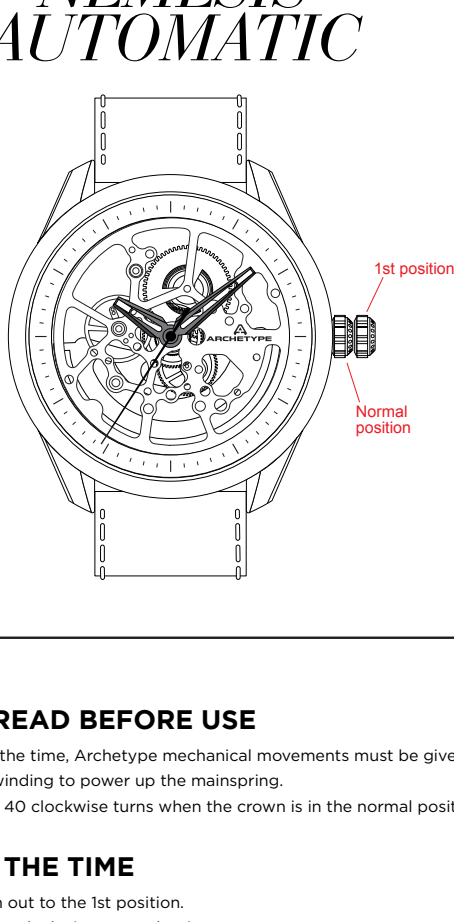

PLEASE READ BEFORE USE

Prior to setting the time, Archetype mechanical movements must be given an initial hand winding to power up the mainspring.

[Approximately 40 clockwise turns when the crown is in the normal position]

SETTING THE TIME

1. Pull the crown out to the 1st position.
2. Turn the center hands clockwise to set the Home Time.
3. As the center hands move, the corresponding Day/Night display moves as well.
4. Push the crown back in to the normal position after setting the time.

SETTING THE DUAL TIME

1. Pull the crown out to the 1st position.
2. Turn the center hands counterclockwise to set the preferred Dual Time. (the Dual Time hand at 9 o'clock will simultaneously move clockwise)
3. Now turn the center hands clockwise to set the Home Time.
4. Push the crown back in to the normal position after setting the time.

PLEASE NOTE:


Your Archetype watch **MUST** be worn for at least eight (8) hours each day to ensure it is fully wound. An automatic watch will only wind when the watch is on your wrist and your arm moves. Winding the watch by the crown will power up the mainspring but not enough to allow the watch to fully function.

If your watch stops overnight, runs fast, or runs slow this means the movement is not being fully wound. We recommend hand winding your movement before you put it on your wrist and then wearing the watch for at least 8 hours a day.

WATCH WINDER SETTINGS

Both directions. 950 turns per day

NEMESIS AUTOMATIC

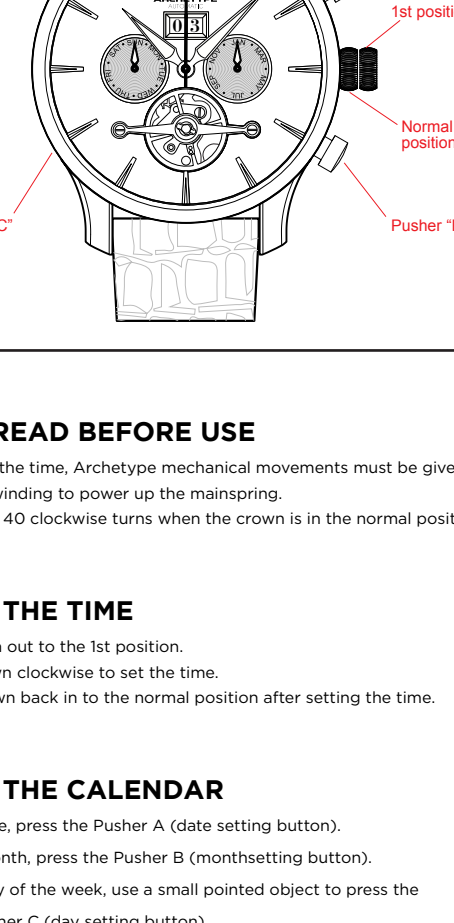

PLEASE READ BEFORE USE

Prior to setting the time, Archetype mechanical movements must be given an initial hand winding to power up the mainspring.

[Approximately 40 clockwise turns when the crown is in the normal position]

SETTING THE TIME

1. Pull the crown out to the 1st position.
2. Turn the crown clockwise to set the time.
3. Push the crown back in to the normal position after setting the time.

PLEASE NOTE:


Your Archetype watch **MUST** be worn for at least eight (8) hours each day to ensure it is fully wound. An automatic watch will only wind when the watch is on your wrist and your arm moves. Winding the watch by the crown will power up the mainspring but not enough to allow the watch to fully function.

If your watch stops overnight, runs fast, or runs slow this means the movement is not being fully wound. We recommend hand winding your movement before you put it on your wrist and then wearing the watch for at least 8 hours a day.

WATCH WINDER SETTINGS

Clockwise. 950 turns per day

CASPIAN AUTOMATIC

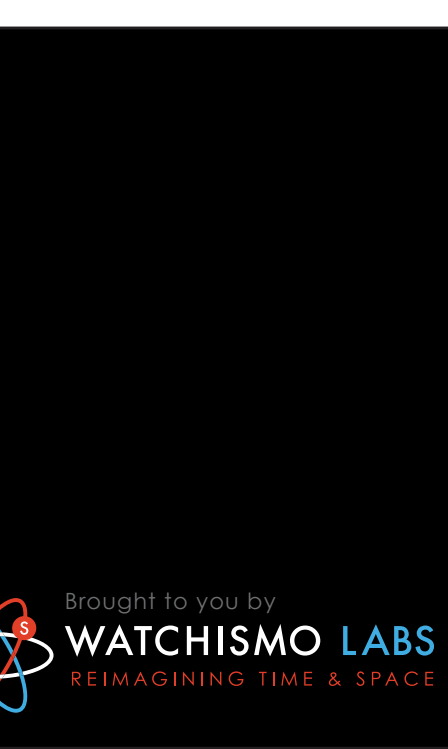

PLEASE READ BEFORE USE

Prior to setting the time, Archetype mechanical movements must be given an initial hand winding to power up the mainspring.

[Approximately 40 clockwise turns when the crown is in the normal position]

SETTING THE TIME

1. Pull the crown out to the 1st position.
2. Turn the crown clockwise to set the time.
3. Push the crown back in to the normal position after setting the time.

PLEASE NOTE:

Your Archetype watch **MUST** be worn for at least eight (8) hours each day to ensure it is fully wound. An automatic watch will only wind when the watch is on your wrist and your arm moves. Winding the watch by the crown will power up the mainspring but not enough to allow the watch to fully function.

If your watch stops overnight, runs fast, or runs slow this means the movement is not being fully wound. We recommend hand winding your movement before you put it on your wrist and then wearing the watch for at least 8 hours a day.

WATCH WINDER SETTINGS

Both directions (Clockwise or Counter-clockwise). 950 turns per day

LOYALIST AUTOMATIC



PLEASE READ BEFORE USE

Prior to setting the time, Archetype mechanical movements must be given an initial hand winding to power up the mainspring.

[Approximately 40 clockwise turns when the crown is in the normal position]

SETTING THE TIME

1. Pull the crown out to the 1st position.
2. Turn the crown clockwise to set the time.
3. Push the crown back in to the normal position after setting the time.

SETTING THE CALENDAR

1. To set the date, press the Pusher A (date setting button).
2. To set the month, press the Pusher B (month setting button).
3. To set the day of the week, use a small pointed object to press the recessed Pusher C (day setting button).

PLEASE NOTE:

Your Archetype watch **MUST** be worn for at least eight (8) hours each day to ensure it is fully wound. An automatic watch will only wind when the watch is on your wrist and your arm moves. Winding the watch by the crown will power up the mainspring but not enough to allow the watch to fully function.

If your watch stops overnight, runs fast, or runs slow this means the movement is not being fully wound. We recommend hand winding your movement before you put it on your wrist and then wearing the watch for at least 8 hours a day.

WATCH WINDER SETTINGS


Both directions (Clockwise or Counter-clockwise). 950 turns per day

WARRANTY

Archetype gladly offers a limited warranty covering defects in materials and manufacturing for a period of one (1) year after the original purchase date from an authorized Archetype retailer. This warranty does not cover case, crystal, crown, pushers, straps, or any changes that occur during use and not from manufacturing or assembly. This warranty is considered void if you open your caseback, push the buttons underwater, or expose your watch to moisture beyond the recommendation of the watch's water resistance rating. Proof of purchase is required for all warranty claims, so please save a copy of your receipt. Archetype reserves the right to not accept a warranty claim if a watch has evidence of excessive wear or misuse. Archetype reserves the right to repair or replace any watch returned for service at our option.

WATER RESISTANCE CHART

3 ATM	Splash Resistant. Not intended for any prolonged exposure to water.
5 ATM	Normal Daily Wear. Suitable for washing hands or light rain. No showers.
10 ATM	Water Sports. Suitable for swimming, surfing, etc.
30 ATM	Scuba Diving. Suitable for extreme ocean depths.
Do not expose your watch to high temperature water (i.e. hot tubs/showers) as this will void the warranty.	

 

Brought to you by
WATCHISMO LABS
REIMAGINING TIME & SPACE