 
 
 
 
 




Original	Recharge	Original	Recharge
 POWER	 Power	 8	 8
 MUTE	 Mute / Dimmer	 9	 9
 P. MODE	 Picture / Format	 -/--	 Shift + Guide / EPG / -/+
 S. MODE	 Sound / Title	 0	 0
 TV / RADIO	 TV/Radio /	 BACK	 Back / Return
 NICAM	 Shift + Audio / Lang I/II	 REC. MENU	 D.Menu / Top
 DISPLAY	 Display / Media	 PLAY / PAUSE	 Play / Slow
 ZOOM / PC.A	 Shift + Zoom /	 SKIP PREV	 I<< / Preset-
 SLEEP	 Sleep / Timer	 SKIP NEXT	 >>I / Preset+
 EDIT	 Shift + Text /	 REC	 Rec / Rec Mode
 1	 1	 STOP	 Stop / Hold
 2	 2	 REW	 << / Tune-
 3	 3	 FWD	 >> / Tune+
 4	 4	 CH+	 CH+ / Page+
 5	 5	 SOURCE	 AV / Input / RDS
 6	 6	 VOL+	 Vol+
 7	 7	 CH-	 CH- / Page-



[illegible]