



Error Codes in Top Load HE Washers

Error Codes in your Amana Top Load Washer:

If your Amana top load washer displays an error code, here are some steps you can take to try and solve the problem. This may not be all Error Codes for your model. See your Owner's Manual for specific Error Codes for your Model.

If these actions don't work, you can [Contact Us](#) or [Schedule Service Online](#).

Error code	Error	Possible resolution
drn	Washer is not draining properly,	This can sometimes be an installation problem. You can v Hose
F# E# or F##	System error code.	Press START/PAUSE once to clear the code, then press code doesn't clear, Contact Us or Schedule Service Online
HC	Hot and cold inlet hoses have been installed incorrectly (reversed).	This code will appear at the end of the wash cycle to indic hot water inlet, and the hot water hose is connected to the Turn off the water supply, and reverse the hoses. Run an See installation instructions for questions regarding the h Literature page.)
LdL	Lid is not locking.	It's possible that an item in the load may be keeping the li lid. Also check for detergent build up around the lid lock m
LdU	Lid cannot unlock.	The washer detects that there are objects on washer lid p such as a basket of laundry, from the top of the washer.
LF, Lo FL or F8 E1	The washer is taking too long to fill.	There may be some problem with the water supply going the water, and check the household water supply to see if on. Make sure to open both faucets completely for proper NOTE: Both Hot and Cold water must be supplied to the v For more information on how to remove the error code, ch



lid	The washer lid was left open.	<p>Close the lid to clear the display. If the lid is left open for more than 15 minutes, the water in the washer will drain.</p> <p>If washer has drained, start cycle over. Do not add more clothes. The washer will not be penetrated with water and detergent.</p>
Ofb	The washer load is out of balance.	<p>The washer is running a load-balance correction routine. A load balance icon will appear on the display.</p> <p>Try the following steps first:</p> <ul style="list-style-type: none"> • If the dial is flashing and the washer has stopped, press START/PAUSE. • You may also experience some vibration during spinning. If the dial is flashing, load items in loose heaps evenly around the drum. • Adding wet items to washer or adding more water to the drum. • Avoid washing single items. Balance a single item such as a towel with other items, such as towels. • If the dial is flashing, redistribute the load, close the lid and press START/PAUSE. <p>Use Bulky/Sheets Deep Water Wash cycle for oversized, bulky items like coats, heavy filled jackets. Other items are not appropriate for Bulky/Sheets cycle. Refer to the User and Care manual for more information on loading.</p>
OL	The washer load too large.	If an overload is detected, the washer will drain any water in the drum, remove items and add HE detergent. Close lid and press START/PAUSE.
PF	The wash cycle was interrupted by a power failure.	Touch and hold START to restart the washer cycle or press CANCEL to stop the cycle.
Sud	There are excessive suds in washer.	Be sure to always use HE High Efficiency Detergent in the washer. For more information, visit your Washer .

If you would like to download or view product literature for your appliance, please visit our [Manuals and Literature](#) page.

