

SAFETY PRECAUTIONS

When using your earphones, basic safety precautions should always

- 1. READ ALL INSTRUCTIONS BEFORE USING YOUR FARPHONES. 2. Never expose your earphones to high temperatures, extreme cold, or high humidity. Do not submerge in water.
- 3. To avoid the risk of electric shock, never attempt to open or repair your earphones without the assistance of certified professionals. 4. Your earphones are not to be used by children or the infirm
- 5. Always press all buttons carefully. Do not manhandle your
- 6. Do not use your earphones at temperatures under 32°F (0°C) or over 104°F (40°C).
- 7. Do not drop your earphones, throw them, or subject them to strong mpacts or physical trauma. 8. Contact the manufacturer for support if you detect any abnormalities when using your earphones. In addition, do not continue to use
- your earphones if you detect any smoke or fire.

 9. Unplug your earphones when not in use for extended periods of
- 10. When plugged in, do not place your earphones on flammable
- materials such as rugs, carpets, or bedding.

 11. Please recycle or dispose of your earphones properly according to your municipality's laws and rules. Contact local recycling facilities
- and/or the manufacturer for further information.

 12. Clean your earphones and charging case using a soft cloth or paper towel. Do not use harsh chemicals when cleaning your earphones, and never submerge your earphones in water.

not be replaced. Do not attempt to remove the battery from t o not dispose of in fire or expose to excessive heat. o not crush, puncture, incinerate, or short circuit external cont.

INTRODUCTION

Thank you for purchasing the Reebok Open Flow Open Wearable Earphones, item RBK1307. To get the most out of your device, please read this user's manual thoroughly before use.

PACKAGE CONTENTS

-Open Wearable Earphones with Charging Case -USB-C Charging Cable
-User's Manual With Warranty Information


FEATURES


- -20 Hours Total Playtime -5 Hours Playtime per Charge
- -3 Extra Charges in Case
- Around the Ear Secure Fit Touch Controls
- *Applicable at 50% of maximum volume. Results will lower with

SPECIFICATIONS

Bluetooth Range: Up to 33 Feet (10 Meters)

A CLOSER LOOK

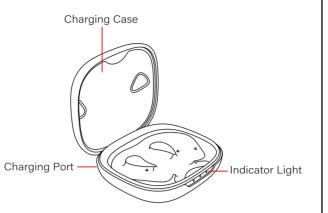

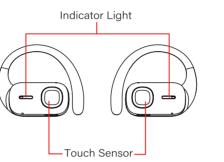


CHARGING

Charging The Case

Insert one end of the included USB-C charging cable into the charging port on your case.

Insert the other end of the LISB cable

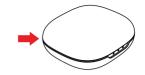

into a suitable USB charging adapte



When charging, the indicator light on the case flashes blue. When fully charged, the indicator light becomes a solid blue.



Charging The Earphones

Place the earphones in the charging case to charge. Make sure the charging points make contact between the case and earphones.
While charging, the earphone's indicator light will illuminate red until


Charging can take approximately 1-2 hours.



POWERING ON/OFF

When first using your earphones, place them into the case. To turn the earphones ${\sf ON}$, remove them from the case. To turn the earphones OFF, put them back into the case.

Note: It is recommended that the earphones be fully charged before

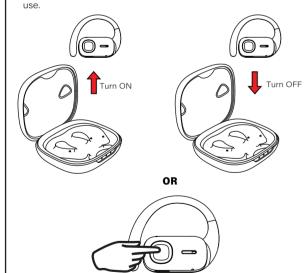

Press and hold the touch sensor on the earphones for five seconds to power ON or OFF.

BLUETOOTH PAIRING

When you remove your earphones from the case, they will power ON and go into pairing mode. Both earphones will automatically



The indicator lights on the earphones will flash red and blue in pairing mode.

Once two earphones paired together, the indicator light on one earphone will turn OFF, and the indicator light of the other will continue flash red and blue alternately.





After connecting the earphones, their indicator lights will turn OFF.

USING YOUR EARPHONES

LEFT EARPHONE


Decrease Volume: Press Once ous Track: Press and Hold for 1 Second Play/Pause: Press Two Times Answer Call: Press Once Decline Call: Press and Hold for 2 Seconds

Hang Up Call: Press and Hold for 2 Seconds Voice Assistant: Press Three Times

RIGHT EARPHONE

Increase Volume: Press Once

Next Track: Press and Hold for 1 Second Play/Pause: Press Two Times Answer Call: Press Once Decline Call: Press and Hold for 2 Seconds

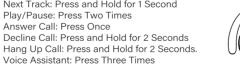



To prevent possible hearing damage, do not listen at high volume levels for long periods. For your own safety, please be aware of your surroundings when using these earphones.

RESET

If the earphones have any technical problems without visible physical damage, please first attempt a soft reset. A soft reset does not remove previous pairing information.

Place the earphones into the case. Let the earphones sit for

If a soft reset does not work, attempt a hard reset. A hard reset will remove all pairing information.

Hard Reset

I. Disconnect the earphones from Bluetooth and place them into the charging case.

- 2. Take one earphone out and press the touch area four times.
- 3. Repeat step 2 to the second earphone.

approximately five seconds before taking out

MAINTENANCE AND CARE

-Use a soft cloth or paper towel to clean your earphones and charging case. Never use any harsh chemicals or detergents for cleaning. Make sure your earphones are dry before charging.

-When your earphones are unused, they should be stored in a cool, dry place.

-Never tug or yank on a cable connected to your earphones or charging case. Connect and disconnect cables as carefully as possible.

-Never expose your earphones to high temperatures or extreme cold.

FCC STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not nstalled and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the nterference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receive -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

The equipment complies with FCC Radiation exposure limit set forth for uncontrolled environment. The device shall be operated and installed without restrcition.

FCCID: 2AIXC-RBK-OWS

ONE YEAR WARRANTY

This warranty covers the original consumer purchaser only and is

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor or a period of one year.

What Is Not Covered By Warranty
Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal se, including but limited to, repair by unauthorized parties, tampering, modification or accident

To Obtain Warranty Service and Troubleshooting Information:

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchase nust contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address of the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by