




Dual Digital Kitchen Timer Instruction Manual

369-BL-V20241210 EN FR

1. Introduction

Congratulations on your purchase of the ThermoPro Dual Digital Kitchen Timer. You will now be able to keep track of time with this digital timer!

2. Key Definition

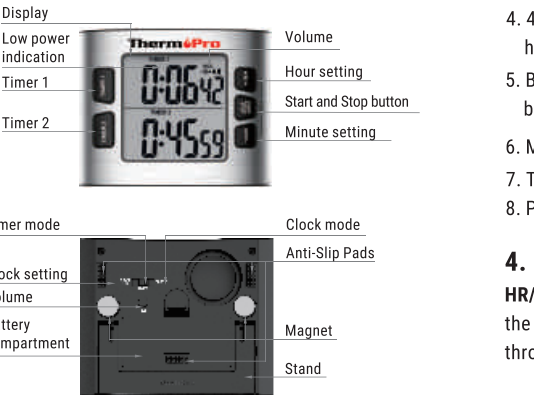

-2-

3. Specifications

1. Display: Displays dual timer or clock by switching the selector
2. Dual Timer: Track up to two timer events simultaneously
3. Clock and Date Function: 12/24-hour time format for different needs
4. 4 Adjustable Volume Settings: off, low, medium, and high
5. Backlight: Any button presses will activate the backlight for 10 seconds
6. Max Countdown Time: 23hour 59 minutes
7. Tabletop and magnet-mountable Design
8. Power Supply: 2 x AAA batteries

4. Buttons

HR/+: Press to set the hour in the timer mode and increase the digits in clock mode. Press and hold to quickly scroll through digits.

-3-

MIN/-: Press to set the minutes in the timer mode and decrease the digits in clock mode. Press and hold to quickly scroll through digits.

START/STOP: Press once to start or pause the timer.

TIMER 1: Press once to set the countdown for TIMER 1.

TIMER 2: Press once to set the countdown for TIMER 2.

CLOCK SET: Slide to set the clock.

TIMER: Slide to set the countdown.

CLOCK: Slide to display the clock.

⏮: Press to toggle between the volume settings.

5. Count up Setting

1. On the back of the device, slide the selector switch to **TIMER** and the “TIMER” icon and digits will appear. Press **TIMER 1** to adjust setting.
2. Press “**START/STOP**” to start the countup timer, and press again to pause/stop.

-4-

3. To reset timer to zero, first pause the timer, by pressing **START/STOP** then press **HR/+** and **MIN/-** at the same time.
- Note 1**: If you need the second timer, press **TIMER 2**, and follow the same steps.
- Note 2**: When timer is on, and you slide to **CLOCK/CLOCK SET**, the timer will continue running as indicated by the flashing “TIMER” icon on the display.

6. Countdown Timer Setting

1. On the back of the device, slide the selector switch to **TIMER** and the “TIMER” icon and digits will appear. Press **TIMER 1** to set the timer.
2. Press **HR/+** to set the hour. Press **MIN/-** to set the minutes. Press and hold the buttons to increase digits rapidly.
3. Press “**START/STOP**” to start the timer or to pause the timer. If you wish to adjust the timer during the countdown, first pause the timer by pressing **START/STOP**, then press **HR/+** and **MIN/-** together.

-5-

4. When the timer reaches zero, the alarm will beep for 1 minute and the timer will begin to flash and count up. If you wish to stop the alarm while in **TIMER** mode, press **START/STOP** to stop the alarm and the digits will restore to the initial value. When the device is in **CLOCK** or **CLOCK SET** mode, and the timer reaches zero, press any button on the front of the device to stop the alarm.
5. To reset the timer to zero after the alarm after stopping the alarm in **CLOCK** or **CLOCK SET** modes, slide the selector switch back to **TIMER**, then press **START/STOP**, then press **HR/+** and **MIN/-** together.
6. To reset the timer to zero after the alarm after stopping the alarm in **TIMER** mode, press **HR/+** and **MIN/-** together.

Note 1: If you need to set a second timer, press **TIMER 2**, and follow the same steps as above.

Note 2: When timer is on, and you slide to **CLOCK/CLOCK SET**, the timer will continue running as indicated by the flashing “TIMER” icon on the display.

-6-

7. Clock Setting

1. On the back of the device, slide the selector switch to **CLOCK SET** and the “CLOCK.S” icon and digits will appear.
2. Press the “**START/STOP**” button then press **HR/+** and **MIN/-** buttons to select between 12Hr and 24Hr. Once you have selected 12Hr or 24Hr, press “**START/STOP**” button again to confirm your selection.
3. Press the **HR/+** to increase the hour or minutes and press **MIN/-** to decrease the hour or minutes. Press and hold the **HR/+** or **MIN/-** buttons to quickly scroll through the digits.
4. Press the “**START/STOP**” button to set the clock time.
5. Press **HR/+** to increase or press **MIN/-** to decrease the digits for YEAR/MONTH/DAY. After setting the YEAR, press the “**START/STOP**” button to confirm your selection. Then repeat the steps for MONTH and DAY.

Note: If no button presses for 20 seconds, all flashing digits will be saved.

-7-

8. Clock Mode

1. On the back of the device, slide the selector switch to **CLOCK** to display hour/minute/year/month/day.
2. Digits will not be changed if any buttons are pressed.

9. Adjust Alarm Volume

1. The timer has 4 alarm volume levels: off, low, medium, and high. Press the “**⏮**” button to cycle through the volume levels.
2. While in **TIMER** mode. (Bell “**🔔**” icon = OFF. One volume bar = low. Two volume bars = medium. Three volume bars = high.

10. Backlight Feature

Pressing any button will activate the backlight, if no further buttons are pressed for 10 seconds, the backlight will automatically turn off.

*** WARNING FOR ARTIFICIAL CARDIAC PACEMAKER USERS**


-8-

Please be aware that a magnet installed inside the device may impact the functionality of your artificial cardiac pacemaker. If you have a pacemaker, we recommend always staying up to 1 foot or 0.3 meter away from the device.

11. Declaration of Conformity

Hereby, the manufacturer declares that this product complies with the basic requirements and applicable regulations of the EMC Directive 2014/30/EU. The complete declaration of conformity can be found at: <https://buythermopro.com/eu-declaration-of-conformity/>

12. Disposal

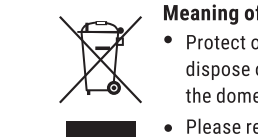

Meaning of the “Dustbin” Symbol

- Protect our environment: do not dispose of electrical equipment in the domestic waste.
- Please return any electrical equipment that you will no longer use to the collection points provided for their disposal.

-9-

- This helps avoid the potential effects of incorrect disposal on the environment and human health.
- This will contribute to the recycling and other forms of reutilisation of electrical and electronic equipment.
- Information concerning where the equipment can be disposed of can be obtained from your local authority.

CAUTION: Batteries/rechargeable batteries must not be disposed of with household waste!

- The batteries must be removed from the appliance.
- Take spent batteries to the appropriate collection point or to a dealer.
- Your town or local authority can provide information about public collection points.

This symbol can be found on batteries/rechargeable batteries which contain hazardous:

-10-



- Pb = contains lead
- Cd = contains cadmium
- Hg = contains mercury
- Li = contains lithium

13. Limited One-Year Warranty

ThermoPro warrants this product to be free of defects in parts, materials and workmanship for a period of one year, from date of purchase.

Should any repairs or servicing under this warranty be required, contact Customer service by phone or email for instructions on how to pack and ship the product to ThermoPro.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

14. Customer Service

Call or Text: 1-877-515-7797(USA & Canada only)
Email: service@buythermopro.com
Hours: Weekdays 8:00AM- 8:00PM EST

-11-

