 


SPECIFICATIONS

Model Number	: MK875V2
Connectivity	: Wired
Number of Keys	: 81
Switch Type	: Mechanical
Keycap Type	: Double-Shot ABS
Anti-Ghosting	: 26-Key
Lighting Effects	: RGB 17 Modes
Cable Length	: 1.5 m PVC Cable
Size	: 327*135*35 mm
Weight	: 608 ± 5 g
Power Rating	: 5V --- 150 mA
Compatibility	: Windows® 7 or later, Mac® OS 10.11 or later & PS4/PS5

PRODUCT TOUR

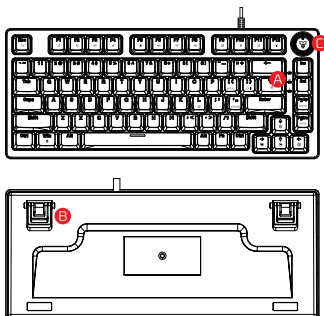

EN

- A** LED Indicator
- B** Adjustable Stand
- C** Rotary Encoder

ID

- A** Indikator LED
- B** Stand yang Dapat Disesuaikan
- C** Encoder Rotary

ES

- A** Indicador LED
- B** Soporte Ajustable
- C** Codificador Rotativo

ZH

- A** LED 指示灯
- B** 折叠脚架
- C** 旋转编码器

JP

- A** LED インジケータ
- B** 調整可能なスタンド
- C** ロータリーエンコーダ

KR

- A** LED 표시등
- B** 조절 가능한 스탠드
- C** 로터리 엔코더

Join the Fantech
Discord
Community




FUNCTION AND MULTIMEDIA KEYS


WIN	F1	F2	F3	F4	F5	F6	F7	F8	F9	F10	F11	F12
	Ctrl	Alt	Alt	Alt	Win	Win	Del	Del	Del	Del	Del	Del
MAC	F1	F2	F3	F4	F5	F6	F7	F8	F9	F10	F11	F12
	Ctrl	Alt	Alt	Alt	Win	Win	Del	Del	Del	Del	Del	Del

ADDITIONAL KEY COMBINATIONS

Fn + PgUp Home	Fn + [{ Print Screen	Fn + }] Scroll Lock
Fn + PgDn End	Fn + [F12] Pause	Fn + W Swap W, A, S, D to Arrow Keys.

  LED INDICATOR

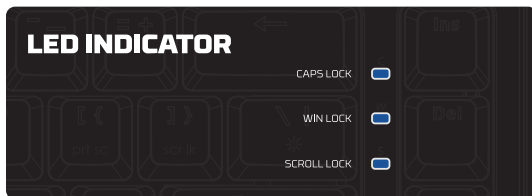

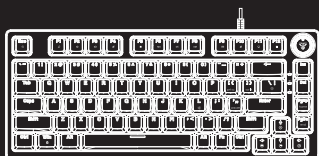

ANY QUESTIONS?

Thanks for choosing Fantech.
If you have any questions or need any help with your products,
please do not hesitate to contact us.



support@fantechworld.com

MK875V2

ATOM81 HERO

MECHANICAL KEYBOARD



QUICK START GUIDE

PANDUAN CEPAT [ID]

快速入门指南 [ZH]



DOWNLOAD

 
To further customize your setting, please
visit our website and download the
software (if applicable).

www.fantechworld.com



HOW TO USE

WIRED CONNECTION

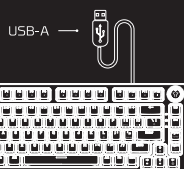

LED EFFECTS

- | | | | | |
|--|---|--|--|---|
| | + | | | Increase or decrease backlight brightness |
| | + | | | Increase or decrease backlight speed |
| | + | | | Change the backlight mode |
| | + | | | Turn On/Off rotary encoder lighting |

ROTARY ENCODER

LIGHTING MODE:

1. Press and hold for 3 seconds until the four indicator lights flash to switch to lighting effect mode.
2. Rotate clockwise to increase brightness and counterclockwise to decrease brightness.
3. Press the Rotary Encoder to switch lighting modes.



VOLUME CONTROL:

1. Press and hold for 3 seconds until the four indicator lights flash to switch to volume control mode.
2. Rotate clockwise to increase the volume and counterclockwise to decrease the volume.
3. Press the Rotary Encoder to mute.