 


Caution

Before using our chain saws, please read this manual carefully to understand the proper use of your unit. Keep this manual handy.

CUT-X[®] CHAIN SAW 58CC

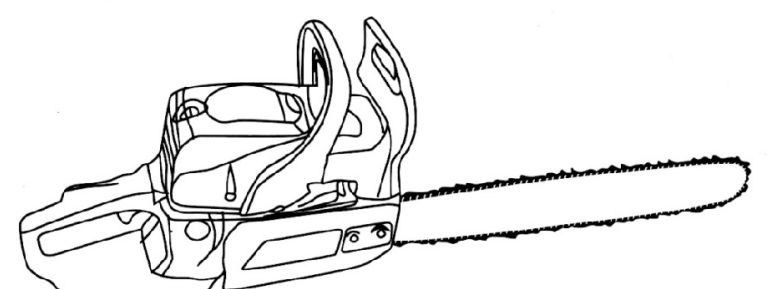

11. SPECIFICATIONS

1	Chain saw Model	S 58CC
2	Mass (without guide bar and chain)	5,500g
3	Dimensions (without guide bar and chain)	410x250x120mm
4	Fuel	Mixture (Gasoline:2 Two-cycle oil:1)
5	Fuel tank capacity	550ml
6	Chain oil	Motor oil SAE15W-30
7	Oil tank capacity	200ml
8	Engine displacement	50cm ³ (500cm ³)
9	Maximum engine power	0.26kW/7500rpm
10	Maximum engine speed with cutting attachment	10000rpm
11	Maximum engine speed at idling	2800rpm
12	Maximum cutting length	45cm
13	Sprocket	7T10-32S
14	Saw chain type	Degman Z18PVG(CARLTON/Chiesse)
15	Saw chain pitch	0.325in
16	Saw chain gauge	0.58in
17	Guide bar type	Sprocket nose
18	Guide bar size	18, 20, 22in
19	Oil feeding system	Automatic pump with adjuster

NOTE: Specifications are subject to change without notice.

SAFETY FIRST

Instructions contained in warnings within this manual marked with a symbol represent visual points which must be taken into account to avoid any serious bodily injury, and for this reason you are requested to read all such instructions carefully and follow them without fail.

8. NOTES ON TYPES OF WARNINGS IN THE MANUAL

- WARNING**
This mark indicates instructions which must be followed in order to prevent accidents which could lead to serious bodily injury or death.
- CAUTION**
This mark indicates instructions which must be followed, or it leads to mechanical failure, breakdown, or damage.

NOTE
This mark indicates hints or directions useful in the use of the product.

Contents

1. PARTS LOCATION	2
2. WARNING LABELS ON THE MACHINE	2
3. SYMBOLS ON THE MACHINE	3
4. SAFETY PRECAUTIONS	3
5. INSTALLING GUIDE BAR AND SAW CHAIN	7
6. FUEL AND CHAIN OIL	9
7. OPERATING ENGINE	10
8. STOPPING	14
9. MAINTENANCE	16
10. MAINTENANCE OF SAW CHAIN AND GUIDE BAR	18
11. SPECIFICATIONS	20

1. PARTS LOCATION

- Front guard
- Starter knob
- Air cleaner
- Choke knob
- Throttle interlock
- Rear handle
- Throttle trigger
- Throttle lock button
- Engine switch
- Fuel tank
- Oil tank
- Front handle
- Saw chain
- Guide Bar

2. WARNING LABELS ON THE MACHINE

(1) Read owner's manual before operating this machine.

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
(2) Wear head, eye, and ear protection.

(3) Use the chain saw with two hands.

(4) Warning! Kickback is danger.

(5) Warning! Attention.

IMPORTANT!
If warning signs peel off or become soiled and impossible to read, you should contact the dealer from whom you purchased the product to order new signs and affix the new signs in the required location(s).

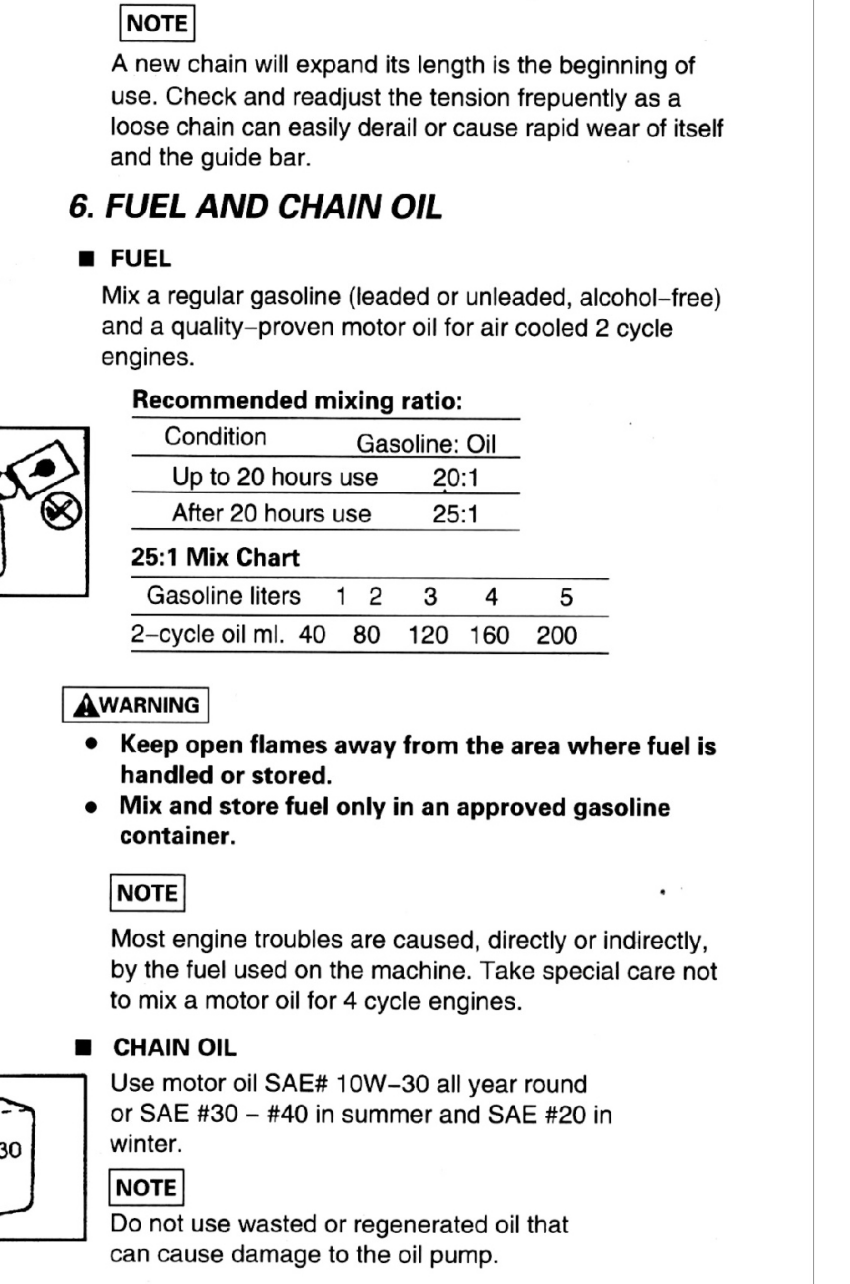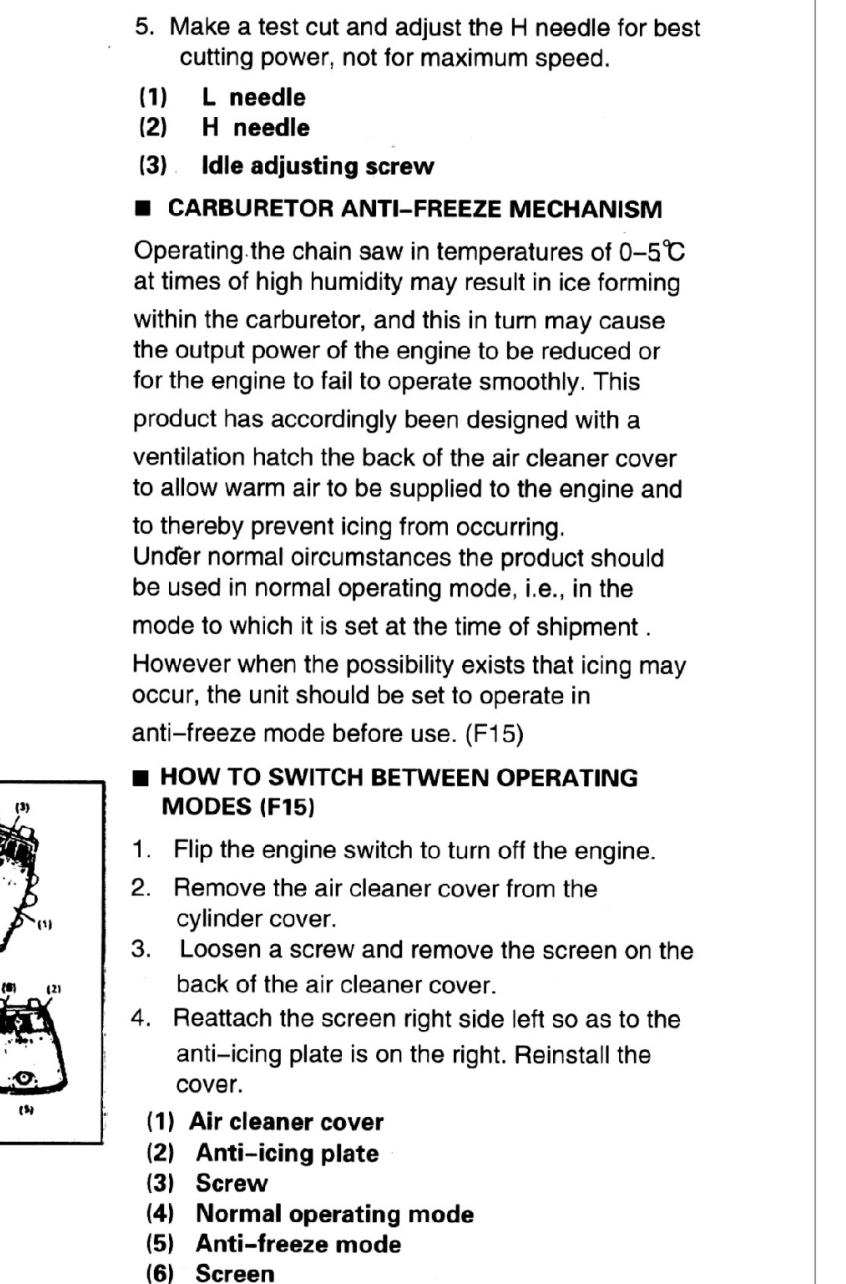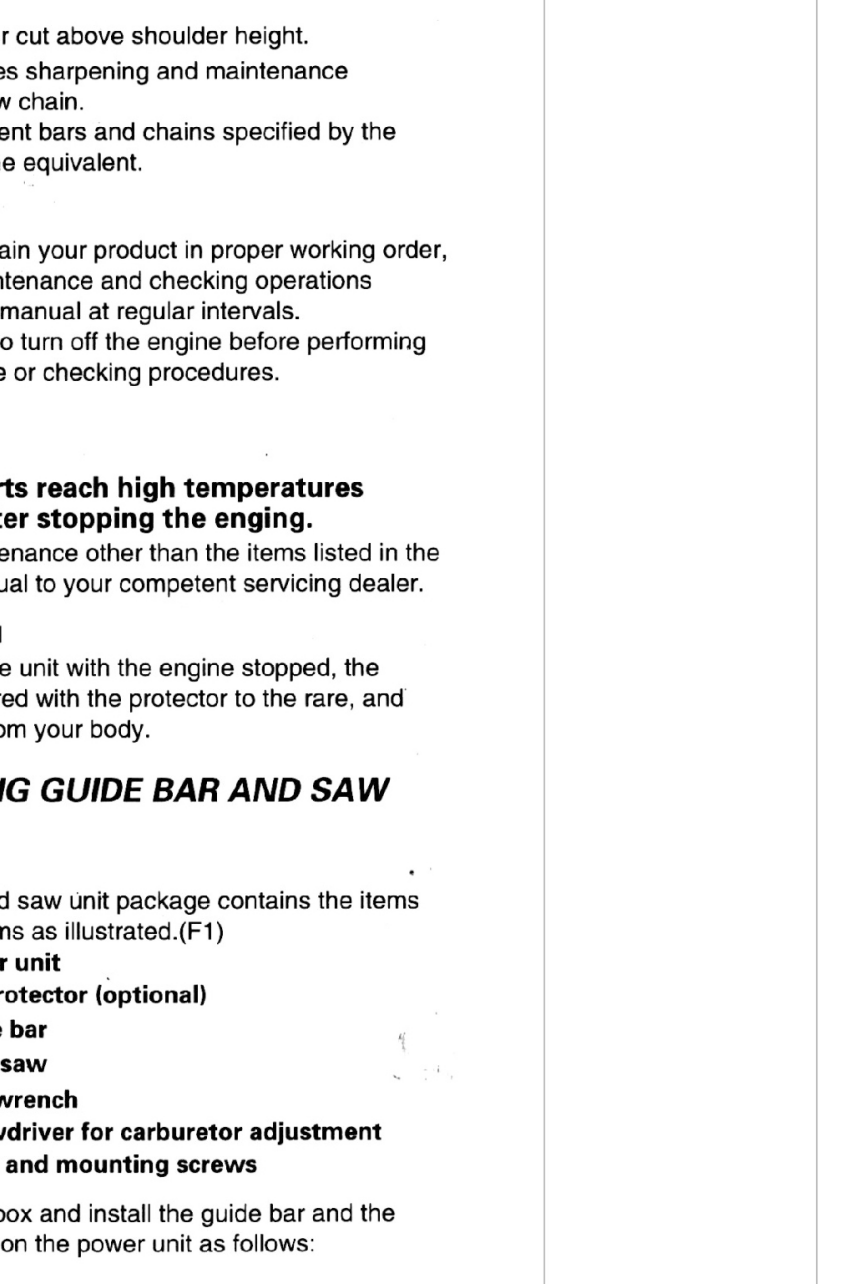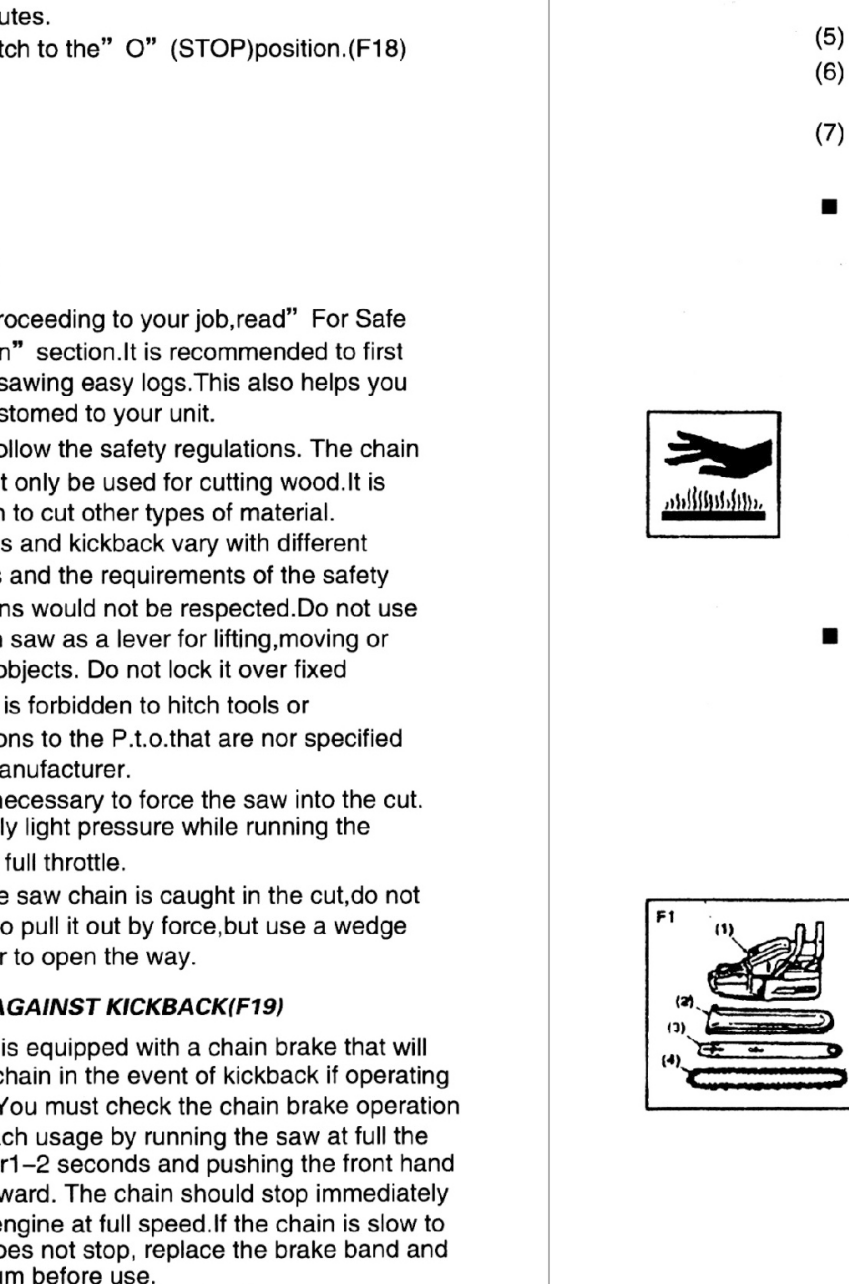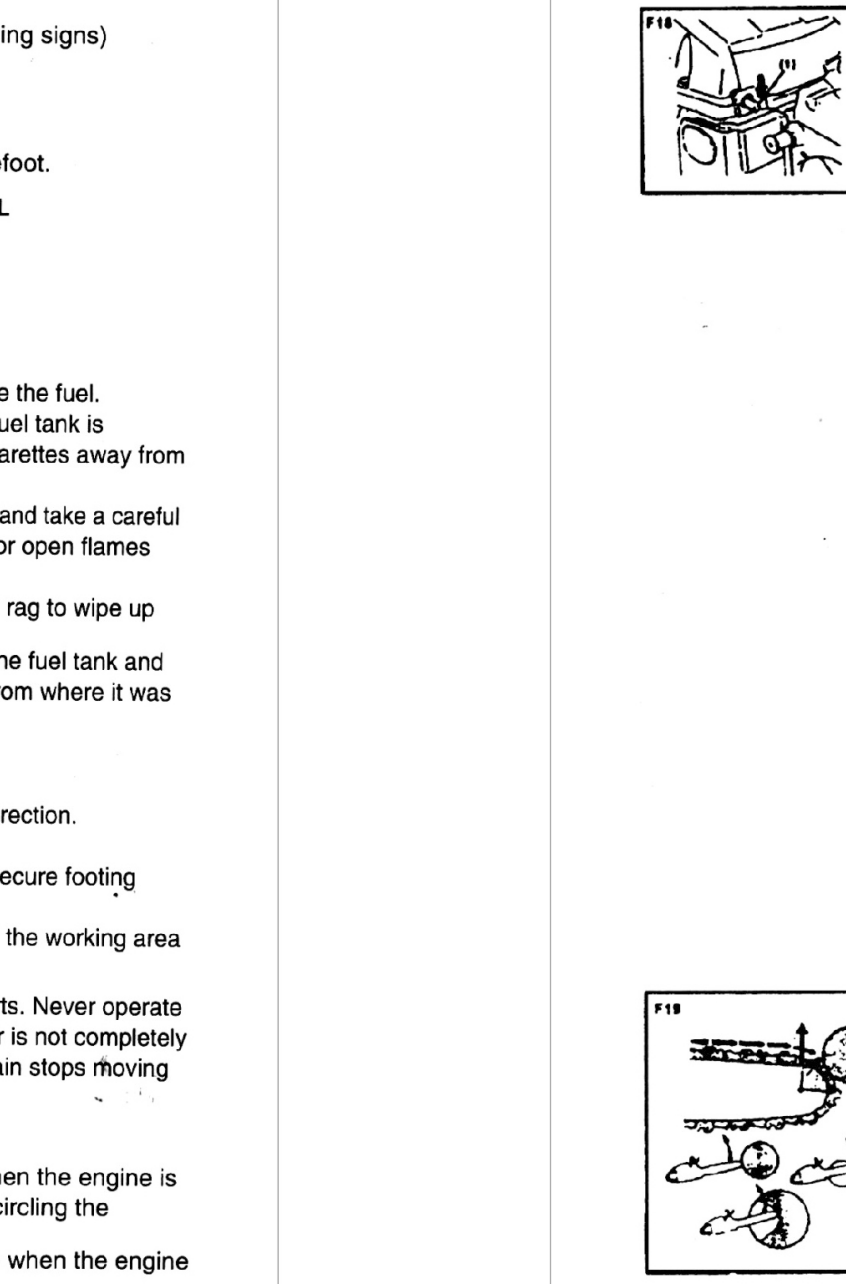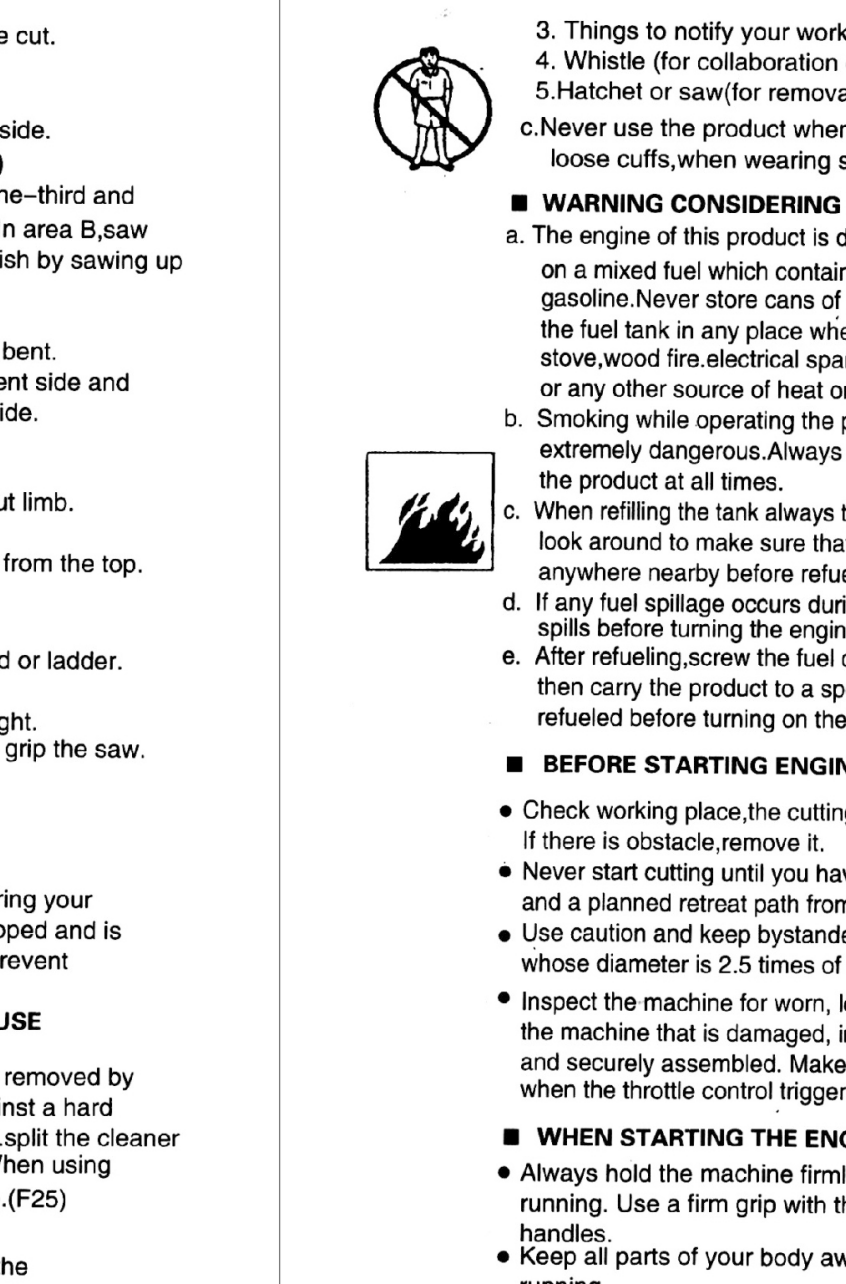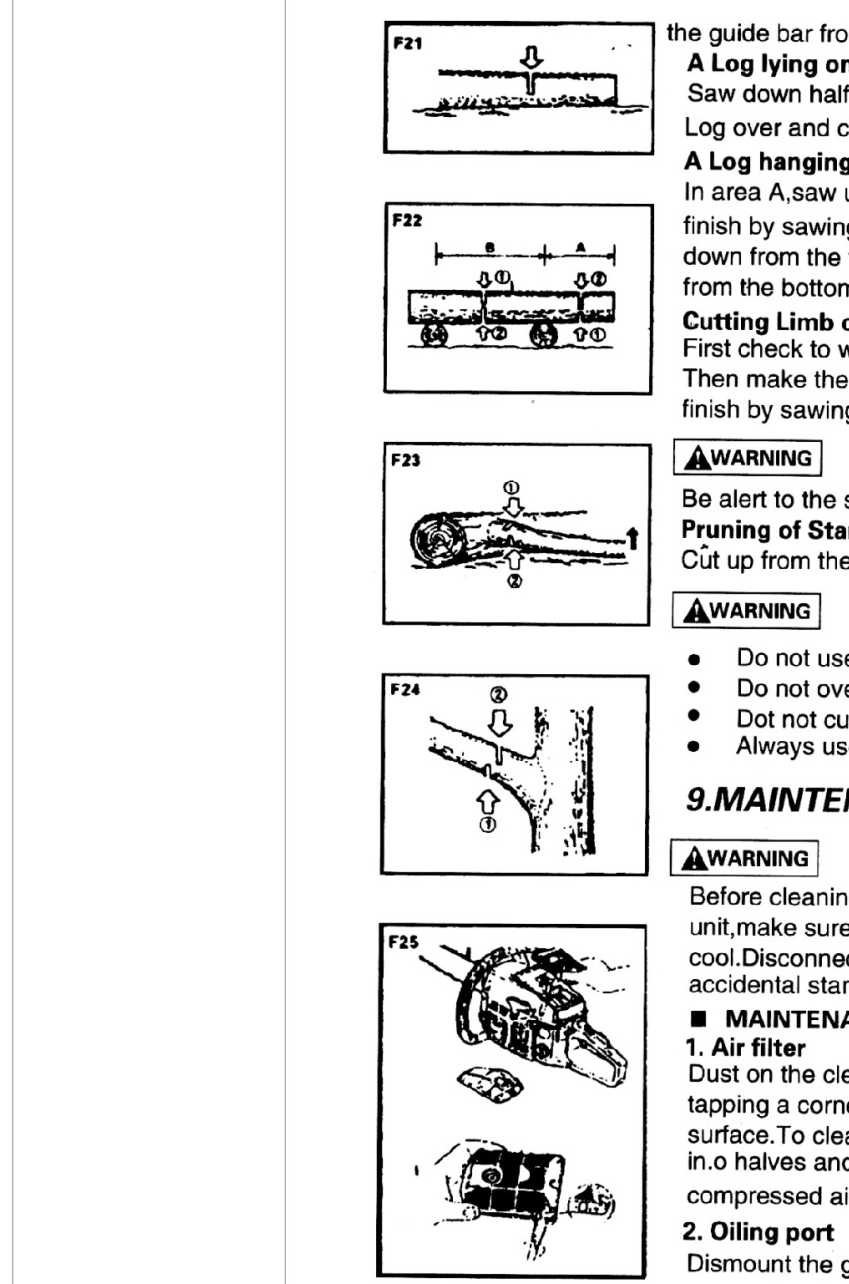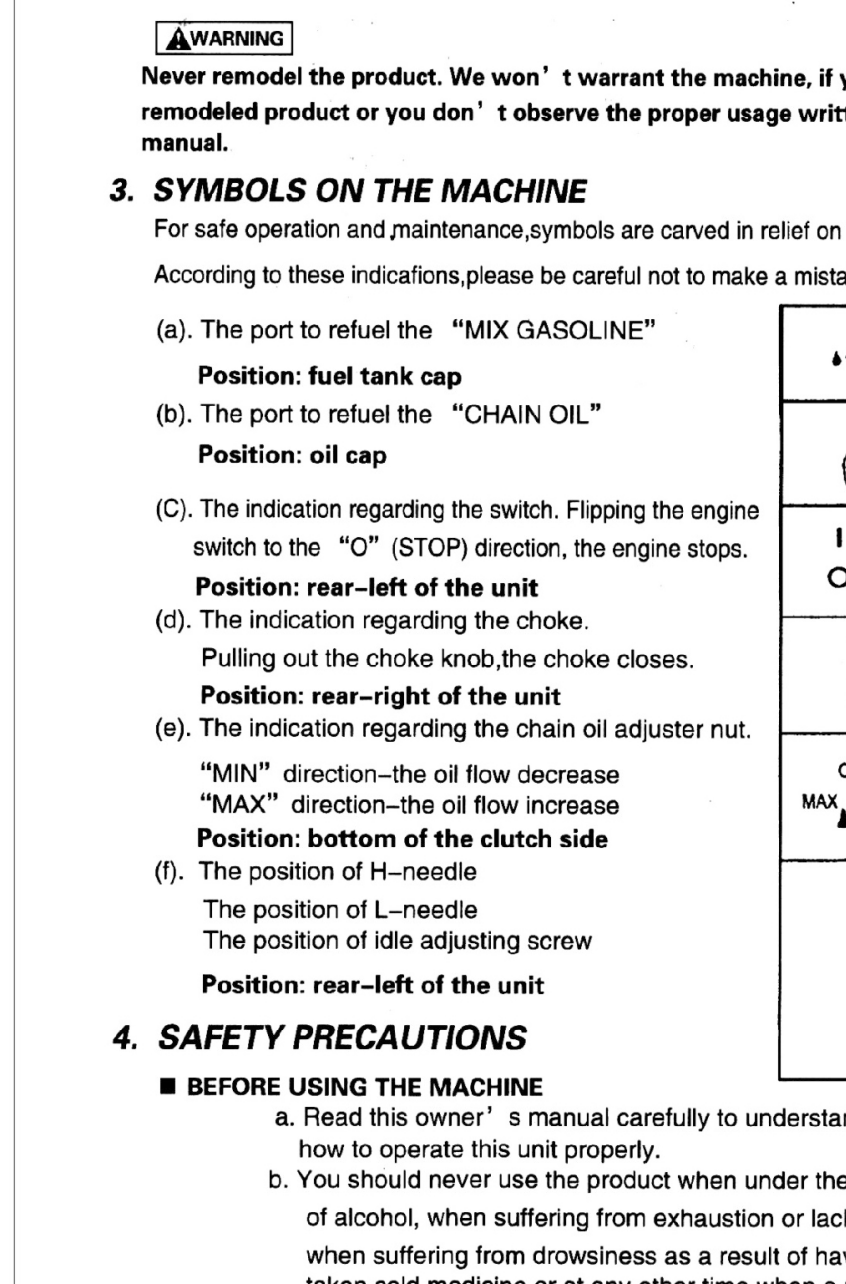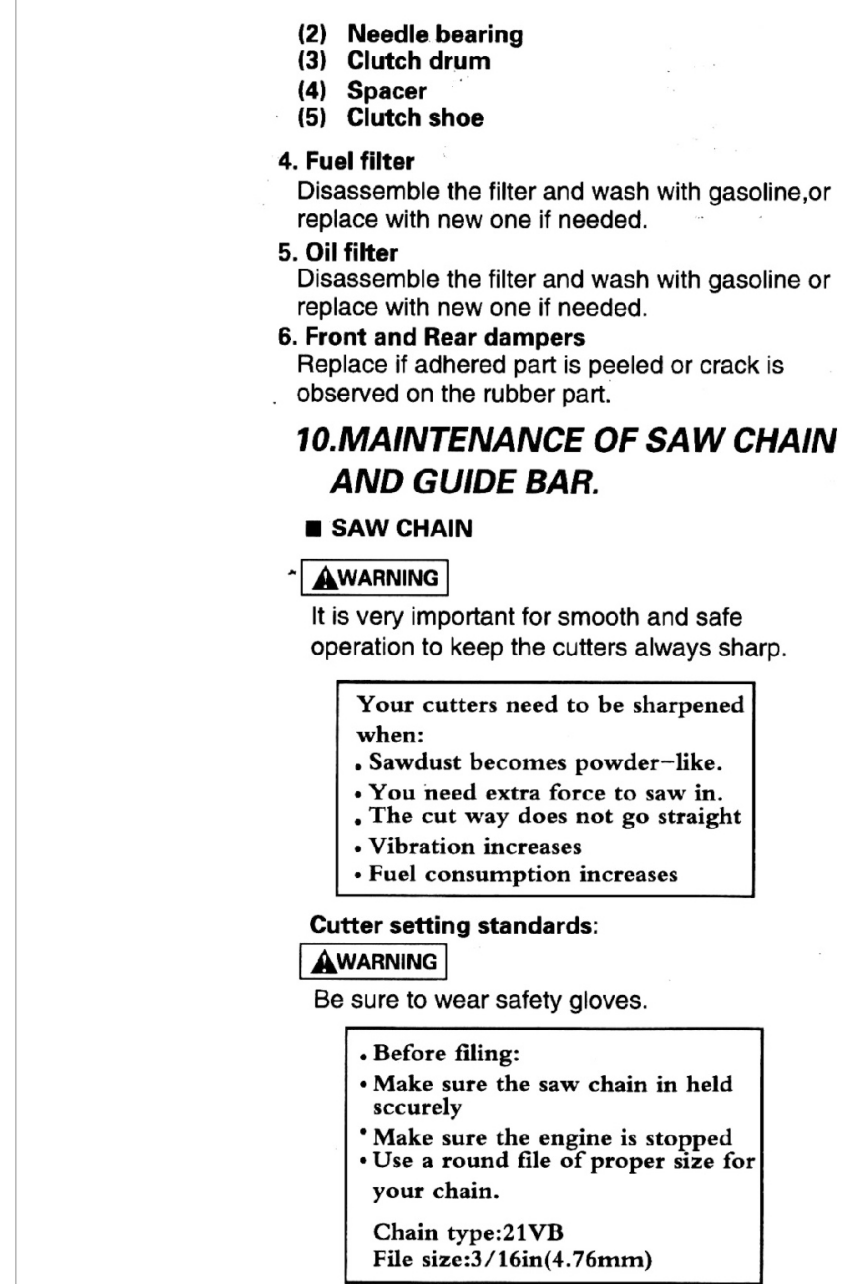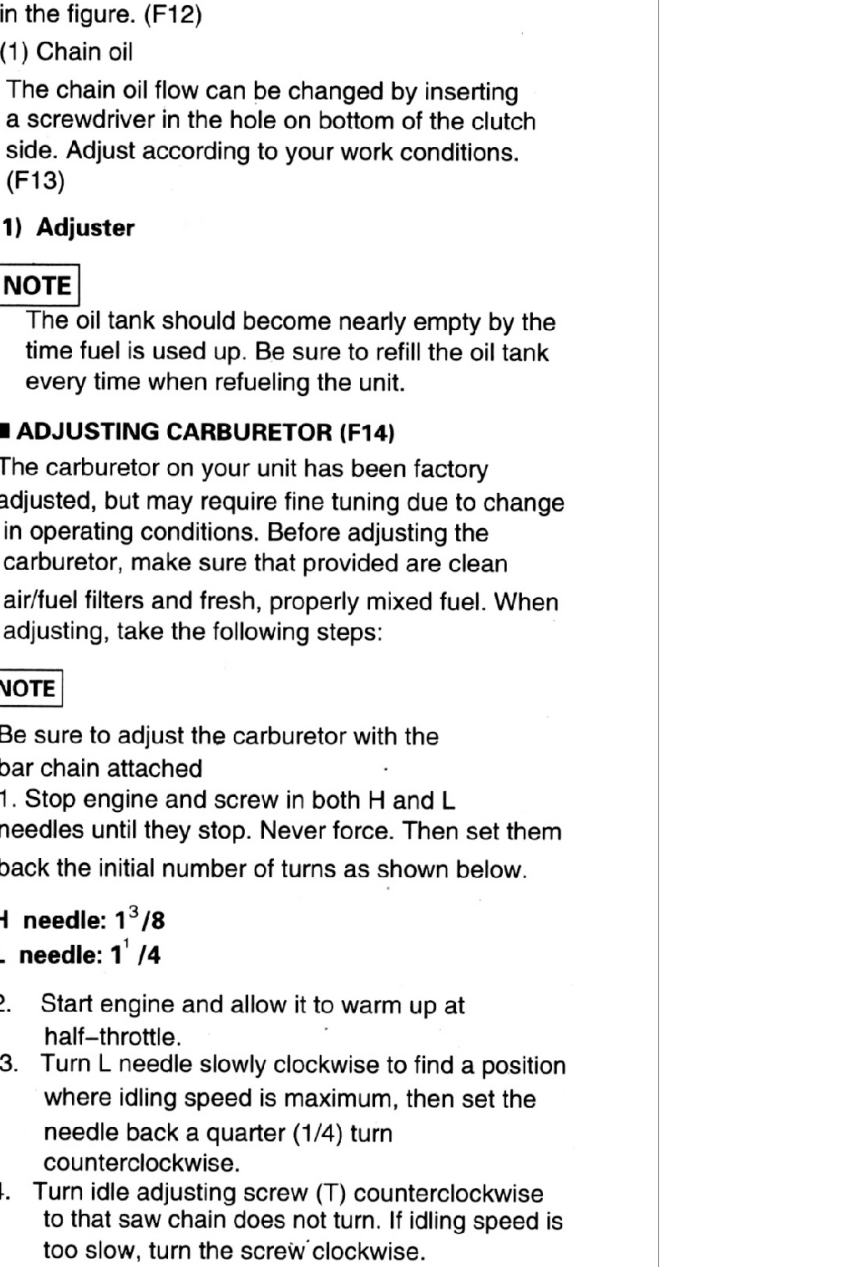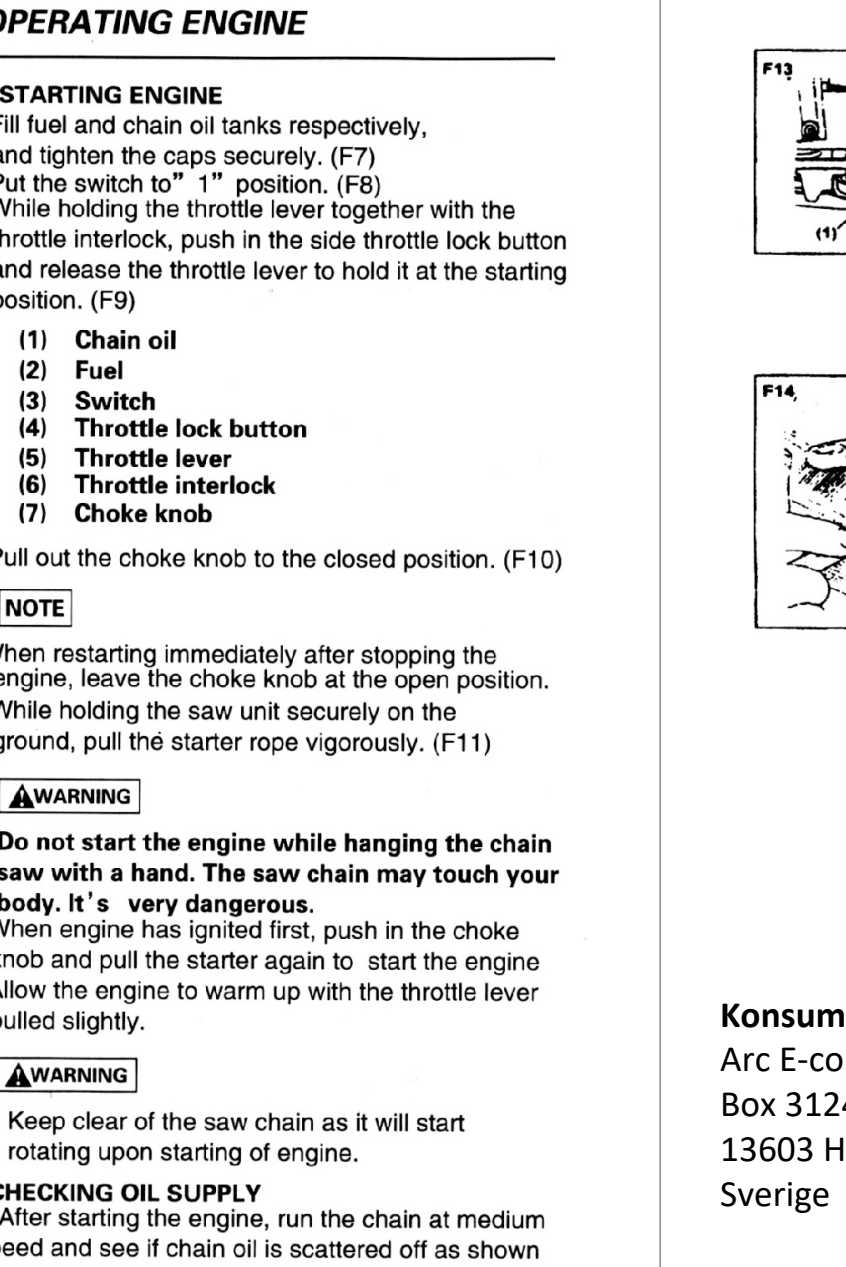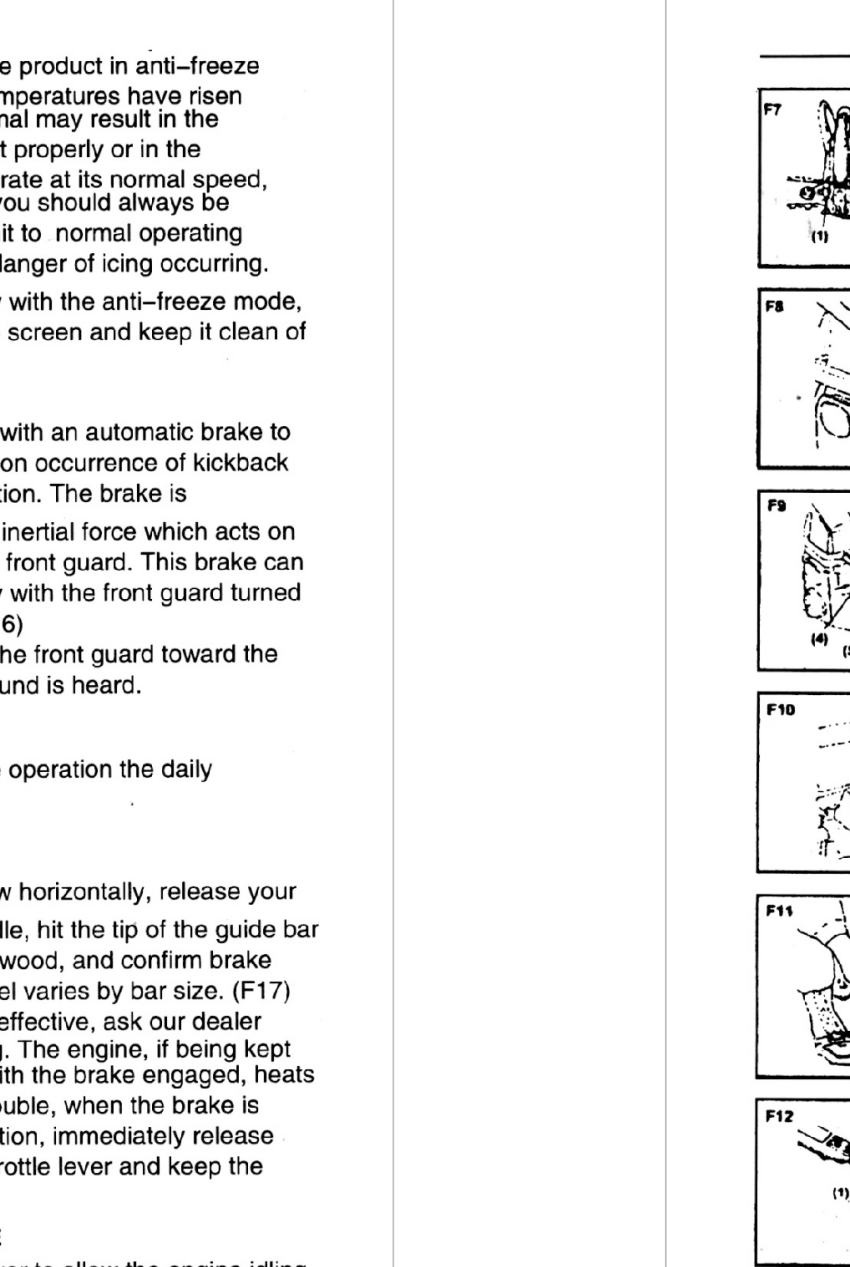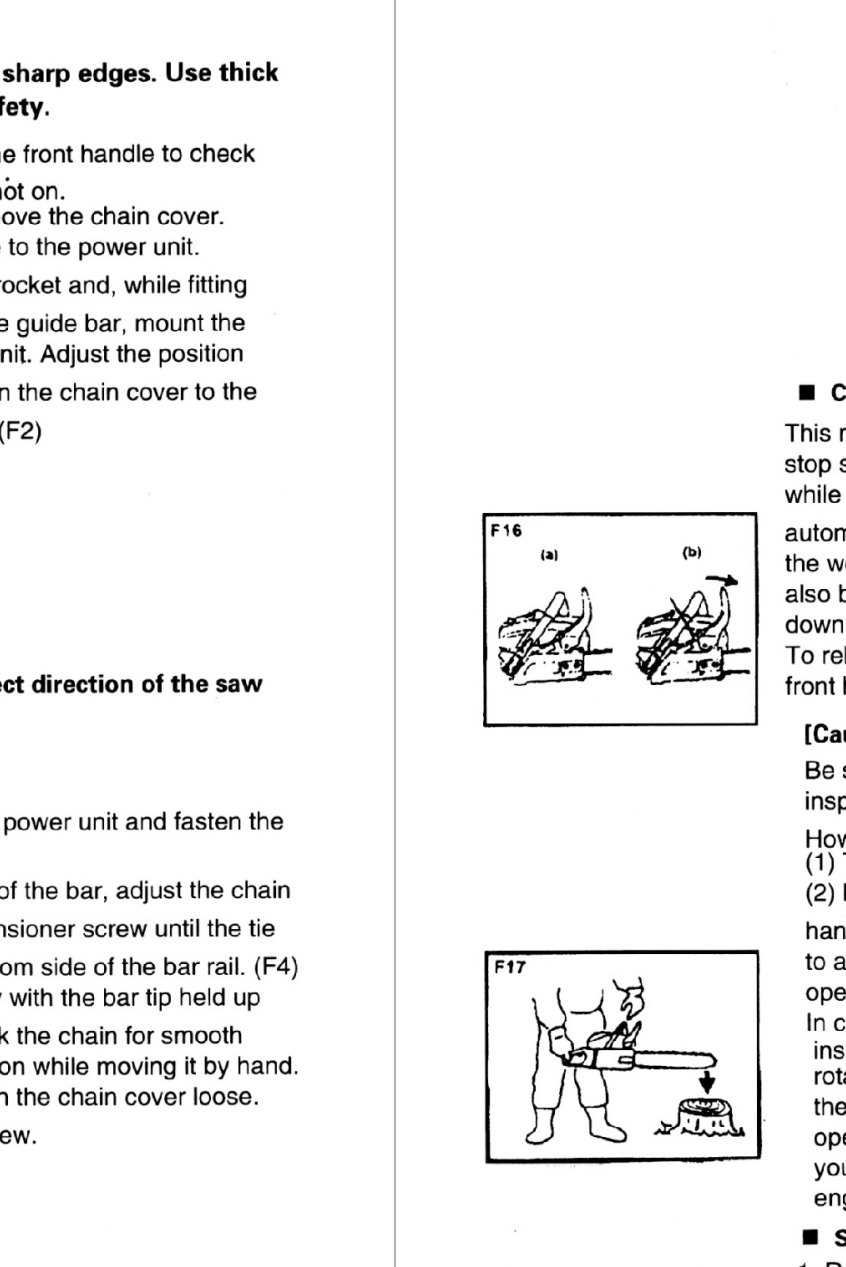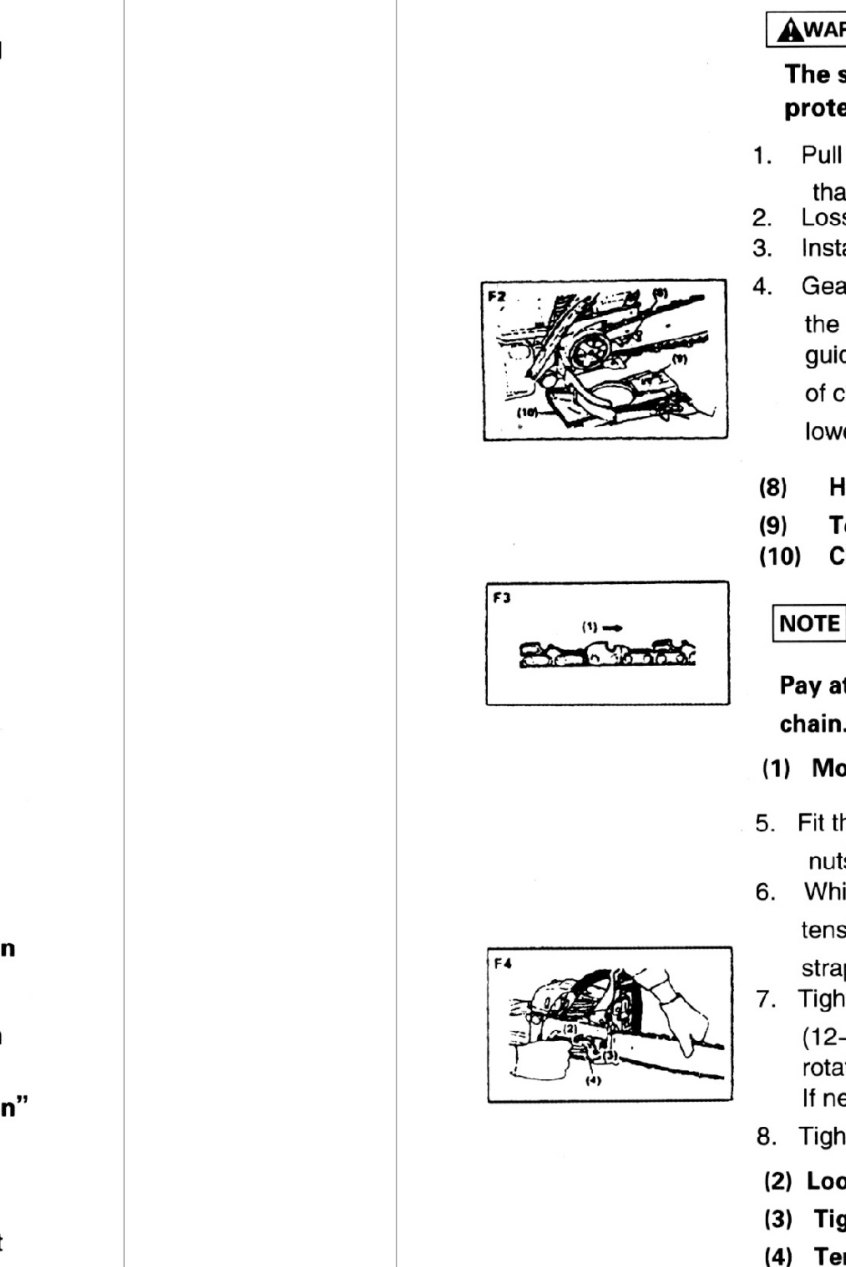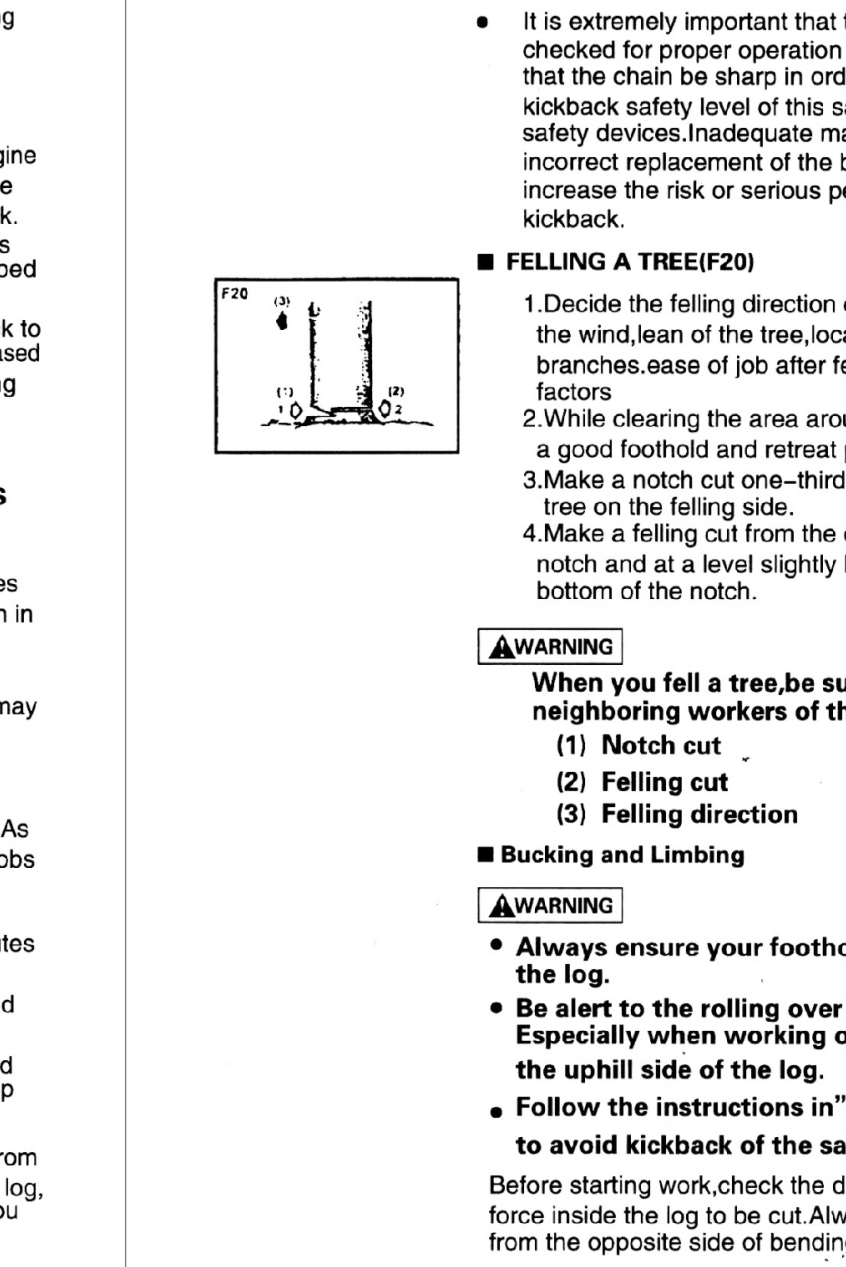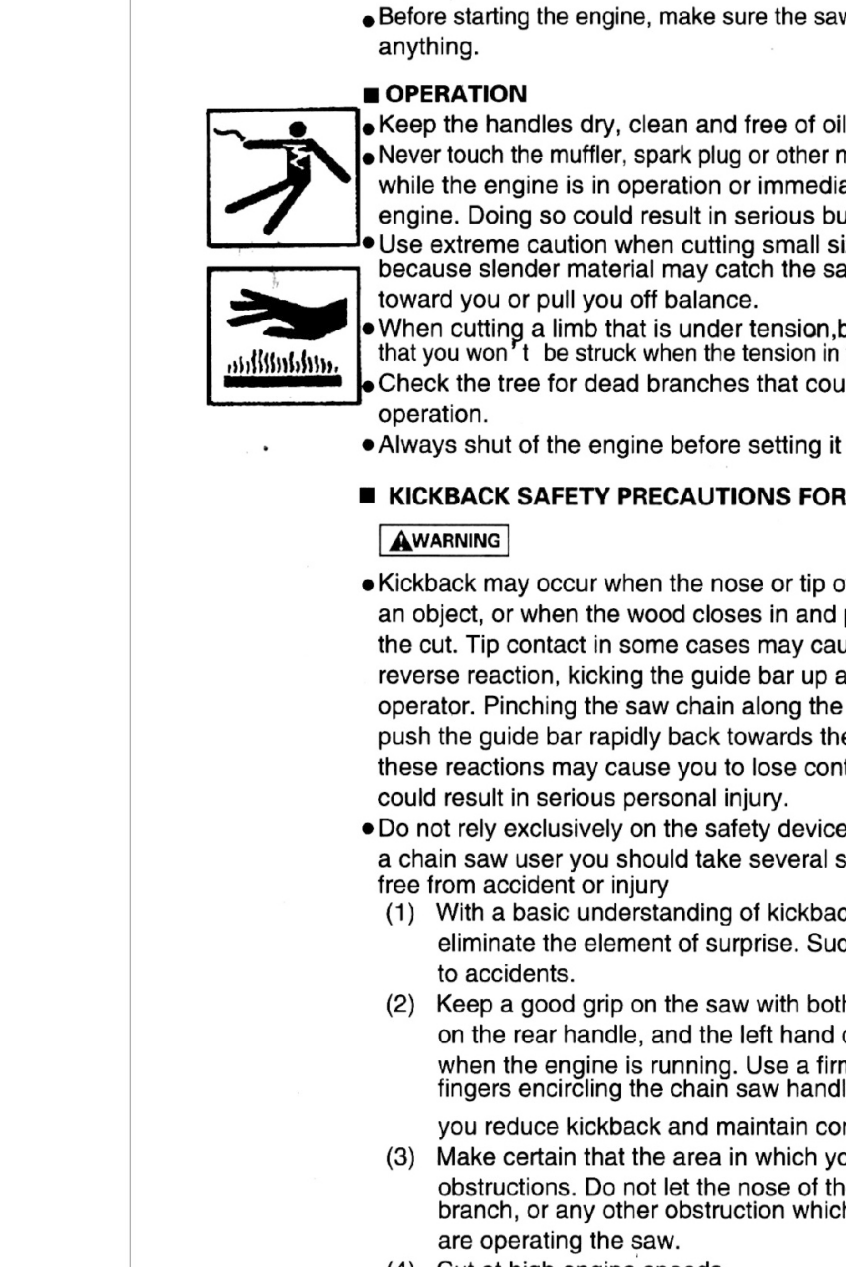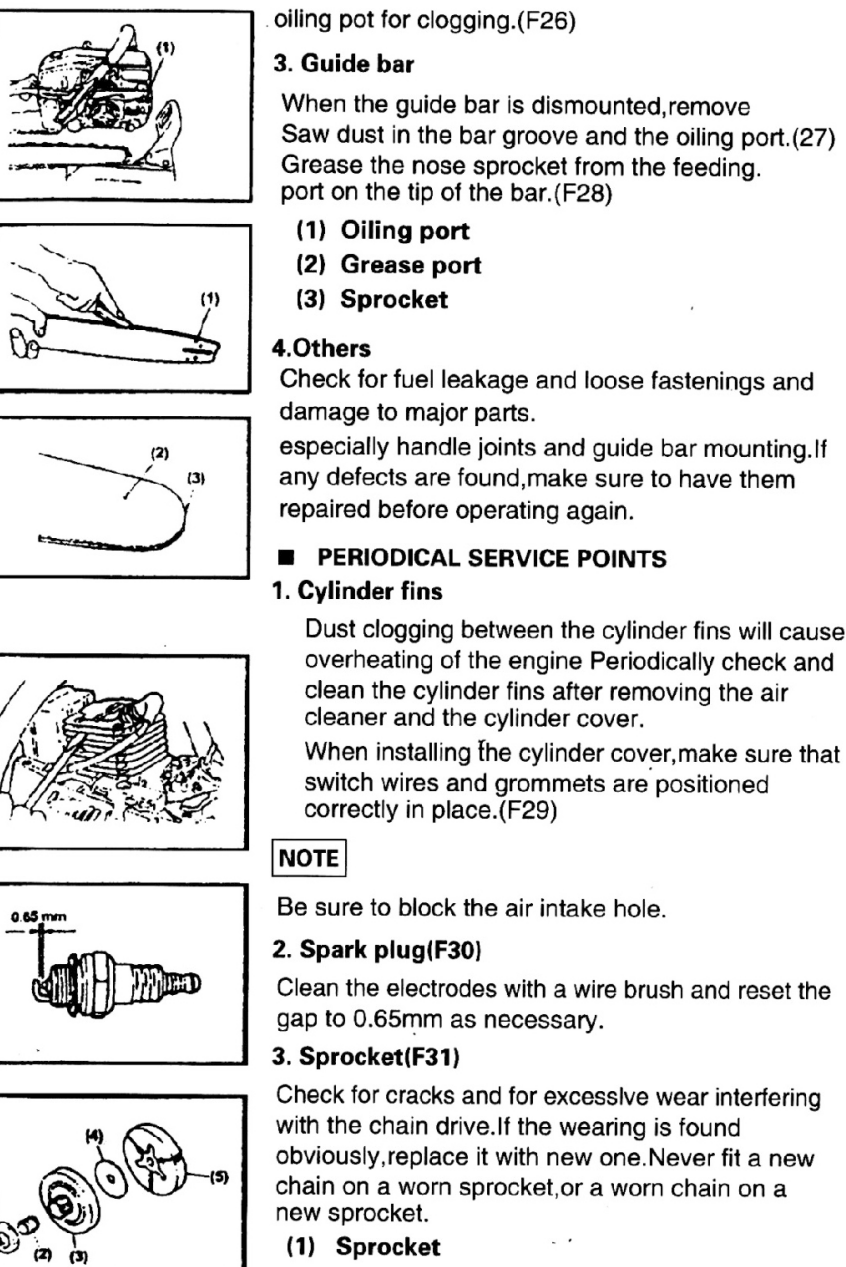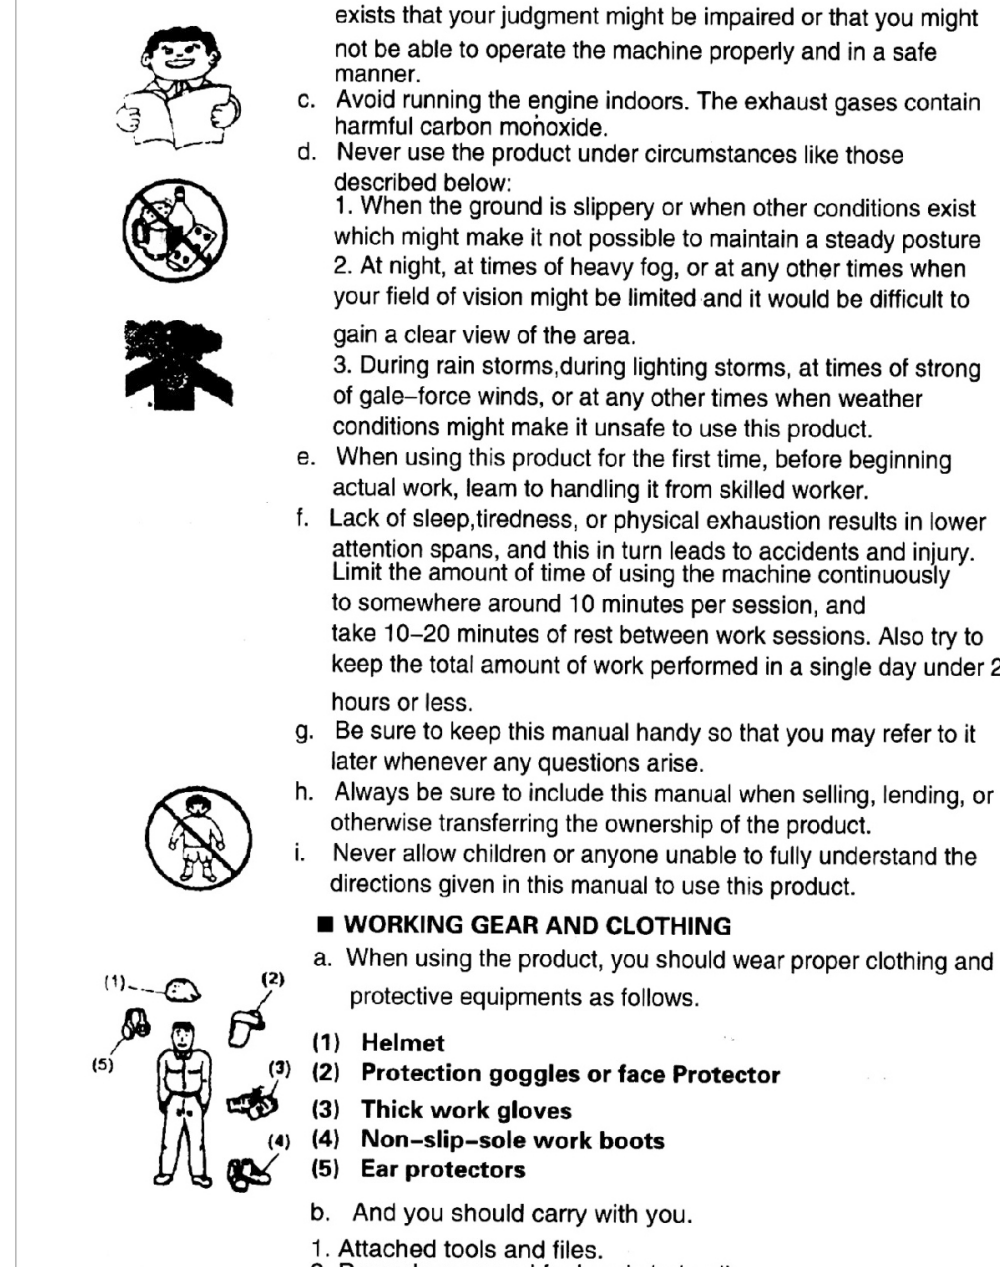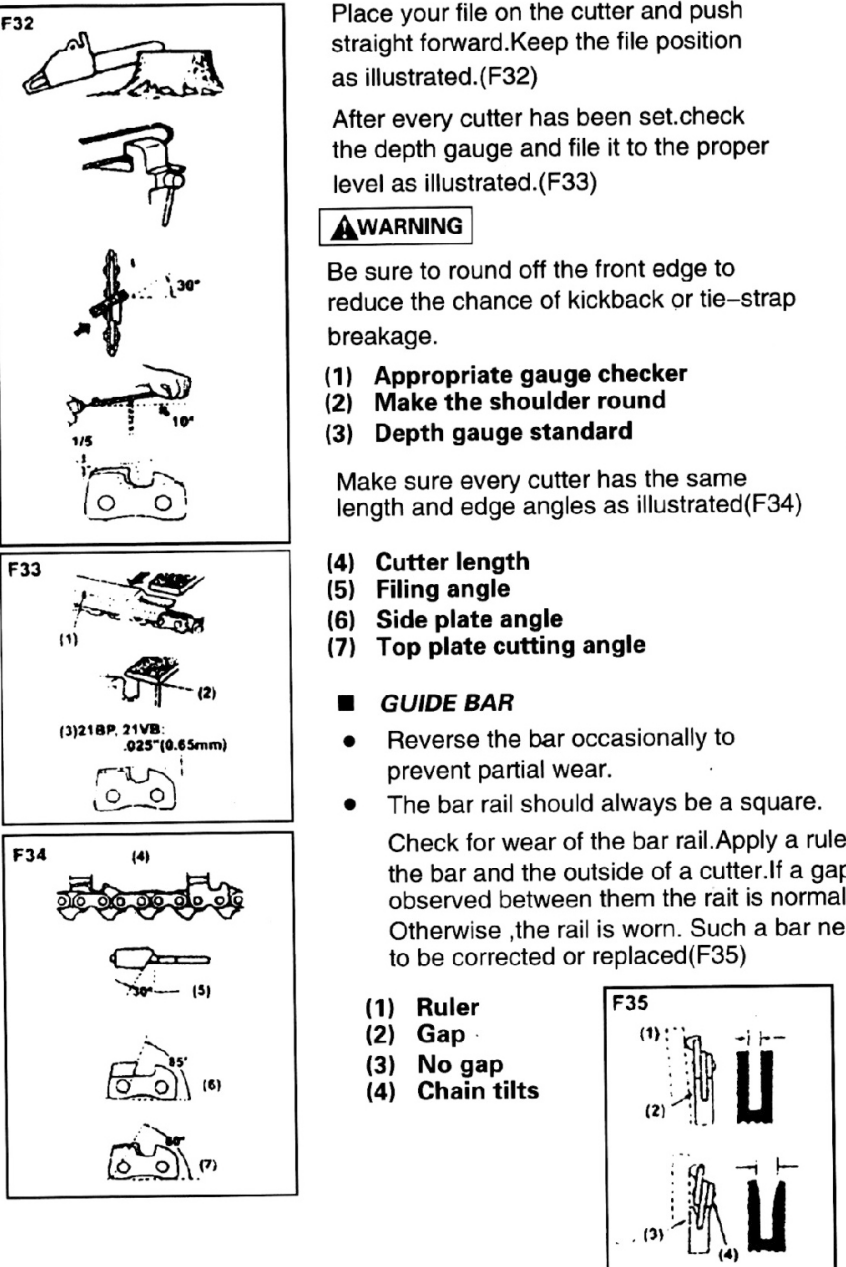

Konsumentkontakt
Arc E-commerce AB
Box 3124
13603 Hänge
Sverige