



# HyperX Cloud II Wireless



---

## Part Numbers

---

HHSC2X-BA-RD/G

---



 
---

## TABLE OF CONTENTS

Overview .....	3
Specifications.....	4
Setting up with PC .....	5
Setting up with PlayStation 4.....	9
Controls .....	10
Mic mute / mic monitoring button.....	10
Power button / 7.1 Surround Sound button.....	10
Volume wheel .....	11
Status LED .....	10
Charging the Headset.....	12
Wired charging .....	12
HyperX NGENUITY Software.....	12
Manually Pairing the Headset and USB Adapter .....	13



## Overview

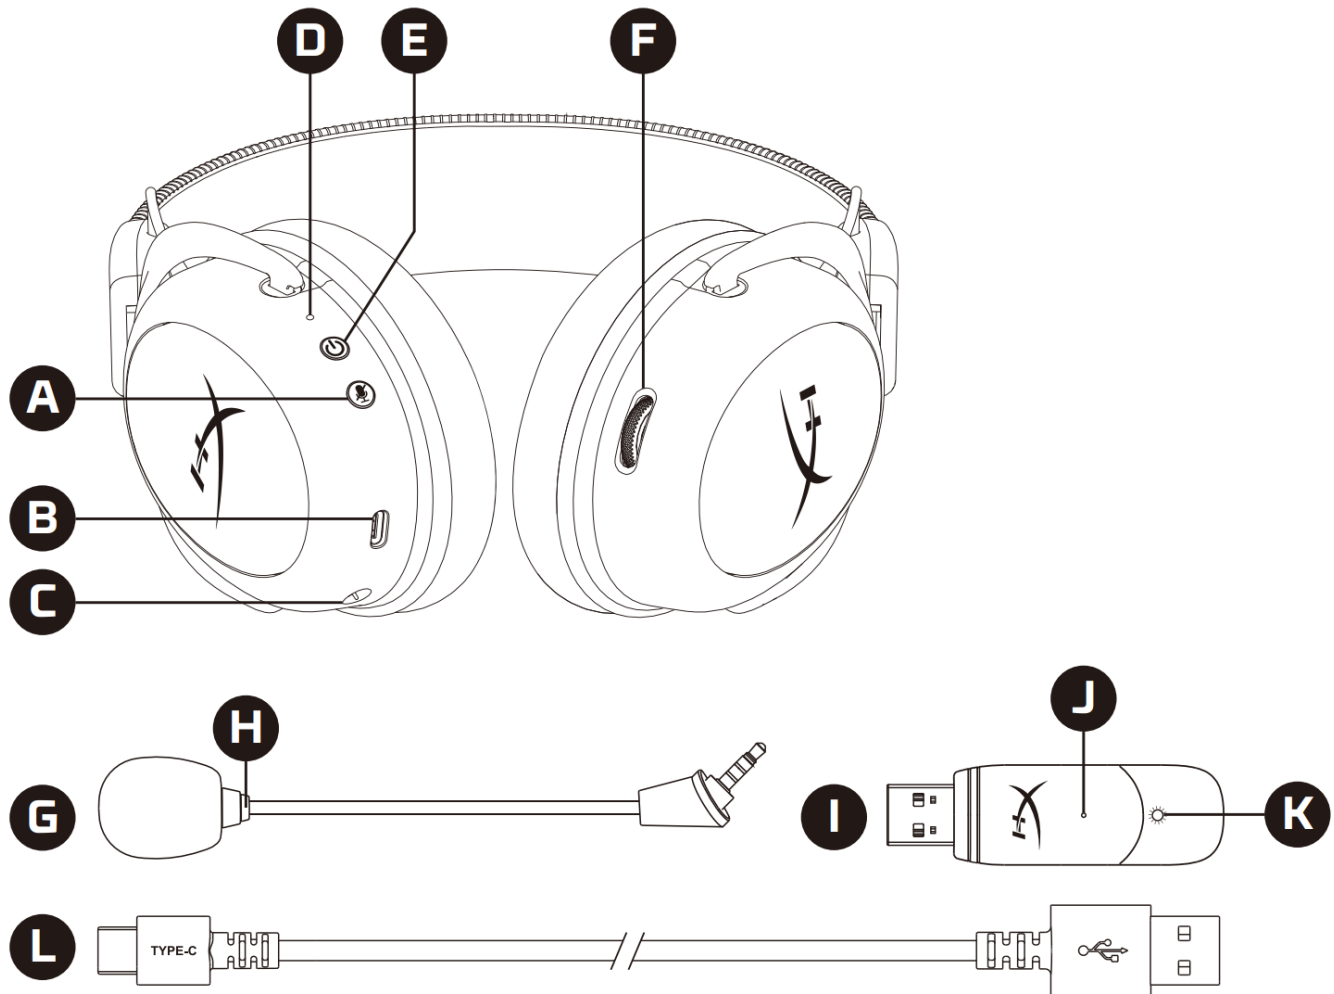

A. Mic mute / mic monitoring button

B. USB charge port

C. Microphone port

D. Status LED

E. Power / 7.1 Surround Sound button

F. Volume wheel

G. Detachable microphone

H. Microphone mute LED

I. USB adapter

J. Wireless pairing pin hole

K. Wireless status LED

L. USB charge cable



---

## Specifications

### Headphone

Driver: Dynamic, 53mm with neodymium magnets

Type: Circumaural, Closed back

Frequency response: 15Hz–20kHz

Impedance: 60  $\Omega$

Sound pressure level: 104dB SPL/mW at 1kHz

T.H.D.:  $\leq 1\%$

Weight: 300g

Weight with mic: 309g

Cable length and type: USB charge cable (0.5m)

### Microphone

Element: Electret condenser microphone

Polar pattern: Bi-directional, Noise-cancelling

Frequency response: 50Hz–6.8kHz

Sensitivity: -20dBV (1V/Pa at 1kHz)

### Battery life\*

30 hours

### Wireless Range\*\*

 
2.4 GHz

Up to 20 meters


\*Tested at 50% headphone volume. Battery life varies depending upon the usage.

\*\*Wireless range may vary due to environmental conditions.

## Setting up with PC

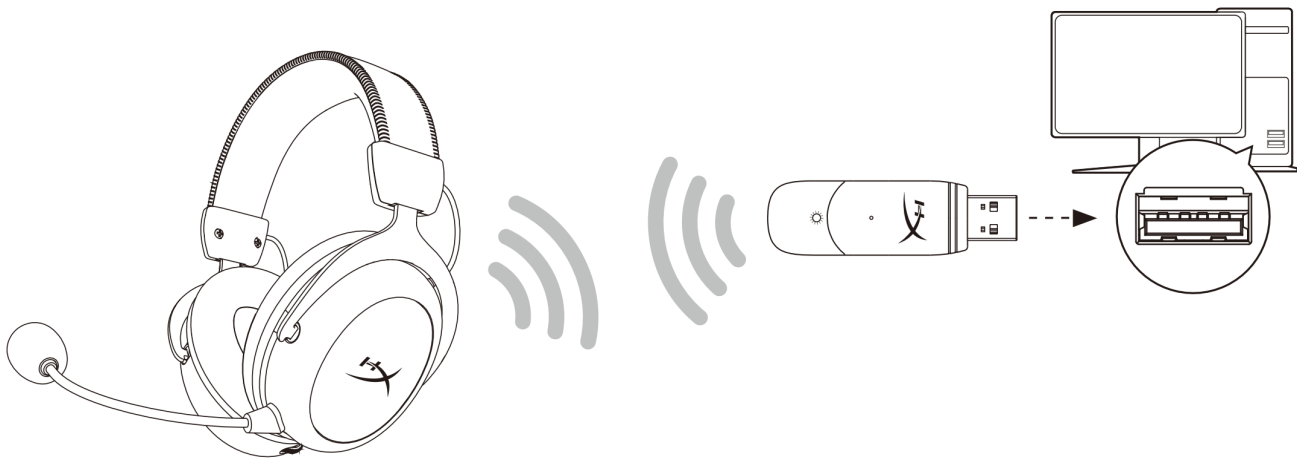


 1. Connect the wireless USB adapter to the PC.
2. Power on the headset.
3. Right click *speaker icon* > Select *Open Sound settings* > Select *Sound Control Panel*

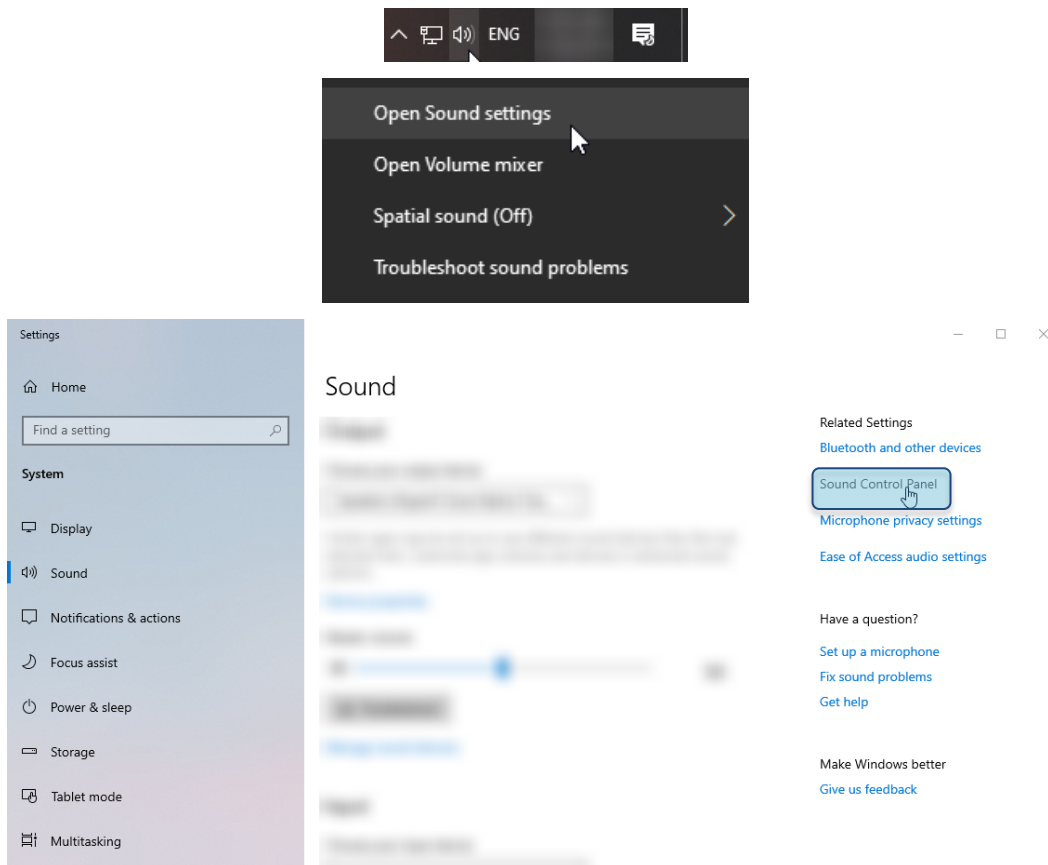




 4. Under the *Playback* tab, click on “**HyperX Cloud II Wireless**” and click on the *Set Default* button.

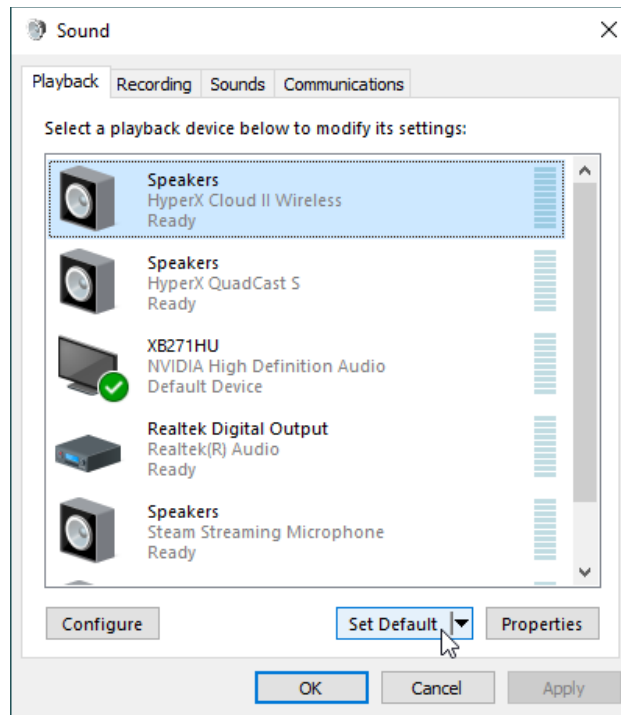


 5. Right click on “**HyperX Cloud II Wireless**” and click on *Configure Speakers*.

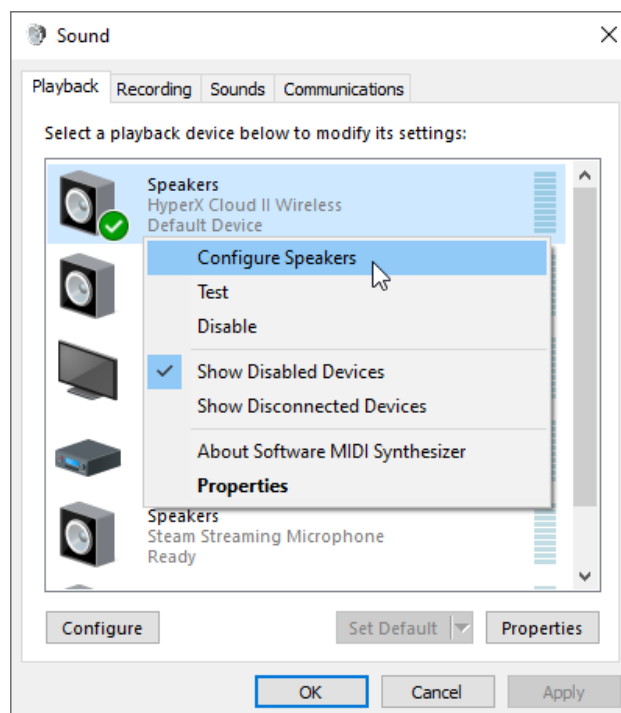




 6. Select *7.1 Surround* as the speaker configuration and click next.

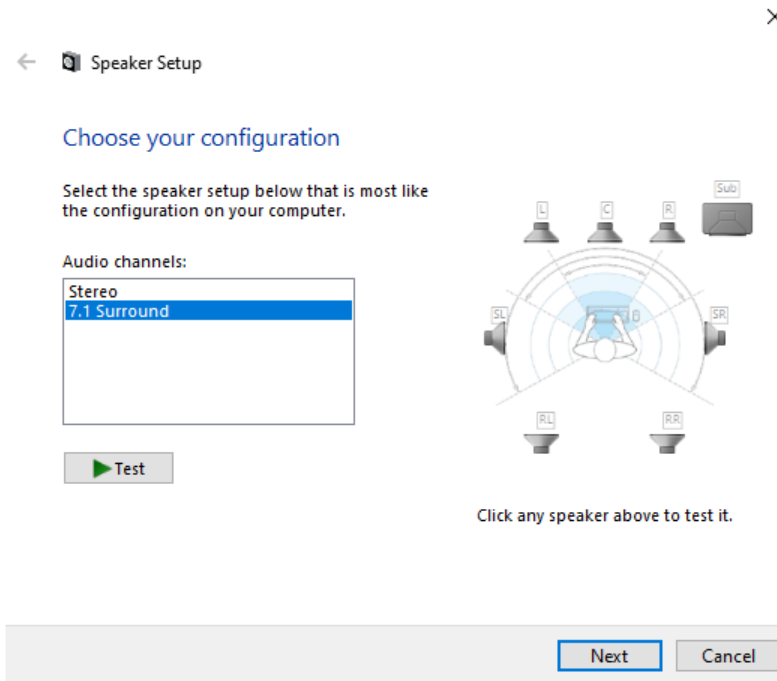


 7. Under the *Recording* tab, click on “**HyperX Cloud II Wireless**” and click on the *Set Default* button.

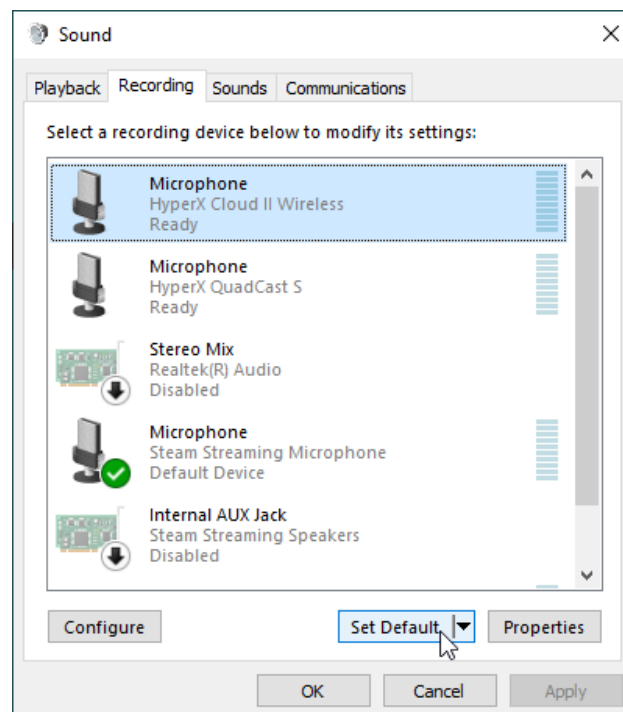




 8. Under the *Playback* tab, verify that “**HyperX Cloud II Wireless**” is set as *Default Device* and *Default Communication Device*. Under the *Recording* tab, verify that “**HyperX Cloud II Wireless**” is set as *Default Device*.

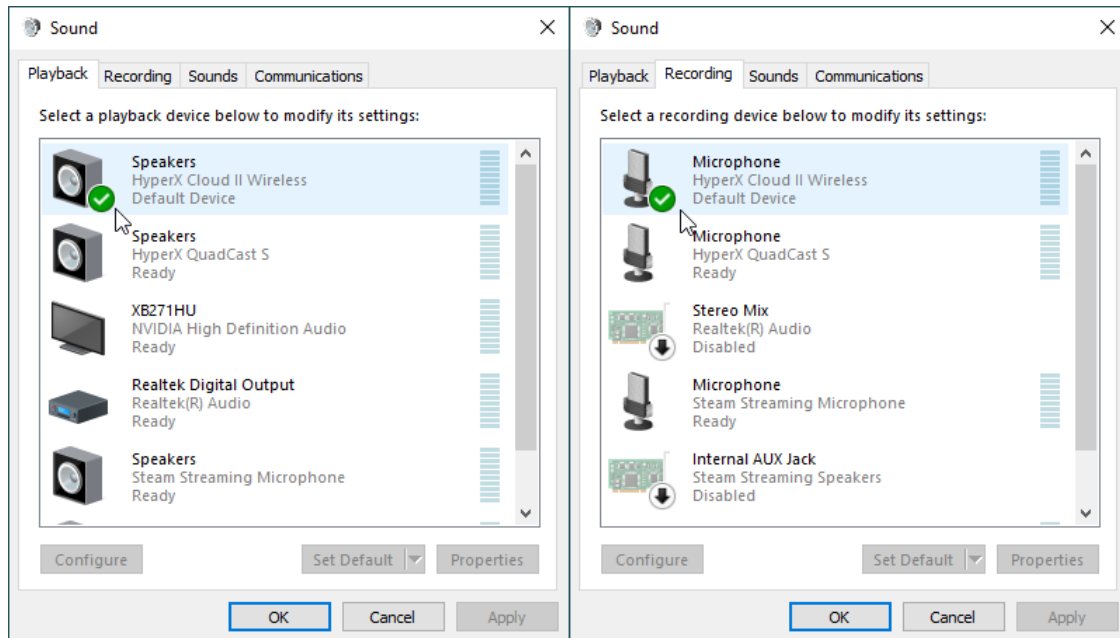




## Setting up with PlayStation 4

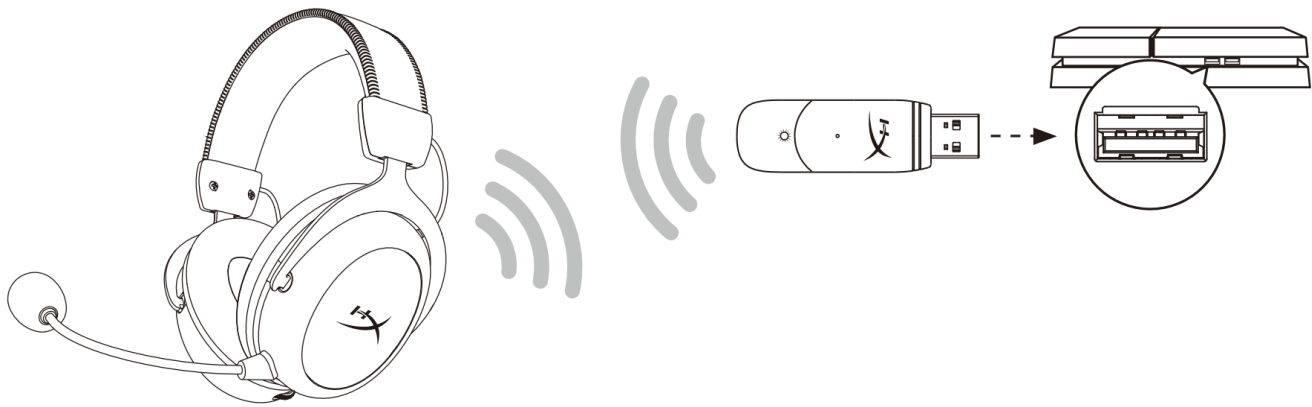 


 1. Set *Input Device* to **USB Headset (HyperX Cloud II Wireless)**
2. Set *Output Device* to **USB Headset (HyperX Cloud II Wireless)**
3. Set *Output to Headphones* to **All Audio**
4. Set *Volume Control (Headphones)* to maximum.

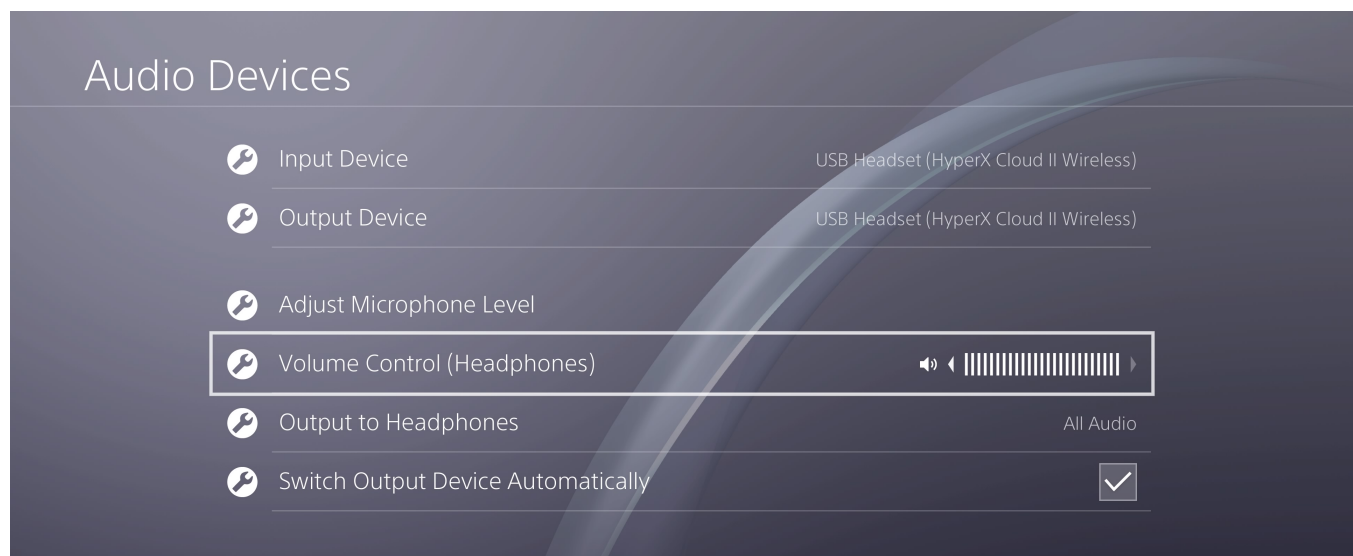



## Controls

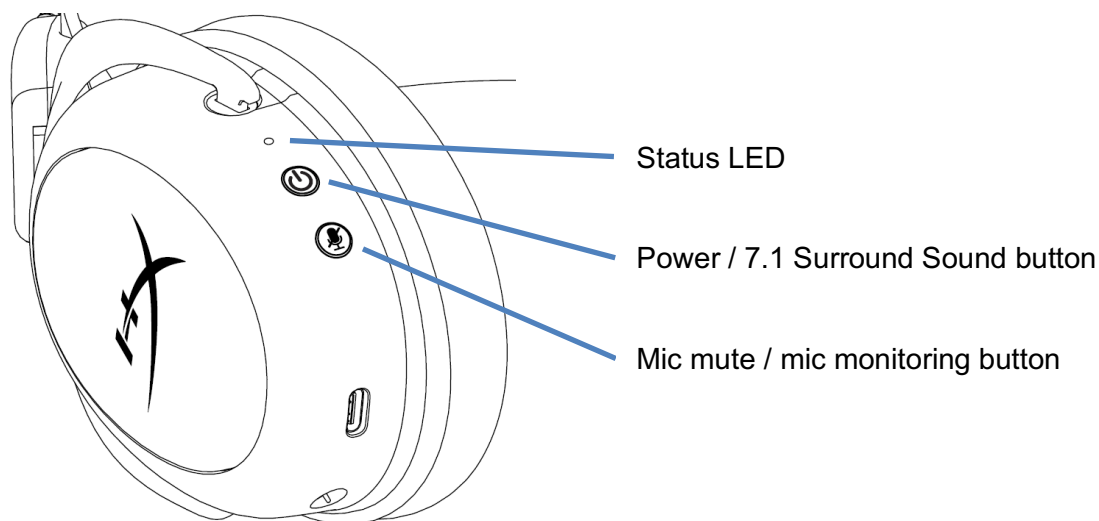 

### Status LED

Status	Battery Level	LED
<b>Pairing</b>	-	Flash green and red every 0.2s
<b>Searching</b>	-	Slow breathing green
<b>Connected</b>	90% - 100%	Solid green
	15% - 90%	Blinking green
	< 15%	Blinking red

 
### Power / 7.1 Surround Sound button

- Hold for 3 seconds to power headset on/off
- Press to toggle 7.1 Surround Sound\* on/off

\*Virtual 7.1 surround sound outputs as a 2 channel stereo signal to be used with stereo headphones.

### Mic mute / mic monitoring button

- Press to toggle mic mute on/off
  - LED On – Mic muted
  - LED Off – Mic active
- Hold for 3 seconds to toggle mic monitoring on/off

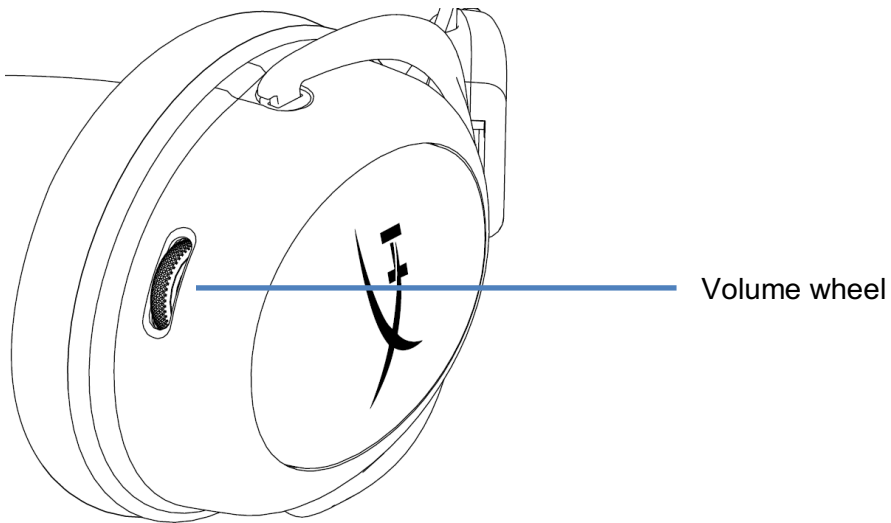

### Volume wheel

- Scroll up and down to adjust volume level

**WARNING:** Permanent hearing damage can occur if a headset is used at high volumes for extended periods of time

 
## Charging the Headset

It is recommended to fully charge your headset before first use.

When charging the headset, the headset status LED will indicate the current charge status.

Status LED	Charge Status
Solid green	Fully charged
Breathing green	15% - 99% battery level
Breathing red	< 15% battery level

### Wired charging

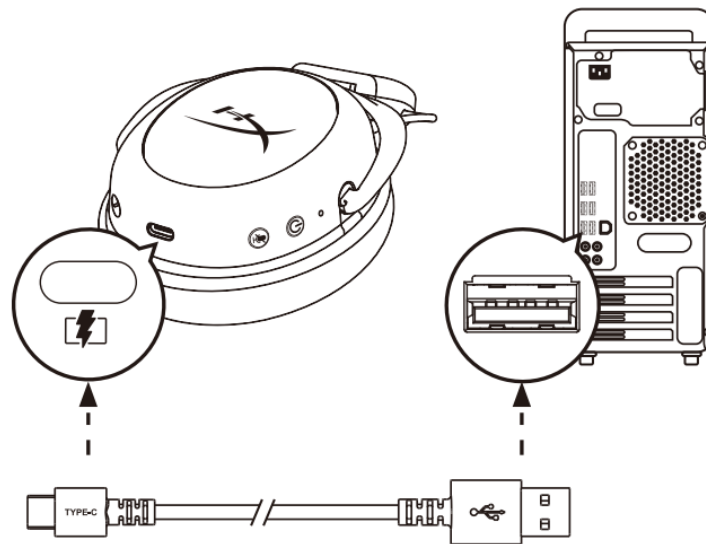

To charge the headset via wired, plug the headset to a USB port with the USB charge cable.

## HyperX NGENUITY Software

Download NGENUITY software at: [hyperxgaming.com/ngenuity](https://hyperxgaming.com/ngenuity)

