


XD MICROPHONE

QUICK START GUIDE

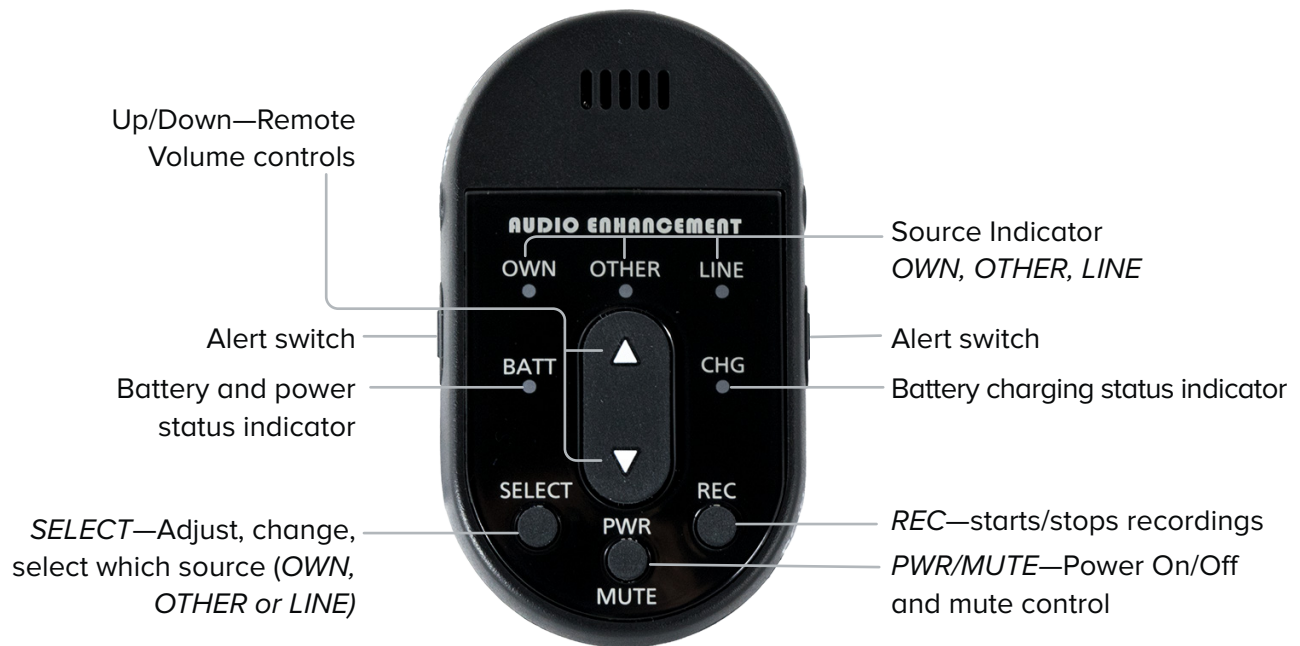

TEACHER MICROPHONE LINKING

1. With the microphone off, press the Link button on the front of the amplifier or side of the BEAM (Look for the blinking yellow LED)



2. With the microphone off, press and hold REC button. Then promptly press and hold PWR until microphone is linked.



3. Successful microphone linking will produce a *beep* through the system, and on the front of the amplifier you will see an additional green LED



STUDENT MICROPHONE LINKING

1. Press and hold the *PWR LINK* button on the back of the XD Student Microphone



2. While holding use your thumb to slide the *TALK* button up into to the on position. Successful linking will produce an audible beep as well as an additional green LED.



LINKING THE MEDIA CHANNEL

1. The microphone cannot be linked to the Media channel unless *MIC 1* and *MIC 2* channels are on
2. Make sure the microphone needing to be linked, either the Teacher or Student, is turned off
3. Confirm that both *Channel 1* and *Channel 2* mics are on and connected to the amplifier
4. Follow XD Teacher or XD Student Microphone Linking section instructions
5. In around 10 seconds you should hear a beep and the amplifier *LINK* LED will be solid yellow

CHARGING YOUR XD MICROPHONE

1. Connect the Micro-USB plug of the charger to the DC input terminal of the microphone. After connecting the microphone to the charger, the charge indicator (*red*) indicates the charging status
2. When the charge indicator stops blinking, the microphone is fully charged. If the charge indicator is blinking rapidly it means that the Micro-USB isn't fully inserted

REMINDER

Charge the microphone at the end of each day to ensure its functionality and longevity.

XD TEACHER MICROPHONE VOLUME CONTROL

1. Press *SELECT* to choose the desired source to control. An LED will illuminate to indicate the selected source. *OWN* will control the level of the microphone currently in use. *OTHER* will control the other microphone if a second microphone has been linked. *LINE* is not used with this system
2. Press the up arrow to increase the level of the selected source or the down arrow to decrease the level