


TOZO®
www.tozostore.com

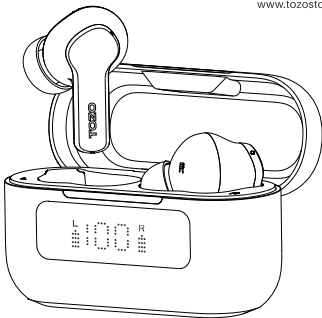

NC3 ACTIVE NOISE
CANCELLATION

Quick Guide

1

 
Bluetooth pairing and wearing

Bluetooth pairing

Open the case lid, earbuds will reconnect to the last paired device if paired before.

If not paired or pairing canceled, the earbuds enter pairing mode with a slow white light blink.

Search [TOZO NC3] on your phone and connect.



Wearing

1. Ensure the eartip is facing downwards, and then place the earbuds into your ears.
2. Rotate the earbuds towards the side of your auricle to fit snugly.



EN | JP | DE | FR | IT | ES | NL | SE

X1: Press once **X2:** Press twice

X3: Press three times

Hold: Press and hold for 2 seconds

X2 



Previous song | 前の曲 |
Vorheriges lied | Chanson trécedente |
Canzone precedente | Canción anterior |
Vorig nummer | Föregående låt

Hold



Volume down | 音量を下げる |
Lautstärke runter | Baisser le volume |
Volume basso | Bajar volumen |
Volume verminderen | Sänk volymen

X3 



Normal mode | ノーマルモード |
Normaler Modus | Mode normal |
Modalità normale | Modo normal |
Normale modus | Normalt läge

X1 



Active Noise Cancellation mode/Transparent mode | アクティブノイズキャンセルモード/透過モード | Aktiver Geräuschunterdrückungsmodus/Transparenter Modus | Mode d'annulation active du bruit/Mode transparent | Modalità di cancellazione attiva del rumore/Modalità trasparente | Modo de cancelación activa de ruido/Modo transparente | Actieve ruisonderdrukkingsmodus/Transparente modus | Aktivt brusreduceringsläge/Transparent läge

X1 



Answer | 答え |
Antworten | Réponse |
Rispondere | Responder |
Antwoorden | Svar

Hold



Reject | 拒絶 |
Ablehnen | Rejeter |
Rifiutare | Rechazar |
Afwijzen | Avvisa

2

Smart touch control

X1 



Play/Pause | 再生/一時停止 |
Spielen/Pause | Jouer/Pause |
Giocare a/Pausa | Tocar/Pausa |
Toneelstuk/Pauze | Spela/Paus

X2 



Next song | 次の曲 |
Nächstes lied | Chanson prochaine |
Canzone prossima | Canción siguiente |
Volgende nummer | Nästa låt

Hold



Volume up | 音量を上げる |
Lauter | Monter le son |
Alza il volume | Sube el volumen |
Volume omhoog | Høj volymen

X3 



Voice assistant | 音声アシスタント |
Sprachassistenten | Assistant vocal |
Assistente vocale | Asistente de voz |
Spraakassistent | Röstassistent

Hold



Hang up | 電話を切る |
Auflegen | Raccrocher |
Appendere | Colgar |
Ophangen | Lägga på



Power on



Power off

EN

Power on :

Open the lid; or press and hold the earbuds 3 seconds.

Power off :

Place the earbuds back into the case and close the lid; or press and hold the earbuds 5 seconds.

DE

Power on :

Öffne den Deckel; oder drücke und halten für 3 Sekunden.

Power off :

Lege die Ohrhörer zurück in das Gehäuse und schließe den Deckel; oder drücke und halten für 5 Sekunden.

IT

Accensione :

Apri il coperchio; oppure tieni premuto per 3 secondi.

Spegnimento :

Riponi gli auricolari nel contenitore e chiudi il coperchio; oppure tieni premuto per 5 secondi.

NL

Aanzetten:

Open de deksel; of houd 3 seconden ingedrukt.

Uitschakelen:

Plaats de oortjes terug in het geval en sluit de deksel; of houd 5 seconden ingedrukt.

3

Power on/off

JP

電源を入れる :

蓋を開きます ; または3秒間押し続けます。

電源を切る :

イヤフォンをケースに戻し、蓋を閉じます ; または5秒間押し続けます。

FR

Allumer :

Ouvrez le couvercle; ou maintenez appuyé pendant 3 secondes.

Éteindre :

Remplacez les écouteurs dans le boîtier et fermez le couvercle; ou maintenez appuyé pendant 5 secondes.

ES

Encendido :

Abra la tapa; o manténgalo presionado por 3 segundos.

Apagado :

Coloque los auriculares de nuevo en el estuche y cierre la tapa; o manténgalo presionado por 5 segundos.

SE

Ström på :

Öppna locket; eller håll nedtryckt i 3 sekunder.

Stäng av :

Lägg öronsnäckan tillbaka i fodralet och stäng locket; eller håll nedtryckt i 5 sekunder.

4

Reset

If only one earbud is working, please follow these steps:

1. Check if there is dirt on the charging pins of the earbuds. If so, please clean them.
2. If the issue of one earbud not working persists after cleaning, place the earbuds in the charging case and open the lid. Hold down the reset button on the charging case for 10 seconds, and then wait for another 10 seconds for the reset to complete.

After the reset, the earbuds should be ready for normal use once you open the lid.

If this method does not work, repeat the steps above once again.



🕒 10"



5

Charging

Charge the case via USB-C connector.
(USB-C cable included)



Don't put wet earbuds into the charging case,
fully dry off the earbuds
before charging.



Thank you for purchasing the TOZO authentic product.

For more latest products, parts and accessories,
please visit: www.tozostore.com

For any assistance please contact Email: info@tozostore.com

