

**2-YEAR LIMITED WARRANTY**  
**VISIT [PowerA.COM/SUPPORT](http://PowerA.com/Support) FOR DETAILS**

Garantie limitée de 2 ans – Consultez le site visit [PowerA.com/Support](http://PowerA.com/Support) pour plus de détails

Beschränkte 2-Jahres-Garantie – Weitere Informationen unter [PowerA.com/Support](http://PowerA.com/Support)

Garantía limitada de 2 años – Visita [PowerA.com/Support](http://PowerA.com/Support) para obtener más información

Garanzia limitata di 2 anni – Visita [PowerA.com/Support](http://PowerA.com/Support) per i dettagli

Garantia limitada de 2 anos – Visita [PowerA.Com/Support](http://PowerA.Com/Support) para saberes mais

BDA LLC., 15525 WOODINVILLE-REDMOND RD NE, WOODINVILLE, WA 98072

## CONTENTS

FUSION Pro Wireless Controller | Pro Pack (with four removable paddles) | Protective case

9.8ft (3m) braided USB cable\* with snap-lock, inline release and cable wrap

Pro Pack controller cover | One tall concave analog stick | One tall convex analog stick

One saddle thumbstick adapter | Two swappable anti-friction rings | User Manual

*\*NOTE: The included USB cable is a dedicated (proprietary) USB cable for this FUSION Pro Wireless Controller*





FUSION

BY

PowerA™

## PRO WIRELESS CONTROLLER

MANETTE SANS FIL PRO

### USER MANUAL

MANUEL DE L'UTILISATEUR  
BEDIENUNGSANLEITUNG  
MANUAL DE USUARIO  
MANUALE PER L'USO  
MANUAL DO USUÁRIO

## FRONT



**BACK**

**R2 BUTTON/  
TRIGGER**

**USB PORT**

**PROGRAM  
BUTTON**

**L2 BUTTON/  
TRIGGER**

**RIGHT 3-WAY  
TRIGGER LOCK**

**LEFT 3-WAY  
TRIGGER LOCK**

**MAPPABLE  
PRO PACK**

**STEREO  
HEADSET  
PORT**

**RUBBERIZED  
GRIPS**

**WIRELESS/WIRED  
SWITCH**



 
## THUMBSTICK / ANTI-FRICTION RING REPLACEMENT

AUSTAUSCH DES ANALOGSTICKS / DES RINGS GEGEN ABRIEB | SUSTITUCIÓN DEL CONTROL ANALÓGICO / DEL ANILLO ANTIFRICCIÓN | REMPLACEMENT DU STICK ANALOGIQUE / DE LA BAGUE ANTI-FRICTION  
SOSTITUZIONE STICK ANALOGICO / GUARNIZIONE ANTI-ATTRITO | SUBSTITUIÇÃO DOS STICKS ANALÓGICOS / ANÉIS ANTIFRIÇÃO


1




2

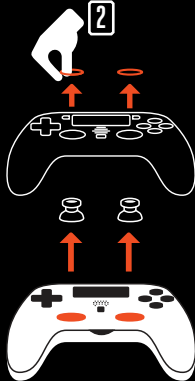

3

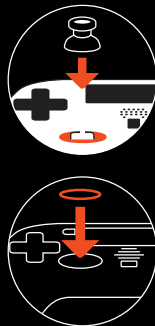 


4

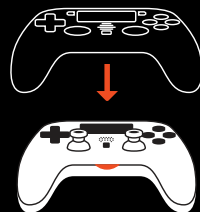 

## MAPPING PRO PACK PADDLES

 PROGRAMMIERUNG DER PRO PACK PADDLES | ASIGNACIÓN DE LOS GATILLOS PRO PACK | CARTOGRAPHIE DES PALETTES PRO PACK | MAPPATURA DEI PADDLE PRO PACK | MAPEAR OS CONTACTOS DO PRO PACK

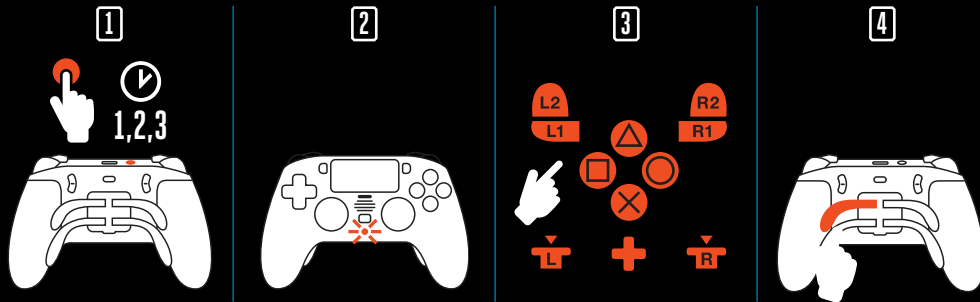

**NOTE:** Repeat for the remaining Pro Pack paddles. Pro Pack paddle assignments will remain in memory even after disconnected.

**REMARQUE:** Recommencez l'opération pour les palettes Pro Pack restantes. les attributions des palettes Pro Pack resteront en mémoire même lorsque le dispositif est déconnecté. | **HINWEIS:** Wiederholen Sie diese Schritte für die verbleibenden Paddles Ihres Pro Packs. Die Belegungen der Tasten für das Pro Pack Paddle bleiben auch nach der Trennung vom Stromanschluss im Speicher. | **NOTA:** Repite esta operación para el resto de los gatillos Pro Pack. Las asignaciones de los gatillos Pro Pack permanecerán en la memoria incluso una vez desconectados. | **NOTA:** Ripetere l'operazione per i restanti paddle Pro Pack. Le assegnazioni dei paddle Pro Pack rimarranno in memoria anche dopo la disconnessione. | **NOTA:** Repete a operação para os restantes contactos do Pro Pack. as atribuições de contactos do Pro Pack permanecem na memória mesmo que o dispositivo seja desligado.


## RESETTING THE PRO PACK PADDLES

 ZURÜCKSETZEN DES PRO PACK PADDLES | RESTABLECIMIENTO DE LOS GATILLOS PRO PACK  
REINITIALISATION DES PALETES PRO PACK | RESET DEI PADDLE PRO PACK  
REPOR OS CONTACTOS DO PRO PACK







## 3-WAY TRIGGER LOCK ADJUSTMENT

EINSTELLEN DER 3-WEGE-TRIGGER-SPERREN | AJUSTE DE LOS BLOQUEOS DE GATILLO  
DE TRES POSICIONES | RÉGLAGE DU VERROUILLAGE DE LA GÂCHETTE À 3 VOIES  
REGOLAZIONE DEL BLOCCO GRILLETTO A 3 VIE | 3 POSIÇÕES DE AJUSTE DE BLOQUEIO DE AÇÃO

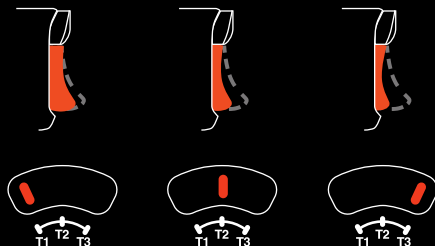

## PRO PACK INSTALLATION/REMOVAL

    PRO PACK ANBRINGEN/ENTFERNEN | INSTALACIÓN/SUSTITUCIÓN DEL PRO PACK | INSTALLATION / ENLÈVEMENT DE PRO PACK | INSTALLAZIONE/RIMOZIONE PACK PRO | INSTALAÇÃO/REMOÇÃO DO PRO PACK

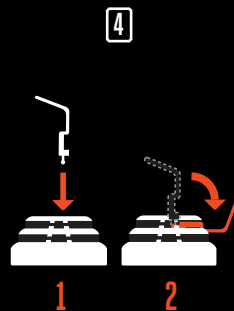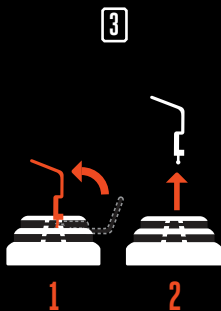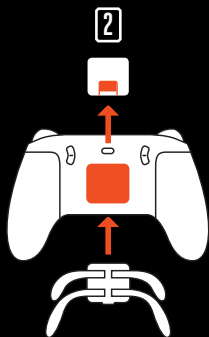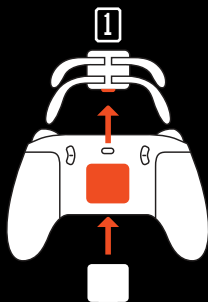

*NOTE: Store all unused components in protective case when not in use.*

*REMARQUE: Rangez dans la coque de protection lorsqu'ils ne sont pas utilisés. | HINWEIS: Bewahren Sie gegen Abrieb in dem Schutzetui auf, wenn Sie nicht benötigen. | NOTA: Guarda en el estuche protector cuando no los utilices. | NOTA: Conservare nella custodia protettiva quando non vengono utilizzate. | NOTA: Guarda na bolsa de proteção quando não estiver a ser utilizado.*



## SETUP

### RECHARGEABLE 1000 MAH INTERNAL BATTERY

Controller was charged at the factory, but if Light Bar LED is flashing red, plug in USB cable to charge prior to initial pairing.

**NOTE:** Remember to charge controller at least once every 45-60 days (regardless of use) so battery retains ability to charge. Battery capacity will gradually reduce over time with repeated charging.

### PS4™ USB WIRED MODE

1. Slide Mode Switch on back of controller to the "PS4™ USB" centre position.
2. Connect USB cable into available port on PlayStation®4 and into USB port on controller. If PS4™ is OFF, press PS button to power PlayStation®4 "ON". The controller's LED Connection Indicator will illuminate, and a notification should show up on the home screen indicating the controller is plugged in.
3. For player and controller assignment, refer to the PlayStation®4 user manual.

**NOTE:** To remove cable, squeeze two side buttons near port and pull gently. USB cable also includes inline release plug closer to end of cable that will disconnect when needed.

### PS4™ BLUETOOTH WIRELESS MODE

1. Upon first use, slide the Mode Switch on the back of the controller to "PS4™ BT" left position.
2. Hold both "PS" button and "SHARE" buttons together for 3 seconds until the LED quickly flashes.
3. On the PlayStation®4 console, use a DUALSHOCK®4 wireless controller to access Setting -> Devices -> Bluetooth Devices. To select the "PS4™ FUSION Pro" use the official controller to Choose "YES" when prompted.
4. Press the PS button on the PS4™ FUSION Pro Controller to confirm.

### PC USB WIRED MODE

1. Slide Mode Switch on back of controller to the "PC USB" right position.
2. Connect USB cable into available USB port on PC and into USB port on controller. The controller's LED Connection Indicator will illuminate, indicating the controller is plugged in.
3. Follow PC software or game service for controller setup or button mapping if needed.

### UNDERSTANDING LED INDICATORS

Light Bar LED performs similar to Light Bar on DualShock 4. Pro Pack Program LED flashes during paddle programming.





## TROUBLESHOOTING

For latest FAQs, visit [PowerA.com/Support/](http://PowerA.com/Support/)

**Problem:** Controller will not connect to game console.

**Solution: (wired mode)** Confirm cable is properly connected to console. Confirm Inline Release Cable is properly connected.

**Solution: (wireless mode)** If using wirelessly confirm the controller is in "BT Mode". Confirm that the controller is still paired in Settings » Devices » Bluetooth Devices.

**Problem:** Pro Pack paddles are not functioning properly.

**Solution:** Confirm Pro Pack is securely installed to controller. Confirm Pro Pack paddles are securely installed. Review "Mapping Pro Pack Paddles" section above. For additional troubleshooting, refer to your PlayStation®4 user guide.

## BATTERY WARNING

- Don't attempt to replace the rechargeable battery yourself- you may damage the battery, which could cause overheating, fire, and injury. The Lithium-ion battery in your device should be serviced or recycled by PowerA or an authorized provider and must be recycled or disposed of separately from household waste.
- Dispose of batteries according to your local environment laws and guidelines.

- Don't use or leave the product containing rechargeable batteries exposed to very high temperature (e.g. at strong direct sunlight or in a vehicle in extremely hot weather). Otherwise, it can overheat, catch fire, or the performance will degenerate, and the service life will be shortened.
- Don't use the rechargeable battery item in a location where static electricity is rich, otherwise, the internal safety devices may be damaged, causing a harmful situation.
- In case the electrolyte gets into the eyes due to the leakage of battery, do not rub eyes! Rinse eyes with clean running water and seek medical attention immediately. Otherwise, it may injure eyes or cause a loss of sight.
- If the battery gives off an odor, generates heat, or in any way appears abnormal during use, recharging or storage, immediately remove it from battery charger and place it in a contained vessel such as a metal box.
- Be aware discarded batteries may cause fire, do not heat the controller or throw it into fire.

## MOTION WARNING

Playing video games can make your muscles, joints, skin or eyes hurt. Follow these instructions to avoid problems such as tendinitis, carpal tunnel syndrome, skin irritation or eyestrain:





- Avoid excessive play. Take a 10 to 15 minute break every hour, even if you don't think you need it. Parents should monitor their children for appropriate play.
- If your hands, wrists, arms or eyes become tired or sore while playing, or if you feel symptoms such as tingling, numbness, burning or stiffness, stop and rest for several hours before playing again.
- If you continue to have any of the above symptoms or other discomfort during or after play, stop playing and see a doctor.

#### CUSTOMER SERVICE

For support with your authentic PowerA accessories, please visit [PowerA.com/Support](http://PowerA.com/Support).

#### MANUFACTURED BY

Bensussen Deutsch & Associates, LLC. (BDA, LLC.) 15525 Woodinville-Redmond Rd. NE Woodinville, WA 98072. [BDAINC.com](http://BDAINC.com) | [POWERA.com](http://POWERA.com)

#### ADDITIONAL LEGAL

PowerA, the PowerA logo, and the FUSION by PowerA logo are trademarks of Bensussen Deutsch and Associates, LLC. TM and © Bensussen Deutsch and Associates, LLC. Manufactured and distributed under license by Sony Interactive Entertainment LLC. "PS" and "PlayStation" are registered trademarks or trademarks of Sony Interactive Entertainment Inc. All rights reserved. All other

trademarks are the property of their respective owners. **Made in China.**

#### FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:





- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### CAN ICES-3(B)/NMB-3(B)

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference;
2. This device must accept any interference, including interference that may cause undesired operation of the device

### AUSTRALIAN WARRANTY STATEMENT

This product comes with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. If purchased within Australia or New Zealand, this product comes

with a One-year warranty from date of purchase. Defects in the product must have appeared within One year from date of purchase, in order to claim the warranty. All warranty claims must be facilitated back through the retailer of purchase in accordance with the retailer's return policies and procedures. Any expenses incurred, as a result of returning the product to the retailer of purchase are the full responsibility of the consumer.

### AU WHOLESALE DISTRIBUTOR

Level 2, 2 Darling Street South Yarra, Australia VIC 3141  
bluemouth.com.au Email: support@bluemouth.com.au +61 (3) 9867 2666

### REGIONAL COMPLIANCE SYMBOLS

More information available via web-search of each symbol name.



**(EU and Turkey only)** The WEEE (Waste of electrical and electronic equipment) symbol requires battery disposal outside of other household waste per local regulations. Contact your city office, waste disposal service, or retailer for guidance.



CE (Conformité Européenne aka European Conformity) is a certification mark that indicates conformity with health, safety, and environmental protection standards for products sold within the European Economic Area.





The Regulatory Compliance Mark is a visible indication of a product's compliance with all applicable ACMA (Australian Communications and Media Authority) regulatory arrangements, including all technical and record-keeping requirements regarding the electrical safety and/or electromagnetic compatibility (EMC).

### WARRANTY

2-Year Limited Warranty: Visit [PowerA.com/support](http://PowerA.com/support) for details.

### DECLARATION OF CONFORMITY

Hereby, Bensussen Deutsch & Associates LLC at 15525 Woodinville-Redmond Road NE, Woodinville, WA 98072 USA, declares that this wireless controller is in compliance with Directive 2014/53/EU. The full text of the EU Declaration of Conformity is available at the following internet address:

[PowerA.com/compliance](http://PowerA.com/compliance)

### WIRELESS SPECIFICATIONS

Frequency Range: 2.4 – 2.48356Hz

Max E.I.R.P.: < 10dBm for EU

### ELECTRICAL RATING INFORMATION

DC 5V, 500mA

## INSTALLATION

### BATTERIE RECHARGEABLE INTERNE 1000 MAH

La manette a été chargée en usine mais si le voyant LED clignote en rouge, branchez le câble USB pour la charger avant la synchronisation initiale.

**REMARQUE:** Veillez à charger le contrôleur régulièrement (45-60d) car la batterie peut perdre de sa capacité de charge après une période prolongée. La capacité de la batterie diminuera progressivement avec le temps avec des charges répétées.

### MODE FILAIRE USB PS4

1. Faites glisser le commutateur de mode au dos de la manette sur la position centrale «PS4™ USB».
2. Branchez le câble USB sur un port disponible sur la PlayStation4 et dans le port USB sur la manette. Si PS4™ est désactivé, appuyez sur le bouton PS pour mettre sous tension. L'indicateur LED de connexion de la manette s'allume et une notification doit s'afficher sur l'écran d'accueil indiquant que la manette est branchée.
3. Pour affecter une manette à un joueur, reportez-vous au manuel d'utilisation de PlayStation®4.

**REMARQUE:** Pour retirer le câble, appuyez sur les deux boutons latéraux, près du port,



*et tirez doucement. Le câble USB comporte également une fiche de relâchement en ligne située vers l'extrémité du câble qui se déconnectera si nécessaire.*

### MODE SANS FIL DU BLUETOOTH PS4

1. Lors de la première utilisation, faites glisser le commutateur de mode au dos de la manette sur la position « PS4™ BT ».
2. Maintenez les boutons « PS » et « SHARE » pendant 3 sec jusqu'à ce que le voyant LED clignote rapidement.
3. Sur la PlayStation4, utilisez la manette de départ, accédez à Paramètre -> Appareils -> Appareils Bluetooth, pour sélectionner « PS4™ FUSION Pro », utiliser la manette officielle pour choisir « YES » lorsque vous y êtes invité.
4. Appuyez sur le bouton PS sur la manette PS4™ FUSION Pro pour confirmer le jeu.

### MODE FILAIRE USB PSPC

1. Faites glisser le commutateur de mode au dos de la manette sur la position de droite « PC USB ».
2. Branchez le câble USB sur un port USB disponible sur le PC et dans le port USB sur la manette. L'indicateur LED de connexion de la manette s'allume, indiquant que la manette est branchée.
3. Suivez le logiciel PC ou le service de jeu pour la configuration de la manette ou le mappage des boutons si nécessaire.

### COMPRENDRE LES VOYANTS LED

Le témoin de la barre lumineuse fonctionne de manière similaire à la barre lumineuse sur DualShock 4. La LED de Pro Pack Program clignote pendant la programmation de la palette.

### DÉPANNAGE

*Pour consulter les dernières Questions fréquentes, rendez-vous sur [PowerA.com/Support/](http://PowerA.com/Support/)*

**Problème :** la manette ne se connecte pas à la console.

**Solution: (mode filaire)** Vérifiez que le câble est correctement raccordé à la console. Assurez-vous que le câble de relâchement est correctement connecté.

**Solution: (mode sans fil)** En cas d'utilisation fil, vérifiez que la manette est en « Mode BT ». Assurez-vous que la manette est toujours synchronisée dans Paramètres » Appareils » Appareils Bluetooth.

**Problème :** les palettes Pro Pack ne fonctionnent pas correctement.

**Solution :** Vérifiez que Pro Pack est correctement installé sur la manette. Vérifiez que les palettes Pro Pack sont correctement installées. Consultez la section « Cartographie des palettes Pro Pack » ci-dessus.

*Pour des informations de dépannage supplémentaires, reportez-vous à votre manuel d'utilisation PlayStation®4.*

