

Panasonic®

Operating Instructions

Digital Cordless Answering System

Model No.	KX-TGU130E
	KX-TGU132E
	KX-TGU133E
	KX-TGU430E
	KX-TGU432E
	KX-TGU433E



Model shown is KX-TGU130.

Before initial use, see “Getting Started” on page 14.

Thank you for purchasing a Panasonic product.

Please read these operating instructions before using the unit and save them for future reference.

Table of Contents

Introduction

Model composition	4
Accessory information	5
Sales and support information	6
General information	6
Graphical symbols for use on equipment and their descriptions	8

Important Information

For your safety	9
Important safety instructions	11
For best performance	11
Other information	12
Specifications	13

Getting Started

Setting up	14
Controls	17
Display icons/Indicators	19
Turning the power on/off	21
Language setting	21
Date and time	21
Recording your greeting message	22
Other settings	22

Making/Answering Calls

Making calls	24
Answering calls	25
Useful features during a call	25
Intercom	28
Key lock	29

Nuisance Call Block

Nuisance call block	31
Storing unwanted callers	31

Automated Call Block

Automated call block	34
----------------------------	----

Phonebook

Phonebook	37
Speed dial	39
Fav Call key	39

Programming

Menu list	41
Alarm	48
Do not disturb mode	48
Baby monitor	49
Other programming	52

Caller ID Service

Using Caller ID service	54
Caller list	55

Answering System

Answering system	56
Turning the answering system on/off	56
Greeting message	56
Listening to messages	57
Advanced new message alerting features	59
Remote operation	61
Answering system settings	62

Useful Information


Voicemail service	64
Character entry	64
Error messages	66
Troubleshooting	67
Registering a unit	74
Conditions of guarantee	75

Index

Index.....76


Model composition

■ KX-TGU130 series

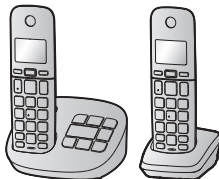

- Model shown is KX-TGU132.

■ KX-TGU430 series

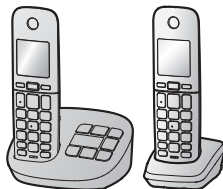

- Model shown is KX-TGU432.

Series	Model No.	Base unit	Handset	
		Part No.	Part No.	Quantity
KX-TGU130 series	KX-TGU130	KX-TGU130	KX-TGUA10	1
	KX-TGU132	KX-TGU130	KX-TGUA10	2
	KX-TGU133	KX-TGU130	KX-TGUA10	3
KX-TGU430 series	KX-TGU430	KX-TGU430	KX-TGUA40	1
	KX-TGU432	KX-TGU430	KX-TGUA40	2
	KX-TGU433	KX-TGU430	KX-TGUA40	3


Accessory information

Supplied accessories

No.	Accessory item/Part number	Quantity		
		KX-TGU130 KX-TGU430	KX-TGU132 KX-TGU432	KX-TGU133 KX-TGU433
①	AC adaptor for base unit/PNLV226E0Q	1	1	1
②	Rechargeable batteries*1	2	4	6
③	Handset cover*2	1	2	3
④	Charger/PNLC1099ZB	—	1	2
⑤	AC adaptor for charger/PNLV233EKP	—	1	2

*1 See page 5 for replacement battery information.

 *2 The handset cover comes attached to the handset.



In line with our policy to minimize waste, Panasonic has elected not to include the cord with our telephone products. Many of our customers have retained an existing cord and do not require a new one. However, if you do not have one, please contact our Customer Care Centre, who would be pleased to advise you on what you require.

Additional/replacement accessories

Please contact your nearest Panasonic dealer for sales information.

Accessory item	Model number/Specifications
Rechargeable batteries	Battery type: — Nickel metal hydride (Ni-MH) — 2 x AAA (R03) size for each handset — 1.2 V

Introduction

Other information

- Design and specifications are subject to change without notice.
- The illustrations in these instructions may vary slightly from the actual product.

Sales and support information

Customer Communications Centre

- For customers within the U.K.: 0344 844 3899
- For customers within Ireland: 01289 8333
- For further support on your product, please visit our website:
www.panasonic.co.uk

Direct Sales at Panasonic U.K.

- Order accessory and consumable items for your product with ease and confidence by phoning our Customer Communications Centre Monday - Friday 9:00am - 5:00pm (Excluding public holidays).
- Go on line through our Internet Accessory ordering application at
www.pas-europe.com
- Most major credit and debit cards accepted.
- All enquiries transactions and distribution facilities are provided directly by Panasonic U.K.
- Also available through our Internet is direct shopping for a wide range of finished products. Take a browse on our website for further details.
shop.panasonic.co.uk/

General information

- This equipment is designed for use on the U.K. and Ireland analogue telephone network.
- In the event of problems, you should contact your equipment supplier in the first instance.

Declaration of Conformity:

- Panasonic Entertainment & Communication Co., Ltd. declares that the radio equipment type (KX-TGU130 series/KX-TGU430 series: page 4) is in compliance with Directive 2014/53/EU (for EU) and The Radio Equipment Regulations 2017 (for UK). The full text of the EU and UK declaration of conformity is available at the following internet address:
<https://www.ptc.panasonic.eu/compliance-documents>

Authorised Representative in EU:

Panasonic Marketing Europe GmbH
Panasonic Testing Centre
Winsbergring 15, 22525 Hamburg, Germany

Contact in the UK:

Panasonic Testing Centre on behalf of Panasonic UK,
a branch of Panasonic Marketing Europe GmbH (Importer)
Maxis 2, Western Road, Bracknell, Berkshire, RG12 1RT

Confirmation of Compliance with UK Regulations

This product complies with UK relevant Regulations and Standards (being those relevant for England, Wales and Scotland).

Ecodesign information

Ecodesign information under EU Regulation (EC) No. 1275/2008 amended by (EU) Regulation No. 801/2013.

"ErP Free Web Product Information" is available at the following URL:

<https://www.ptc.panasonic.eu/compliance-documents>

Power consumption in networked standby and guidance are mentioned in the web site above.

Note:

- For more information about the energy efficiency of the product, please visit our web site, www.panasonic.com, and enter the model number in the search box.

For your future reference

We recommend keeping a record of the following information to assist with any repair under warranty.

Serial No.	Date of purchase
(found on the bottom of the base unit)	
Name and address of dealer	

Graphical symbols for use on equipment and their descriptions

Symbol	Explanation	Symbol	Explanation
	Alternating current (A.C.)		Class II equipment (equipment in which protection against electric shock relies on Double Insulation or Reinforced Insulation)
	Direct current (D.C.)		"ON" (power)
	Protective earth		"OFF" (power)
	Protective bonding earth		Stand-by (power)
	Caution, risk caused by visible radiation		"ON"/"OFF" (power; push-push)
	For indoor use only		Caution, risk of electric shock

For your safety

To prevent severe injury and loss of life/property, read this section carefully before using the product to ensure proper and safe operation of your product.

WARNING

Power connection

- Use only the power source marked on the product.
- Do not overload power outlets and extension cords. This can result in the risk of fire or electric shock.
- Completely insert the AC adaptor/power plug into the power outlet. Failure to do so may cause electric shock and/or excessive heat resulting in a fire.
- Regularly remove any dust, etc. from the AC adaptor/power plug by pulling it from the power outlet, then wiping with a dry cloth. Accumulated dust may cause an insulation defect from moisture, etc. resulting in a fire.
- Unplug the product from power outlets if it emits smoke, an abnormal smell, or makes an unusual noise. These conditions can cause fire or electric shock. Confirm that smoke has stopped emitting and contact an authorised service centre.
- Unplug from power outlets and never touch the inside of the product if its casing has been broken open.
- Never touch the plug with wet hands. Danger of electric shock exists.

Installation

- To prevent the risk of fire or electrical shock, do not expose the product to rain or any type of moisture.
- Do not place or use this product near automatically controlled devices such as automatic doors and fire alarms. Radio waves emitted from this product may cause such devices to malfunction resulting in an accident.
- Do not allow the AC adaptor or telephone line cord to be excessively pulled, bent or placed under heavy objects.
- Do not place the handset on the base unit when battery cover is removed.

Operating safeguards

- Unplug the product from power outlets before cleaning. Do not use liquid or aerosol cleaners.
- Do not disassemble the product.
- Do not spill liquids (detergents, cleansers, etc.) onto the telephone line cord plug, or allow it to become wet at all. This may cause a fire. If the telephone line cord plug becomes wet, immediately pull it from the telephone wall jack, and do not use.
- To prevent hearing damage, make sure anyone who uses this product is aware that the product can produce very loud sounds, and make sure children use this product only under adult supervision.
- To prevent hearing damage, we recommend that you set this product to the lowest volume setting at which you can hear adequately. Note that when the  is displayed, the Amplify

Important Information

key feature is enabled and the product may emit sounds at very high volume. (KX-TGU430 series: page 4)

- Avoid prolonged exposure to loud sounds produced by this product. Be aware that the louder a sound is, the less time is needed to cause hearing damage. In the event that you experience hearing discomfort, consult a medical professional.

Medical

- Consult the manufacturer of any personal medical devices, such as pacemakers or hearing aids, to determine if they are adequately shielded from external RF (radio frequency) energy. (The product operates in the frequency range of 1.88 GHz to 1.90 GHz, and the RF transmission power is 250 mW (max.).)
- Do not use the product in health care facilities if any regulations posted in the area instruct you not to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

CAUTION

Installation and location

- Never install telephone wiring during an electrical storm.
- Never install telephone line jacks in wet locations unless the jack is specifically designed for wet locations.
- Never touch uninsulated telephone wires or terminals unless the telephone line has been

disconnected at the network interface.

- Use caution when installing or modifying telephone lines.
- The AC adaptor is used as the main disconnect device. Ensure that the AC outlet is installed near the product and is easily accessible.
- This product is unable to make calls when:
 - the handset batteries need recharging or have failed.
 - there is a power failure.
 - the key lock feature is turned on.

Battery

- We recommend using the batteries noted on page 5. **USE ONLY rechargeable Ni-MH batteries AAA (R03) size.**
- Do not mix old and new batteries.
- Do not open or mutilate the batteries. Released electrolyte from the batteries is corrosive and may cause burns or injury to the eyes or skin. The electrolyte is toxic and may be harmful if swallowed.
- Exercise care when handling the batteries. Do not allow conductive materials such as rings, bracelets, or keys to touch the batteries, otherwise a short circuit may cause the batteries and/or the conductive material to overheat and cause burns.
- Charge the batteries provided with or identified for use with this product only, in accordance with the instructions and limitations specified in this manual.
- Only use a compatible base unit (or charger) to charge the batteries. Do not tamper with the base unit (or charger). Failure to follow these

instructions may cause the batteries to swell or explode.

- Avoid the use in the following conditions:
 - High or low extreme temperatures during use, storage or transportation.
 - Replacement of a battery with an incorrect type that can defeat a safeguard.
 - Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
 - Extremely high temperature and/or extremely low air pressure that can result in an explosion or the leakage of flammable liquid or gas.

Important safety instructions

When using your product, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Do not use this product near water for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement or near a swimming pool.
2. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
3. Do not use the telephone to report a gas leak in the vicinity of the leak.
4. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with

local codes for possible special disposal instructions.

SAVE THESE INSTRUCTIONS

For best performance

Base unit location/avoiding noise

The base unit and other compatible Panasonic units use radio waves to communicate with each other.

- For maximum coverage and noise-free communications, place your base unit:
 - at a convenient, high, and central location with no obstructions between the handset and base unit in an indoor environment.
 - away from electronic appliances such as TVs, radios, personal computers, wireless devices, or other phones.
 - facing away from radio frequency transmitters, such as external antennas of mobile phone cell stations. (Avoid putting the base unit on a bay window or near a window.)
- Coverage and voice quality depends on the local environmental conditions.
- If the reception for a base unit location is not satisfactory, move the base unit to another location for better reception.

Environment

- Keep the product away from electrical noise generating devices, such as fluorescent lamps and motors.
- The product should be kept free from excessive smoke, dust, high temperature, and vibration.

Important Information

- The product should not be exposed to direct sunlight.
- Do not place heavy objects on top of the product.
- When you leave the product unused for a long period of time, unplug the product from the power outlet.
- The product should be kept away from heat sources such as heating devices, cooking appliances, etc. It should not be placed in rooms where the temperature is less than 0 °C or greater than 40 °C. Damp basements should also be avoided.
- The maximum calling distance may be shortened when the product is used in the following places: Near obstacles such as hills, tunnels, underground, near metal objects such as wire fences, etc.
- Operating the product near electrical appliances may cause interference. Move away from the electrical appliances.

Routine care

- **Wipe the outer surface of the product with a soft moist cloth.**
- Do not use benzene, thinner, or any abrasive powder.

Other information


- The applied nameplate is located at the bottom or rear of the product.

⚠ CAUTION: Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

Notice for product disposal, transfer, or return

- This product can store your private/confidential information. To protect your privacy/confidentiality, we recommend that you erase information such as phonebook or caller list entries from the memory before you dispose of, transfer, or return the product.

Disposal of Old Equipment and Batteries (Only for European Union and countries with recycling systems)

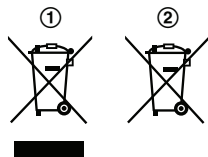

These symbols (①, ②) on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries must not be mixed with general household waste. For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points in accordance with your national legislation.

By disposing of them correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment. For more information about collection and recycling, please contact your local authority. Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

For business users in the European Union

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.

Information on Disposal in other Countries outside the European Union

These symbols (①, ②) are only valid in the European Union. If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.

Note for the battery symbol

This symbol (②) might be used in combination with a chemical symbol. In this case it complies with the requirement set by the Directive for the chemical involved.

Note for the battery removal procedure

Refer to "Removing the battery" on page 15.

Specifications


- **Standard:**
DECT (Digital Enhanced Cordless Telecommunications),
GAP (Generic Access Profile)
- **Frequency range:**
1.88 GHz to 1.90 GHz
- **RF transmission power:**
Approx. 10 mW (average power per channel)
250 mW (max.)
- **Power source:**
100 – 240 V AC, 50/60 Hz

- **Rechargeable battery:**
AAA (R03) Ni-MH battery (1.2 V, 550 mAh)
- **Power consumption:**
Base unit:
Standby: 0.8 W
Maximum: 2.7 W
Charger:
Standby: 0.2 W
Maximum: 1.2 W
- **Operating conditions:**
0 °C–40 °C, 20 %–80 % relative air humidity (dry)

Setting up

Connections

■ Base unit

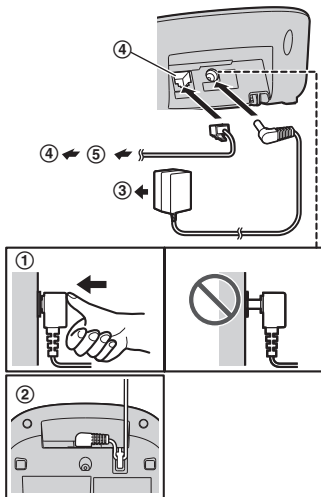


- ① Connect the AC adaptor to the unit by pressing the plug firmly.
- ② Fasten the cord by hooking it.
- ③ Connect the AC adaptor to the power outlet.
- ④ Connect the telephone line cord to the unit, then to the telephone line jack until you hear a click.
- ⑤ A DSL/ADSL filter (not supplied) is required if you have a DSL/ADSL service.

Note:

- Use only the supplied Panasonic AC adaptor PNLV226E.
- In line with our policy to minimize waste, Panasonic has elected not to include the cord with our telephone products. Many of our customers have retained an existing cord and do not require a new one. However, if you do not have one, please contact our Customer Care Centre, who would be pleased to advise you on what you require.

■ Charger

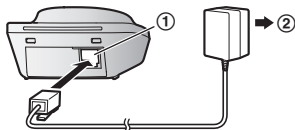


- ① Connect the AC adaptor plug to the unit until you hear a click.
- ② Connect the AC adaptor to the power outlet.

Note:

- Use only the supplied Panasonic AC adaptor PNLV233E.


Battery installation

- USE ONLY rechargeable Ni-MH batteries AAA (R03) size (A).
- Do NOT use alkaline/manganese/ Ni-Cd batteries.
- Confirm correct polarities (+, -).

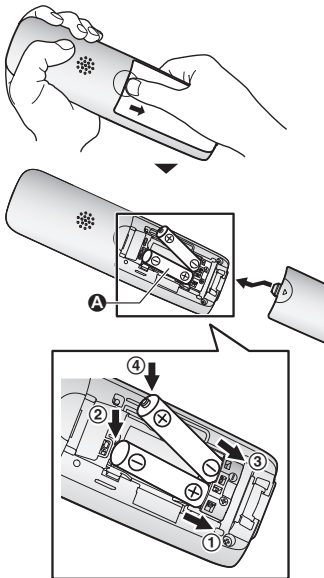

- Follow the directions on the display to set up the unit.


Removing the battery

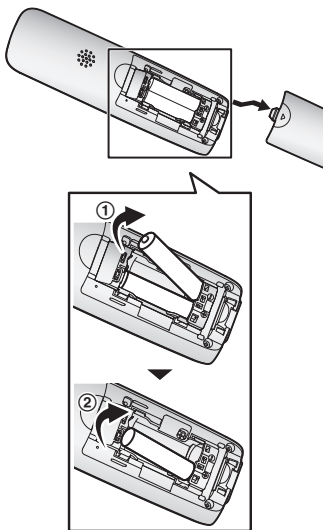

Battery charging

Charge for about 7 hours.

- Confirm “**Charging**” is displayed (A).
- When the batteries are fully charged, “**Fully Charged**” is displayed.

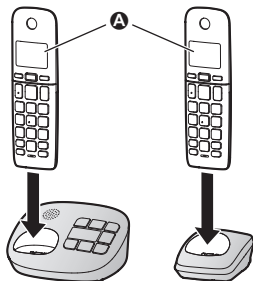

Model shown is KX-TGU132

Note when setting up

Note for connections

- The AC adaptor must remain connected at all times. (It is normal for the adaptor to feel warm during use.)
- The AC adaptor should be connected to a vertically oriented or floor-mounted AC outlet. Do not connect the AC adaptor to a horizontally oriented AC outlet that faces the floor, such as an AC outlet installed on a ceiling or under a table, as the weight of the adaptor may cause it to become disconnected.

Power failure

- The unit cannot be used to make or receive calls during a power failure. We recommend connecting a corded-type telephone that does not use an AC adaptor to your telephone line.

Note for battery installation

- Use the supplied rechargeable batteries. For replacement, we recommend using the Panasonic rechargeable batteries noted on page 5, 10.

Note for battery charging

- It is normal for the handset to feel warm during charging.
- Clean the charge contacts of the handset, base unit, and charger with a soft and dry cloth once a month. Before cleaning the unit, disconnect from power outlets and any telephone line cords. Clean more often if the unit is exposed to grease, dust, or high humidity.

Battery level

Icon	Battery level
	High
	Medium
	Low
	Needs charging.

Ni-MH battery performance (supplied batteries)

Operation	Operating time
In continuous use	18 hours max.*1, *2
Not in use (standby)	250 hours max.*1, *2

*1 When eco mode is on.


*2 When torchlight or Amplify key feature is off. (KX-TGU430 series: page 4)

Note:

- Actual battery performance depends on usage and ambient environment.
- When eco mode is set to "Eco Plus", the base unit stops communicating with the handset while it is in standby mode. As a result, the handset uses more power than usual to search for the base unit and therefore battery usage time is shortened (page 22).

Controls

Base unit

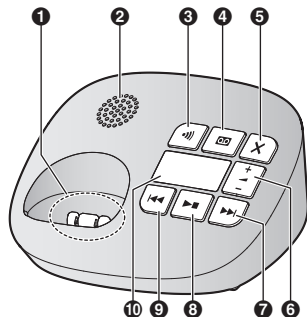

1 Charge contacts

2 Speaker

3 [•••] (Locator)

- You can locate a misplaced handset by pressing [•••].

4 [••] (Answer on/off)

5 [X] (Erase)

6 [+]/[-] (▲: Volume up/down)

7 [▶] (Skip)

8 [■] (Play/Stop)


9 [◀] (Repeat)

10 Message counter

Message indicator (—)

Handset


■ KX-TGU130 series: page 4

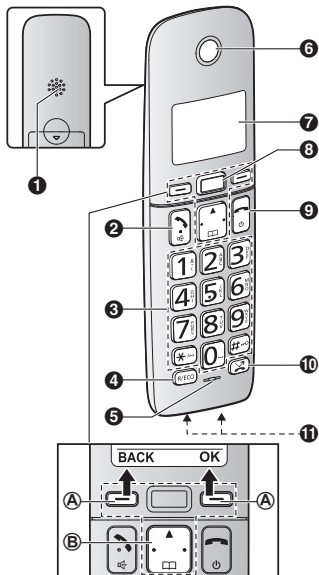

- 1 Speaker
- 2 [📞/🔊] (Talk/Listener)
- 3 Dial keypad
- 4 [🔒] (Key lock)
- 5 [R/ECO]
- 6 Receiver
- 7 Display
- 8 Fav Call key (Fav Call: Favourites Call)
- 9 Fav Call key indicator

- 9 [🔌] (Off/Power)
- 10 [📞] (Call block)
- 11 Charge contacts

■ KX-TGU430 series: page 4

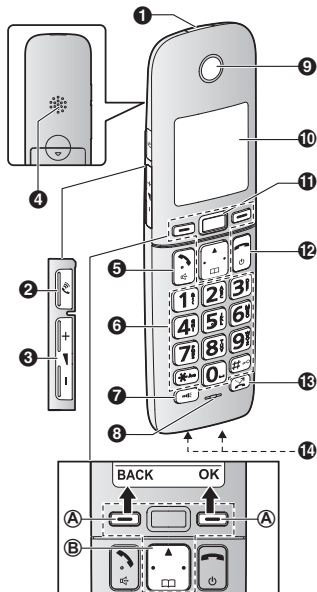

- 1 Torchlight/Ringer indicator
- 2 [🔊] (Amplify key)
- 3 [+]/[-] (📶: Volume up/down)
- 4 Speaker
- 5 [📞/🔊] (Talk/Listener)
- 6 Dial keypad
- 7 [🔒] (Key lock)
- 8 [🔦] (Torchlight)
- 9 Receiver

- 10 Display
- 11 Fav Call key (Fav Call: Favourites Call)
Fav Call key indicator
- 12  (Off/Power)
- 13  (Call block)
- 14 Charge contacts

■ Control type


Ⓐ Soft keys

By pressing a soft key, you can select the feature shown directly above it on the display.

(Example: MENU, OK, etc.)

Ⓑ Navigator key

Navigator keys functions as follows.

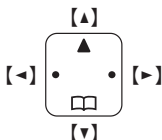

- [▲], [▼], [◀], or [▶]: Scroll through various lists and items.
- [▲] or [▼] (▲): Adjust the receiver or speaker volume while talking.
- Right [•]: View the redial list.
- Left [•]: View the caller list.
-  (Phonebook): View the phonebook entry.

Display icons/Indicators

Handset display items

Item	Meaning
	Range status: The more bars visible, the closer the handset is to the base unit.

Item	Meaning
	Out of base unit range.
	Security for phone calls is set to "Enhanced". (page 52)
	Paging, intercom mode.*1
	Speakerphone is on. (page 24)
	The line is in use. ● When flashing slowly: The call is on hold. ● When flashing rapidly: An incoming call is now being received.
	Missed call*2 (page 54, page 71)
	Eco mode is set to "Eco". (page 22)
	Eco mode is set to "Eco Plus". (page 22)
	Noise reduction is set. (page 27)
	The LCD and key backlight is off. (page 45)

Getting Started

Item	Meaning
	- When displayed near the battery icon: Answering system is on. (page 56) - When displayed with a number: New messages have been recorded. (page 58)
	"Greeting Only" is selected. Caller messages are not recorded. (page 63)
	Battery level.
	Amplify key feature is on.*3 (page 26)
	Alarm is on. (page 48)
	Privacy mode is on.*1 (page 46)
	Ringer volume is off. (page 43)
	Do not disturb mode is on. (page 49)
	Nuisance call blocked.*2 (page 31)
	Automated call block is set to "Block". (page 35)
	Automated call blocked.*2 (page 55)
	New voicemail message received.*4 (page 64)

Item	Meaning
	Baby monitor is activated. The name/number displayed next to the icon indicates the monitoring unit.*3 (page 49)
Line in use	Someone is using the line.*1
IN USE	Answering system is being used by another unit.

*1 KX-TGU132/KX-TGU133/
KX-TGU432/KX-TGU433

*2 Caller ID subscribers only

*3 KX-TGU430 series: page 4

*4 Voicemail subscribers only

Base unit display items

Item	Meaning
--	"Greeting Only" is selected. Caller messages are not recorded. (page 63)
-	No messages.

Fav Call key indicators on the handset

Status	Meaning
Flashing	There is a missed call from a favourite contacts.
Flashing rapidly	An incoming call from a phone number registered in favourite contacts.

Handset soft key icons

Icon	Action
OK	Accepts the current selection.
	Temporarily turns off the ringer for incoming calls. (page 25)
	Turns the key lock feature off. (page 29)

■ When you select a language other than English

Icon	Action
	Returns to the previous screen or outside call.
	Displays the menu.
	Makes a call. (page 38)
	Temporarily turns off the ringer for incoming calls. (page 25)
	Places a call on hold.*1
	Allows you to edit phone numbers. (page 32)
	Adds new entry. (page 39, 50)
	Displays the phonebook search menu. (page 38)
	Stops alarm. (page 48)
	Snooze button on the alarm. (page 48)
	Selects entries or handsets. (page 48)
	Stops recording or playback.
	Stores phone numbers. (page 37)

Icon	Action
	Erases the selected item.
	Allows you to make an intercom call.*1 (page 29)
C	Erases a number/character.
	Puts the call on mute.
	View the caller log.

*1 KX-TGU132/KX-TGU133/
KX-TGU432/KX-TGU433

Turning the power on/off

Press **[]** for about 2 seconds.

Language setting

Display language

- [MENU]** **#** **1** **1** **0**
- []**: Select your desired language.
→ **[OK]** → **[]**

Date and time

- [MENU]** **#** **1** **0** **1**
- Enter the current date, month, and year. → **[OK]**
Example: 12 July, 2024
1 **2** **0** **7** **2** **4**
- Enter the current hour and minute.
Example: 9:30
0 **9** **3** **0**

- You can select 24-hour or 12-hour clock format ("AM" or "PM") by pressing [X].

4 [OK] → [📞]

Recording your greeting message

You can record your own greeting message instead of using a pre-recorded greeting message. See page 56 for details.

- 1 [MENU]#302
- 2 [↕]: "Yes" → [OK]
- 3 Record a greeting message. → [STOP] → [📞]

Other settings

Eco mode

You can select the desired eco mode setting by pressing [R/ECO].*1
The following settings are available for eco mode.

- "Eco": Reduces the base unit transmission power by up to 90 % in standby mode.
When this setting is selected, [ECO] is displayed on the handset display instead of [📶].
- "Eco Plus": Reduces the base unit transmission power completely in standby mode.
When this setting is selected, [ECO+] is displayed on the handset display instead of [📶].
- "Off" (default setting): Turns off eco mode.

When this setting is selected, [ECO]/[ECO+] are not displayed on the handset display.

*1 KX-TGU130 series: page 4

Setting the eco mode

- 1 [MENU]#725
- 2 [↕]: Select the desired setting. → [OK] → [📞]

Note:

- If there is a handset that is not compatible with Eco Plus registered to the base unit, "Eco Plus" is not available. If that handset is registered while "Eco Plus" was already selected, the setting changes to "Off".
- When there is another cordless phone in use nearby, the base unit transmission power may not be reduced. (KX-TGU132/KX-TGU133/KX-TGU432/KX-TGU433)
- When eco mode is set to "Eco Plus", there is a delay between when calls are received and when the handset starts ringing.
- When eco mode is active, the range of the base unit is reduced in standby mode.
- When eco mode is set to "Eco Plus", battery usage time is shortened (page 17).

Torchlight/Ringer indicator

Available for:

KX-TGU430 series: page 4

The indicator is located at the top of handset. There are two features available.

■ Torchlight

Press **[]** to turn the torchlight on/off. The maximum lighting time is about 5 minutes.

■ Ringer indicator

The LED flashes rapidly to indicate the unit status under the following conditions:

- an incoming call.
- intercom is being received.

The default setting is “On”.

1 **[MENU]** **#** **3** **4** **5**

2 **[]**: Select the desired setting. →
[OK] → **[]**

Note:

- When the torchlight is turned on while receiving an incoming call, the ringer indicator will not work.

Low battery alert

When this feature is turned on, the unit notifies you by beeping 3 times at the selected interval if the battery needs charging when the handset is in standby mode.

Note for handset:

- At the end of each call, the unit displays a large icon for a few moments to indicate the battery level.

Setting low battery alert

To turn this feature on, select the desired alert interval, or select “Off” to turn this feature off. The default setting is “Every Hour”.

1 **[MENU]** **#** **1** **7** **6**

2 **[]**: Select the desired setting. →
[OK] → **[]**

Making calls

- 1 Lift the handset and then dial the phone number.
 - To correct a digit, press **[CLEAR]**.
- 2 Press **[📞/📞]** to make the call.
 - To make the call using the speakerphone, press and hold **[📞/📞]** for a few seconds.
- 3 When you finish talking, press **[📞]** or place the handset on the base unit or charger.

Note:

- While talking, you can switch between the receiver and the speakerphone by pressing **[📞/📞]**.
- In step 1, you can store the dialled phone number to the phonebook by pressing **[SAVE]**.

Adjusting the receiver or speaker volume

■ KX-TGU130 series: page 4

Press **[▲]** or **[▼]** on the navigator key repeatedly, to select the desired volume while talking.

■ KX-TGU430 series: page 4

Press either **[▲]** or **[▼]** on the navigator key, or **[+]** or **[-]** located on the side of the handset repeatedly, to select the desired volume while talking.

Note:

- If the receiver volume is set to level 5 (max.), it will be changed to level 4 in the next call. (KX-TGU130 series: page 4)
- Pressing the **[🔊]** key activates the Amplify key feature. Use this key with care. To prevent hearing

damage, we recommend that you set this product to the lowest volume setting at which you can hear adequately (page 26).
(KX-TGU430 series: page 4)

Making a call using the redial list

The last 10 phone numbers dialled are stored in the redial list (24 digits max. each).

- 1 Press right **[➡]** navigator key.
 - Or press **[CALL LOG]** (left soft key).
If the caller list is displayed, press right **[➡]** navigator key to switch to the redial list.
- 2 **[↕]**: Select the desired entry.
- 3 **[📞/📞]**

Erasing a number in the redial list

- 1 Press right **[➡]** navigator key.
 - Or press **[CALL LOG]** (left soft key).
If the caller list is displayed, press right **[➡]** navigator key to switch to the redial list.
- 2 **[↕]**: Select the desired entry. → **[ERASE]**
- 3 **[↕]**: "Yes" → **[OK]** → **[📞]**

Pause (for PBX/long distance service users)

A pause is sometimes required when making calls using a PBX or long distance service. When storing a calling card access number and/or PIN in the phonebook, a pause is also needed (page 38).

Example: If you need to dial the line access number "0" when making outside calls with a PBX:

- 1 **[0]** → **[▲]** (Pause)

- 2 Dial the phone number. → [📞/📞]

Note:

- A 3 second pause is inserted each time [⏸] (Pause) is pressed.

Answering calls

When a call is being received, the ringer indicator flashes rapidly according to its settings.*1 (page 23)

- 1 Lift the handset and then press [📞/📞] when the unit rings.
- 2 When you finish talking, press [📞] or place the handset on the base unit or charger.

*1 KX-TGU430 series: page 4

Any key answer: You can answer the call by pressing any dial key.

Auto talk: You can answer calls simply by lifting the handset (page 45).

Temporary handset ringer off: You can turn the ringer off temporarily by pressing [📞] (left soft key).

Adjusting the ringer volume

Handset

■ KX-TGU130 series: page 4

Press [▲] or [▼] on the navigator key repeatedly, to select the desired volume while ringing.

- To turn the ringer off, press [▼] repeatedly.

■ KX-TGU430 series: page 4

Press either [▲] or [▼] on the navigator key, or [⊕] or [⊖] located on the side of the handset repeatedly, to select the desired volume while ringing.

- To turn the ringer off, press either [▼] or [⊖] repeatedly.

Base unit

Press [⊕] or [⊖] repeatedly to select the desired volume.

- To turn the ringer off, press and hold [⊖] until the unit beeps.

Note:

- To change the ringer volume and ringer tone for an outside call, see page 43.

Useful features during a call

Hold

- 1 Press [MENU] during an outside call.
- 2 [⏸]: "Hold" → [OK]
- 3 To release hold, press [📞/📞].

Note:

- After holding for 10 minutes, the call is disconnected.

Mute

- 1 Press [MUTE] during a call.
- 2 To return to the call, press [MUTE].

Making/Answering Calls

Recall/flash

■ **KX-TGU130 series:** page 4
Press **[R/ECO]**

■ **KX-TGU430 series:** page 4
Press **[MENU]** during an outside call.
→ **[↕]**: "Recall" → **[OK]**

Allows you to use the special features of your host PBX such as transferring an extension call, or accessing optional telephone services.

Note:

- To change the recall/flash time, see page 45.

For call waiting or Call Waiting Caller ID service users

To use call waiting or Call Waiting Caller ID, you must first subscribe with your phone service provider. This feature allows you to receive calls while you are already talking on the phone. If you receive a call while on the phone, you will hear a call waiting tone. **If you subscribe to both Caller ID and Call Waiting with Caller ID services**, the 2nd caller's information is displayed on the unit that is in use after you hear the call waiting tone.

- 1 To answer the 2nd call,
■ **KX-TGU130 series:** page 4
Press **[R/ECO]**

■ **KX-TGU430 series:** page 4
Press **[MENU]** during an outside call. → **[↕]**: "Recall" → **[OK]**
- 2 To switch between calls,
■ **KX-TGU130 series:** page 4

Press **[R/ECO]**

■ **KX-TGU430 series:** page 4
Press **[MENU]** during an outside call. → **[↕]**: "Recall" → **[OK]**

Note:

- Please contact your phone service provider for details and availability of this service in your area.

Amplify key feature

Available for:

KX-TGU430 series: page 4

This feature allows you to substantially increase the volume of the other party's voice. This feature can be set for each unit.

Amplify key feature is working under the following features:

- Making call (page 24).
- Answering call (page 25).
- Monitoring with a handset (page 49).
- Listening to message from handset (page 58).



WARNING

- This feature is designed for users who are hard of hearing. If other users use the phone, be sure to turn this feature off.
- Do not use this feature unnecessarily. High volume emitted from the product may cause hearing damage.
- Pressing the **[↕]** key activates the Amplify key feature. Use this key with care. To prevent hearing damage, we recommend that you set this product to the lowest volume setting at which you can hear adequately.

Setting the amplify volume mode

- 1 **[MENU]** **[#]** **[2]** **[7]** **[9]**
- 2 **[↕]**: Select the desired setting. → **[OK]** → **[🔊]**

Turning the Amplify key feature on/off

- 1 Press **[🔊]** while on a call.
 - The unit displays **[🔊]**.
- 2 Press either **[▲]** or **[▼]** on the navigator key, or **[+]** or **[-]** located on the side of the handset repeatedly, to select the desired volume while talking.

Note:

- When the amplify volume mode is set to **"Normal"**:
 - If the receiver volume is set to level 5 (max.), it will be changed to level 4 in the next call or after listening to messages.
 - If the Amplify key feature is on, it will be changed to off in the next call or after listening to messages.
- When the amplify volume mode is set to **"Amplified"**:
 - The previous receiver volume level and Amplify key feature on/off status will continue in the next call or after listening to messages.
- This feature is not available while using the speakerphone.

Handset noise reduction

This feature allows you to hear the voice of the person you are talking to more clearly, by reducing the surrounding noise coming from the other party's telephone.

- 1 Press **[MENU]** while talking.

- 2 **[↕]**: **"Noise Reduction On"** or **"Noise Reduction Off"** → **[OK]**

Note:

- Depending on the environment where this handset is being used, this feature may not be effective.
- This feature is not available while using the speakerphone.

Handset equalizer

This feature clarifies the voice of the person you are talking to, producing a more natural-sounding voice that is easier to hear and understand.

- 1 Press **[MENU]** while talking.
- 2 **[↕]**: **"Equalizer"** → **[OK]**
- 3 **[↕]**: Select the desired setting.
- 4 Press **[OK]** to exit.

Note:

- Depending on the condition and quality of your telephone line, this feature may emphasise existing line noise. If it becomes difficult to hear, select another setting.
- This feature is not available while using the speakerphone.

Call share

Available for:

KX-TGU132/KX-TGU133/
KX-TGU432/KX-TGU433

You can join an existing outside call.

To join the conversation, press

[📞/📞] when the other handset is on an outside call.

Making/Answering Calls

Note:

- When another user joins the conversation, the interrupt tone sounds.
- To prevent other users from joining your conversations with outside callers, turn the privacy mode on (page 46).

Transferring calls, conference calls

Available for:

KX-TGU132/KX-TGU133/
KX-TGU432/KX-TGU433

Outside calls can be transferred or a conference call with an outside party can be made between handsets in the same radio cell.

- 1 During an outside call, press **[MENU]**.
- 2 **[$\blacktriangle$]: "Intercom" → [OK]**
- 3 **[$\blacktriangle$]: Select the desired unit. → [OK]**
 - If you select "Voice Paging", the call will be switched from the ear-receiver mode to the speakerphone mode.
- 4 Wait for the paged party to answer.
 - If the paged party does not answer,
 - press **[BACK]** to return to the outside call.
 - if you select "Voice Paging" in step 3, press **[P]** and then **[P]** to return to the outside call.
- 5 **To complete the transfer:**
Press **[P]**.
To establish a conference call:

[MENU] → [$\blacktriangle$]: "Conference" → [OK]

- To leave the conference, press **[P]**. The other 2 parties can continue the conversation.
- To put the outside call on hold: **[MENU] → [$\blacktriangle$]: "Hold" → [OK]**
To resume the conference: **[MENU] → [$\blacktriangle$]: "Conference" → [OK]**
- To cancel the conference: **[MENU] → [$\blacktriangle$]: "Stop Conference" → [OK]**
You can continue the conversation with the outside caller.

Intercom

Available for:

KX-TGU132/KX-TGU133/
KX-TGU432/KX-TGU433

Intercom calls can be made between handsets in the same radio cell.

Note:

- When paging the handset, the paged handset beeps for 1 minute.
- If you receive an outside call while talking on the intercom, the interrupt tone sounds. To finish intercom, press **[P]**. To answer the call, press **[P]**.
- To change the ringer volume and ringer tone for intercom, see page 43.

Making an intercom call

- 1 **[MENU]** → **[↶]**
- 2 **[↷]**: Select the desired unit or "Voice Paging". → **[OK]**
 - If you select "Voice Paging", speak into the microphone after the beep. Your voice will be heard using the speakers of all handsets, until a paged party answers your page or until you press **[📞]**.
After the other party answers, the speakerphone mode is turned on.
- 3 When you finish talking, press **[📞]**.

Note:

- You cannot use voice paging if other units are in use.

Answering an intercom call

- 1 Press **[📞/📞]** to answer the page.
- 2 When you finish talking, press **[📞]**.

Turning auto intercom on/off

Available for:

KX-TGU430 series: page 4

This feature allows the handset to answer intercom calls automatically when it is called. You do not need to press **[📞/📞]**. When this feature is set to "On", the monitoring handset for the baby monitor feature (page 51) will also answer baby monitor calls automatically. The default setting is "Off".

- 1 **[MENU]** **[#]** **[2]** **[7]** **[3]**

- 2 **[↷]**: Select the desired setting. → **[OK]** → **[📞]**

Note:

- This feature is not available for all handsets paging and voice paging even if it is turned on.

Key lock

The handset can be locked so that no calls or settings can be made. Incoming calls can be answered, but most other functions are disabled while the key lock is on.

You can select to lock the handset with or without a password. The default setting is "without Password". When you turn the key lock feature on, "🔒" is displayed.

Important:

- Turn the torchlight off (page 23) before turning on the key lock feature.
- Calls to emergency numbers cannot be made until key lock is turned off.

Setting the key lock mode

- 1 **[MENU]** **[#]** **[2]** **[4]** **[6]**
- 2 **[↷]**: Select the desired setting. → **[OK]** → **[📞]**

Turning the key lock on/off

■ Without a password:

Press **[#]** for about 3 seconds during standby mode.

■ With a password:

- 1 Press **[#]** for about 3 seconds during standby mode.

Making/Answering Calls

- 2** Enter your key lock password (4 digits). → **[OK]** 2 times
- If you forget your password, see page 69.

Note:

- You can turn off the handset while the key lock is on. Depending on the settings, the state of the handset may change when you turn on the handset again:
 - Without a password: The key lock turns off.
 - With a password: The key lock stays on.
- The following keys and operations are available when the key lock is on:
 - **[STOP]** to stop the alarm.
 - Without a password: During a call, all available features can be used as usual. When the call ends, the handset turns the key lock on again.
- When the key lock mode is set to “**with Password**”:
 - Dial keypad and right **[•]** navigator key (to view redial list) cannot be used during a call.
 - **[CALL]** (right soft key) is not available during chain dial (page 38).

Nuisance call block

You can press the [M] key in the following situations to disconnect the current call and add a phone number to the call block list:

- when an incoming call is being received
- when an incoming call is being recorded by the answering system
- when talking on an outside call

Once a phone number has been added to the call block list, the unit will block calls from that phone number in the future.

- 1 Press [M] under the situations shown above.
- 2 Confirm the call block number and press [OK].
 - The call block number is stored in the call block list, "Call Blocked" is displayed, and then the call is disconnected.

Note:

- If the call has no phone number, the call is blocked but it is not stored in the call block list.
- The call block feature is not available for intercom calls or calls received by call waiting.
- Blocked calls are logged in the caller list.

Storing unwanted callers

The unit can block calls by storing the desired items in the call block list beforehand (Caller ID subscribers only).

- "Single Number": The unit blocks calls from specific phone numbers stored in the call block list.
- "Range of Numbers": The unit blocks calls that begin with a number stored in the call block list, such as a toll-free phone number prefix or certain area codes.
- "Withheld": The unit blocks calls that have no phone number.

However, this option may not be available in the following situations:

- If the caller dials from an area which does not provide a Caller ID service.
- International calls.

Single phone numbers and ranges of numbers can be stored in the call block list up to 1,000 items in total.

Blocking unwanted callers:

When a call is received, the unit does not ring while the caller is being identified.

If the caller's phone number matches an entry in the call block list, the unit emits no sound to the caller, and disconnects the call.

Storing a single phone number

Important:

- You must include the area code when storing phone numbers in the call block list.

Adding call blocked numbers from the caller list

- 1 Press left [•] navigator key.
 - Or press [CALL LOG] (left soft key).
If the redial list is displayed, press left [•] navigator key to switch to the caller list.

Nuisance Call Block

- 1 [↕]: Select the desired entry to be blocked.
- 2 [↕] → [↕]: "Yes" → [OK] → [📞]

Adding call blocked numbers manually

- 1 [↕]
- 2 [↕]: "Nuisance Call Block" → [OK]
- 3 [↕]: "Single Number" → [OK]
- 4 [MENU] → [↕]: "Add" → [OK]
- 5 Enter the phone number (24 digits max.). → [OK] → [📞]

Storing a range of numbers

- 1 [↕]
- 2 [↕]: "Nuisance Call Block" → [OK]
- 3 [↕]: "Range of Numbers" → [OK]
- 4 [MENU] → [↕]: "Add" → [OK]
- 5 Enter the desired number (2-8 digits). → [OK] → [📞]

Blocking incoming calls that have no phone number

You can block calls when no phone number is provided, such as private callers.

- 1 [↕]
- 2 [↕]: "Nuisance Call Block" → [OK]
- 3 [↕]: "Withheld" → [OK]
- 4 [↕]: Select the desired setting. → [OK] → [📞]

Viewing/editing/erasing call block numbers

- 1 [↕]
- 2 [↕]: "Nuisance Call Block" → [OK]
- 3 [↕]: "Single Number" or "Range of Numbers" → [OK]
- 4 [↕]: Select the desired entry.
 - After viewing, press [📞] to exit.
- 5 To edit a number:
[EDIT] → Edit the number. → [OK] → [📞]
To erase a number:
[ERASE] → [↕]: "Yes" → [OK] → [📞]

Note:

- When editing, press the desired dial key to add digits and press [CLEAR] to erase digits.

Erasing all call block numbers

- 1 [↕]
- 2 [↕]: "Nuisance Call Block" → [OK]
- 3 [↕]: "Single Number" or "Range of Numbers" → [OK]
- 4 [MENU] → [↕]: "Erase All" → [OK]
- 5 [↕]: "Yes" → [OK]
- 6 [↕]: "Yes" → [OK] → [📞]

Displaying and clearing the blocked call count

The total number of blocked calls (up to 65,000) will be displayed.

- 1 [
- 2 []: "Nuisance Call Block"
→ [OK]
- 3 []: "Blocked Calls Count"
→ [OK]
 - To exit, press [].
- 4 [CLEAR]
- 5 []: "Yes" → [OK] → [

Automated call block

Automated call block means the unit screens incoming calls before ringing. If the call is allowed, the unit will ring. If the call is identified as an automated/telemarketing call, the unit will not ring. The unit will play a greeting message to the caller and prompt them to enter an access code.

This enables the unit to identify whether the call is automated. You can set the unit to block or unblock mode. The default setting is “**Unblock**”.

Note:

- The unit connects the call without prompting to enter access code in the following situations:
 - the caller's phone number matches an entry in the phonebook (page 37).
 - the caller's phone number matches an entry in the Fav Call key (page 39).
 - the caller's name matches an entry in the allow name list (page 35).
 - the caller's phone number is memorised in the allowed number database (page 34).
- If the number is stored in the call block list (page 31), the unit disconnects the call without playing the greeting message for automated call block.
- When the answering system answers a call from a caller who is not registered in the phonebook, Fav Call key, allow name list, or allowed number database, the following operations are delayed:
 - answering a call
 - remote turn on

- When the unit receives a call from a caller who is not registered in the phonebook, Fav Call key, allow name list, or allowed number database in the following situations, the unit shifts to standby mode:
 - when searching the phonebook, Fav Call key, caller list, call block list, or allow name list
 - when programming (depending on settings)
 - when using the answering system
 - when paging all handsets
- Blocked calls are logged in the caller list. We recommend you to check the caller list periodically. If necessary, register the entry to the phonebook, Fav Call key, or allow name list to connect the call next time.

Allowed number database

Once the caller enters the access code, the caller's phone number is memorised in the allowed number database as an unblocked number. Callers from this database are allowed to connect without the access code from their next call.

100 entries can be stored to the database (22 digits max. each).

Note:

- When the database memory is full, the latest call received will replace the oldest number stored in the list.
- The numbers stored in the database will be erased when you change the access code (page 35).
- The numbers stored in the database cannot be displayed.

Setting the automated call block

- 1 [M] → [OK]
- 2 [↕]: "Block/Unblock" → [OK]
- 3 [↕]: Select the desired setting. → [OK]
- 4 [↕]: "Yes" → [OK] → [📞]

Note:

- We recommend you perform a test run of the automated call block procedure to ensure that the automated call block feature is set correctly.

Changing the access code

If the unit answers undesirable calls such as automated calls even though the automated call block function is on, change the access code (3 digits max.). The default setting is "1".

- 1 [M] → [OK]
- 2 [↕]: "Access Code" → [OK]
- 3 [CLEAR]
- 4 Enter the new access code. → [OK] → [📞]

Displaying and clearing the blocked call count

The total number of blocked calls (up to 65,000) will be displayed.

- 1 [M] → [OK]
- 2 [↕]: "Blocked Calls Count" → [OK]
 - To exit, press [📞].
- 3 [CLEAR]
- 4 [↕]: "Yes" → [OK] → [📞]

Adding to the allow name list

You can allow specific callers to pass through by adding the caller's name to the allow name list even if you do not know the caller's number.

You can store up to 100 names (16 characters max.). If the name stored in the allow name list matches the incoming Caller ID, the unit rings.

Callers listed in the allow name list are not required to enter the access code.

Adding allowed names from the caller list

- 1 Press left [•] navigator key.
 - Or press [CALL LOG] (left soft key).
 If the redial list is displayed, press left [•] navigator key to switch to the caller list.
- 2 [↕]: Select the desired entry. → [MENU]
- 3 [↕]: "Save Allow Name" → [OK] → [📞]

Viewing/erasing an entry

- 1 [M] → [OK]
- 2 [↕]: "Allow Name List" → [OK]
- 3 [↕]: Select the desired entry.
 - After viewing, press [📞] to exit.
- 4 [ERASE] → [↕]: "Yes" → [OK] → [📞]

Erasing all entries

- 1 [M] → [OK]
- 2 [↕]: "Allow Name List" → [OK]

Automated Call Block

3 [ERASE] → [↕]: “Yes” → [OK]

4 [↕]: “Yes” → [OK] → [📞]

Greeting message for automated call block

When the unit answers a call, a greeting message is played to the caller.

You can use either:

- your own greeting message and pre-recorded greeting message.
- a pre-recorded greeting message.

Recording a personalised greeting message for automated call block

Using this feature, the unit can play your own greeting message and pre-recorded greeting message.

Example of your own greeting message:

“Hi, you have reached xxxxxx (Name).”

“Thank you for your calling, You have reached xxxxxx (Name).”

“Hi, you have reached the xxxxxx (Name) residence.”

1 [📞] → [OK]

2 [↕]: “Automated Call Greeting” → [OK]

3 [↕]: “Record Greeting” → [OK]

4 [↕]: “Yes” → [OK]

5 After a beep sounds, hold the handset about 20 cm away and speak clearly into the microphone (2 minutes 30 seconds max.).

6 Press [STOP] to stop recording.

7 The unit will play the recorded greeting message for automated call block. → [📞]

Resetting to the pre-recorded greeting message for automated call block

This procedure will erase your greeting message for automated call block and reset to the pre-recorded one.

1 [📞] → [OK]

2 [↕]: “Automated Call Greeting” → [OK]

3 [↕]: “Default” → [OK] 2 times
→ [📞]

Playing back the greeting message for automated call block

1 [📞] → [OK]

2 [↕]: “Automated Call Greeting” → [OK]

3 [↕]: “Play Greeting” → [OK]

4 To exit, press [📞].

Phonebook

You can add 100*1/200*2 names (16 characters max.) and phone numbers (24 digits max.) to the phonebook, and assign each phonebook entry to the desired category (page 37).

*1 KX-TGU130 series: page 4

*2 KX-TGU430 series: page 4

Important:

- All entries can be shared by any registered handset.

Adding phonebook entries

- 1 **[□□] → [MENU]**
- 2 **[↕]: "New Entry" → [OK]**
- 3 Enter the party's name. → **[OK]**
 - You can change the character entry mode by pressing **[#]** (page 64).
- 4 Enter the party's phone number. → **[OK]**
- 5 **[↕]:** Select the desired category. → **[OK]** 2 times → **[📞]**

Storing a redial list number to the phonebook

- 1 Press right **[•]** navigator key.
 - Or press **[CALL LOG]** (left soft key).
If the caller list is displayed, press right **[•]** navigator key to switch to the redial list.
- 2 **[↕]:** Select the desired entry. → **[SAVE]**
- 3 To store the name, continue from step 3, "Editing entries", page 38.

Storing caller information to the phonebook

- 1 Press left **[•]** navigator key.
 - Or press **[CALL LOG]** (left soft key).
If the redial list is displayed, press left **[•]** navigator key to switch to the caller list.
- 2 **[↕]:** Select the desired entry. → **[MENU]**
- 3 **[↕]: "Save Phonebook" → [OK]**
- 4 To store the name, continue from step 3, "Editing entries", page 38.

Categories

Categories can help you find entries in the phonebook quickly and easily. You can change the names of categories ("Friends", "Family", etc.). By assigning different ringer tones for different categories of callers, you can identify who is calling (category ringer tone), if you have subscribed to Caller ID service.

Changing category names/setting category ringer tone

- 1 **[□□] → [MENU]**
- 2 **[↕]: "Category" → [OK]**
- 3 **[↕]:** Select the desired category. → **[OK]**
- 4 **To change category names**
[↕]: "Category Name" → [OK]
 → Edit the name (10 characters max.). → **[OK]**
To set category ringer tone
[↕]: Select the current setting of the category ringer tone. → **[OK]**
 → **[↕]:** Select the desired ringer tone. → **[OK]**

5

Finding and calling from a phonebook entry

1

2 To scroll through all entries

: Select the desired entry.

To search by first character

① Press the dial key ( to , or ) which contains the character you are searching for (page 64).

② : Scroll through the phonebook if necessary.

To search by category

① **[SEARCH]** → : "Category" → **[OK]**

② : Select the desired category. → **[OK]**

③ : Scroll through the phonebook if necessary.

3

Editing entries

1 Find the desired entry (page 38). → **[MENU]**

2 : "Edit" → **[OK]**

3 Edit the name if necessary. → **[OK]**

4 Edit the phone number if necessary. → **[OK]**

5 : Select the desired category (page 37). → **[OK]** 2 times → 

Erasing entries

Erasing an entry

1 Find the desired entry (page 38). → **[MENU]**

2 : "Erase" → **[OK]**

3 : "Yes" → **[OK]** → 

Erasing all entries

1  → **[MENU]**

2 : "Erase All" → **[OK]**

3 : "Yes" → **[OK]**

4 : "Yes" → **[OK]** → 

Chain dial

This feature allows you to dial phone numbers in the phonebook while you are on a call. This feature can be used, for example, to dial a calling card access number or bank account PIN that you have stored in the phonebook, without having to dial manually.

1 During an outside call, press **[MENU]**.

2 : "Phonebook" → **[OK]**

3 Continue from step 2, "Finding and calling from a phonebook entry", page 38.

4 Press **[CALL]** (right soft key) to dial the number.

Note:

- When storing a calling card access number and your PIN in the phonebook as one phonebook entry, press **[PAUSE]** (Pause) to add pauses after the number and PIN as necessary (page 24).

Speed dial

You can assign 1 phone number to each of the dial keys ([1] to [9]) on the handset.

Adding phone numbers to speed dial keys

■ By entering phone numbers:

- 1 Press and hold the desired speed dial key ([1] to [9]). → [ADD]
- 2 [↕]: "Manual" → [OK]
- 3 Enter the party's name (16 characters max.). → [OK]
- 4 Enter the party's phone number (24 digits max.). → [OK] 2 times → [📞]

■ From the phonebook:

- 1 Press and hold the desired speed dial key ([1] to [9]). → [ADD]
- 2 [↕]: "Phonebook" → [OK]
- 3 [↕]: Select the desired entry. → [OK] → [📞]

Note:

- If you edit a phonebook entry which is assigned to a speed dial key, the edited entry does not transfer to the speed dial key.

Editing an entry

- 1 Press and hold the desired speed dial key ([1] to [9]). → [MENU]
- 2 [↕]: "Edit" → [OK]
- 3 Edit the name if necessary. → [OK]

- 4 Edit the phone number if necessary. → [OK] 2 times → [📞]

Erasing an entry

- 1 Press and hold the desired speed dial key ([1] to [9]). → [MENU]
- 2 [↕]: "Erase" → [OK]
- 3 [↕]: "Yes" → [OK] → [📞]

Viewing an entry/Making a call

- 1 Press and hold the desired speed dial key ([1] to [9]).
- 2 To make a call, press [📞/📞].

Fav Call key

You can add up to 3 favourite names (16 characters max.), phone numbers (24 digits max.) and the desired ringer tone to the Fav Call key. The Fav Call key indicator flashes once you have set your favourite contacts information (page 20).

Important:

- Make sure the unit's date and time setting is correct (page 21).
- This unit is Caller ID compatible. To use Fav Call key indicator and ringer tones features, you must subscribe to a Caller ID service. Contact your phone service provider for details.

Note:

- Favourite contacts are a common feature within the system.

Adding phone numbers manually to Fav Call key

- 1 **[MENU]** **#** **2** **9** **5**
- 2 **[↕]**: Select the desired entry. → **[ADD]**
- 3 Enter the party's name. → **[OK]**
- 4 Enter the party's phone number. → **[OK]**
- 5 **[↕]**: Select the desired ringer tone. → **[OK]** 2 times → **[📞]**

Finding and calling from Fav Call key

- 1 Press Fav Call key.
- 2 **[↕]**: Select desired entry.
- 3 Press **[📞/📞]** or Fav Call key to make the call.

Answering call from Fav Call key

- 1 Lift the handset and then press Fav Call key or **[📞/📞]** when the unit rings.
- 2 When you finish talking, press **[📞]**.

Note:

- If there is a missed call from the favourite contacts, it will not be listed in the caller list. Instead, the Fav Call key will flash slowly to let you know there is a missed call from the favourite contacts.

To view:

- ① Press Fav Call key.
- ② **[↕]**: Select the desired entry. → **[OK]**

- If the indicator flashes when the handset is not placed on the base unit or charger, battery consumption will be faster than usual.

Editing a favourites caller's phone number

- 1 **[MENU]** **#** **2** **9** **5**
- 2 **[↕]**: Select desired entry. → **[MENU]**
- 3 **[↕]**: "Edit" → **[OK]**
- 4 Edit the name if necessary. → **[OK]**
- 5 Edit the phone number if necessary. → **[OK]**
- 6 **[↕]**: Select the desired ringer tone if necessary. → **[OK]** 2 times → **[📞]**

Viewing the favourites information

- 1 **[MENU]** **#** **2** **9** **5**
- 2 **[↕]**: Select desired entry. → **[MENU]**
- 3 **[↕]**: "Detail" → **[OK]**
- 4 **[📞]**

Erasing an entry

- 1 **[MENU]** **#** **2** **9** **5**
- 2 **[↕]**: Select desired entry. → **[MENU]**
- 3 **[↕]**: "Erase" → **[OK]**
- 4 **[↕]**: "Yes" → **[OK]** → **[📞]**

Menu list

To access the features, there are 2 methods.

■ Scrolling through the display menus

- 1 [MENU]
- 2 Press [▼], [▲], [▶], or [◀] to select the desired main menu. → [OK]
- 3 Press [▼] or [▲] to select the desired item from the next sub-menus. → [OK]
- 4 Press [▼] or [▲] to select the desired setting. → [OK]

■ Using the direct command code

- 1 [MENU] → Enter the desired code.
Example: Press [MENU][#][1][0][1].
- 2 Select the desired setting. → [OK]

Note:

- To exit the operation, press [⏻].
- In the following table, < > indicates the default settings.
- In the following table, (F) indicates the reference page number.
- Display menu order and sub-menu may vary depending on your model.

Display the menu tree and direct command code table

Main menu: [00] "Answer System"

Sub-menu 1	Sub-menu 2	Settings	Code	(F)
Play New Message	—	—	#323	58
Play All Message	—	—	#324	58
Erase All Message* ¹	—	—	#325	59
Greeting	Record Greeting* ¹	—	#302	56
	Play Greeting	—	#303	57
	Default* ¹ (Reset to pre-recorded greeting)	—	#304	57

Programming

Sub-menu 1	Sub-menu 2	Settings	Code	
New Message Alert ^{*1,*2}	Outgoing Call – On/Off	On <Off>	#338	59
	Outgoing Call – Notification to	–		
	Outgoing Call – Remote Code	Activate <Inactivate>		
	Base Unit Beep	On <Off>	#339	59
Settings	Number of Rings ^{*1}	Auto 2-9 Rings <5 Rings> ^{*3/} <8 Rings> ^{*2}	#211	63
	Recording Time ^{*1}	<3 Minutes> 1 Minute Greeting Only ^{*4}	#305	63
	Remote Code ^{*1}	–	#306	61
	Call Screening	<On> Off	#310	62
Answer On ^{*1}	–	–	#327	56
Answer Off ^{*1}	–	–	#328	56

Main menu:  “Time Settings”

Sub-menu 1	Sub-menu 2	Settings	Code	
Set Date/Time ^{*1}	–	–	#101	21
Memo Alarm	Alarm1-3	<Off> Once Daily Weekly	#720	48
Time Adjustment ^{*1,*5}	–	<Caller ID> Manual	#226	–

Main menu:  “Intercom”^{*6}

Operation	Code	
Paging the desired unit.	#274	29

Main menu:  "Initial Setup"

Sub-menu 1	Sub-menu 2	Settings	Code	
Ringer Setup	Ringer Volume (External) – Handset	Off-6 <6>	#160	–
	Ringer Volume (External) – Base Unit	Off-6 <3>	#*160	–
	Ringer Volume (Intercom) (Handset)	1-6 <6>	#175	–
	Ringtone (External) ^{*7} (Handset)	<Ringtone 1>	#161	–
	Ringtone (Intercom) ^{*7} (Handset)	<Ringtone 6>	#163	–
	Do Not Disturb Mode – On/Off	On <Off>	#238	49
	Do Not Disturb Mode – Start/End	<23:00/06:00>	#237	49
	Do Not Disturb Mode – Ring Delay	30 sec. <60 sec.> 90 sec. 120 sec. No Ringing	#239	49
	Do Not Disturb Mode – Select Category	Fav Call 1-3 Category 1-9	#241	49
	First Ring ^{*1, *8}	<On> Off	#173	–
	Ringer Indicator ^{*2}	<On> Off	#345	22

Programming

Sub-menu 1	Sub-menu 2	Settings	Code	
Time Settings	Set Date/Time* ¹	–	#101	21
	Memo Alarm – Alarm1-3	<Off> Once Daily Weekly	#720	48
	Time Adjustment* ¹ , * ⁵	<Caller ID> Manual	#226	–
Talking Caller ID* ²	Handset	<On> Off	#162	54
	Base Unit* ¹ , * ²	<On> Off	#*162	
Amplify Volume Mode* ²	–	<Normal> Amplified	#279	26
Low Battery Alert	–	Off <Every Hour> Every 3 Hours Every 6 Hours	#176	23
Automated Call Block* ¹	Block/Unblock	Block <Unblock>	#787	35
	Allow Name List	–	#794	35
	Access Code	<1>	#789	35
	Automated Call Greeting	Record Greeting	#791	36
		Play Greeting	#792	36
		Default	#793	36
	Blocked Calls Count	–	#790	35
Nuisance Call Block* ¹	Single Number	–	#217	31
	Range of Numbers	–		
	Withheld	On <Off>	#240	32
	Blocked Calls Count	–	#177	33
Fav Call* ¹	–	–	#295	39

Sub-menu 1	Sub-menu 2	Settings	Code	
Speed Dial	—	—	#261	39
Eco Mode* ¹	—	<Off> Eco Eco Plus	#725	22
Security* ¹	—	<Normal> Enhanced	#729	52
Record Greeting* ¹	—	—	#302	56
Display Setup	LCD & Key Backlight	<On> Off	#276	—
	Contrast (Display contrast)	Level 1–4 <2>	#145	—
	Handset Name	—	#104	52
	Display Name	On <Off>	#105	52
Auto Intercom* ⁶	—	On <Off>	#273	29
Keytones	—	<On> Off	#165	—
Key Lock Mode	—	with Password <without Password>	#246	29
Call Restrict* ¹	—	—	#256	52
Auto Talk* ⁹	—	On <Off>	#200	25
Line Setup	Recall/Flash Time* ¹ , * ¹⁰	80 msec. 90 msec. <100 msec.> 110 msec. 160 msec. 200 msec. 250 msec. 300 msec. 400 msec. 600 msec. 700 msec. 900 msec.	#121	26

Programming

Sub-menu 1	Sub-menu 2	Settings	Code	
Privacy Mode*1, *6, *11	—	On <Off>	#194	—
Base Unit PIN*1	—	<0000>	#132	53
Register	Register Handset	—	#130	74
	Cancel Register*4	—	#131	74
Language	Display	<English>	#110	21

Main menu:  “Ringer Setup”*3

Sub-menu 1	Sub-menu 2	Settings	Code	
Ringer Volume (External)	Handset	Off-6 <6>	#160	—
	Base Unit	Off-6 <3>	#*160	—
Ringer Volume (Intercom) (Handset)	—	1-6 <6>	#175	—
Ringtone (External)*7 (Handset)	—	<Ringtone 1>	#161	—
Ringtone (Intercom)*7 (Handset)	—	<Ringtone 6>	#163	—
Do Not Disturb Mode	On/Off	On <Off>	#238	49
	Start/End	<23:00/06:00>	#237	49
	Ring Delay	30 sec. <60 sec.> 90 sec. 120 sec. No Ringing	#239	49
	Select Category	Fav Call 1-3 Category 1-9	#241	49
First Ring*1, *8	—	<On> Off	#173	—

Main menu:  "Baby Monitor"*2

Sub-menu 1	Sub-menu 2	Settings	Code	
On/Off	—	On <Off>	#268	50
Sensitivity Level	—	Low <Middle> High	#269	51

Main menu:  "Caller List"

Operation	Code	
Viewing the caller list.	#213	55

- *1 If you program these settings using one of the handsets, you do not need to program the same item using another handset. (KX-TGU132/KX-TGU133/KX-TGU432/KX-TGU433)
- *2 KX-TGU430 series: page 4
- *3 KX-TGU130 series: page 4
- *4 This menu is not displayed when scrolling through the display menus. It is only available in direct command code.
- *5 This feature allows the unit to automatically adjust the date and time each time caller information including date and time is received.
To turn this feature on, select "**Caller ID**". To turn this feature off, select "**Manual**". (Caller ID subscribers only)
To use this feature, set the date and time first (page 21).
- *6 KX-TGU132/KX-TGU133/KX-TGU432/KX-TGU433
- *7 The preset melodies in this product ("**Ringtone 3**" - "**Ringtone 40**") are used with the permission of © 2012 - 2017 Copyrights Vision Inc.
- *8 If you do not want the unit to ring before the caller information is received, set to "**Off**". (Caller ID subscribers only)
You can only remove the first ring if the unit rings 2 times or more by default, which depends on your phone service provider.
- *9 If you subscribe to a Caller ID service and want to view the caller's information after lifting up the handset to answer a call, turn off this feature.
- *10 The recall/flash time depends on your telephone exchange or host PBX. Contact your PBX supplier if necessary.
- *11 To prevent other users from joining your conversations with outside callers, turn this feature on.

Alarm

An alarm sounds at the set time for 1 minute and is repeated 5 times at 5 minute intervals (snooze function). A text memo can also be displayed for the alarm. A total of 3 separate alarm times can be programmed for each handset. You can set one of 3 different alarm options (once, daily, or weekly) for each alarm time.

Important:

- Make sure the unit's date and time setting is correct (page 21).

- 1 **[MENU]** **[#]** **[7]** **[2]** **[0]**
- 2 **[↕]**: Select the desired alarm. → **[OK]**
- 3 **[↕]**: Select the desired alarm option. → **[OK]**

"Off"
Turns alarm off. Go to step 9.

"Once"
An alarm sounds once at the set time.

"Daily"
An alarm sounds daily at the set time. Go to step 5.

"Weekly"
Alarm sounds weekly at the set time(s).

- 4 Proceed with the operation according to your selection in step 3.

■ Once:

Enter the desired date and month. → **[OK]**

■ Weekly:

[↕]: Select the desired day of the week and press **[SELECT]**.
→ **[OK]**

- 5 Set the desired time. → **[OK]**
- 6 Enter a text memo (10 characters max.). → **[OK]**
- 7 **[↕]**: Select the desired alarm tone.
→ **[OK]**
 - We recommend selecting a different ringer tone from the one used for outside calls.
- 8 **[↕]**: Select the desired snooze setting. → **[OK]**
- 9 **[OK]** → **[🔔]**

Note:

- Press **[STOP]** to stop the alarm completely.
- When the handset is in use, the alarm will not sound until the handset is in standby mode.
- Press any dial key or **[SNOOZE]** to stop the sound but keep the snooze function activated.
- If you want to make an outside call when the snooze function is activated, please stop the snooze function before making the call.

Do not disturb mode

Do not disturb mode allows you to select a period of time during which the handset will not ring for outside calls. This feature is useful for time periods when you do not want to be disturbed, for example, while sleeping. Do not disturb mode can be set for each handset. Using the phonebook's category feature (page 37), you can also select categories of callers whose calls override do not disturb mode and

ring the handset (Caller ID subscribers only).

Important:

- Make sure the unit's date and time setting is correct (page 21).
- We recommend turning the base unit ringer off (page 25) in addition to turning do not disturb mode on.
- If you have set the alarm, the alarm sounds even if do not disturb mode is turned on.

Turning do not disturb mode on/off

- 1 **[MENU]** **#** **2** **3** **8**
- 2 **[↕]**: Select the desired setting. → **[OK]**
 - If you select "Off", press **[🔇]** to exit.
- 3 Enter the desired hour and minute you wish to start this feature. → **[OK]**
- 4 Enter the desired hour and minute you wish to end this feature. → **[OK]** → **[🔇]**

Changing the start and end time

- 1 **[MENU]** **#** **2** **3** **7**
- 2 Continue from step 3, "Turning do not disturb mode on/off", page 49.

Setting the ring delay

This setting allows the handset to ring during do not disturb mode if the caller waits long enough. After the selected amount of time passes, the handset rings. If you select "No Ringing", the handset never rings during do not disturb mode.

- 1 **[MENU]** **#** **2** **3** **9**

- 2 **[↕]**: Select the desired setting. → **[OK]** → **[🔇]**

Note:

- When the answering system answers the call, this feature does not work.

Selecting categories to bypass do not disturb mode

- 1 **[MENU]** **#** **2** **4** **1**
- 2 **[↕]**: Select the desired categories. → **[SELECT]**
 - "✓" is displayed next to the selected category numbers.
 - To cancel the selected category: **[↕]**: Select the category. → Press **[SELECT]** again. "✓" disappears.
- 3 **[OK]** → **[🔇]**

Note:

- In addition to the phonebook categories, you can select 3 people registered in favourite contacts.

Baby monitor

Available for:

KX-TGU430 series: page 4

This feature allows you to listen in on a room where another handset is located, allowing you to easily monitor from different areas of the house or place. The monitored handset (placed in a baby's room, for example) will automatically call the monitoring handset or the phone number stored when it detects sound.

Programming

Important:

- Before using this feature, we recommend that you test this feature and adjust the baby monitor sensitivity as needed, especially if you plan to monitor from outside.
- This feature should not be used as a substitute for a medical or caregiver's supervision. It is the caregiver's responsibility to stay close enough to handle any eventuality.

Note:

- During the monitoring mode, battery consumption is faster than usual. We recommend leaving the monitored handset on the base unit or charger.
- The monitored handset never rings while it is being monitored. If the base unit is placed near the monitored handset, we recommend turning off the base unit ringer volume (page 25).

Setting the baby monitor

Perform the setting operation with the handset to be monitored (for example, the handset placed in a baby's room).

To monitor with a handset

The internal baby monitor feature is available between handsets in the same radio cell.

- 1 **[MENU]#268**
- 2 **[↕]: "On" → [OK]**
- 3 **[↕]: Select the desired handset number to monitor with. → [OK]**
 - "Baby Monitor" will be displayed.
 - The registered handset name/number is displayed.

Note:

- When this feature is on, another handset can hear the monitored handset by making an intercom call.

To monitor from an outside line

If you enable this feature, the unit will call a pre-programmed phone number when the handset detects sound. After you answer the call, you can listen in on the room where the handset is located.

■ From the phonebook:

- 1 **[MENU]#268**
- 2 **[↕]: "On" → [OK]**
- 3 **[↕]: Select "External" to monitor from an outside line. → [ADD]**
- 4 **[↕]: "Phonebook" → [OK]**
- 5 **[↕]: Select the phonebook entry. → [OK]**
 - "Baby Monitor" will be displayed.

Note:

- If you edit a phonebook entry which is assigned for monitoring, the edited entry does not transfer to the monitor.

■ By entering phone numbers:

- 1 **[MENU]#268**
- 2 **[↕]: "On" → [OK]**
- 3 **[↕]: Select "External" to monitor from an outside line. → [ADD]**
- 4 **[↕]: "Manual" → [OK]**
- 5 Enter the desired name. → **[OK]**

- 6 Enter the desired number. → [OK] 2 times
 - “Baby Monitor” will be displayed.

Note:

- The registered name/number is displayed.

Turning off the baby monitor

The monitored handset cannot be used while baby monitor is set to “On”.

- 1 Press [MENU] on the handset being monitored.
- 2 [↕]: “On/Off” → [OK]
- 3 [↕]: “Off” → [OK] → [🔌]

Editing an outside monitoring number

- 1 Press [MENU] on the handset being monitored.
- 2 [↕]: “On/Off” → [OK]
- 3 [↕]: “On” → [OK]
- 4 [↕]: Select the outside line.
- 5 [MENU] → [↕]: “Edit” → [OK]
- 6 Edit the name if necessary. → [OK]
- 7 Edit the phone number if necessary. → [OK] 2 times

Erasing an outside monitoring number

- 1 Press [MENU] on the handset being monitored.
- 2 [↕]: “On/Off” → [OK]
- 3 [↕]: “On” → [OK]
- 4 [↕]: Select the outside line.
- 5 [MENU] → [↕]: “Erase” → [OK]

- 6 [↕]: “Yes” → [OK] → [🔌]

Baby monitor sensitivity

You can adjust the sensitivity of the baby monitor. Increase or decrease the sensitivity to adjust the sound level needed to trigger the baby monitor feature.

- This feature cannot be set during a monitoring call.

- 1 Press [MENU] on the handset being monitored.
- 2 [↕]: “Sensitivity Level” → [OK]
- 3 [↕]: Select the desired setting. → [OK] → [🔌]

Answering the baby monitor

■ When monitoring with a handset:

Press [📞/🔌] to answer calls.

If you want to respond from the monitoring handset, press [MUTE].

- The monitoring handset will answer calls automatically when the auto intercom feature is set to “On” (page 29).

Note:

- If you receive an outside call when communicating with the monitored handset, the interrupt tone sounds. To answer the call, press [🔌], then press [📞/🔌].

■ When monitoring from an outside line:

Answer the call.

If you want to respond from the monitoring phone, press [#1] using tone dialling.

You can turn off the baby monitor feature by pressing [#0].

Note:

- The unit disconnects the call automatically after 2 minutes.

Other programming

Changing the handset name

The default handset name is “Handset 1” to “Handset 3”. You can customise the name of each handset (“Bob”, “Kitchen”, etc.). This is useful when you make intercom calls between handsets. To display the handset name in standby mode, turn on the handset name display feature (page 52).

- 1 **[MENU]#104**
- 2 Enter the desired name (10 characters max.).
- 3 **[OK] → [🔍]**

Displaying the handset name

You can select whether or not the handset name is displayed in standby mode. The default setting is “Off”.

- 1 **[MENU]#105**
- 2 **[↕]**: Select the desired setting. → **[OK] → [🔍]**

Call restriction

You can restrict selected handsets from dialling certain numbers. You can assign up to 6 phone numbers to be restricted, and select which handsets are to be restricted. Storing area codes here prevents the restricted handsets from dialling any phone number in that area code.

- 1 **[MENU]#256**
- 2 Enter the base unit PIN (default: “0000”).
 - If you forget your PIN, see page 69.
- 3 **[↕]**: Select the handsets to be restricted. → **[SELECT]**
 - “✓” is displayed next to the selected handset numbers.
 - To cancel the selected handsets:
[↕]: Select the handset. → Press **[SELECT]** again. “✓” disappears.
- 4 **[OK]**
- 5 **[↕]**: Select a memory location. → **[OK]**
- 6 Enter the phone number or area code to be restricted (8 digits max.). → **[OK] → [🔍]**

Enhancing security for phone calls

You can increase the security of phone conversations by setting this feature to “Enhanced”. When “Enhanced” is selected,  is displayed. The default setting is “Normal”.

- 1 **[MENU]#729**
- 2 **[↕]**: Selected the desired setting. → **[OK]**
- 3 **[🔍]**

Note:

- When enhanced security is enabled, sound may cut in and out during conversations.

Changing the base unit PIN

Important:

- If you change the PIN (Personal Identification Number), please make note of your new PIN. The unit will not reveal the PIN to you. If you forget your PIN, see page 69.

- 1** **[MENU]** **[#]** **[1]** **[3]** **[2]**
- 2** Enter the current 4-digit base unit PIN (default: "0000").
- 3** Enter the new 4-digit base unit PIN. → **[OK]**
- 4** **[↕]**: "Yes" → **[OK]** → **[📞]**

Using Caller ID service

Important:

- This unit is Caller ID compatible. To use Caller ID features, you must subscribe to a Caller ID service. Contact your phone service provider for details.

Caller ID features

When an outside call is being received, the caller information is displayed. Caller information for the last 50 callers is logged in the caller list from the most recent call to the oldest.

- If the unit cannot receive caller information, the following is displayed:
 - “**Out of Area**”: The caller dials from an area which does not provide a Caller ID service.
 - “**Private Caller**”: The caller requests not to send caller information.
- If the unit is connected to a PBX system, caller information may not be properly received. Contact your PBX supplier.

Missed calls

If a call is not answered, the unit treats it as a missed call and  is displayed. This lets you know if you should view the caller list to see who called while you were away. Even if only one missed call in the caller list is viewed (page 55),  disappears from the display. When you receive another new call,  is displayed again.

Note:

- Even when there are unviewed missed calls,  disappears from the standby display if the following operation is performed by one of the registered handsets:
 - Being replaced on the base unit or charger.
 - Pressing [].

Phonebook name display

When caller information is received and it matches a phone number stored in the phonebook, the stored name in the phonebook is displayed and logged in the caller list.

However, if the caller information matches a number in the Fav Call key, the stored name in the Fav Call key is displayed, but it will not be shown in the caller log.

Talking Caller ID

Available for:

KX-TGU430 series: page 4

This feature lets you know who is calling without looking at the display.

To use this feature, you must:

- subscribe to a Caller ID service of your phone service provider.
- turn this feature on (page 44).
- store the name and phone number in the phonebook (page 37) or the Fav Call key (page 39).

Phonebook name announcement

When caller information is received from your phone service provider and it matches a phone number stored in either the phonebook or the Fav Call key, the corresponding stored name will be announced following every ring.

If that phone number has not been stored in the phonebook or Fav Call key, the caller information is announced.

Note:

- Name pronunciation may vary. This feature may not pronounce all names correctly.

Caller list

Important:

- Make sure the unit's date and time setting is correct (page 21).

Viewing the caller list and calling back

- 1 Press left **[•]** navigator key.
 - Or press **[CALL LOG]** (left soft key).
If the redial list is displayed, press left **[•]** navigator key to switch to the caller list.
- 2 Press **[v]** to search from the most recent call, or press **[Δ]** to search from the oldest call.
- 3 To call back, press **[↶/☎]**.
To exit, press **[⏏]**.

Note:

- If **[▶]** is displayed in step 2, not all of the information is shown. To see the remaining information, press **[▶]**. To return to the previous screen, press **[◀]**.
- If the entry has already been viewed or answered, "✓" is displayed.
 - "☎" indicates the caller blocked by Nuisance call block.

- "☎" indicates the caller blocked by Automated call block.

Editing a caller's phone number

- 1 Press left **[•]** navigator key.
 - Or press **[CALL LOG]** (left soft key).
If the redial list is displayed, press left **[•]** navigator key to switch to the caller list.
- 2 **[↕]**: Select the desired entry. → **[MENU]**
- 3 **[↕]**: "Edit & Call" → **[OK]**
- 4 Edit the number.
- 5 **[↶/☎]**

Erasing selected caller information

- 1 Press left **[•]** navigator key.
 - Or press **[CALL LOG]** (left soft key).
If the redial list is displayed, press left **[•]** navigator key to switch to the caller list.
- 2 **[↕]**: Select the desired entry.
- 3 **[ERASE]** → **[↕]**: "Yes" → **[OK]** → **[⏏]**

Erasing all caller information

- 1 Press left **[•]** navigator key.
 - Or press **[CALL LOG]** (left soft key).
If the redial list is displayed, press left **[•]** navigator key to switch to the caller list.
- 2 **[ERASE]** → **[↕]**: "Yes" → **[OK]** → **[⏏]**

Answering system

The answering system can answer and record calls for you when you are unavailable to answer the phone. You can also set the unit to play a greeting message but not to record caller messages by selecting **"Greeting Only"** as the recording time setting (page 63).

Important:

- Make sure the unit's date and time setting is correct (page 21).

Memory capacity (including your greeting message)

The total recording capacity is about 18*1/20*2 minutes. A maximum of 64 messages can be recorded.

*1 KX-TGU130 series: page 4

*2 KX-TGU430 series: page 4

Note:

- When message memory becomes full:
 - **"Messages Full"** is shown on the handset display.
 - The message counter on the base unit flashes if the answering system is turned on.
 - **00** and the total number of new messages are not displayed on the handset even if the answering system is turned on.
 - If you use the pre-recorded greeting message, the unit automatically switches to another pre-recorded greeting message asking callers to call again later.
 - If you recorded your own greeting message, the same message is still announced to callers even

though their messages are not recorded.

Turning the answering system on/off

The answering system is preset to on.

Base unit

Press **[00]** to turn on/off the answering system.

Handset

- 1 To turn on:
[MENU]#327
To turn off:
[MENU]#328
- 2 **[📞]**

Note for base unit and handset:

- When the answering system is turned on:
 - the message counter displays the total number of messages (old and new).
 - **00** is displayed on the handset.

Greeting message

When the unit answers a call, a greeting message is played to callers. You can use either:

- your own greeting message
- a pre-recorded greeting message

Recording your greeting message

- 1 **[MENU]#302**

- 2 **[↕]: “Yes” → [OK]**
- 3 After a beep sounds, hold the handset about 20 cm away and speak clearly into the microphone (2 minutes 30 seconds max.).
- 4 Press **[STOP]** to stop recording.
→ **[📞]**

Using a pre-recorded greeting message

The unit provides 2 pre-recorded greeting messages:

- If you reset to pre-recorded greeting or do not record your own greeting message, the unit plays a pre-recorded greeting asking callers to leave a message.
- If the message recording time (page 63) is set to **“Greeting only”**, callers’ messages are not recorded and the unit plays a different pre-recorded greeting message asking callers to call again.

Resetting to a pre-recorded greeting message

Use this procedure to erase your greeting message and use a pre-recorded one.

- 1 **[MENU]#304**
- 2 **[OK] → [📞]**

Playing back the greeting message

- 1 **[MENU]#303**
- 2 **[📞]**

Listening to messages

Important:

- When using the base unit or handset to listen to messages, the noise reduction feature (page 27) is activated automatically in spite of the setting (**NR** is not displayed).

Using the base unit

When new messages have been recorded, the message indicator **[]** on the base unit flashes.

Press **[▶■]**.

- During playback, the message indicator **[]** on the base unit lights.
- If new messages have been recorded, the base unit plays back new messages.
- If there are no new messages, the base unit plays back all messages.

Operating the answering system during playback

Key	Operation
[+] or [-]	Adjust the speaker volume
[⏮]	Repeat message*1
[⏭]	Skip message
[▶■]	Stop playback
[X]	Erase currently playing message

*1 If pressed within the first 5 seconds of a message, the previous message is played.

Answering System

Rewinding the message

Available for:

KX-TGU430 series: page 4

Press and hold [⏮] until the unit plays the desired part of the message.

- During rewinding, the base unit makes a continuous beeping sound. Rewinding speed may vary depending on the recorded message.
- At the beginning of the message, the unit plays the message at normal speed.

Fast-forwarding the message

Available for:

KX-TGU430 series: page 4

Press and hold [⏭] until the unit plays the desired part of the message.

- During fast-forwarding, the base unit makes a continuous beeping sound. Fast-forwarding speed may vary depending on the recorded message.
- Even if you press and hold [⏭] when the end of this message is played, the next message is played at normal speed.

Erasing all messages

Press [X] 2 times while the unit is not in use.

Using the handset

When new messages have been recorded, [00] is displayed on the handset with the total number of new messages.

1 To listen to new messages:

[MENU]#323

To listen to all messages:

[MENU]#324

2 When finished, press [⏹].

Note:

- To switch to the receiver, press [📞]. Note to set the lowest volume setting at which you can hear adequately.

Operating the answering system

[MENU] → [00] → [OK]

Key	Operation
[▲] or [▼]/ [+]¹ or [-]¹	Adjust the receiver or speaker volume (during playback)
[1] or [◀]	Repeat message (during playback)²
[2] or [▶]	Skip message (during playback)
[3]	Enter the "Settings" menu
[4]	Play new messages
[5]	Play all messages
[6]	Play greeting message
[7] [6]	Record greeting message
[8]	Turn answering system on
[MENU]	Pause message³
[9] or [STOP]	Stop recording Stop playback
[0]	Turn answering system off
[*] [4]⁴	Erase currently playing message
[*] [5]	Erase all messages

Key	Operation
[*] [6]	Reset to a pre-recorded greeting message

- *1 KX-TGU430 series: page 4
- *2 If pressed within the first 5 seconds of a message, the previous message is played.
- *3 To resume playback:
[↵]: "Play" → [OK]
- *4 You can also erase as follows:
[MENU] → [↵]: "Erase" → [OK] → [↵]: "Yes" → [OK]

Calling back (Caller ID subscribers only)

- 1 Press **[MENU]** during playback.
- 2 **[↵]: "Call Back" → [OK]**
- **Editing the number before calling back**
 - 1 Press **[MENU]** during playback.
 - 2 **[↵]: "Edit & Call" → [OK]**
 - 3 Edit the number. → **[📞]**

Erasing all messages

- 1 **[MENU] [#] [3] [2] [5]**
- 2 **[↵]: "Yes" → [OK] → [🔇]**

Advanced new message alerting features

Available for:
KX-TGU430 series: page 4

Audible message alert

This feature allows the base unit to beep to inform you of a new message arrival when new messages are recorded. The base unit beeps 2 times every minute until you listen to the messages, if the **"Base Unit Beep"** setting is turned on. The default setting is **"Off"**.

- 1 **[MENU] [#] [3] [3] [9]**
- 2 **[↵]: Select the desired setting. → [OK] → [🔇]**

New message alert by a call

This feature allows you to receive a notification by phone when new messages are recorded. The base unit calls a phone number you specify. You can then operate the answering system remotely to listen to the new message. To use this feature, you must:

- store a phone number to which the unit makes the call to.
- turn on the new message alert setting.

After you answer the new message alert call, you can listen to messages from that call (page 61).

Important:

- A new message alert is stopped 1 minute after the unit starts to call. The unit will not retry the call even if the call is not answered.

Storing a phone number to which the unit makes an alert call

- **From the phonebook:**
 - 1 **[MENU] [#] [3] [3] [8]**
 - 2 **[↵]: "Notification to" → [OK] → [ADD]**

- 3 [↕]: "Phonebook" → [OK]
- 4 [↕]: Select the desired phonebook entry. → [OK] → [📞]

■ By entering a phone number:

- 1 [MENU]#338
- 2 [↕]: "Notification to" → [OK] → [ADD]
- 3 [↕]: "Manual" → [OK]
- 4 Enter the desired name (16 characters max.). → [OK]
- 5 Enter the desired number (24 digits max.). → [OK] 2 times → [📞]

Turning on/off the new message alert setting

■ If the phone number is being stored:

- 1 [MENU]#338
- 2 [↕]: "On/Off" → [OK]
- 3 [↕]: Select the desired setting. → [OK] → [📞]

■ If the phone number is not being stored:

- 1 [MENU]#338
- 2 [↕]: "On/Off" → [OK]
 - If you select "Off", press [OK].
To exit, press [📞].
- 3 [↕]: "On" → [OK] → [ADD]
- 4 [↕]: "Phonebook" → [OK] → Continue from step 4, "Storing a phone number to which the unit makes an alert call", page 59.
or

- [↕]: "Manual" → [OK] → Continue from step 4, "Storing a phone number to which the unit makes an alert call", 59.

Editing the set phone number

- 1 [MENU]#338
- 2 [↕]: "Notification to" → [OK]
- 3 [MENU] → [↕]: "Edit" → [OK]
- 4 Edit the name if necessary (16 characters max.). → [OK]
- 5 Edit the phone number if necessary (24 digits max.). → [OK] 2 times → [📞]

Erasing the set phone number

- 1 [MENU]#338
- 2 [↕]: "Notification to" → [OK]
- 3 [MENU] → [↕]: "Erase" → [OK]
- 4 [↕]: "Yes" → [OK] → [📞]
 - The new message alert setting is turned off.

Activating/inactivating the remote access code to play messages

If you activate this feature, you must enter the remote access code (page 61) to play the new message from the new message alert call. This is so that unauthorised parties cannot listen to your messages. The default setting is "Inactivate".

- "Inactivate": You can listen to the message by pressing [4] to play new messages (without entering the remote access code).

- **“Activate”**: You must enter your remote access code and then press **[4]** to play new message.

- 1 **[MENU]#[3][3][8]**
- 2 **[↕]: “Remote Code” → [OK]**
- 3 **[↕]: Select the desired setting. → [OK] → [📞]**

Listening to messages

After you answer the new message alert, you can listen to the messages as follows.

■ **When the remote access code is set to “Inactivate”:**

Press **[4]** to play the new message during the announcement.

■ **When the remote access code is set to “Activate”:**

- 1 Enter the remote access code (page 61) during the announcement.
- 2 Press **[4]** to play the new message.

Note:

- Within 10 seconds after listening to new messages, you can press **[#][9]** during the call to turn off the new message alert by a call feature.
- Even if the unit makes a new message alert call, the handset redial list does not show the record.

Remote operation

Using a touch-tone phone, you can call your phone number from outside and access the unit to listen to messages or change answering system settings. The unit's voice guidance prompts you

to press certain dial keys to perform different operations.

Remote access code

A 3-digit remote access code must be entered when operating the answering system remotely. This code prevents unauthorised parties from listening to your messages remotely.

Important:

- In order to operate the answering system remotely, you must first set a remote access code.

- 1 **[MENU]#[3][0][6]**
- 2 To turn on remote operation, enter the desired 3-digit remote access code.
- 3 **[OK] → [📞]**

Deactivating remote operation

Press **[X]** in step 2 on “Remote access code”, page 61.

- The entered remote access code is deleted.

Using the answering system remotely

- 1 Dial your phone number from a touch-tone phone.
- 2 After the greeting message starts, enter your remote access code.
- 3 Follow the voice guidance prompts as necessary or control the unit using remote commands (page 62).
- 4 When finished, hang up.

Answering System

Voice guidance

During remote operation, the unit's voice guidance starts and prompts you to press **[1]** to perform a specific operation, or press **[2]** to listen to more available operations.

Note:

- If you do not press any dial keys within 10 seconds after a voice guidance prompt, the unit disconnects your call.

Remote commands

You can press dial keys to access certain answering system functions without waiting for the voice guidance to prompt you.

Key	Operation
[1]	Repeat message (during playback)* ¹
[2]	Skip message (during playback)
[4]	Play new messages
[5]	Play all messages
[6]	Play greeting message
[7]	Record greeting message
[9]	Stop recording Stop playback
[0]	Turn answering system off
[*][4]	Erase currently playing message
[*][5]	Erase all messages
[*][6]	Reset to a pre-recorded greeting message (during greeting message playback)
[*][#]	End remote operation (or hang up)

- *¹ If pressed within the first 5 seconds of a message, the previous message is played.

Turning on the answering system remotely

- 1 Dial your phone number from a touch-tone phone.
- 2 Let the phone ring 20 times.
 - A long beep is heard.
- 3 Enter your remote access code within 10 seconds after the long beep.
 - The greeting message is played back.
 - You can either hang up, or enter your remote access code again and begin remote operation (page 61).

Answering system settings

Call screening

While a caller is leaving a message, you can listen to the call through the handset's speaker. To adjust the speaker volume, press either **[▲]** or **[▼]** on the navigator key, or **[+]***¹ or **[-]***¹ located on the side of the handset repeatedly. You can answer the call by pressing **[📞/📞]** on the handset. Call screening can be set for each handset. The default setting is "On".

*¹ KX-TGU430 series: page 4

- 1 **[MENU][#][3][1][0]**

- 2 : Select the desired setting. →
[OK] →

Number of rings before the unit answers a call

You can change the number of times the phone rings “**Number of Rings**” before the unit answers a call. You can select 2 to 9 rings, or “**Auto**”.

The default setting is “**5 Rings**”^{*1} / “**8 Rings**”^{*2}.

“**Auto**”: The unit’s answering system answers at the end of the 2nd^{*1}/5th^{*2} ring when new messages have been recorded, or at the end of the 5th^{*1}/8th^{*2} ring when there are no new messages. If you call your phone from outside to listen to new messages (page 61), you know that there are no new messages when the phone rings for the 3rd^{*1}/6th^{*2} time. You can then hang up without being charged for the call.

*1 KX-TGU130 series: page 4

*2 KX-TGU430 series: page 4

- 1 [MENU]# [2] [1] [1]

- 2 : Select the desired setting. →
[OK] →

Caller’s recording time

You can change the maximum message recording time allowed for each caller. The default setting is “**3 Minutes**”.

- 1 [MENU]# [3] [0] [5]

- 2 : Select the desired setting. →
[OK] →

Selecting “Greeting Only”

You can select “**Greeting Only**” which sets the unit to announce a greeting message to callers but not record messages.

Select “**Greeting Only**” in step 2 on “**Caller’s recording time**”, page 63.

Note:

- When you select “**Greeting Only**”:
 - If you do not record your own message, the unit will play the pre-recorded greeting-only message asking callers to call again later.
 - If you use your own message, record the greeting-only message asking callers to call again later (page 56).

Voicemail service

In addition to your unit's answering system you may also have voicemail service from your phone service provider. Voicemail is an answering service that may be offered by your phone service provider. This service can also record calls when you are unavailable to answer the phone or when your line is busy. Messages are recorded on the phone company system and not on the unit's answering system.

- To use the voicemail service rather than the unit's answering system, turn off the answering system (page 56).

If you have unit's answering system set to on and also the voicemail enabled, the system with least amount of rings will record the message first.

Example:

If the unit's answering system is set to 5¹/₈² rings (page 63) and the voicemail answering system provided by your phone company is set to 3¹/₆² rings (call your service provider), the unit's answering system will record the incoming call first.

When you have new messages,  is displayed on the handset if message indication service is available. Please contact your phone service provider for details of this service.

*1 KX-TGU130 series: page 4

*2 KX-TGU430 series: page 4

Important:

- If  still remains on the display even after you have listened to new messages, turn it off by pressing and holding **[MENU]** for 3 seconds.

Character entry

The dial keys are used to enter characters and numbers. Each dial key has multiple characters assigned to it. The characters that can be entered depend on the character entry mode (page 65).

- Press **[◀]** or **[▶]** to move the cursor left or right.
- Press dial keys to enter characters and numbers.
- Press **[CLEAR]** to erase the character or number highlighted by the cursor. Press and hold **[CLEAR]** to erase all characters or numbers.
- Press **[A→a]** to switch between uppercase and lowercase.
- To enter another character located on the same dial key, press **[▶]** to move the cursor to the next space, then press the appropriate dial key.
- If you do not press any dial key within 2 seconds after entering a character, the character is fixed and the cursor moves to the next space.

Character entry modes

The available character entry modes are Alphabet (ABC), Numeric (0-9), Greek (ΑΒΓ), Extended 1 (ÄÄÄ), Extended 2 (ŠŠŠ), and Cyrillic (АБВ). When in these entry modes except Numeric, you can select which character is entered by pressing a dial key repeatedly.

When the unit displays the character entry screen:

[#] → [↕]: Select a character entry mode. → [OK]

Note:

- □ in the following tables represents a single space.

Alphabet character table (ABC)

0	1	2	3	4	5	6	7	8	9
□ 0	# & ' () * , - . / 1	A B C 2 a b c 2	D E F 3 d e f 3	G H I 4 g h i 4	J K L 5 j k l 5	M N O 6 m n o 6	P Q R 7 p q r 7	T U V 8 t u v 8	W X Y 9 w x y 9

Numeric entry table (0-9)

0	1	2	3	4	5	6	7	8	9
0	1	2	3	4	5	6	7	8	9

Greek character table (ΑΒΓ)

0	1	2	3	4	5	6	7	8	9
□ 0	# & ' () * , - . / 1	Α Β Γ 2	Δ Ε Ζ 3	Η Θ Ι 4	Κ Λ Μ 5	Ν Ξ Ο 6	Π Ρ Σ 7	Τ Υ Φ 8	Χ Ψ Ω 9

Extended 1 character table (ÄÄÄ)

0	1	2	3	4	5	6	7	8	9
□ 0	# & ' () * , - . / 1	A Ä Á Ä Ä Ä Ä Æ B C Ç 2	D E È É È È Ê F 3	G Ğ H I Ì Í Î Ï Î Î 4	J K L 5	M N Ñ O Ò Ó Ô Õ Ö ø 6	P Q R S Š 7	T U Û Ü Ü Ü Û V 8	W Ŵ X Y Ŷ Z 9
		a à á â ã ä å æ b c ç 2	d e è é ê ë ë f 3	g ğ h i ì í î ï î î 4	j k l 5	m n ñ o ò ó ô õ ö ø 6	p q r s š 7	t u ù ü û ü û v 8	w ŵ x y ŷ z 9

Useful Information

- The following are used for both uppercase and lowercase: ø ð ŵ ŷ

Extended 2 character table (ŠŠŠ)

0	1	2	3	4	5	6	7	8	9
0	# & ' () * , - . / 1	A Á Ą Ȧ B C Ć Č 2	D Ď E É Ě ě F 3	G H I Í 4	J K L Ľ Ł 5	M N Ń Ñ O Ó Ő Ő̇ 6	P Q R Ę Ŗ Š 7	T Ť U Ú Ů ů V 8	W X Y ŷ Ź Ž 9
		a á ä Ȧ b c Ć Č 2	d ě e é Ě ě f 3	g h i í 4	j k l Ľ Ł 5	m n Ń ñ o ó ő Ő̇ 6	p q r Ę Ŗ š 7	t ť u ú ů ů v 8	w x y ŷ Ź ž 9

- The following are used for both uppercase and lowercase:

À Ć Č Ę Ł Ľ Ĺ Ń Ŗ Š ů ŷ Ž ž Ž

Cyrillic character table (АБВ)

0	1	2	3	4	5	6	7	8	9
0 1 2 3 4 5 6 7 8 9	# & ' () * , - . / 1	А Б В Г 2	Д Е Ж З 3	И Й К Л 4	М Н О П 5	Р С Т У 6	Ф Х Ц Ч 7	Ш Щ Ъ Ы 8	Ь Э Ю Я 9

Error messages

Display message	Cause/solution
Base no power or No link. Reconnect AC adaptor.	- Confirm the base unit's AC adaptor is connected to the unit and the power outlet correctly. - The handset has lost communication with the base unit. Move closer to the base unit and try again. - Unplug the base unit's AC adaptor to reset the unit. Reconnect the adaptor and try again. - The handset's registration may have been cancelled. Re-register the handset (page 74).
Check Phone Line	- Make sure that you are using the compatible telephone line cord. - The telephone line cord has not been connected yet or not connected properly. Check the connections (page 14).

Display message	Cause/solution
Checking	● The automated call block function is in operation. Try again later.
Error	● Recording was too short. Try again.
Memory Full	● The phonebook memory is full. Erase unwanted entries (page 38). ● Message memory is full. Erase unwanted messages (page 57, 58). ● The call block list memory is full. Erase unwanted entries (page 32).
Use rechargeable	● A wrong type of battery such as alkaline or manganese was inserted. Use only the rechargeable Ni-MH batteries noted on page 5, 10.
You must first subscribe to Caller ID.	● You must subscribe to a Caller ID service. Once you receive caller information after subscribing to a Caller ID service, this message will not be displayed.

Troubleshooting

If you still have difficulties after following the instructions in this section, disconnect the base unit's AC adaptor and turn off the handset, then reconnect the base unit's AC adaptor and turn on the handset.

General use

Problem	Cause/solution
The handset does not turn on even after installing charged batteries.	● Place the handset on the base unit or charger to turn on the handset.
The unit does not work.	● Make sure the batteries are installed correctly (page 15). ● Fully charge the batteries (page 16). ● Check the connections (page 14). ● Unplug the base unit's AC adaptor to reset the unit and turn off the handset. Reconnect the adaptor, turn on the handset and try again. ● The handset has not been registered to the base unit. Register the handset (page 74).

Useful Information

Problem	Cause/solution
The handset display is blank.	● The handset is not turned on. Turn the power on (page 21).
I cannot hear a dial tone.	● Make sure that you are using the compatible telephone line cord. Your old telephone line cord may have a different wiring configuration. ● The base unit's AC adaptor or telephone line cord is not connected. Check the connections. ● Disconnect the base unit from the telephone line and connect the line to a known working telephone. If the working telephone operates properly, contact our service personnel to have the unit repaired. If the working telephone does not operate properly, contact your phone service provider.
The base unit beeps.	● New messages have been recorded. Listen to the new messages (page 57).
Error sound is heard when I press some keys on base unit.	● Automated call block is being screened. Try again later.
I cannot use the intercom feature.	● This feature is available between the handsets. Although the handset displays "Intercom" or "Auto Intercom", these features are not available for single handset models.
The unit does not emit the specified number of rings.	● If the first ring is turned off, the number of rings decreases by 1 from the specified number of rings (page 43).
Excessive use of the torchlight can reduce the battery life.*1	● Continuous usage of the torchlight will reduce the battery life to 2 hours. Note: Torchlight will automatically turn off after 5 minutes of usage. You can press the  key to turn back on.

Problem	Cause/solution
Handset functions abnormally, such as: ● One-sided connection (only one party can hear the other). ● No ring when receiving calls. ● Complete inability to connect calls.	● This could be due to temporary communication errors between the phone and the router/FritzBox. ● Please reboot your router/FritzBox by unplugging it from the AC outlet, waiting for 10 seconds, and then plugging it back in. This may fix the problems.

*1 KX-TGU430 series: page 4

Menu list

Problem	Cause/solution
The display is in a language I cannot read.	● Change the display language (page 21).
I cannot register a handset to a base unit.	● You entered the wrong PIN. If you forget your PIN, see "I cannot remember the PIN." (page 69).
I cannot remember the PIN.	● Change the PIN using the following method. 1 [MENU]#132 2 *7000 3 Enter the new 4-digit base unit PIN. → [OK] 4 [↕]: "Yes" → [OK] → [📞]
I cannot remember the key lock mode password.	● If you forget your password, enter *7000 instead of your key lock password.

Battery recharge

Problem	Cause/solution
The handset beeps and/or  flashes.	● Battery charge is low. Fully charge the batteries (page 16).
I fully charged the batteries, but –  still flashes or – the operating time seems to be shorter.	● Clean the battery ends (+, -) and the charge contacts with a dry cloth and charge again. ● It is time to replace the batteries (page 15).

Useful Information

Making/answering calls, intercom

Problem	Cause/solution
 is displayed.	• The handset is too far from the base unit. Move closer. • The base unit's AC adaptor is not properly connected. Reconnect AC adaptor to the base unit. • The handset is not registered to the base unit. Register it (page 74). • Activating eco mode reduces the range of the base unit in standby mode. If required, turn eco mode off (page 22).
Noise is heard, sound cuts in and out.	• You are using the handset or base unit in an area with high electrical interference. Re-position the base unit and use the handset away from sources of interference. • Move closer to the base unit. • If you use a DSL/ADSL service, we recommend connecting a DSL/ADSL filter between the base unit and the telephone line jack. Contact your DSL/ADSL provider for details.
Sound quality seems to be getting worse.	• You have registered a handset that is not recommended. The clearest sound quality is only possible by registering the provided handset.
The handset does not ring.	• The ringer volume is turned off. Adjust ringer volume (page 25, 43). • Do not disturb mode is turned on. Turn it off (page 49).
The base unit does not ring.	• The ringer volume is turned off. Adjust ringer volume (page 25).
I cannot make a call.	• You dialled a call restricted number (page 52). • The key lock feature is turned on. Turn it off (page 29).
I cannot use voice paging.	• You cannot use voice paging if other units are in use.
I cannot hear other party's voice clearly during a conversation.	• Press either [▲] on the navigator key, or [+]^{*1} located on the side of the handset repeatedly, to select the desired volume while talking. • Turn on the Amplify key feature by pressing [🔊] while on a call (page 26). Note that volume will be increased substantially.*1

*1 KX-TGU430 series: page 4

Fav Call key

Problem	Cause/solution
The Fav Call key remains flashing.	The Fav Call key flashes when there is a missed call from any of your favourite contacts is received and not answered.
No notification of missed call from favourite contacts.	When there is a missed call from the favourite contacts, the Fav Call key flashes at 5 second intervals. Press the Fav Call key, if "→" is displayed besides the favourite contacts that means you had a missed call from that contact. Note: Once you press the Fav Call key to see the missed call and press [], the Fav Call key will stop flashing.

Caller ID, Talking Caller ID*1

Problem	Cause/solution
Caller information is not displayed.	- You must subscribe to a Caller ID service. Contact your phone service provider for details. - If your unit is connected to any additional telephone equipment, remove and plug the unit directly into the wall jack. - If you use a DSL/ADSL service, we recommend connecting a DSL/ADSL filter between the base unit and the telephone line jack. Contact your DSL/ADSL provider for details. - Other telephone equipment may be interfering with this unit. Disconnect the other equipment and try again.
Caller information is displayed or announced*1 late.	- Depending on your phone service provider, the unit may display the caller's information at the 2nd ring or later. Set the first ring to "OFF" (page 43). - Move closer to the base unit.

Useful Information

Problem	Cause/solution
Caller information is not announced.*1	● To use the Talking Caller ID feature, store the name and phone number in the phonebook (page 37) or Fav Call key (page 40). ● The handset or base unit's ringer volume is turned off. Adjust it (page 25, 43). ● The Talking Caller ID feature is turned off. Turn it on (page 44). ● Depending on the number of rings setting, the answering system may answer calls before announcing the caller information. Select a different setting (page 63).
Time on the unit has shifted.	● Incorrect time information from incoming Caller ID changes the time. Set the time adjustment to "Manual" (off) (page 44).
The name stored in the phonebook is not fully displayed while an outside call is being received.	● Edit the phonebook entry name to fit in 1 line of text (page 38).
The following features are not available: ● Phonebook. ● CLIP (Caller Line Identification Presentation). ● Date and time display (not available or incorrect).	● If the handset is directly registered to the router/FritzBox, these features may not be available. ● Connect the base unit to an analog port on the router/FritzBox, and then register the handset to the base unit. ● If connecting the base unit to the router/FritzBox is not feasible, please refer to the manual of the router/FritzBox or contact the manufacturer for potential workarounds or alternative solutions.

*1 KX-TGU430 series: page 4

Answering system

Problem	Cause/solution
The unit does not record new messages.	● The answering system is turned off. Turn it on (page 56). ● The message memory is full. Erase unwanted messages (page 57). ● The recording time is set to “Greeting Only”. Change the setting (page 63). ● Your phone service provider’s voicemail service may be answering your calls before the unit’s answering system can answer your calls. Change the unit’s number of rings setting (page 63) to a lower value, or contact your phone service provider.
I cannot operate the answering system remotely.	● The remote access code is not set. Set the remote access code (page 61). ● You are entering the wrong remote access code. If you have forgotten your remote access code, enter the remote access code setting to check your current code (page 61). ● The answering system is turned off. Turn it on (page 62).

Liquid damage

Problem	Cause/solution
Liquid or other form of moisture has entered the handset/base unit.	● Disconnect the AC adaptor and telephone line cord from the base unit. Remove the batteries from the handset and leave to dry for at least 3 days. After the handset/base unit are completely dry, reconnect the AC adaptor and telephone line cord. Insert the batteries and charge fully before use. If the unit does not work properly, contact an authorised service centre.

Caution:

- To avoid permanent damage, do not use a microwave oven to speed up the drying process.

Registering a unit

Registering a handset to the base unit

The supplied handset and base unit are pre-registered. If for some reason the handset is not registered to the base unit (for example,  is displayed even when the handset is near the base unit), re-register the handset.

1 Handset:

[MENU]  **1**  **3**  **0**

2 Base unit:

Press and hold  for about 5 seconds.

- If all registered handsets start ringing, press  again to stop, then repeat this step. (KX-TGU132/KX-TGU133/KX-TGU432/KX-TGU433)

3 Handset:

[OK] → Wait until “**Base PIN**” is displayed. → Enter the base unit PIN (default: “0000”). → **[OK]**

- If you forget your PIN, see page 69.

Deregistering a handset

A handset can cancel its own registration to the base unit, or other handsets registered to the same base unit. This allows the handset to end its wireless connection with the system.

1 [MENU] **1** **3** **1**

- All handsets registered to the base unit are displayed.

2 [↕]: Select the handset you want to cancel. → **[OK]**

3 [↕]: “Yes” → **[OK]** →

Conditions of guarantee

This guarantee is in addition to and does not in any way affect any statutory or other rights of consumer purchasers. If within the applicable guarantee period, the product proves to be defective by reason of faulty design, workmanship or materials, we undertake subject to the following conditions to have the defective product (or any part or parts thereof) repaired or replaced free of charge.

1. The product shall have been purchased and used solely within either the U.K. or Ireland and in accordance with standard operating instructions and the technical and/or Safety Standards required in the U.K.
2. On being found defective, please consult with the retailer from where it was purchased for assistance.
3. This guarantee shall not apply to damage caused through fire, accident, lightning, misuse, wear and tear, neglect, incorrect adjustment or repair, to damage caused through installation, adaption, modification or use in an improper manner or inconsistent with the technical and/or safety standards required in the country where this product is used, or to damage occurred during transit to or from the purchaser.
4. If at any time during the guarantee period any part or parts of the product are replaced with a part or parts not supplied or approved by us or of an objective quality safe and suitable for the product, or the product has been dismantled or repaired by any person not authorised by us, we shall have the right to terminate this guarantee in whole or in part immediately without further notice.
5. The purchaser's sole and exclusive remedy under this guarantee against us is for the repair or replacement of the product or any defective part or parts and no other remedy, including, but not limited to, incidental or consequential damage or loss of whatsoever nature shall be available to the purchaser.
6. This guarantee shall not apply to batteries and any other items of limited natural life.
7. Our decision on all matters relating to complaints shall be final. Any product or defective part which has been replaced shall become our property.
8. The guarantee period applicable to this product shall be 12 months.

Please keep these operating instructions with your receipt.

Panasonic U.K. a branch of Panasonic Marketing Europe GmbH

Receipt No. _____	Date of purchase _____
Model No. _____	Serial No. _____

Index

- A** Alarm: 48
 - Answering calls: 25
 - Answering system: 56
 - Call screening: 62
 - Erasing messages: 57, 58, 59, 62
 - Greeting message: 56
 - Greeting only: 63
 - Listening to messages: 57, 58, 61
 - New message alerting: 59
 - Number of rings: 63
 - Recording time: 63
 - Remote access code: 61
 - Remote operation: 61
 - Turning on/off: 56
 - Auto intercom: 29
 - Auto talk: 25, 45
 - Automated call block: 34
- B** Baby monitor: 49
 - Battery: 15, 16
- C** Call restriction: 52
 - Call share: 27
 - Call waiting: 26
 - Call Waiting Caller ID: 26
 - Caller ID service: 54
 - Caller list: 55
 - Caller list edit: 55
 - Category: 37
 - Chain dial: 38
 - Character entry: 64
 - Conference calls: 28
 - Control type: 19
- D** Date and time: 21
 - Direct command code: 41
 - Display
 - Contrast: 45
 - Language: 21
 - Do not disturb mode: 48
- E** Eco mode: 22
 - Equalizer: 27
 - Error messages: 66
- F** Fav Call key: 39
 - First ring: 43
- H** Handset
 - Deregistration: 74
 - Name: 52
 - Registration: 74
 - Hold: 25
- I** Intercom: 28
- K** Key lock: 29
 - Keytones: 45
- L** Low battery alert: 23
- M** Making calls: 24
 - Missed calls: 54
 - Mute: 25
- N** Noise reduction: 27
 - Nuisance call block: 31
- O** OK key: 19
- P** Pause: 24
 - Phonebook: 37
 - PIN: 53
 - Power failure: 16
 - Power on/off: 21
 - Privacy mode: 46
- R** Recall/flash: 26
 - Redialling: 24
 - Ringer indicator: 22

- Ringer tone
 - Intercom call: 43
 - Outside call: 43
- S** Security for phone calls: 52
- Speakerphone: 24
- Speed dial: 39
- T** Talking Caller ID: 54
- Time adjustment: 44
- Torchlight: 22
- Transferring calls: 28
- Troubleshooting: 67
- V** Voicemail: 64
- Volume
 - Amplify key: 26
 - Receiver: 24
 - Ringer (Base unit): 25
 - Ringer for intercom call (Handset): 43
 - Ringer for outside call (Base Unit): 43
 - Ringer for outside call (Handset): 25, 43
 - Speaker: 24

IMPORTANT!

If your product is not working properly. . .

- ① **Reconnect AC adaptor to the base unit.**
- ② **Check if telephone line cord is connected.**
- ③ **Use rechargeable Ni-MH batteries.**
(Alkaline/Manganese/Ni-Cd batteries CANNOT be used.)
- ④ Read **troubleshooting** page in the **Operating Instructions.**



If you still have any problems, please call the **Panasonic DECT Helpline**

0344 844 3899 (U.K.)

01289 8333 (Ireland)

or contact us through our website:

www.panasonic.co.uk

UK CA

Importer for UK

Panasonic UK, a branch of
Panasonic Marketing Europe GmbH,

Maxis 2, Western Road, Bracknell, Berkshire, RG12 1RT

Manufactured by:

Panasonic Entertainment & Communication Co., Ltd.

1-10-12 Yagumo-higashi-machi, Moriguchi City, Osaka 570-0021, Japan

<http://www.panasonic.com>

© Panasonic Entertainment & Communication Co., Ltd. 2024

PNQP1891ZA PP0324MH0