



65" SMART HDR 4K LED TV

(Series 8, NU8030)

KALED65NU8030SVA

CONTENTS

Safety and warnings	02	TV Menu.....	10-11
Components.....	04	Specifications.....	12
Product overview	05	Troubleshooting.....	13
Inputs.....	05		
Assembly and installation.....	06		
Stand assembly	06		
Connect to antenna.....	06		
Using remote / power button.....	07		
Remote control overview.....	08		
First time setup.....	09		
TV Buttons	09		

THIS USER GUIDE COVERS THE FOLLOWING MODELS

Kogan 65" UHD HDR LED TV (Series 8 NU8030)

SAFETY AND WARNINGS

Thank you for buying this Kogan product. Please read all safety instructions before using your TV.

WARNING

Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television set.
- Only using furniture that can safely support the television set.
- Ensuring the television set is not overhanging the edge of the supporting furniture.
- Not placing the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television set or its controls.

If your existing television set is being retained and relocated, the same considerations as above should be applied.

- To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- The apparatus shall not be exposed to dripping or splashing, and no objects filled with liquids, (for example, vases), shall be placed on the apparatus.
- When discarding used batteries, always be mindful of the environment. Ensure you follow any guidelines for recycling and safe disposal of batteries that apply in your local area. Don't throw used batteries in rubbish bin.
- When installing your TV, maintain a distance of at least 10 cm between the TV and other objects (walls, cabinet sides, etc.) to ensure proper ventilation. Failing to maintain proper ventilation may result in a fire or a problem with the product caused by an increase in its internal temperature.
- The openings/slots on the back of the apparatus have been provided for necessary ventilation. Ventilation should not be impeded by blocking these openings in any way (for example, newspapers, table-cloths, curtains, etc.)
- No naked flame sources, such as lit candles, should be placed on the apparatus. To prevent the spread of fire, keep candles or other open flames away from this product at all times.
- The device may malfunction when under electrostatic discharge. It can be manually resumed by switching power off completely (at wall outlet), then switching power on again.
- To avoid any injury caused by overturn of the product when installed with base stands, please always ensure the whole product is placed horizontally within the supporting surface and that the television is not overhanging the edge of the supporting furniture.
- If not using with base stands, use only a wall or ceiling mount which has been recommended by the manufacturer of the television.

SAFETY AND WARNINGS cont'd

- Keep small accessories out of reach of children so they are not mistakenly swallowed.

CAUTION: Connecting the power cord

Most appliances recommend they be placed upon a dedicated circuit; that is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits.

Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your appliance, and if appearance indicates damage or deterioration, immediately discontinue use of the appliance until the cord is replaced with an exact replacement part by an authorized servicer.

Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance.

The MAINS plug is used as the disconnect device, and the disconnect device shall remain readily operable.

Operating Temperature: 5°C to 45°C

Storage Temperature: -15°C to 45°C

Operating Humidity: ≤80%

Storage Humidity: ≤90%







CAUTION

Do not attempt to modify this product in any way without written authorization from supplier. Unauthorized modification could void the user's authority to operate this product.

 
It is not recommended to keep a certain still image displayed on the screen for a long time as well as displaying extremely bright images on screen.

Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance. Product design and specifications may be changed without notice.

Refer to the table below as a guide to the symbols and warnings which may be on your TV.

<div>CAUTION</div> <div>RISK OF ELECTRIC SHOCK</div> <div>DO NOT OPEN</div>	CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER TO QUALIFIED SERVICE PERSONNEL.
	The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.
	The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.
	Class II product: This symbol indicates that a safety connection to electrical earth (ground) is not required. If this symbol is not present on a product with a mains lead, the product MUST have a reliable connection to protective earth (ground).
	AC voltage: Rated voltage marked with this symbol is AC voltage.
	DC voltage: Rated voltage marked with this symbol is DC voltage.
	Caution. Consult instructions for use: This symbol instructs the user to consult the user manual for further safety related information.

COMPONENTS

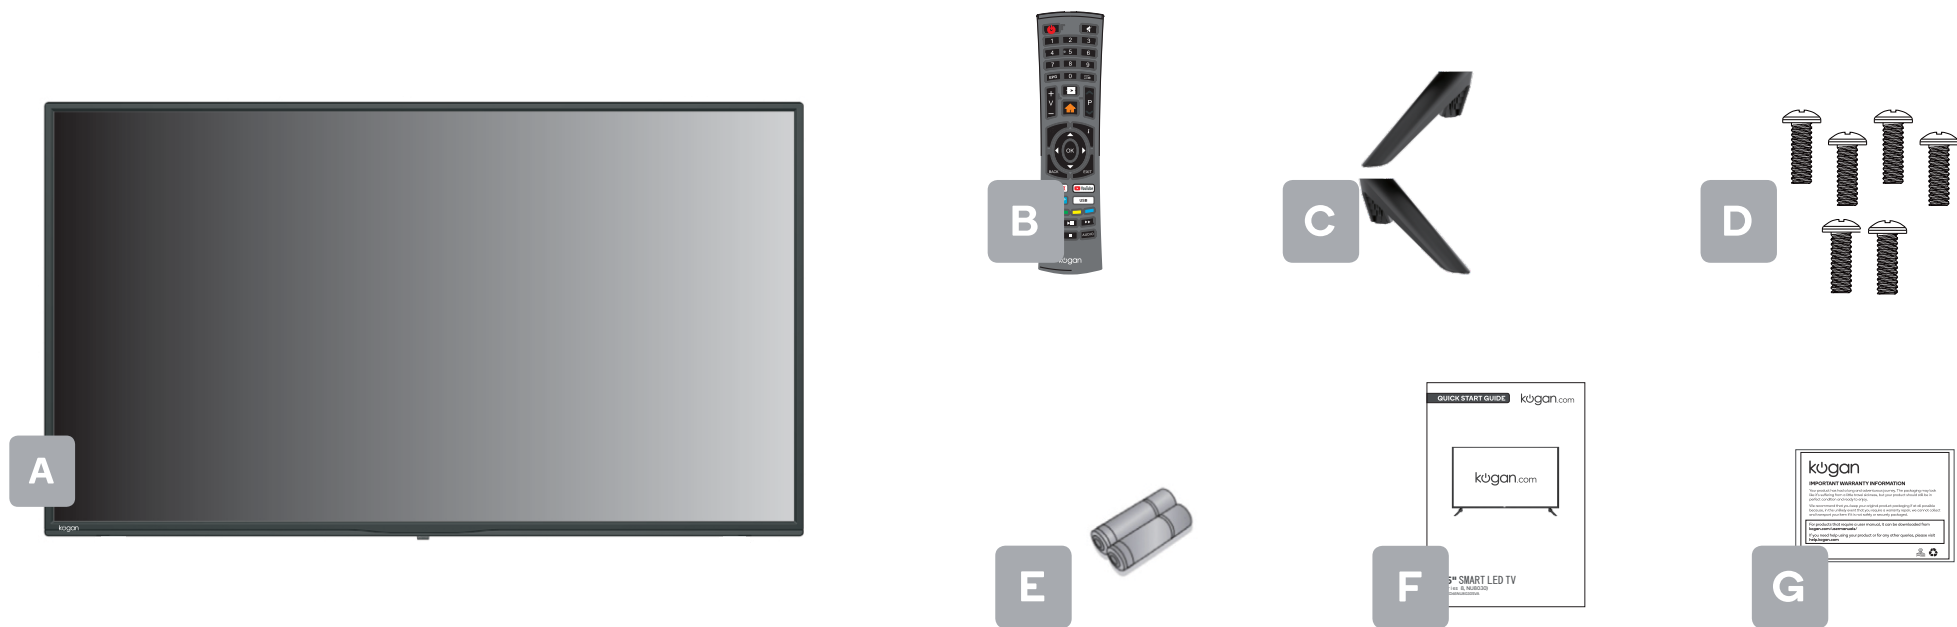

A Kogan 65" Smart LED TV

B Remote control

C Stand (x2)

D Bm4x18mm screw (x6)

E AAA battery (x2)

 
F Quick-start guide

G Warranty card

NOT INCLUDED

Phillips head screwdriver, antenna cable, broadband internet connection.

PRODUCT OVERVIEW

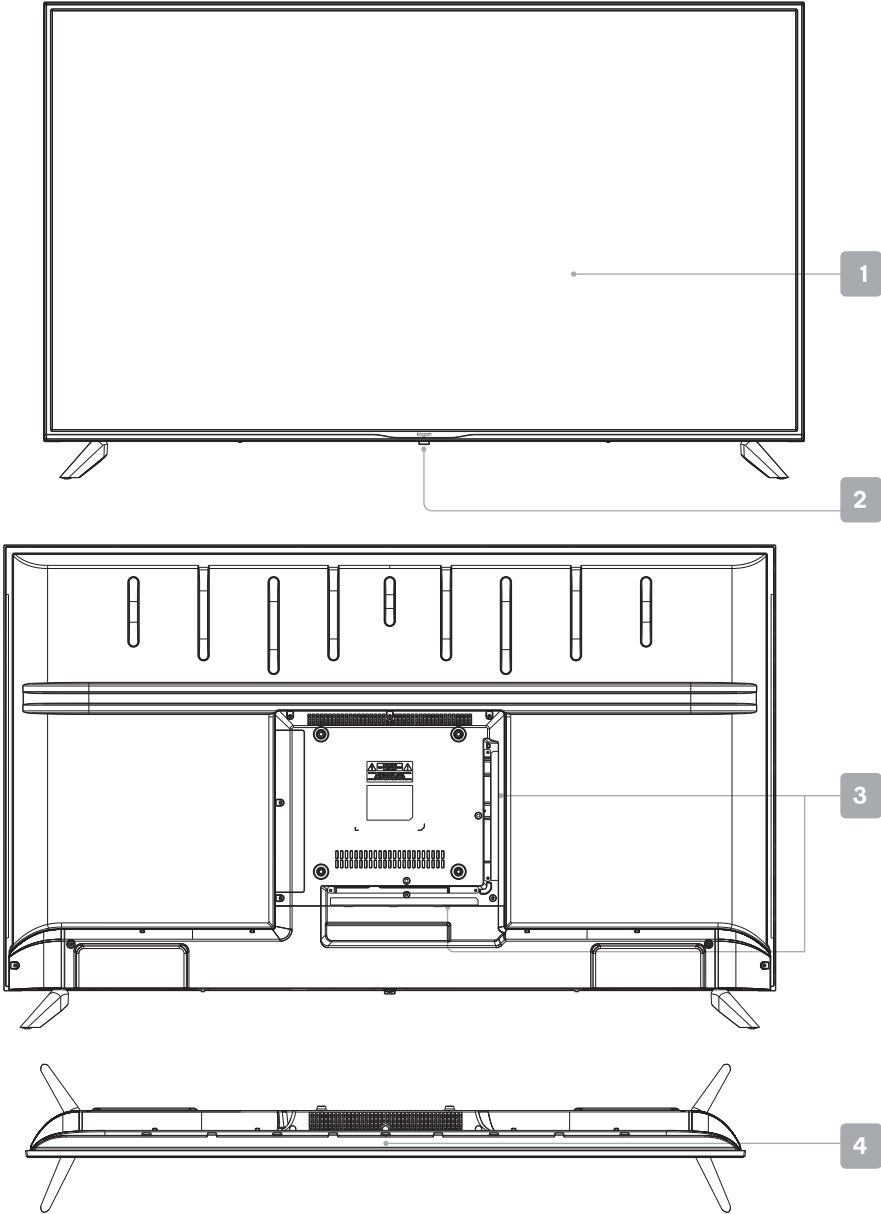

- 1

Kogan 65" Smart LED TV
- 2

Remote sensor / Standby light
- 3

Inputs/Ports
- 4

Power button

Inputs

	AV input External AV Signal Input And Relevant Right/Left Sound Channel
	USB input Connect a USB device here to play its media files or to record programs via the PVR function.
	LAN Connect a Internet
	HDMI input Digital signal input from HDMI video connector.
	ANT 75 Connect the antennal/cadle tv input (75/VHF/UHF)
	OPTICAL Digital Audio Output.
	EARPHONE output When earphones are plugged in, speakers are disabled

This is a general guide to inputs and ports, your TV may not feature all of the above.

 
ASSEMBLY AND INSTALLATION

BEFORE YOU GET STARTED

Spread cushioning flat to lay the TV on. This will help to prevent damage.


1. Stand assembly

- a. Attach stands to base of TV.
- b. Insert three 18mm screws for each stand, and use Phillips head screwdriver (not supplied) to tighten.

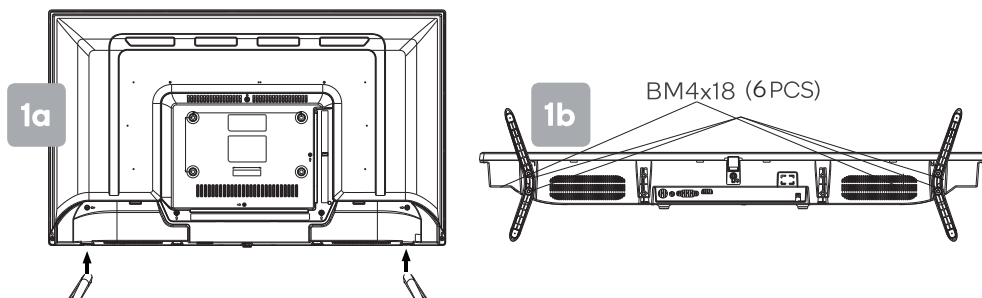

2. Connect to antenna

 
- a. Connect an antenna cable (not supplied) via the 'ANT' input port at the back of the TV.
- b. Ensure the antenna cable is also connected to a working antenna, either via an antenna wall socket in your home, or directly.

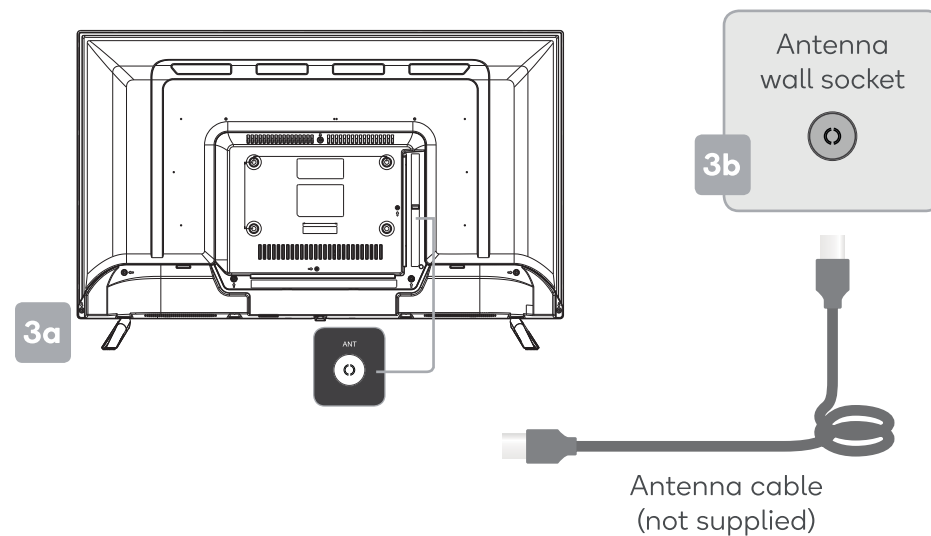

USING REMOTE CONTROL / POWER BUTTON

3. Remote control assembly

 - Open the battery compartment cover on the back side.
- Insert two 1.5V AAA size batteries, making sure to match the polarity markings (+ / -) of the batteries with the diagram inside the compartment.
- Replace battery compartment cover.

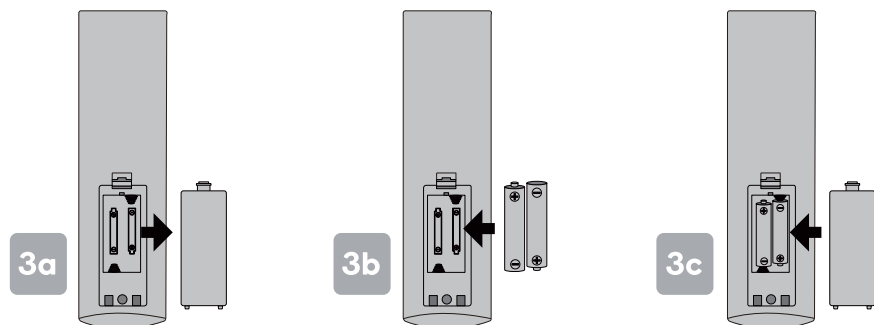

WARNINGS

- One loading of batteries will last for 1 year under normal use.
- If you do not intend to use the remote controller for a long period of time, remove them to avoid damage due to leakage.
- Do not use old and new batteries together.
- The batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

4. Using remote control

Unless stated, otherwise, the remote control can operate all the features of the TV.

 
Always point the remote control directly at the remote sensor in front of the TV.

TIPS

Do not block the path between the sensor and the remote control.

5. Turning TV on

- Plug the power cord into a suitable power outlet. The standby will display a light, showing that the TV is receiving power.
- Press the POWER (⏻) button (on your remote or at the bottom of the TV) to turn the TV on.
- The standby light will turn off when the TV is on.

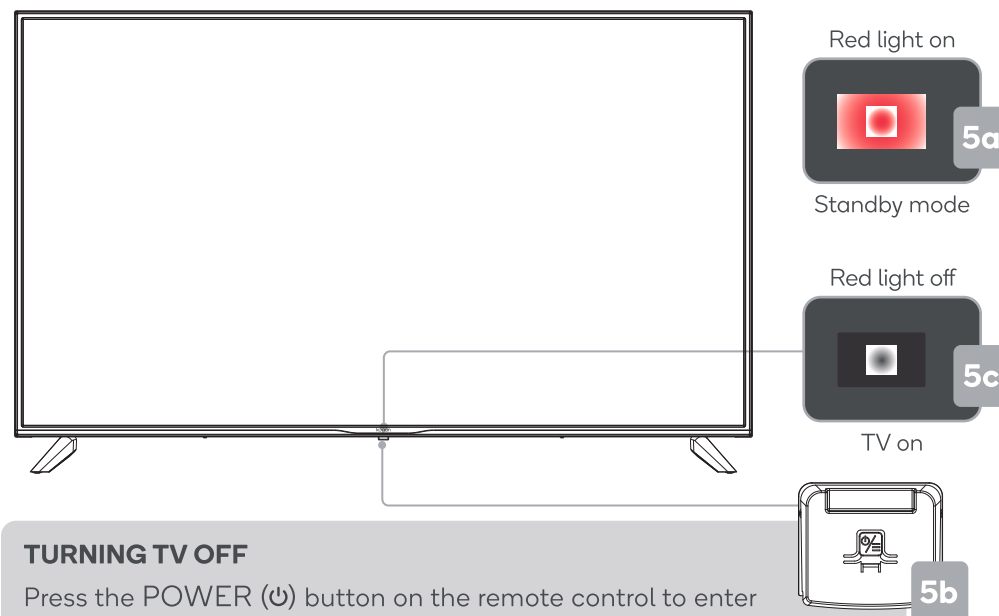

TURNING TV OFF

Press the POWER (⏻) button on the remote control to enter standby mode.

To power down the TV completely, unplug the power cord from the power outlet.

Do not leave your set in standby mode for long periods of time. If you will not use the TV for a long time, it is recommended to unplug the set from both the power outlet and aerial.

REMOTE CONTROL OVERVIEW



- 1 : Turn on the TV or enter standby mode
- 2 : Turn off the sound and turn on when press again
- 3 0~9 : Figures 0-9 are used to directly input channel number
- 4 : Press to display Electronic Program Guide and select the favorite channel
- 5 : Press to enter Teletext when play the program
- 6 : Input source selection button
- 7 : Press to enter the Home Page
- 8 : Increase the volume
- 9 : Decrease the volume
- 10 : Increase the program
- 11 : Decrease the program
- 12 : Start system menu
- 13 : Press to display the source and channels display
- 14 : To confirm the choice with the highlighted menu item



 
- 15 : Press these buttons to select items
- 16 : Press these buttons to select and adjust items
- 17 **BACK** : Go back to the previous step
- 18 **EXIT** : Press to exit the OSD menu
- 19 **NETFLIX** : Press to launch the Netflix
- 20 : Press to launch the YouTube
- 21 : Accesso diretto a Amazon Prime Video
- 22 **USB** : Press to enter USB mode
- 23 **Colour Buttons** : Press these buttons according to different prompts
- 24 : Press to fast reverse in USB mode
- 25 : Press to fast forward in USB mode
- 26 : Press to play the video and press again to pause the video
- 27 : Press to start recording the program
- 28 : Hold on or off for current page display
- 29 : Press to change the language when palyng the stream which contains multi-language

FIRST TIME SETUP


The first time you switch your TV on, it will automatically be in the initial setup mode. This will guide you through the whole setup process of selecting your desired language, connecting to the internet, signing in to your account and tuning in TV channels.

Choosing Your OSD Language


1). Press ▲▼ the buttons to highlight your desired OSD language then press the OK button.

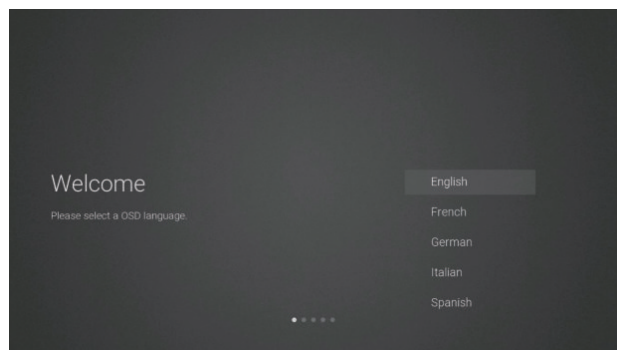

 2). Data Collection and Firmware Updates Notice page will appear. Press the ▲▼ buttons to select the menu option.

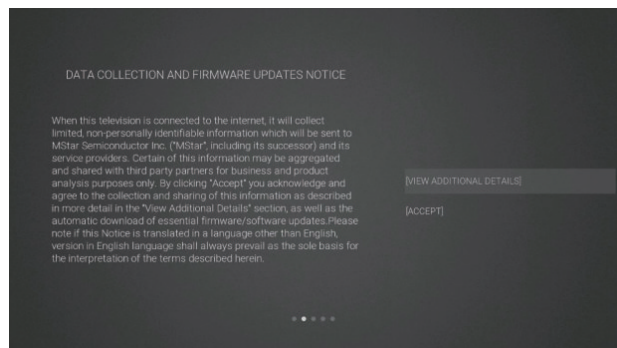

TV Buttons

 

⏻: Turn ON/OFF Power.

SOURCE: External Signal Input Selection.

MENU: Display Main MENU And Confirm MENU Item Selection.

CH+/-: Selecting Channel.

VOL+/-: Adjusting Volume.

FIRST TIME SETUP

 
VIEW ADDITIONAL DETAILS

Go to view more detailed firmware/software network download update instructions.

ACCEPT

Accept all agreements and agree to the firmware/software network to automatically download updates

3). If you select VIEW ADDITIONAL DETAILS, the detailed firmware/software network download update instructions will display. Initially, the default focus will be on the text description section. Press ▲▼the buttons will drop the text to the bottom. Press the ▼buttons, ACCEPT ALL will highlight. Press the ▲▼ buttons then the OK button to confirm the selection.

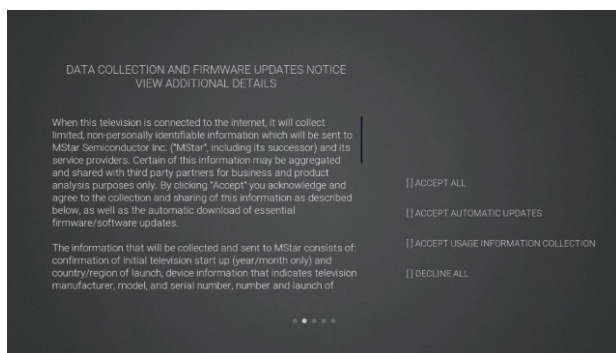

ACCEPT ALL

Accept all protocol sections and agree to the firmware/software network to automatically download updates.

ACCEPT AUTOMATIC UPDATES

Accept all protocol parts and manually select whether to agree to the firmware/software network download update if there is a firmware/software update.

 
ACCEPT USAGE INFORMATION COLLECTION

Suppliers accepting the agreement section collect some non-personal user information.

DECLINE ALL

Reject all protocols to disable firmware/software network updates.

4). Press ▲▼the buttons to select your country where you will operate the TV. Press the OK button to confirm.

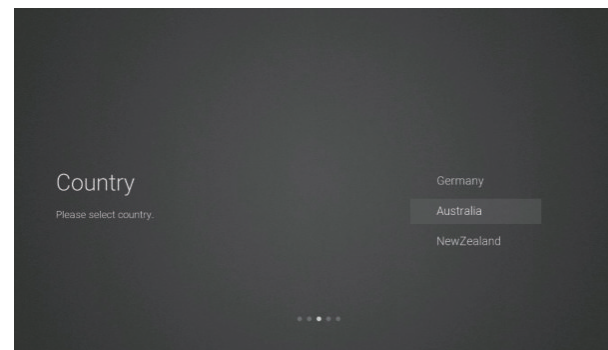

CONNECTING TO THE INTERNET

You have 2 options when connecting your TV to the internet. You can connect wirelessly via Wi-Fi or connect your TV to your router directly by connecting a LAN cable (wired connection). Choose your connection method and follow these instructions.

Wi-Fi Network

1). Press the ▲▼ buttons to highlight Wi-Fi Network then press the OK button. Your TV will automatically scan for your wireless network, then show you a list of networks that it's found. Highlight your network and press the OK button.

 
2). Use the ◀▶ buttons to navigate the keypad in the screen to enter your Wi-Fi password, then press the OK button to select the characters. Finally select the and press the OK button. In a second or two your TV will show Success after connection successful.

WIRED Connection

If you have connected your ethernet cable to the LAN socket on the back of your TV, select Wired Network and then press the OK button. Then select Connect to start connect to the internet.

SKIP Connection

1). If you do not need to connect to the network, select Skip and press the OK button to confirm.

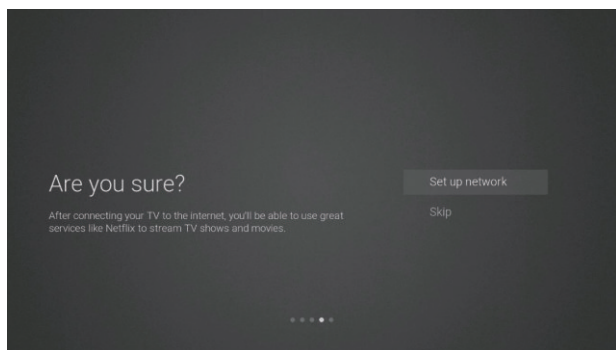

2). A pop up menu will be display. If you want to go back the network setting page, select Set up Network. If you want to confirm to skip the network setting, select Skip. Then will enter to Input Source menu and start TV Tuning.

SIGNING IN TO YOUR NETFLIX ACCOUNT

Press the ▲▼ buttons to select Start Netflix then press the OK button. You will now be asked to sign in to your Netflix account. If you don't already have an account you can set one up on your TV go to the 'Join Now' section.



If you want to temporarily skip the Netflix setting, select Skip to enter to Input Source menu and start TV Tuning.

 
If you complete Netflix setting, press the EXIT button to leave and press the button and select Programme, then select Auto Tuning for TV tuning.

TUNING


If you select Skip option in Netflix setting page, then you now need to tuning in your TV so you can watch LIVE TV (broadcast TV). If you watch TV via a Set Top Box you can skip this section by selecting the correct HDMI input source.

DVB-T


1).Input Source page shown on the TV, use the ▲▼buttons to select TV. then press the OK button.

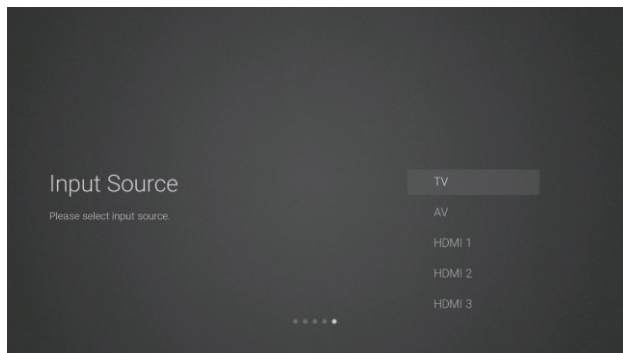

 2).In DVB Tuning Type page, use the ▲▼buttons to select DVBT.

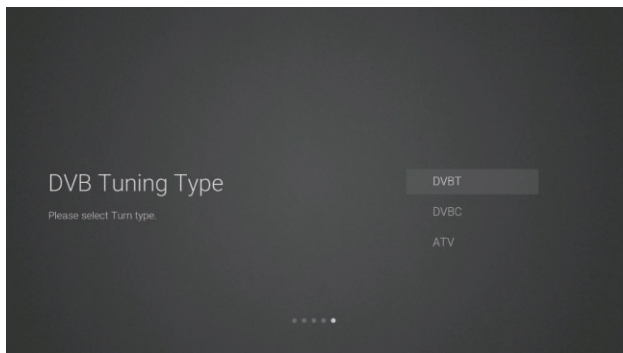

 3). Your TV will now start scanning for all the available TV channels. This operation may take a few minutes. The display will show the progress of the tuning and the number of channels found.

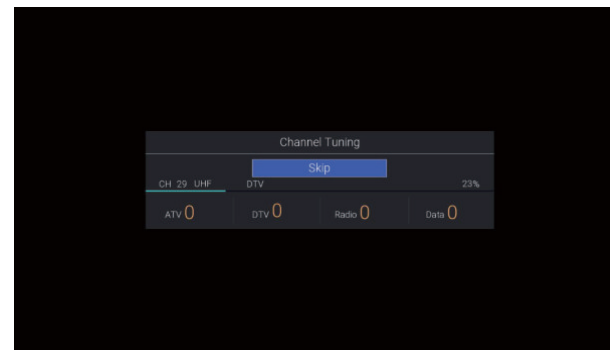


4). If you want to skip the DTV tuning, press the OK button to interrupt the tuning half way. A pop-up screen will be displayed, press the ◀button to select YES to confirm.

e. Your TV is now setup and ready to watch.

DVB-C


1). Input Source page shown on the TV, use the ▲▼buttons to select TV. then press the OK button.

 2). In DVB Tuning Type page, use the▲▼ buttons to select DVBC.

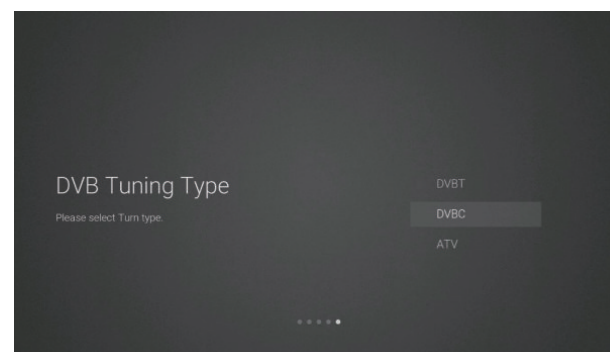

TUNING

 3). Your TV will now start scanning for all the available TV channels. This operation may take a few minutes. The display will show the progress of the tuning and the number of channels found.

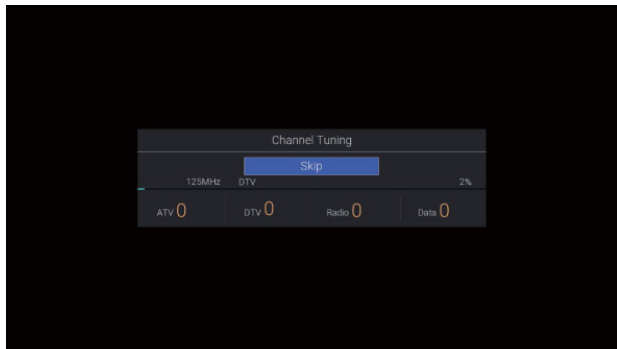


4). If you want to skip the tuning, press the OK button to interrupt the tuning half way. A pop-up screen will be displayed, press the ◀ button to select YES to confirm.

5). Your TV is now setup and ready to watch.

HOME Menu

 1). Press the 🏠 button to display the home menu.

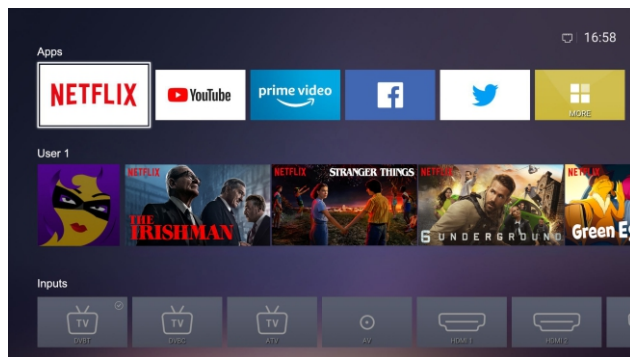

2). Use the ▲▼ buttons to switch between the Apps, NETFLIX, Input, and Settings sections of the Home page.

3). Use the ◀▶ buttons to select the desired App, input source or setting, then press the OK button to confirm.

BASIC TROUBLESHOOTING

Poor picture and sound quality

- Try a different channel
- Adjust the antenna
- Check all connections

No picture or sound in TV status

- Try another channel
- Press the TV/AV button
- Make sure TV is plugged in
- Check the antenna connection

No sound or sound is too low at maximum volume

- Check the volume settings on any external speakers connected to your television
- Adjust the TV volume accordingly
- Check another channel or input
- Check that MUTE hasn't been turned on

No colour, wrong colour or tints

- Make sure the program itself is broadcast in colour
- Select the picture menu, then adjust the colour and tint submenus

Picture rolls vertically

- Check all connections

Blurred or snowy picture, distorted sound

- Check direction, location and connections to your antenna
- Issues may be caused by the use of an indoor antenna (poor signal)

Remote control malfunctions

- Replace remote control batteries
- Check battery terminals
- Remote is out of range, move closer to TV
- Remove any obstructions between remote and IR sensor of TV
- Make sure the power cord to your TV is plugged in and turned on

Image is not centred on the screen

- Adjust the horizontal and vertical position

“No Signal” on HDMI source

- Test the device with a different HDMI cable
- Plug the device into another HDMI port
- Try a different device connected to the same cable and port
- Perform a factory reset on your TV

For our full TV troubleshooting guide and extended User Manual for this TV, head online to help.kogan.com

SPECIFICATIONS

Audio

Speakers 2 x 8W

Connectivity

HDMI 2.0
HDMI-ARC Yes | HDMI 3
HDMI-CEC Yes | HDMI 1 | HDMI 2 | HDMI 3
USB 2 x USB 2.0

Dimensions

Distance Between Legs 1365.4mm
Without Stand 1461.4*84.8*849.2
With Stand 1461.4*249.8*903
VESA Wall Mount Pattern 400 x400
GW 25.9 KG

Display

Brightness 250 ±20 cd/m²
Colours 1.07B
Computer Supported Resolutions 640x480@60Hz, 800x600@60Hz, 1280x720@60Hz, 1360x768@60Hz, 1680x1050@60Hz, 1920x1080@60Hz,
Contrast Ratio 4000:1
Native Aspect Ratio 16:9
Panel Manufacturer CSOT
Refresh Rate 60Hz
Resolution 3840 x 2160
Response Time 6.5ms
Size 65"
Viewing Angle 178°/178°

Features

EPG Yes
HDCP Yes | 2.0
TV Resolution UHD
USB Media Playback Yes
USB Media Playback Formats MPEG1/2*, MPEG4*, H.263*, H.264**, HEVC**, Motion JPEG*, VP8*, AC3, HEAAC, FLAC, JPEG, BMP, PNG
(*up to FHD@60fps; ** up to UHD@60fps)

Power

Average Consumption 160 W
Energy Consumption 348 kWh per year
Energy Rating 6 Star

Tuning And Signal

Tuner Type DVB-T/T2

Note:
• Design and specifications are subject to change without notice.
• Weight and dimension shown are approximate.

TROUBLESHOOTING

Common fixes

Many minor issues can be resolved by hard resetting, or power cycling the unit or upgrading the firmware.

To perform a hard reset, or power cycle, please use the following steps.

- Unplug it from the main power socket and leave it for 10-15 minutes.
- Press and hold the power button on the TV for 5 seconds.
- Connect the TV back to the power and turn it on.

Poor picture and sound quality

- Try a different channel
- Adjust the antenna
- Check all connections

No picture or sound in TV status

- Try another channel
- Press the TV/AV button
- Make sure TV is plugged in
- Check the antenna connection

No sound or sound is too low at maximum volume

- Check the volume settings on any external speakers connected to your television
- Adjust the TV volume accordingly
- Check another channel or input
- Check that MUTE hasn't been turned on

Picture rolls vertically

- Check all connections

No colour, wrong colour or tints

- Make sure the program itself is broadcast in colour
- Select the picture menu, then adjust the colour and tint submenus

Blurred or snowy picture, distorted sound

- Check direction, location and connections to your antenna
- Issues may be caused by the use of an indoor antenna (poor signal)

Remote control malfunctions

- Replace remote control batteries
- Check battery terminals
- Remote is out of range, move closer to TV
- Remove any obstructions between remote and IR sensor of TV
- Make sure the power cord to your TV is plugged in and turned on

Image is not centred on the screen

- Adjust the horizontal and vertical position

"No Signal" on HDMI source

- Test the device with a different HDMI cable
- Plug the device into another HDMI port
- Try a different device connected to the same cable and port
- Perform a factory reset on your TV

Care & maintenance

Unplug the television from the power supply before cleaning. Do not use any liquid cleaners or harsh chemicals. Always use a soft, damp cloth.

Cleaning the screen

Wet a soft cloth in a mixture of lukewarm water and a little fabric softener or dish washing detergent. Wring the cloth until it's almost dry, and then use it to wipe the screen.

Make sure the excess water is off the screen, and then let it air-dry before you turn on your TV.

Cleaning the casing

To remove dirt or dust, wipe the TV casing with a soft, dry, lint-free cloth. Please be sure not to use a wet cloth.

For our full TV troubleshooting guide, head online to help.kogan.com