

KOHO WiFi Digital Photo Frame USER MANUAL	1. POWER After connecting power adapter, please press and hold power button for approximately 5 seconds(until screen turns on). When it is on, press and hold power button for approximately 3 seconds to access reboot or power off menu. Short press on power button will turn off/ on screen (but leave the photo frame in on position). 2.SD/MMC Used for SD card slot. You can insert an SD card to play pictures or videos in the digital photo frame, or copy the pictures in the memory of the digital photo frame to the SD card. 3.EARPHONE Connect a earphone. Suitable for 3.5mm earphone output. 4.USB Connect an external USB device. The picture frame can play pictures and videos in the USB disk. USB is for service use only. 5.MINI USB TYPE-C Used for downloading firmware, and for after-sales use only . 6.DC IN Connect DC adapter to power on the device. 1	CONTENTS Getting started..... 3 Frameo app..... 3 Frameo quick setup..... 4 Start using frameo..... 4 Connecting a new friend..... 4 Navigating your frameo..... 5 Settings..... 5 My frame..... 5 Frame name..... 5 Frame location..... 5 Set language..... 5 Set time zoo..... 5 Sleep mode..... 5 Manage photos..... 6 Show/hide photos..... 6 Delete photos..... 6 Import photos..... 6 My friends..... 6 Remove person..... 6 Add person..... 6 Display and slideshow..... 7 Timer..... 7 Show caption..... 7 Brightness level..... 7 Wi-Fi..... 7 Backup and Restore..... 7 Reset,Update,and Share date..... 7 Guide..... 8 Privacy 8 Warranty,Compliance,Support and Safety..... 8 2	GETTING STARTED Thank you for purchasing your very own frame. First, to set up your frame follow the 'Quick star guide' included in the package. If you are new to using Frameo then start by following the Frameo quick setup on page or follow the on screen guide when powering it on for the first time. Once you have set up your Frameo frame, start connecting it to your friends and family. FRAMEO APP To send photos to your frame, use the Frameo app for iOS or Android. Find the frameo app on: Google play by searching for "frameo" or scan this QR code App Store by searching for "frameo" or scan this QR code 3	FRAMEO QUICK SETUP When starting your frame for the first time, you will need to set up the frame. First you start by selecting a language. This will be the language used throughout Frameo. Connect your frame to the internet by connecting it to Wi-Fi. If a newer version of the frameo software is available, then you will be prompted with an update dialog. It is recommended to update your frame immediately if prompted. Enter your name and the location where you have placed your frame e.g. "John Doe" and "Living room", "Kitchen" or "Office" and finally set the timezone if not already correct. START USING FRAMEO Start by connecting with your friends and family by providing them with a unique code from your frame. If you want to be able to send photos to the frame yourself, start by downloading the app for iOS or Android on App Store or Google Play. Then use the code to connect your frame and app as described below. CONNECTING A NEW FRIEND Make sure that your friend has downloaded and installed the Frameo app. Click the add friend icon on your frame A dialog will appear showing a connection code, which is valid for 12 hours. Now share this code in whatever fashion you prefer e.g. SMS, E-Mail, IM, phone call, to your friend. Once your friends have added the code in their Frameo app, they will automatically appear on your frame and be able to send you photos. 4
8 Check for update Check if an update is available for your frame. Share anonymous analytics data Sharing anonymous analytics data helps us tremendously with improve the Frameo software. We understand if you do not wish to share this data with us. Set checked if you wish to help us improve Frameo. Set unchecked to deny the sharing of anonymous analytics data. GUIDE Opens the quick start guide, that was shown when you first started the frame. PRIVACY For more information regarding privacy, please visit http://privacy.frameo.net WARRANTY, COMPLIANCE, SUPPORT AND SAFETY For more information regarding warranty, hardware compliances, support and safety please refer to the material included in the package.	7 DISPLAY AND SLIDESHOW Define the duration a photo should be displayed. TIMER Set whether or not to display the captions that your friends have sent with the photo. Check to display captions. Uncheck to hide captions. SHOW CAPTION Use to hide or show all photos. DELETE PHOTOS Select photos that you want to permanently delete from your frame by tapping the photo. Use to select or deselect all and to permanently delete the selected photos. IMPORT PHOTOS Allows you to import photos from an external max 32GB SD card. Before you try to import photos from a SD card, make sure you have a SD card with photos on inserted into your frame. Start by selecting the photos that you want to import onto your frame. Once selected tap the import button to start the import process. BACKUP AND RESTORE Backup frame to max 32GB microSD card. Tap to make a backup of your photos, friends and settings. The time of the latest successful backup will be displayed. Any existing backup on the SD card will be overridden! REMOVE PERSON To remove a person from the list thereby removing their permission to sent your photos, tap the delete icon . You will then be asked to confirm the removal and if you would to remove all photos received from this person. ADD PERSON To show a new person to send you photos, simply tap the add friend button and share the presented code in whatever way you prefer. RESET/UPDATE AND SHARE DATA Reset frame Remove all data from your frame. This will permanently remove all your photos, friends/connections and settings.	9 MANAGE PHOTOS Select which photos to hide by tapping the particular photos you wish to hide. Hidden photos will NOT be deleted from your frame and you can always select them to be shown again. SHOW/HIDE PHOTOS Use to hide or show all photos. DELETE PHOTOS Select photos that you want to permanently delete from your frame by tapping the photo. Use to select or deselect all and to permanently delete the selected photos. IMPORT PHOTOS Allows you to import photos from an external max 32GB SD card. Before you try to import photos from a SD card, make sure you have a SD card with photos on inserted into your frame. Start by selecting the photos that you want to import onto your frame. Once selected tap the import button to start the import process. BACKUP AND RESTORE Backup frame to max 32GB microSD card. Tap to make a backup of your photos, friends and settings. The time of the latest successful backup will be displayed. Any existing backup on the SD card will be overridden! REMOVE PERSON To remove a person from the list thereby removing their permission to sent your photos, tap the delete icon . You will then be asked to confirm the removal and if you would to remove all photos received from this person. ADD PERSON To show a new person to send you photos, simply tap the add friend button and share the presented code in whatever way you prefer.	5 NAVIGATING YOUR FRAMEO You interact with your frame through its touchscreen. SETTINGS Through settings, you can personalize your frame to your needs. MY FRAME Changes the name of your frame. This is also the name that connected friends and family will see in their list of connected frames in the smartphone app. FRAME LOCATION Changes the location of your frame. This is the location displayed on your friends' and family's list of connected frames which can help to distinguish the photo when using the import function. Alternatively add yourself to your friend list and send them using the app. MY FRIENDS This list contains all the people that are allowed to send photos to your frame. SLEEP MODE Frameo offers a sleep mode which turns off the screen to reduce power consumption while you are sleeping. Its default setting is to turn off the screen at 23:00 and turn on the screen again at 07:00. To change this just set the sleep mode start/end time. SET TIME ZONE Sets the language throughout your frame. SET LANGUAGE Sets the language throughout your frame. YOUR PHOTOS Your frame is not powered down or in standby, so you will still be able to receive photos during sleep mode.	FCC Statement This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1)This device may not cause harmful interference, and (2)this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: .Reorient or relocate the receiving antenna. .Increase the separation between the equipment and receiver. .Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. .Consult the dealer or an experienced radio/TV technician for help. Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment. RF Exposure Information This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

制作要求：

折后尺寸：90x130mm

材质：80g 铜版纸，双面彩色印刷